


# TABORET

## T-1000 & T-1000 LCS ASSEMBLY INSTRUCTIONS

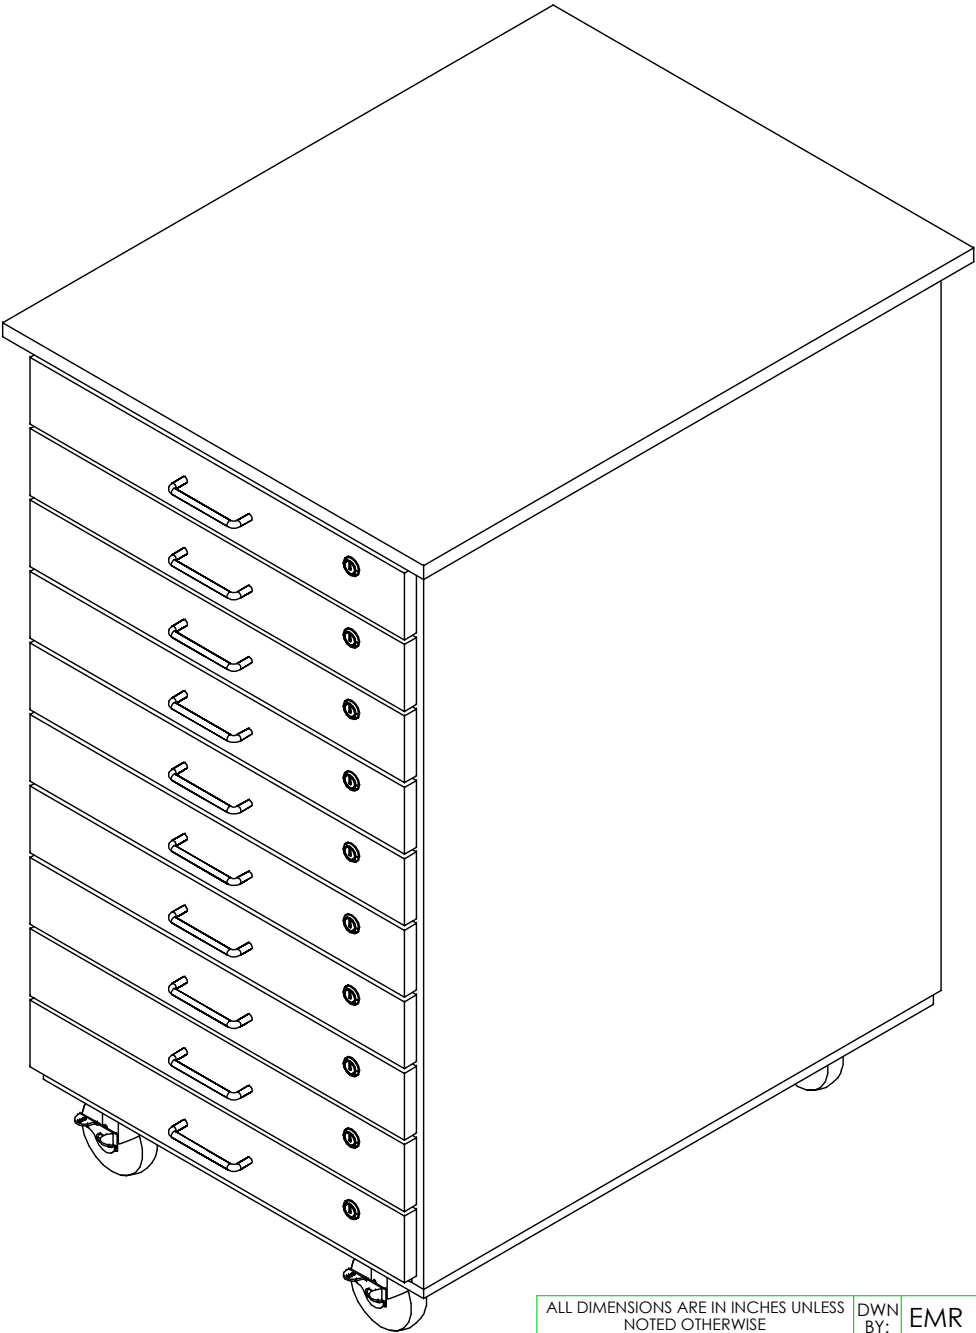


NOTE:

1. MODEL VIEWS MAY NOT REPRESENT EXACT MODEL PURCHASED

C	UPDATED CASTER STEP	3/7/2024	RJM	1447
A	CREATED ASSEMBLY INSTRUCTIONS	9/17/14	EMR	N/A
REV.	DESCRIPTION	DATE	NAME	ECN No.
REVISION LEVEL				

ALL DIMENSIONS ARE IN INCHES UNLESS NOTED OTHERWISE DECIMALS: .X = ± .030 .XX = ± .020 .XXX = ± .010 ANGLES: = ± 1°0' CABINET SQUARENESS = ± .0625		DWN BY:	EMR	DATE DWN:	9/17/14
		APR BY:		DATE APR:	
		APR BY:		DATE APR:	
		APR BY:		DATE APR:	
CONFIDENTIAL: ALL DESIGN RIGHTS RESERVED THE INFORMATION, DATA, DESIGN, AND DRAWINGS EMBODIED IN THIS DOCUMENT AND ALL REPRODUCTIONS THEREOF ARE THE EXCLUSIVE PROPERTY OF DIVERSIFIED WOODCRAFTS, INC.					
THESE DOCUMENTS ARE SUPPLIED WITH THE UNDERSTANDING THAT THEY WILL NOT BE DISCLOSED TO THIRD PARTIES WITHOUT WRITTEN CONSENT OF DIVERSIFIED WOODCRAFTS, INC. ANY REPRODUCTION IN PART OR WHOLE WITHOUT WRITTEN CONSENT IS SUBJECT TO LEGAL ACTION.					

		300 South Krueger Street Suring, WI 54174 diversifiedwoodcrafts.com			
		TITLE: TABORET ASSEMBLY INSTRUCTIONS			
DRAWING NUMBER:				SCALE:	SHEET:
T-1000 & T-1000-LCS SERIES				NTS	1 OF 5
				REVISION:	REV C


TOOLS REQUIRED
**1/2" WRENCH**
**ADJUSTABLE PLIERS**


ASSEMBLY COMPONENTS			
ITEMS INCLUDED	PART #	PART DESCRIPTION	QTY
**CASTERS**	100081	CASTER,4IN SWIVEL TOP PLATE, W/BRAKE	4
**CASTER HARDWARE KIT**	206509	CASTER,ASSY,HDWRE,16-SCREW,16-NUTS	1
**APPLIED BOTTOM**	N/A	T-1000-LCS APPLIED BOTTOM	1
**APPLIED BOTTOM HARDWARE**	100597	SCREW,#8X1.5 QUAD ROUND WASHER	10

NOTE:

1. \*\*XX\*\* INDICATES ITEMS THAT ARE ONLY USED FOR MODELS WITH CASTERS (T-1000-LCS)

C	UPDATED CASTER STEP	3/7/2024	RJM	1447
A	CREATED ASSEMBLY INSTRUCTIONS	9/17/14	EMR	N/A
REV.	DESCRIPTION	DATE	NAME	ECN No.
REVISION LEVEL				

ALL DIMENSIONS ARE IN INCHES UNLESS NOTED OTHERWISE DECIMALS: .X = ± .030 .XX = ± .020 .XXX = ± .010 ANGLES: = ± 1° CABINET SQUARENESS = ± .0625		DWN BY: EMR APR BY: APR BY:	DATE DWN: 9/17/14 DATE APR: DATE APR:
CONFIDENTIAL: ALL DESIGN RIGHTS RESERVED THE INFORMATION, DATA, DESIGN, AND DRAWINGS EMBODIED IN THIS DOCUMENT AND ALL REPRODUCTIONS THEREOF ARE THE EXCLUSIVE PROPERTY OF DIVERSIFIED WOODCRAFTS, INC.  THESE DOCUMENTS ARE SUPPLIED WITH THE UNDERSTANDING THAT THEY WILL NOT BE DISCLOSED TO THIRD PARTIES WITHOUT WRITTEN CONSENT OF DIVERSIFIED WOODCRAFTS, INC. ANY REPRODUCTION IN PART OR WHOLE WITHOUT WRITTEN CONSENT IS SUBJECT TO LEGAL ACTION.		 <div>300 South Krueger Street Suring, WI 54174 diversifiedwoodcrafts.com</div>	
TITLE: TABORET TOOLS AND ASSEMBLY COMPONENTS			
DRAWING NUMBER: T-1000 & T-1000-LCS SERIES		SCALE: NTS	SHEET: 2 OF 5 REVISION: REV C

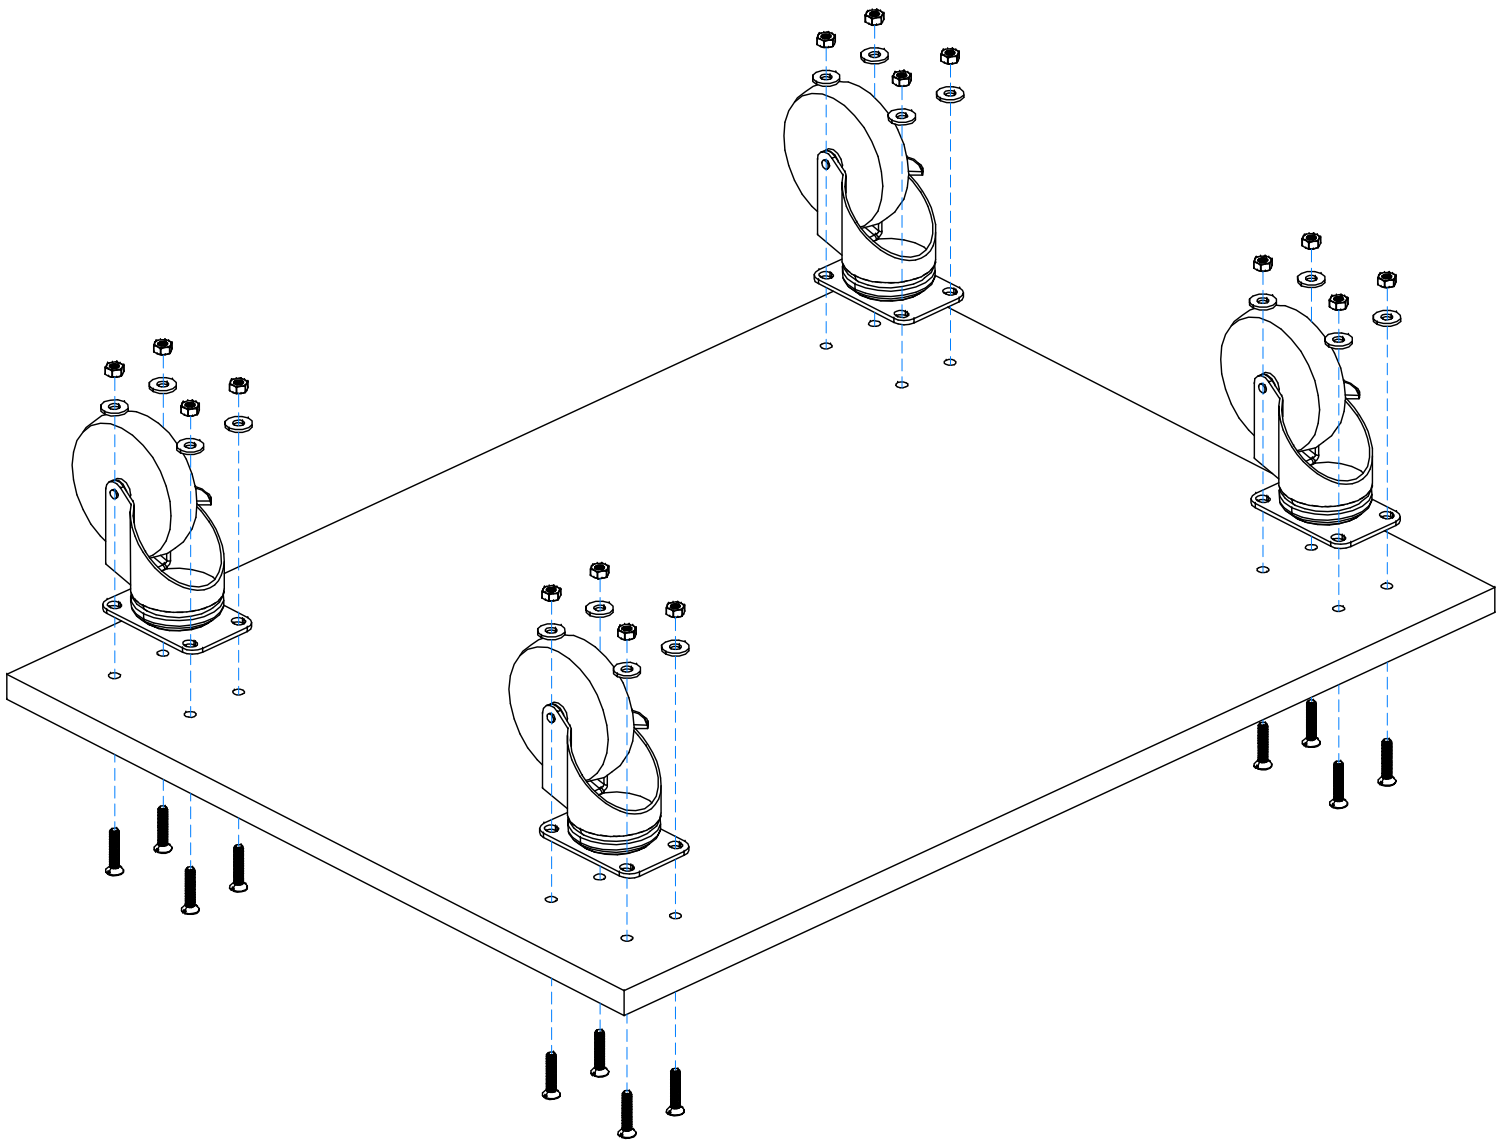

HARDWARE REQUIRED FOR STEP

QTY	DESCRIPTION	PART NUMBER
4	CASTERS	100081
1	CASTER HARDWARE KIT	206509
1	APPLIED BOTTOM	N/A

STEP 1:


- a. IF YOUR UNIT DOES NOT HAVE CASTERS, SKIP TO STEP 3
- b. IF YOUR UNIT DOES HAVE CASTERS, ATTACH CASTERS TO APPLIED BOTTOM USING PROVIDED HARDWARE LISTED ABOVE. **\*\*SEE NOTE\*\***

NOTE:

1. **\*\*ATTACH CASTERS WITH FLAT HEAD BOLT THREADS FACING OUTSIDE OF THE CABINET LIKE SHOWN ABOVE AND ON STEP 2.\*\***

C	UPDATED CASTER STEP	3/7/2024	RJM	1447
A	CREATED ASSEMBLY INSTRUCTIONS	9/17/14	EMR	N/A
REV.	DESCRIPTION	DATE	NAME	ECN No.
REVISION LEVEL				

ALL DIMENSIONS ARE IN INCHES UNLESS NOTED OTHERWISE DECIMALS: .X = ± .030 .XX = ± .020 .XXX = ± .010 ANGLES: = ± 1°0' CABINET SQUARENESS = ± .0625		DWN BY:	EMR	DATE DWN:	9/17/14
		APR BY:		DATE APR:	
		APR BY:		DATE APR:	
		APR BY:		DATE APR:	
CONFIDENTIAL: ALL DESIGN RIGHTS RESERVED THE INFORMATION, DATA, DESIGN, AND DRAWINGS EMBODIED IN THIS DOCUMENT AND ALL REPRODUCTIONS THEREOF ARE THE EXCLUSIVE PROPERTY OF DIVERSIFIED WOODCRAFTS, INC.					
THESE DOCUMENTS ARE SUPPLIED WITH THE UNDERSTANDING THAT THEY WILL NOT BE DISCLOSED TO THIRD PARTIES WITHOUT WRITTEN CONSENT OF DIVERSIFIED WOODCRAFTS, INC. ANY REPRODUCTION IN PART OR WHOLE WITHOUT WRITTEN CONSENT IS SUBJECT TO LEGAL ACTION.					



300 South Krueger Street  
Suring, WI 54174  
diversifiedwoodcrafts.com


TITLE:  
TABORET  
ASSEMBLY INSTRUCTIONS

DRAWING NUMBER:  
T-1000 & T-1000-LCS SERIES

SCALE:  
NTS

SHEET:  
3 OF 5

REVISION:  
REV C

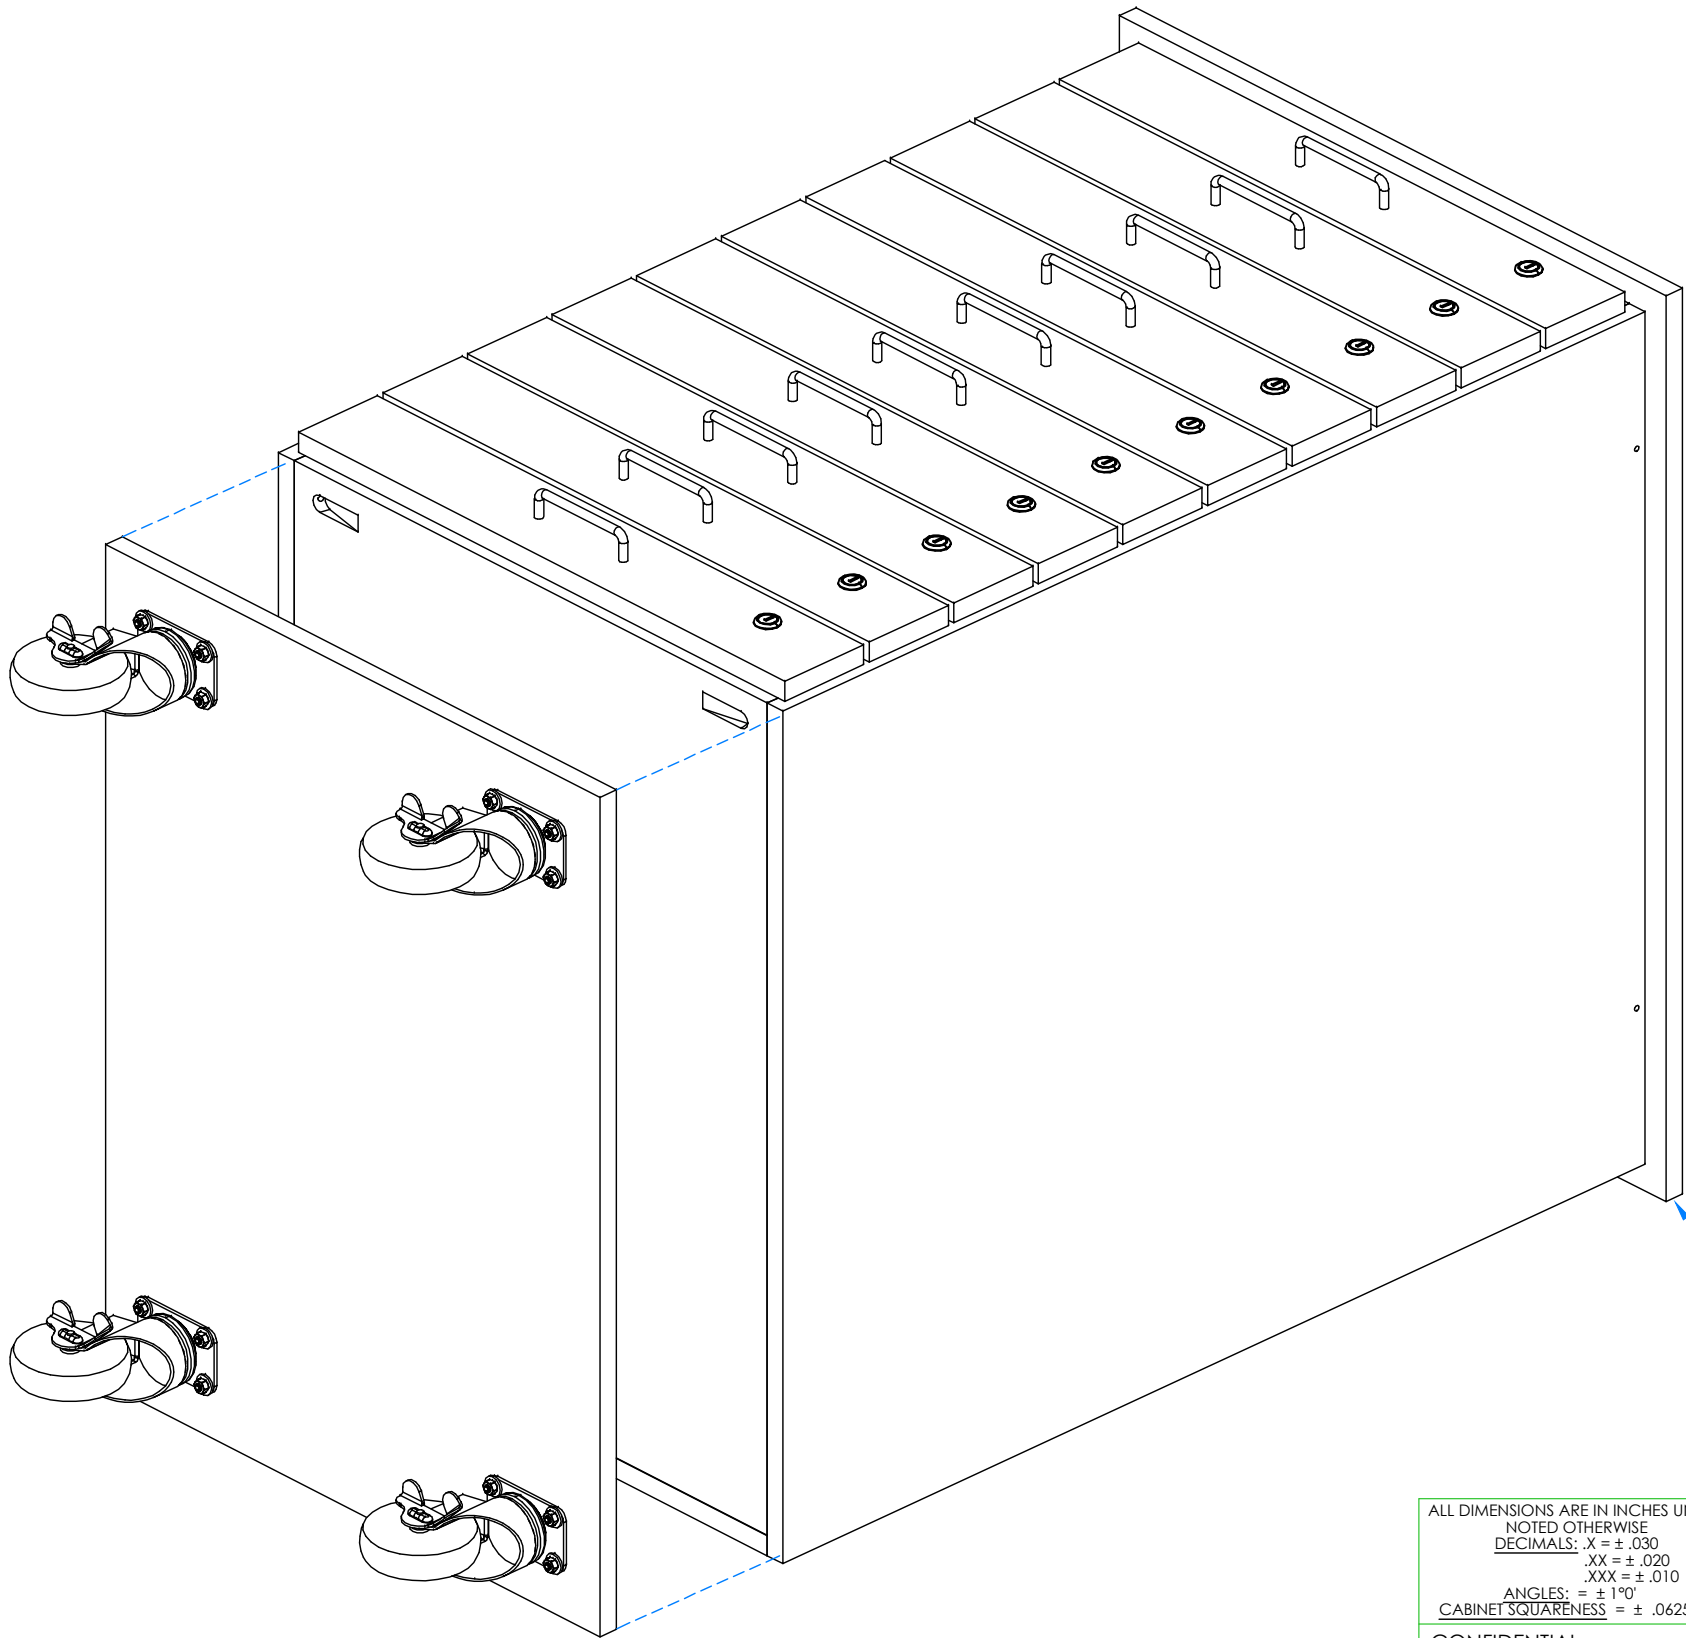

HARDWARE REQUIRED FOR STEP

QTY	DESCRIPTION	PART NUMBER
1	APPLIED BOTTOM W/CASTERS	N/A
10	APPLIED BOTTOM HARDWARE	100597

STEP 2:

- a. LAY CABINET ON ITS BACK
- b. ATTACH APPLIED BOTTOM WITH CASTERS INSTALLED FROM STEP 1 TO BOTTOM OF CABINET WITH PROVIDED HARDWARE, SPACING SCREWS EVENLY. POSITION APPLIED BOTTOM CENTERED FRONT-TO-BACK AND LEFT-TO-RIGHT

\*\*NOTE\*\*

BE SURE CABINET IS ON A CLEAN SURFACE SUCH AS PACKAGING FOAM, CARDBOARD, OR A BLANKET TO PREVENT DAMAGE

NOTE:  
1.

C	UPDATED CASTER STEP	3/7/2024	RJM	1447
A	CREATED ASSEMBLY INSTRUCTIONS	9/17/14	EMR	N/A
REV.	DESCRIPTION	DATE	NAME	ECN No.
REVISION LEVEL				


ALL DIMENSIONS ARE IN INCHES UNLESS NOTED OTHERWISE DECIMALS: .X = ± .030 .XX = ± .020 .XXX = ± .010 ANGLES: = ± 1°0' CABINET SQUARENESS = ± .0625					DWN BY: EMR	DATE DWN: 9/17/14
CONFIDENTIAL: ALL DESIGN RIGHTS RESERVED THE INFORMATION, DATA, DESIGN, AND DRAWINGS EMBODIED IN THIS DOCUMENT AND ALL REPRODUCTIONS THEREOF ARE THE EXCLUSIVE PROPERTY OF DIVERSIFIED WOODCRAFTS, INC.					APR BY:	DATE APR:
THESE DOCUMENTS ARE SUPPLIED WITH THE UNDERSTANDING THAT THEY WILL NOT BE DISCLOSED TO THIRD PARTIES WITHOUT WRITTEN CONSENT OF DIVERSIFIED WOODCRAFTS, INC. ANY REPRODUCTION IN PART OR WHOLE WITHOUT WRITTEN CONSENT IS SUBJECT TO LEGAL ACTION.					APR BY:	DATE APR:



300 South Krueger Street  
Suring, WI 54174  
diversifiedwoodcrafts.com

TITLE:  
TABORET  
ASSEMBLY INSTRUCTIONS

DRAWING NUMBER:	SCALE:	SHEET:	REVISION:
T-1000 & T-1000-LCS SERIES	NTS	4 OF 5	REV C

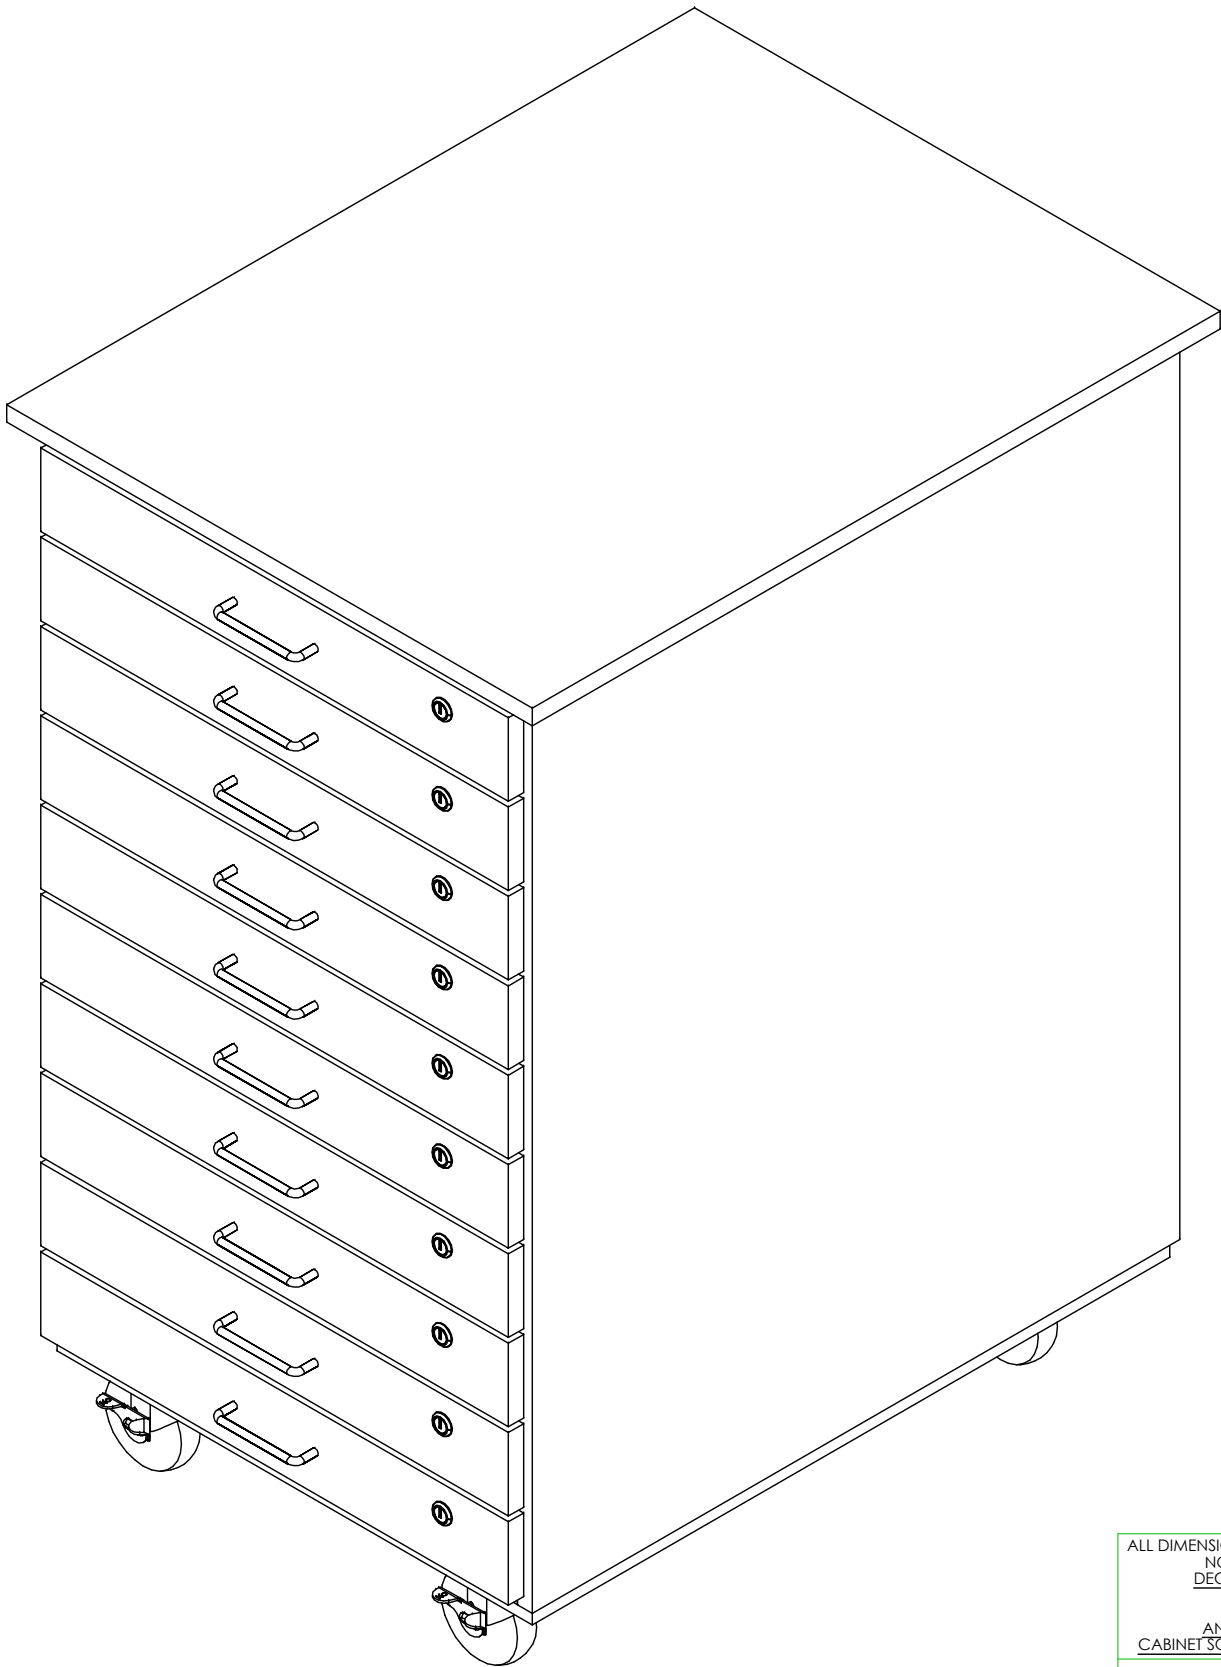

STEP 3:


- a. TIP CABINET UPRIGHT
- b. PLACE UNIT IN DESIRED LOCATION

NOTE:  
1.

COMPLETE UNIT SHOWN

C	UPDATED CASTER STEP	3/7/2024	RJM	1447
A	CREATED ASSEMBLY INSTRUCTIONS	9/17/14	EMR	N/A
REV.	DESCRIPTION	DATE	NAME	ECN No.
REVISION LEVEL				

ALL DIMENSIONS ARE IN INCHES UNLESS NOTED OTHERWISE				DWN BY:	EMR	DATE DWN:	9/17/14
DECIMALS: .X = ± .030				APR BY:		DATE APR:	
.XX = ± .020				APR BY:		DATE APR:	
.XXX = ± .010				APR BY:		DATE APR:	
ANGLES: = ± 1°0'				APR BY:		DATE APR:	
CABINET SQUARENESS = ± .0625				APR BY:		DATE APR:	
CONFIDENTIAL: ALL DESIGN RIGHTS RESERVED THE INFORMATION, DATA, DESIGN, AND DRAWINGS EMBODIED IN THIS DOCUMENT AND ALL REPRODUCTIONS THEREOF ARE THE EXCLUSIVE PROPERTY OF DIVERSIFIED WOODCRAFTS, INC.							
THESE DOCUMENTS ARE SUPPLIED WITH THE UNDERSTANDING THAT THEY WILL NOT BE DISCLOSED TO THIRD PARTIES WITHOUT WRITTEN CONSENT OF DIVERSIFIED WOODCRAFTS, INC. ANY REPRODUCTION IN PART OR WHOLE WITHOUT WRITTEN CONSENT IS SUBJECT TO LEGAL ACTION.							



300 South Krueger Street  
Suring, WI 54174  
diversifiedwoodcrafts.com

TITLE:  
TABORET  
ASSEMBLY INSTRUCTIONS

DRAWING NUMBER:  
T-1000 & T-1000-LCS SERIES

SCALE:  
NTS

SHEET:  
5 OF 5

REVISION:  
REV C