















MID-BACK LEATHER CHAIR

ITEM:VL692SP11

PARTS LIST


PART#		DESCRIPTION	Q'TY
A		BACK CUSHION	1PC
B		SEAT CUSHION	1PC
C		ARMRESTS	1SET
D		SEAT PLATE	1PC
E		GAS LIFT	1PC
F		TELESCOPIC COVER	1PC
G		NYLON BASE	1PC
H		CASTERS	5PCS
I		SCREWS(5/16*2-1/4")	4PCS
J		SCREWS(1/4*7/8")	4PCS
K		SCREWS(1/4*1-1/4")	4PCS
L		WASHERS	8PCS
M		PLASTIC CAPS	4PCS
N		ALLEN WRENCH	1PC

ATTENTION:

Make certain that all screws are fully tightened before using the chair.


START

- ① TURN BASE "G" UPSIDE DOWN, PRESS CASTERS "H" INTO THE HOLES OF EACH LEG OF THE BASE "G".

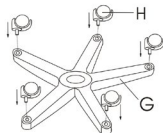


REVERSED


- ② INSERT GAS LIFT "E" WITH TELESCOPIC COVER "F" INTO THE CENTER HOLE OF THE BASE "G".

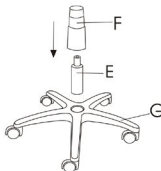


- ③ FASTEN SEAT PLATE "D" ONTO THE BOTTOM SIDE OF SEAT CUSHION "B" USING SCREWS "J" AND WASHERS "L" AS SHOWN, NOTE: DO NOT TIGHTEN ALL THE SCREWS FULLY AT ONCE.

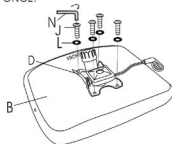

- ④ ATTACH SEAT CUSHION "B" AND BACK CUSHION "A" USING SCREWS "K" AND WASHERS "L" AS SHOWN. NOTE: DO NOT TIGHTEN ALL THE SCREWS FULLY AT ONCE.

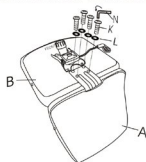

- ⑤ ATTACH ARMRESTS "C" TO SEAT CUSHION "B" AND BACK CUSHION "A" USING SCREWS "I" TIGHTEN ALL THE SCREWS. THEN COVER THE PLASTIC CAPS "M".

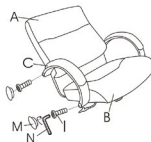

COMPLETED

- ⑥ POSITION THE CHAIR SEAT UPRIGHT WITH SEAT PLATE FACING DOWN, INSERT GAS LIFT "E" INTO THE CENTER HOLE OF THE SEAT PLATE.

