





Double robe hook  
S33EDRH-CH  
S33EDRH-BN




Towel Ring  
S33ETR-CH  
S33ETR-BN

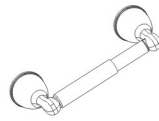

Paper Holder  
S33EPH-CH  
S33EPH-BN

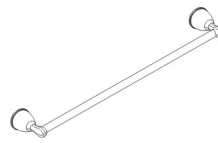


18" Towel Bar  
S33E18TB-CH  
S33E18TB-BN

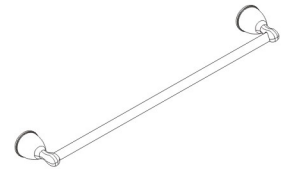

24" Towel Bar  
S33E24TB-CH  
S33E24TB-BN

## TOOLS REQUIRED




Phillips screwdriver



Hexagon allen wrench



Marking pencil



Mounting bracket



Plastic screw



Mounting screw

## HARDWARE PROVIDED

## MOUNTING INSTRUCTION STEPS

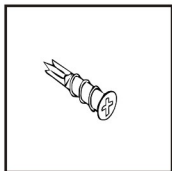


FIGURE 1

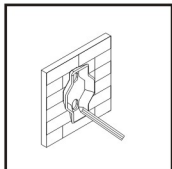


FIGURE 2

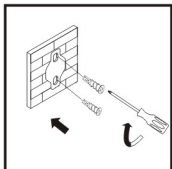


FIGURE 3

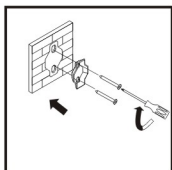


FIGURE 4

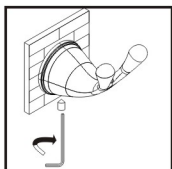


FIGURE 5

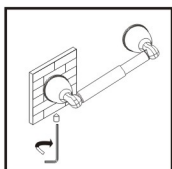


FIGURE 6

**STEP 1: PLEASE READ BEFORE BEGINNING YOUR INSTALLATION – DETERMINE INSTALLATION METHOD.**

The three most common installation methods are indicated below:

### 1. METHOD #1 – DRYWALL

Using the plastic screw provided and pictured in Figure 1 determine mounting locations and screw into the wall using a Phillips screwdriver until flush with the wall.

### 2. METHOD #2 – MOUNTING TO A WOODEN STUD

Upon determining that you will install into a stud – Use only the screw provided, do not use the plastic screw. Determine locations and pre-drill a 1/16" pilot hole prior to installing screw. See detailed installation instructions.

### 3. METHOD #3 – MOUNTING TO CERAMIC TILE

If installing into ceramic tile, the plastic screw provided cannot be utilized.

\*Inquire at the retailer where you purchased your accessories for standard masonry anchors and screws.

### WARNING

Before attempting to drill through ceramic tile, the following must be done:

- Using a center punch, very lightly and carefully tap the spot where you wish to drill to break the shiny glass portion of the tile.
- Once this is done you can safely drill through the tile with a standard masonry drill bit and install standard masonry anchor (not provided).

### Step 2: INSTALLATION

- Determine the location where you wish to install your accessory.
- Place mounting bracket at the desire location and mark hole. (FIGURE 2)
- Install plastic screw at each pencil mark made. (FIGURE 3)
- Align brackets with installed plastic screw and secure with screws provided. (FIGURE 4)
- Install post over bracket and secure with set screw. (FIGURE 5)
- Assemble the bar between the 2 posts and position over wall brackets, screw the posts with the screws provided. (FIGURE 6)