



Welcome to the Kwikset family!

This guide will get you ready to install vour new knob.

If you have any issues, please visit our support center: kwikset.com/support or call us at 1-800-327-5625.

> This manual can be used to install a variety of knobs. Please determine your function type prior to installation.



Passage (Hall/Closet)




Privacy (Bed/Bath)



Entry (Keyed)



Inactive (Non-Rotating)



Door Prep: If you need help in preparing your door Drilling template: If you need help in drilling your door

Separate knobs (if pre-assembled) If installing a non-rotating knob, skip to step 4

А



Twist the side with the holes.

Pull to separate knobs.

C Set knobs aside until step 4.


2 Adjust the backset of the latch (if needed)

A Hold the latch in front of the door hole, with the latch face flush against the door edge.




B If the latch holes are centered in the door hole, no adjustment is required. Proceed to step 3.


If the latch holes are NOT centered, adjust latch. See "Latch Adjustment" (step C).

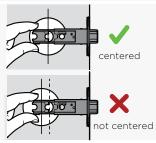



C Latch Adjustment (only if needed)

Move the pin to extend the latch.





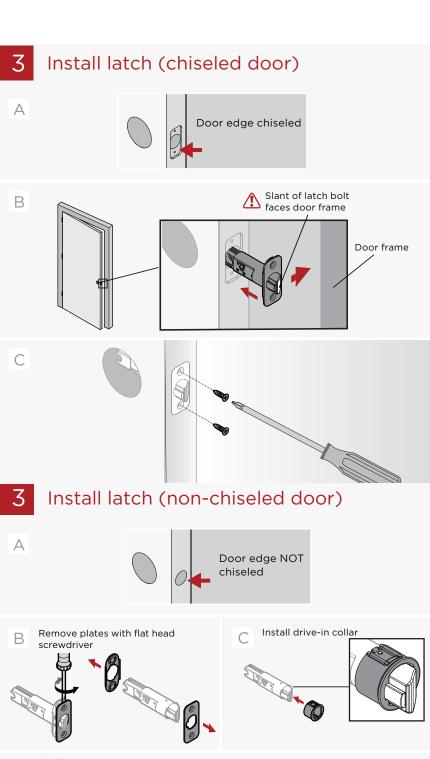

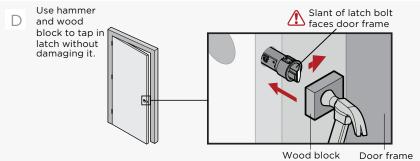



Installation instructions differ by knob design. For traditional styled knobs, follow directions below. For contemporary knobs, please proceed to page 6.

Installing Passage, Privacy or Entry traditional knobs, proceed to the next page.

Option 4a: Install passage, & privacy knobs





Passage (Hall/ Closet)

Privacy (Bed/ Bath)

Option 4b: Install entry knobs



Entry (Keyed)

Installing Inactive knobs, proceed to page 8, step 4d.

Option 4d: Install inactive knobs



Inactive (Non-Rotating)

4


Install traditional styled knobs:


Option 4a: Install passage, & privacy knobs then proceed to step 5






IMPORTANT: If installing a passage lock on an entry door, make sure the knob with the screw holes is on the interior side of the door.















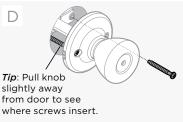

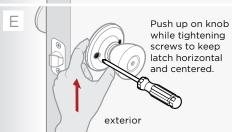



Option 4b: Install entry knobs then proceed to step 5
















To catch screws:



2. Push while twisting



3. Twist clockwise







If installing a contemporary knob (shown below), proceed to the next page.

Option 4c: Install passage, privacy, & entry knobs










Install contemporary styled knobs: Passage, Privacy & Entry

Option 4c: Install passage, privacy, & entry knobs then proceed to step 5

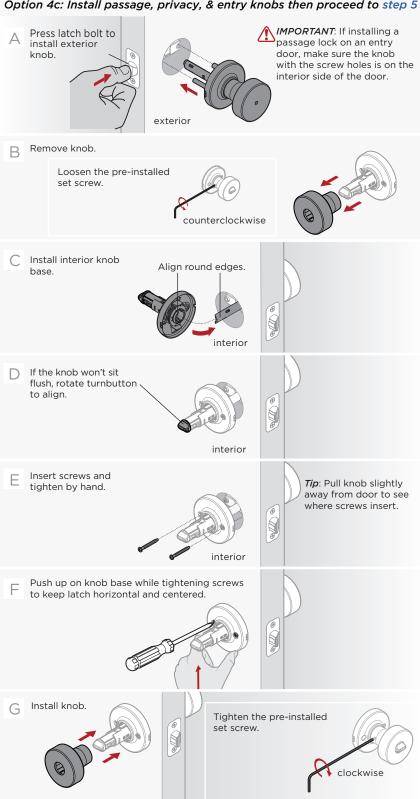

♠ For Privacy Locks ONLY





Save the bedroom/ bathroom emergency unlock tool for future use.





4 Install inactive (non-rotating) knobs

Option 4d: Install inactive knobs then proceed to step 5

A Mark drill holes using the knob, then drill 1/8" (3 mm) 1/2" (13 mm) deep.









5 Install strike to door frame

А

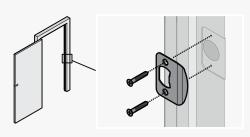


B Close door, test latch operation and make adjustments as needed:

If small bolt of latch enters strike hole, reposition strike.

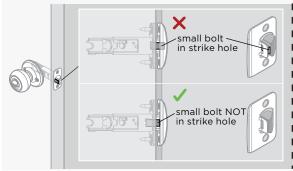

If latch is loose in the strike, adjust the strike tab so it grips the latch bolt better when the door is closed.

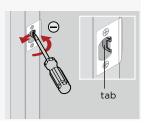

SmartKey Rekeying Instructions



For rekeying instructions, you can also visit: https://www.kwikset.com/support/answers/how-to-re-key-your-smartkey-security-locks

If you have any issues, please visit our support center: **kwikset.com/support** or call us at 1-800-327-5625.

WARNING: This Manufacturer advises that no lock can provide complete security by itself. This lock may be defeated by forcible or technical means, or evaded by entry elsewhere on the property. No lock can substitute for caution, awareness of your environment, and common sense. Builder's hardware is available in multiple performance grades to suit the application. In order to enhance security and reduce risk, you should consult a qualified locksmith or other security professional.