




4" to 3" Upgrade Kit Instructions


INSTALL ME FIRST

Prior to installing
your new 3" filter.


Scan me
for video

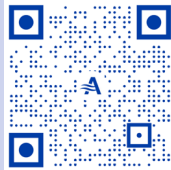

Parts Included

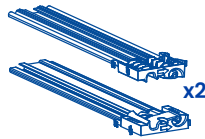

Rail Kit
Pieces

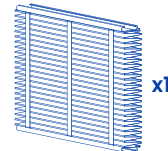

Air Filter




Sticker
Label



Screws


STEP 1

Turn thermostat
mode to OFF.
Turn fan to AUTO.
Remove door and
discard old filter.

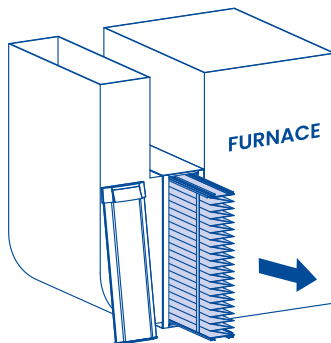


STEP 2

Point arrows toward furnace
or air handler.

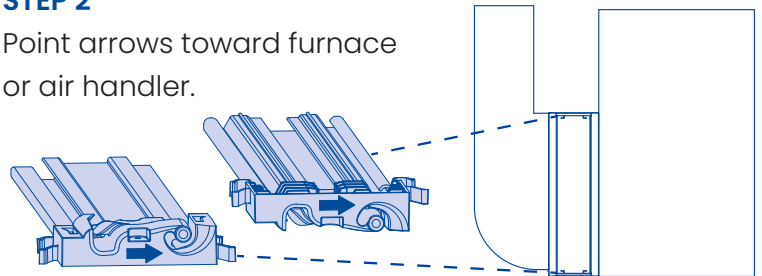

If a 1213 or 1413 Upgrade Kit is installed, DO NOT remove. Install the new rails per instructions.

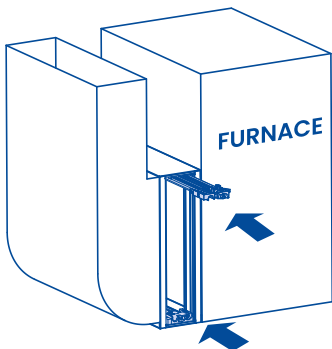


STEP 3

Carefully align and slide top rail along air
cleaner tracks.




Slide in until you hear two clicks.
Repeat with bottom rail.

Recommended




Use one screw
per rail piece.

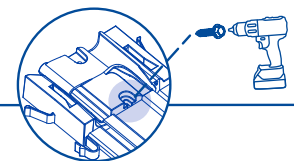

Top

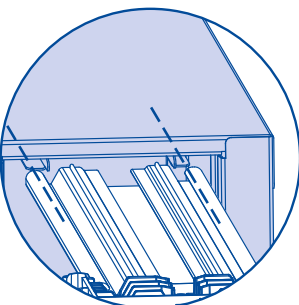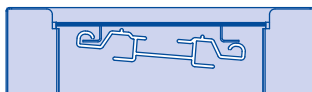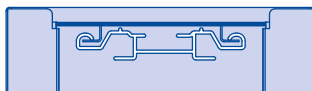


Bottom

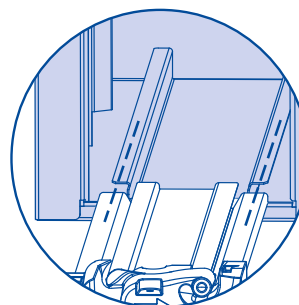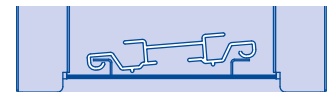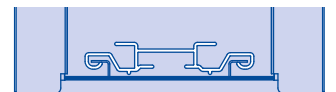

STEP 4


Align new filter onto top and bottom rails, slide filter into air cleaner.

Replace door and return thermostat to original settings.

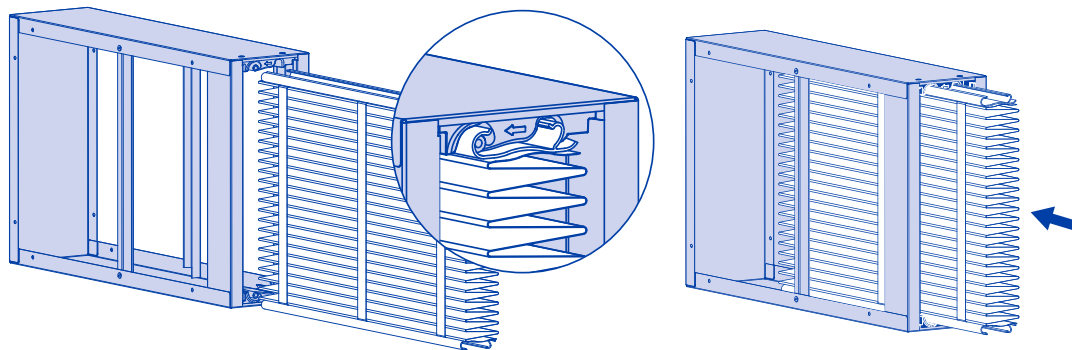

STEP 5

Place new label over existing door label and fill in filter model number.

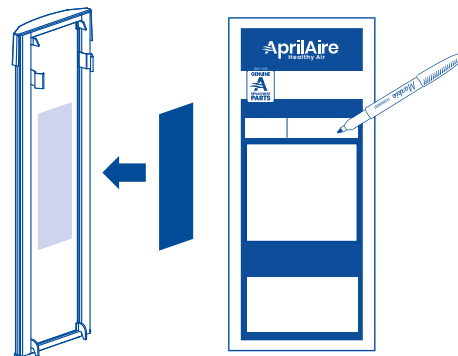

NOTE: One-time upgrade kit installation only. For future filter replacement, slide out the old filter and insert the new.

If your air cleaner has an existing upgrade rail kit, that will remain installed. The new upgrade kit is installed into the existing upgrade rails.