



WALL PREP

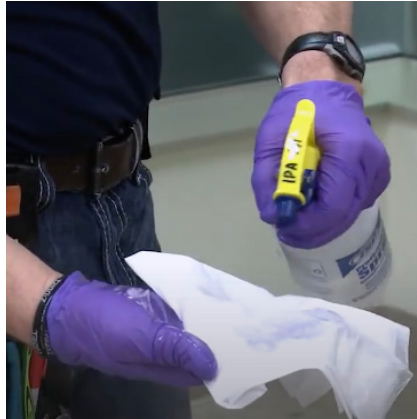

- **USE A LINT-FREE TOWEL.**
- **MIX 70% ISOPROPYL ALCOHOL WITH 30% WATER. THE ALCOHOL MUST BE DILUTED OR IT WILL CAUSE ISSUES SUCH AS BUBBLING. MAKE SURE YOU CLEAN THE WALL THOROUGHLY.**

(YOU MAY SEE A BIT OF PAINT ON THE TOWEL).

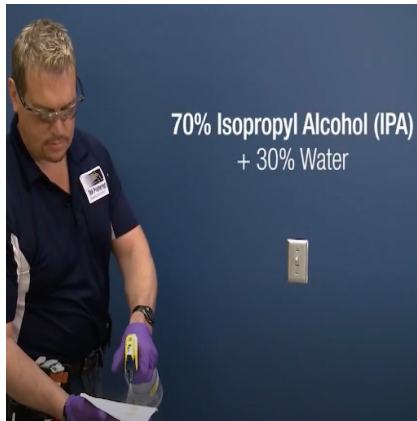

- **WAIT UNTIL IT FLASHES OFF (DRIES). IT IS VERY IMPORTANT TO REPEAT THIS PROCESS 2 MORE TIMES TO OBTAIN MAXIMUM STRENGTH.**
- **WAIT 15 MINUTES (DRIES) AND THEN BEGIN YOUR INSTALLATION.**



SUGGESTION FOR HARD TO STICK SURFACES:

WE RECOMMEND USING THE 3M TAPE OR THE PRO-543 PRIMER ADHESIVE, WHEN NEEDED.

THE 3M HAS A STRONG TACK WHEN USED IMMEDIATELY OR IF YOU WAIT 24 HOURS FOR LESS AGGRESSIVE TACK (EASIER REMOVAL).

THE PRO-543 CAN ALSO BE USED FOR ADDED SECURITY.

BOTH ARE CLEAR COATS AND SUGGESTED TO BE APPLIED ACROSS THE TOP AND IF NEEDED, DOWN THE SIDE AS A BORDER.



NOTE: 3M IS A FLAMMABLE LIQUID

*CAUTION: DO NOT INSTALL ON WALLS PAINTED WITH THE PROMAR 400 ZERO VOC PAINT. ADHESIVES ARE NOT ADHERING TO THIS PAINT.