


ASSEMBLY INSTRUCTIONS FOR WRIGHT SHELF LAMP

Model # 3138-01

3138-01 1.0

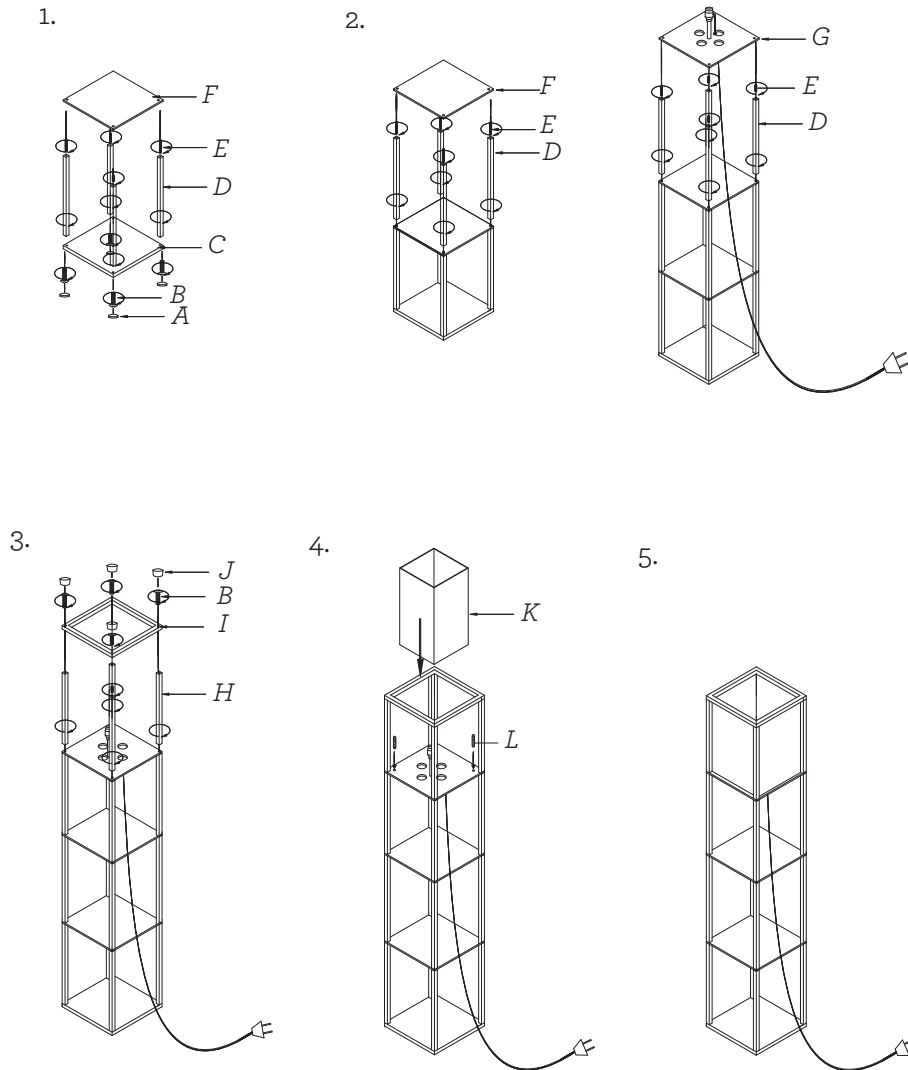

1. Assemble the thick board to the thin board with 4 long poles. Tighten 4 screws to secure 4 long poles to the thick board. Attach the cushion onto 4 screws.
2. Assemble another thin board to the last thin board with screwing another 4 long poles to tighten. Follow the same steps for the board with socket.
3. Assemble the wood frame to the socket frame with screwing 4 long poles to tighten. Fasten 4 screws to secure the wood frame to 4 long poles. Attach the shade peg onto 4 screws.
4. Set small poles into socket frame and then insert the shade.
5. The lamp is completed.

GENERAL PRODUCT INFORMATION:

This product is suitable
for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. **DO NOT ALTER THE PLUG.**

BULB TYPE: (1) 150 watt incandescent or 42 watt CFL equivalent. (not included)

A. Cushion 4PCS	C. Thick board 1PC	E. Threaded screw 12PCS	G. Board with socket 1PC	I. Wood frame 1PC	K. Shade 1PC
B. Screw 8PCS	D. Long pole 12PCS	F. Thin board 2PCS	H. Short pole 4PCS	J. Shade peg 4PCS	L. Small pole 4PCS