



# ASSEMBLY INSTRUCTIONS FOR Hudson Floor Lamp

3341-13 1.0

Model # 3341-13

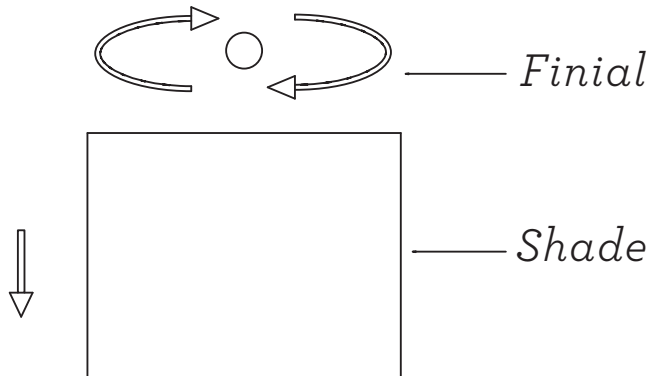

1. Screw Pole 1 clockwise into Base to tighten.
2. Screw Pole 2 clockwise into Pole 1 to tighten.
3. Screw Pole 3 clockwise into Pole 2 to tighten.
4. Screw Pole 4 clockwise into Pole 3 to tighten.
5. Install the Harp by inserting it into the Yoke.
6. Install the Shade by unscrewing the Finial from the Harp, placing the Shade over the threaded nipple, and re-tightening the Finial to secure the Shade.

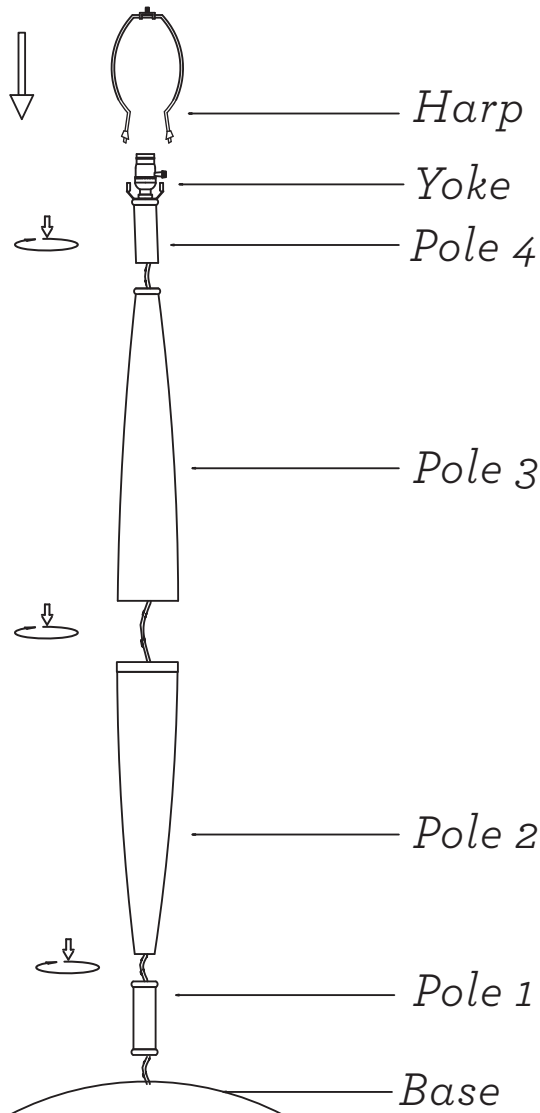

## GENERAL PRODUCT INFORMATION:

This product is suitable  
for dry locations only.



## IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. DO NOT ALTER THE PLUG.

BULB TYPE: (1) 3-way 150 watt incandescent or 42 watt CFL equivalent. (not included)