


ASSEMBLY INSTRUCTIONS FOR Presley Floor Lamp

Model # 3565-01/04/09

3565-01
3565-04
3565-09

1.0

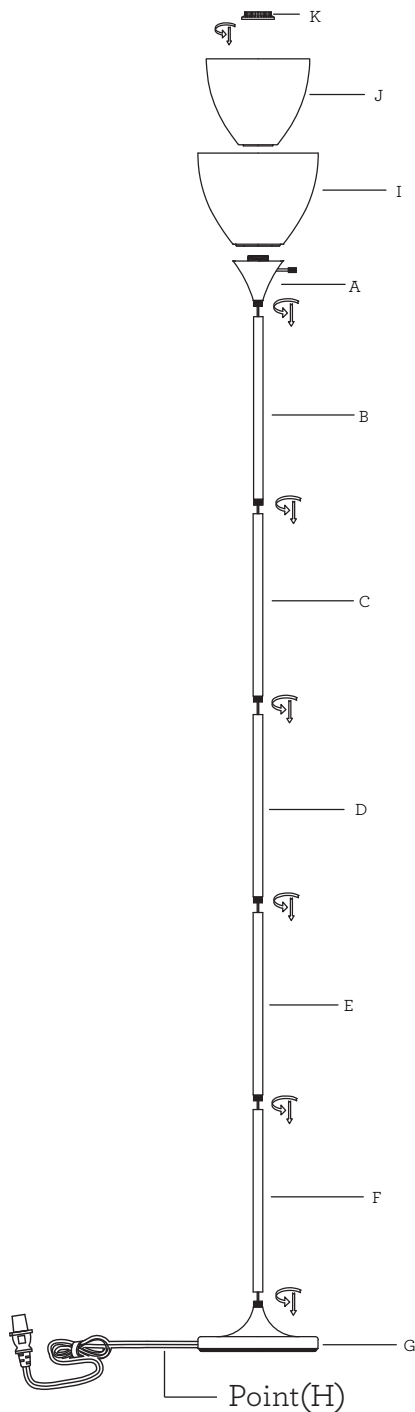

1. Remove all parts and lay on a flat surface.
2. Screw socket cup (A) clockwise into pole (B) to tighten.
3. Screw pole (B) clockwise into pole (C) to tighten.
4. Screw pole (C) clockwise into pole (D) to tighten.
5. Screw pole (D) clockwise into pole (E) to tighten.
6. Screw pole (E) clockwise into pole (F) to tighten.
7. Screw pole (F) clockwise onto base (G) to tighten. Then pull the remaining slack of the power cord out carefully through point (H).
8. Set inner shade (J) onto outer shade (I) and both shades onto socket cup (A). Then screw the socket ring (K) onto the socket clockwise to secure the shade.

GENERAL PRODUCT INFORMATION:

This product is suitable
for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. **DO NOT ALTER THE PLUG.**

BULB TYPE: (1) 150 watt incandescent or 42 watt CFL equivalent . (not included)