
ASSEMBLY INSTRUCTION FOR

Boulevard Floor Lamp

Model# 4067-22

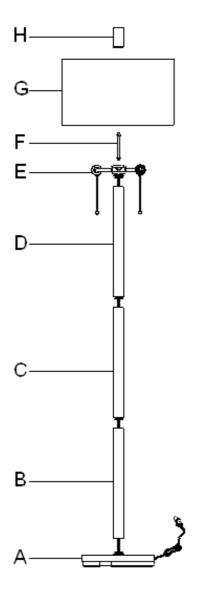

- 1. Screw pole (B) clockwise onto lamp base (A) and turn to tighten.
- 2. Screw pole (B), (C), (D) and socket (E) together.
- 3. Screw tube (F) onto socket (E) till tight.
- 4. Place the shade (G) onto tube (F) and screw it by finial (H).

GENERAL PRODUCT INFORMATION:

This product is suitable for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug as a feature to reduce the risk of electric shock (one blade is larger than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless the plug can be fully inserted. DO NOT ALTER THE PLUG.

BULB TYPE: Use only with maximum of 2*100 watt incandescent bulbs (bulbs not included).

PARTS DIAGRAM

- (1) * tube (F)
- (1) * finial (H)

