
## **Sedona Floor Lamp**

Model# 4085-15

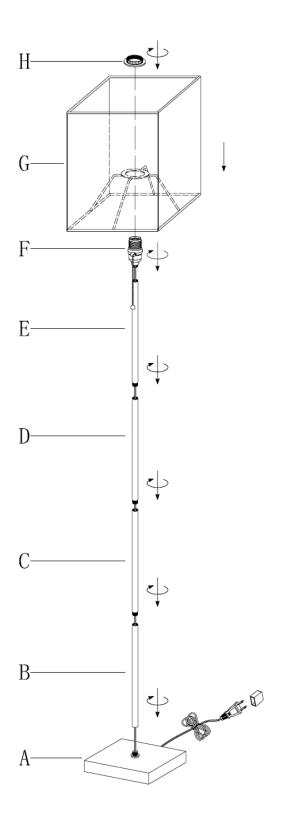

- 1. Assemble the fixture by screwing the (B), (C), (D), and (E) stems together, then screwing the (E) stem to the (F) shade holder and (B) stem to (A) base.
- 2. Install the (G) shade onto the (F) shade holder and tighten it with (H) socket ring.

## GENERAL PRODUCT INFORMATION:

This product is suitable for dry locations only.



## IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug as a feature to reduce the risk of electric shock (one blade is larger than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless the plug can be fully inserted. DO NOT ALTER THE PLUG.

BULB TYPE: one type A Max 100W bulb (bulb not included).

## PARTS DIAGRAM

(1) Socket ring (H)

