


Domino Arc Lamp

Model#5118-01 / 22

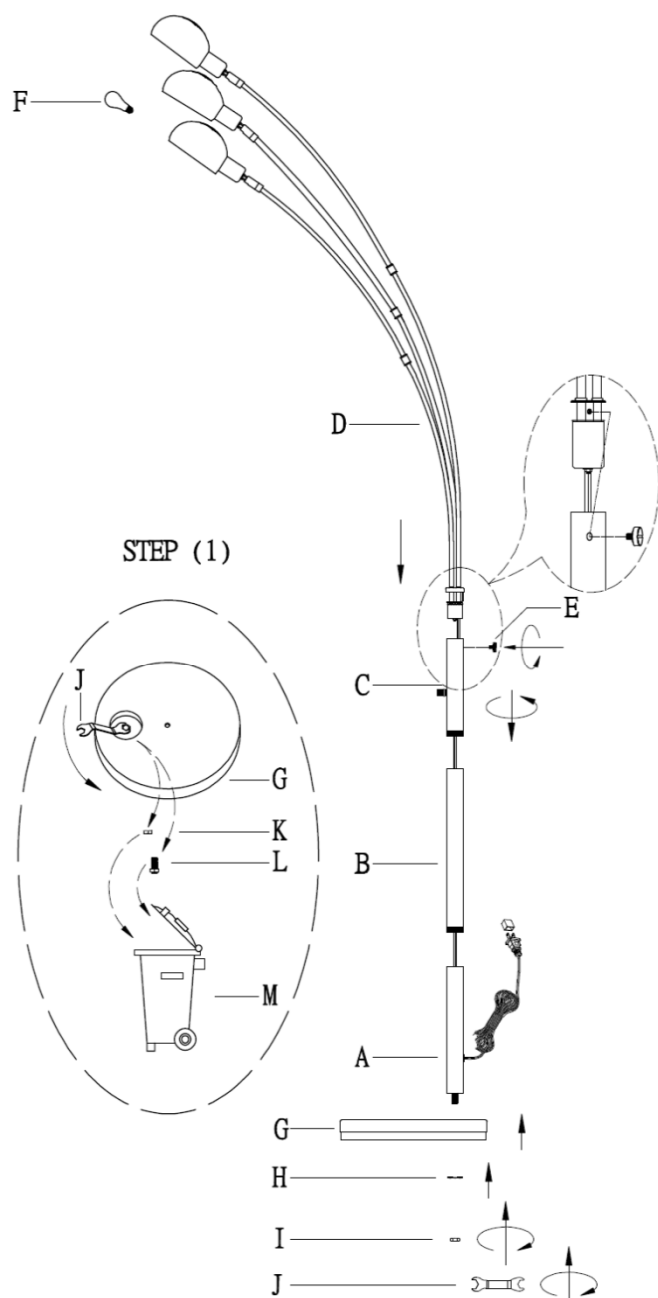

1. Take out the Lamp base (G) from the inner box. Use the wrench (J) to remove the screw (L) / washer (K) and throw it away.
2. Secure pole (A) to base (G) and tighten the washer (H) and nut (I) with wrench (J).
3. Screw pole (B), (C), (G) and part (D) together.
4. Insert screw (E) into pole (C) until tight.
5. Place bulbs (F) into socket of top part (D).

GENERAL PRODUCT INFORMATION:

This product is suitable for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug as a feature to reduce the risk of electric shock (one blade is larger than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless the plug can be fully inserted. **DO NOT ALTER THE PLUG.**

Bulb Type: Use only with maximum of 3*40 watt Type-S bulbs (bulbs included).

PARTS DIAGRAM

(1) * Screw (F)