


Parts Included:

Mounting Strap



Outlet Box screw



Wire Connector




Mounting Screw



CSA / UL Safety Requirements

CSA/UL requires that these IMPORTANT SAFETY INSTRUCTION be listed:

- ☐ Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.
- ☐ Consult a qualified electrician if you have any electrical questions or need to replace the driver.



Care Instructions

Arnsberg suggests using only a micro fiber cleaning cloth to clean this fixture. If required, a slightly damp cleaning cloth may be used to spot clean. Do not use common household cleaners on this fixture, as the final finish may be damaged as a result. Enjoy your new Arnsberg fixture.



customerservice@arnsberg.com


www.arnsberg.com

ASSEMBLY INSTRUCTIONS

MARGIT

301500107

Mounting Instructions:

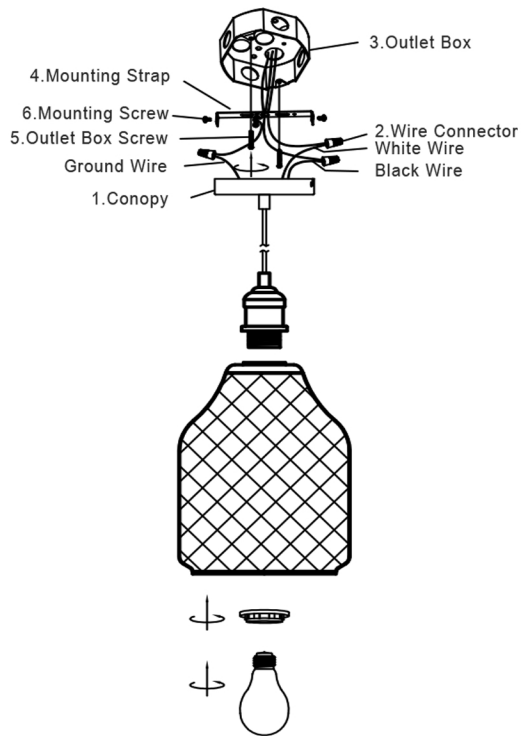

Assembly Instructions:

Screw the mounting screw (#6) into the mounting strap (#4). Mount the mounting strap (#4) to the outlet box (#3). Make sure the heads of the mounting screw (#6) are facing outside when the mounting strap (#4) is attached to the outlet box (#3).

Connect the ground wire from the fixture to the ground wire from the outlet box (#3). Connect the white wire from the fixture to the white wire (neutral wire) from the outlet box (#3). Connect the black wire from the fixture to the black wire (live wire) of the outlet box (#3). Cover the connections using the wire connectors (#2). Wrap the wire connectors with electrical tape for a more secure connection. Position the wires back inside the outlet box (#3). Note: If you have electrical questions, consult your local licensed electrician.

Place the Canopy (#1) over the outlet box (#3). Allow the heads of the outlet box screws (#5) to come out through the large end of the keyholes of the canopy (#1). Twist the canopy (#1) until the heads of the outlet box screws (#5) slide into the narrow ends of the keyholes. Screw the outlet box screws (#5) to secure the Canopy (#1).