

Parts Included:

Mounting Screw




Outlet Box Screw



Wire Connector




Mounting Bracket



CSA / UL Safety Requirements

CSA/UL requires that these IMPORTANT SAFETY INSTRUCTION be listed:


- ☐ Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.
- ☐ Consult a qualified electrician if you have any electrical questions or need to replace the driver.



Care Instructions

Arnsberg suggests using only a micro fiber cleaning cloth to clean this fixture. If required, a slightly damp cleaning cloth may be used to spot clean. Do not use common household cleaners on this fixture, as the final finish may be damaged as a result. Enjoy your new Arnsberg fixture.

Mounting Instructions

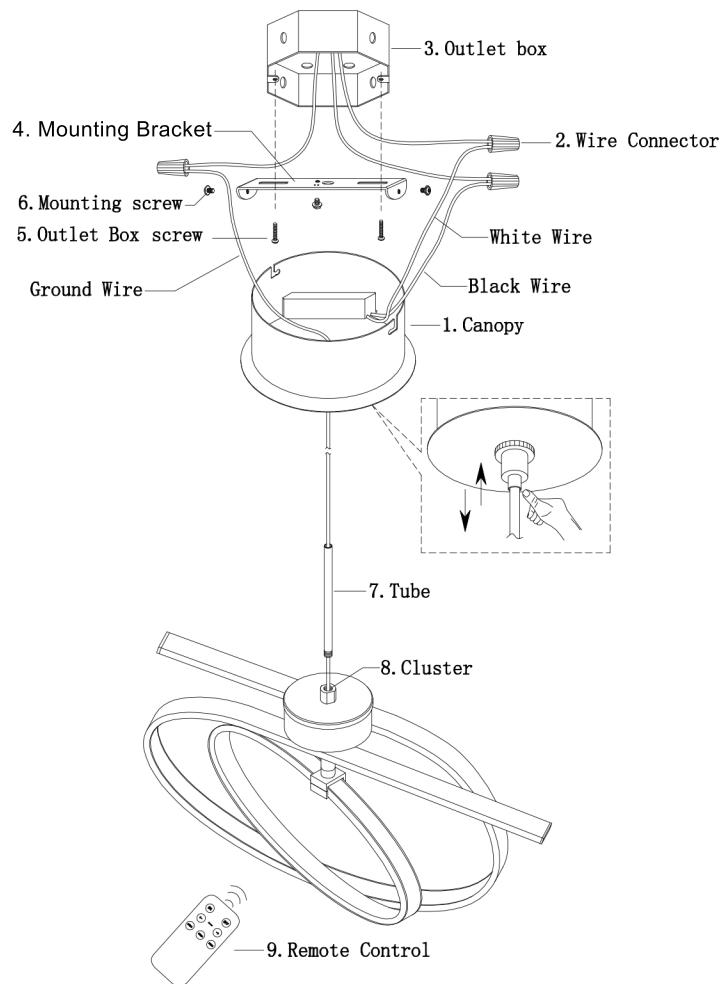

ASSEMBLY INSTRUCTIONS

CORONADO

374910106

Assembly Instructions

1. Screw the mounting screw (#6) into the mounting bracket (#4). Mount the mounting bracket (#4) to the outlet box (#3), Make sure the heads of the mounting screw (#6) are facing outside when the mounting bracket (#4) is attached to the outlet box (#3).
2. Connect the ground wire from the fixture to the ground wire from the outlet box (#3). Connect the white wire from the fixture to the white wire (neutral wire) from the outlet box (#3). Connect the black wire from the fixture to the black wire (live wire) of the outlet box (#3). Cover the connections using the wire connectors (#2). Wrap the wire connectors with electrical tape for a more secure connection. Position the wires back inside the outlet box (#3). Note: If you have electrical questions, consult your local electrical code for approved grounding methods.
3. Place the Canopy (#1) over the outlet box (#3), Allow the Heads of the Mounting Screws (#5) to come out through the large end of the keyholes of the Canopy (#1). Twist the Canopy (#1) until the heads of the Outlet Box Screws (#5) slide into the narrow ends of the keyholes. Screw the Outlet Box Screws (#5) to secure the Canopy (#1).
4. Screw the Tube (#7) into the Cluster (#8)
5. installation is complete, Turn on the power at the circuit breaker of the fuse box. Turn the light switch on to activate the fixture.