


MERIDIAN

L I T E T R E N D S

ITEM NO: M70099AV

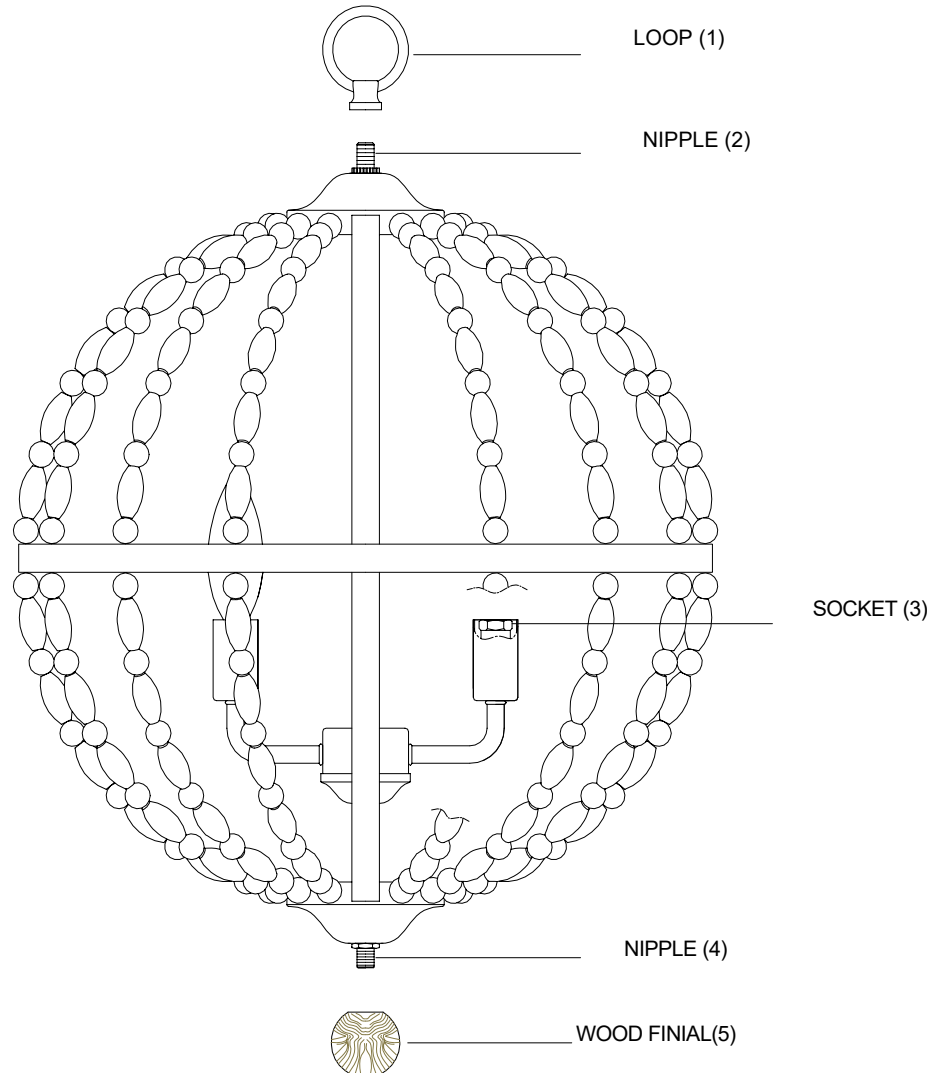

ASSEMBLY INSTRUCTIONS

1. Carefully unpack and identify all parts referring to illustration for parts identification.
2. Turn the power to the installation point OFF.
3. Assemble the loop (1) onto the nipple (2).
4. Install the bulb (NOT PROVIDED) into socket (3).
5. Install the wood finial (5) onto the nipple (4).
6. Refer to the additional installation instructions included with the product for wiring and installation.
7. Restore power to the installation point and retain this sheet for future reference.