

## ASSEMBLY INSTRUCTIONS

### Evans Swing Arm Sconce


Item # RL2010

**WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.**

**WARNING \*\*\* SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

**INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.**

**ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.**

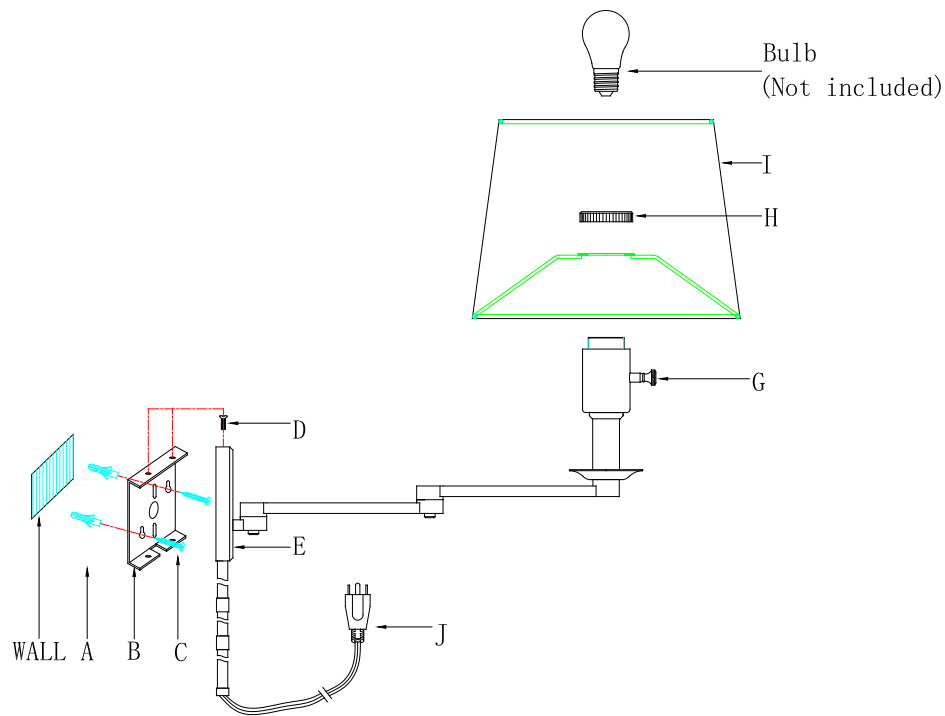

#### CORD COVER MOUNTING OPTION:

1. Drill 2 holes on the wall and make sure the hole distance will match to the mounting plate(B) holes.
2. Knock the anchors (A) into the wall hole.
3. Install the mounting plate(B) to the wall by using mounting screws(C) provided.
4. Secure the fixture base (E) to the mounting plate(B) with the four screws(D).
5. Align shade ( I ) to the top threaded section of the socket (G) and secure with socket ring(H).
6. Insert bulb (not included) into socket (G).
7. Assembly is complete.



RALPH LAUREN

## ASSEMBLY INSTRUCTIONS

### Evans Swing Arm Sconce


Item # RL2010

**WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.**

**WARNING \*\*\* SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

**INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.**

**ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.**

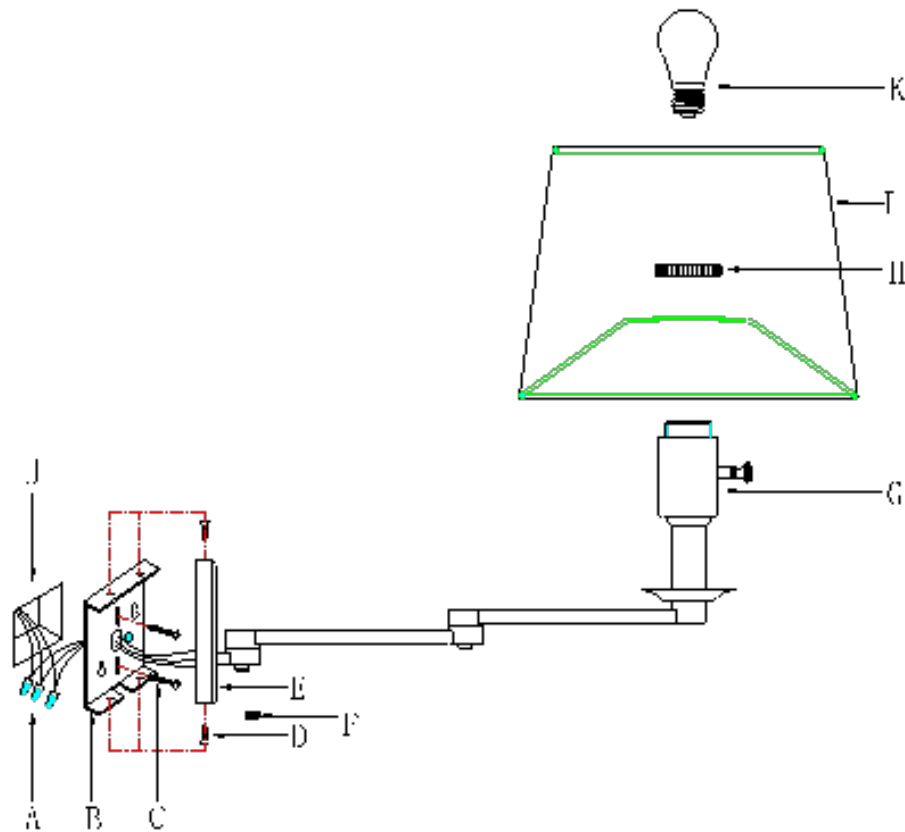

#### DIRECT WIRE MOUNTING OPTION:

1. Carefully remove the mounting plate (B) from the fixture base (E) by unscrewing the side screws(D).
2. Drill 2 holes on the wall and make sure the hole distance will match to mounting plate (B) holes.
3. Separate the two cords carefully and identify the Live & Neutral wire.
4. Connect the Ground (bare) fixture wire with the ground (usually bare) wire from wall outlet box(J) using wire nut (A). If there is no ground wire, then attach this wire to the green grounding screw on mounting plate (B). IT IS IMPERATIVE THAT THE J-BOX IN YOUR HOME BE PROPERLY GROUNDED
5. Connect the Neutral fixture wire with the Neutral (usually white) wire from the wall outlet box (J) using wire nut (A).
6. Connect the Hot (smooth edge, markings, or black) fixture wire with the Hot (usually black) wire from the outlet box(J) using wire nut (A).  
DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED
7. Carefully tuck the wires into the outlet box(J). Make sure no wires can be pulled out.
8. Install the mounting plate(B) to the wall by using mounting screws(C)provided.
9. Secure the fixture base (E) to the mounting plate(B) with the four screws(D).
10. Cover hole an base with cap (F).
11. Align shade (I) to the top threaded section of the socket (G) and secure socket ring(H).
12. Insert bulb(K) (not included) into socket (G). Assembly is complete



# RALPH LAUREN