ASSEMBLY INSTRUCTIONS

Item#: TDL62360DS


- 1. Carefully unpack and place all parts on a smooth surface and line them up as per the sketch
- 2.Fasten tube (B) onto the base (A), tube (C) onto tube (B), tube (D) onto tube (C), then fasten socket assembly (E) onto tube(D).

 be careful not to twist power cord and tighten securely.
- 3. Place shade (F) onto the socket asembly (E) ,then tighten with the ring (G) .
- 4. Please use on/off-100W bulb on the lamp(bulb not included). you use LED-9W bulb(bulb included).

IMPORTANT SAFETY INSTRUCTIONS

This portable floor lamp has polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plugs will fit in a polarized outlet only one way. If it plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified delectrican. Never use with an extension cord unless plug can be fully insterted. Do not alter plugs.

MADE IN CHINA

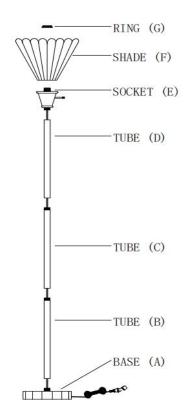

E26, Type A, 100W (NOT INCLUDED) or E26, LED-9W (BULB INCLUDED)