



TRUE NORTH 0 METERS 100

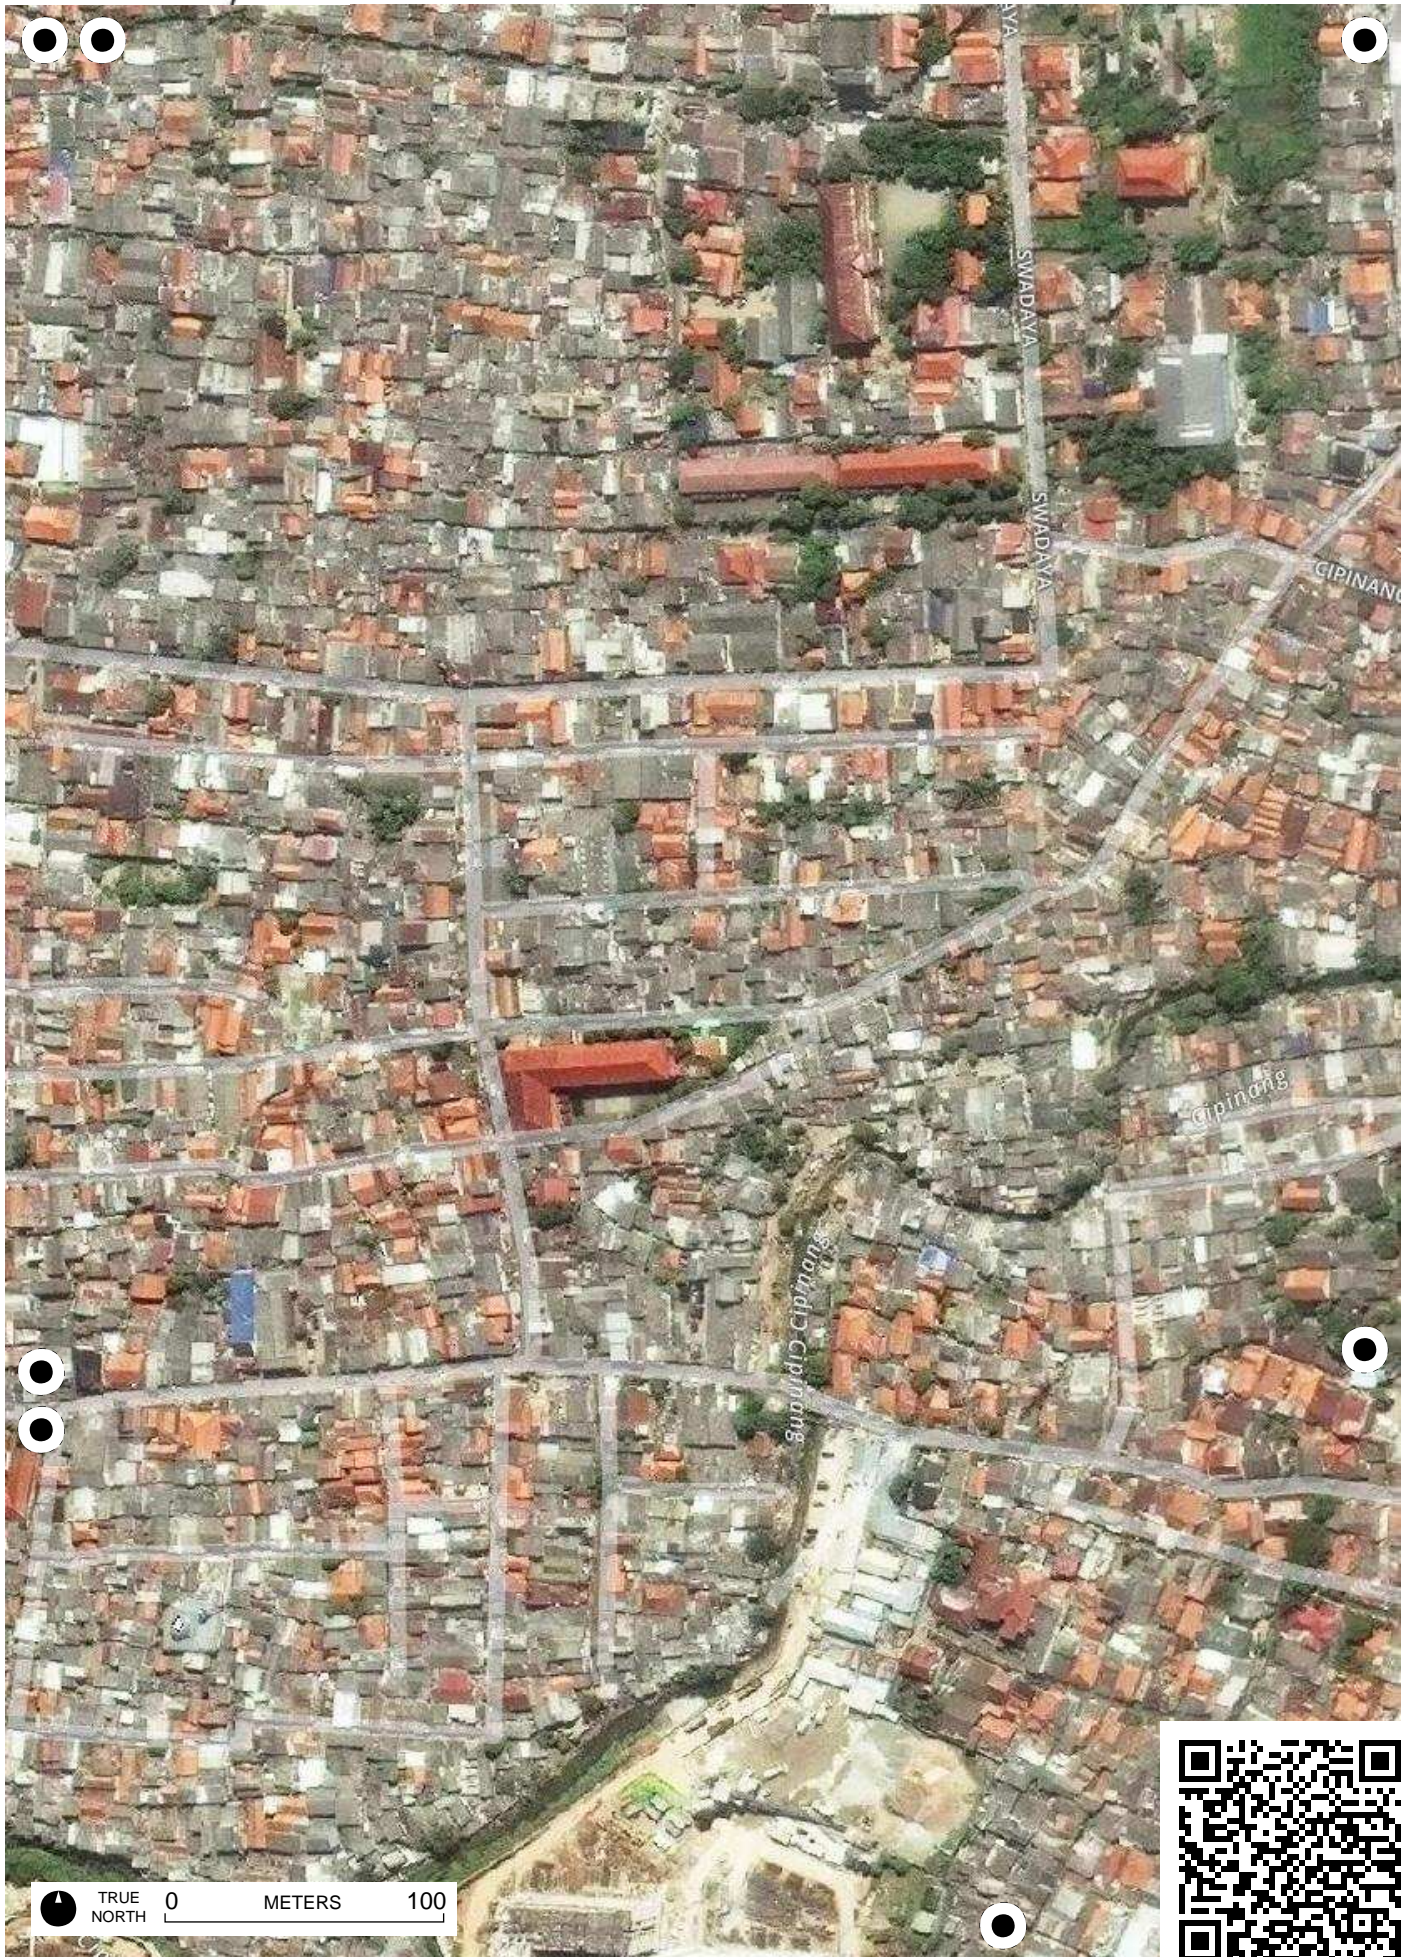


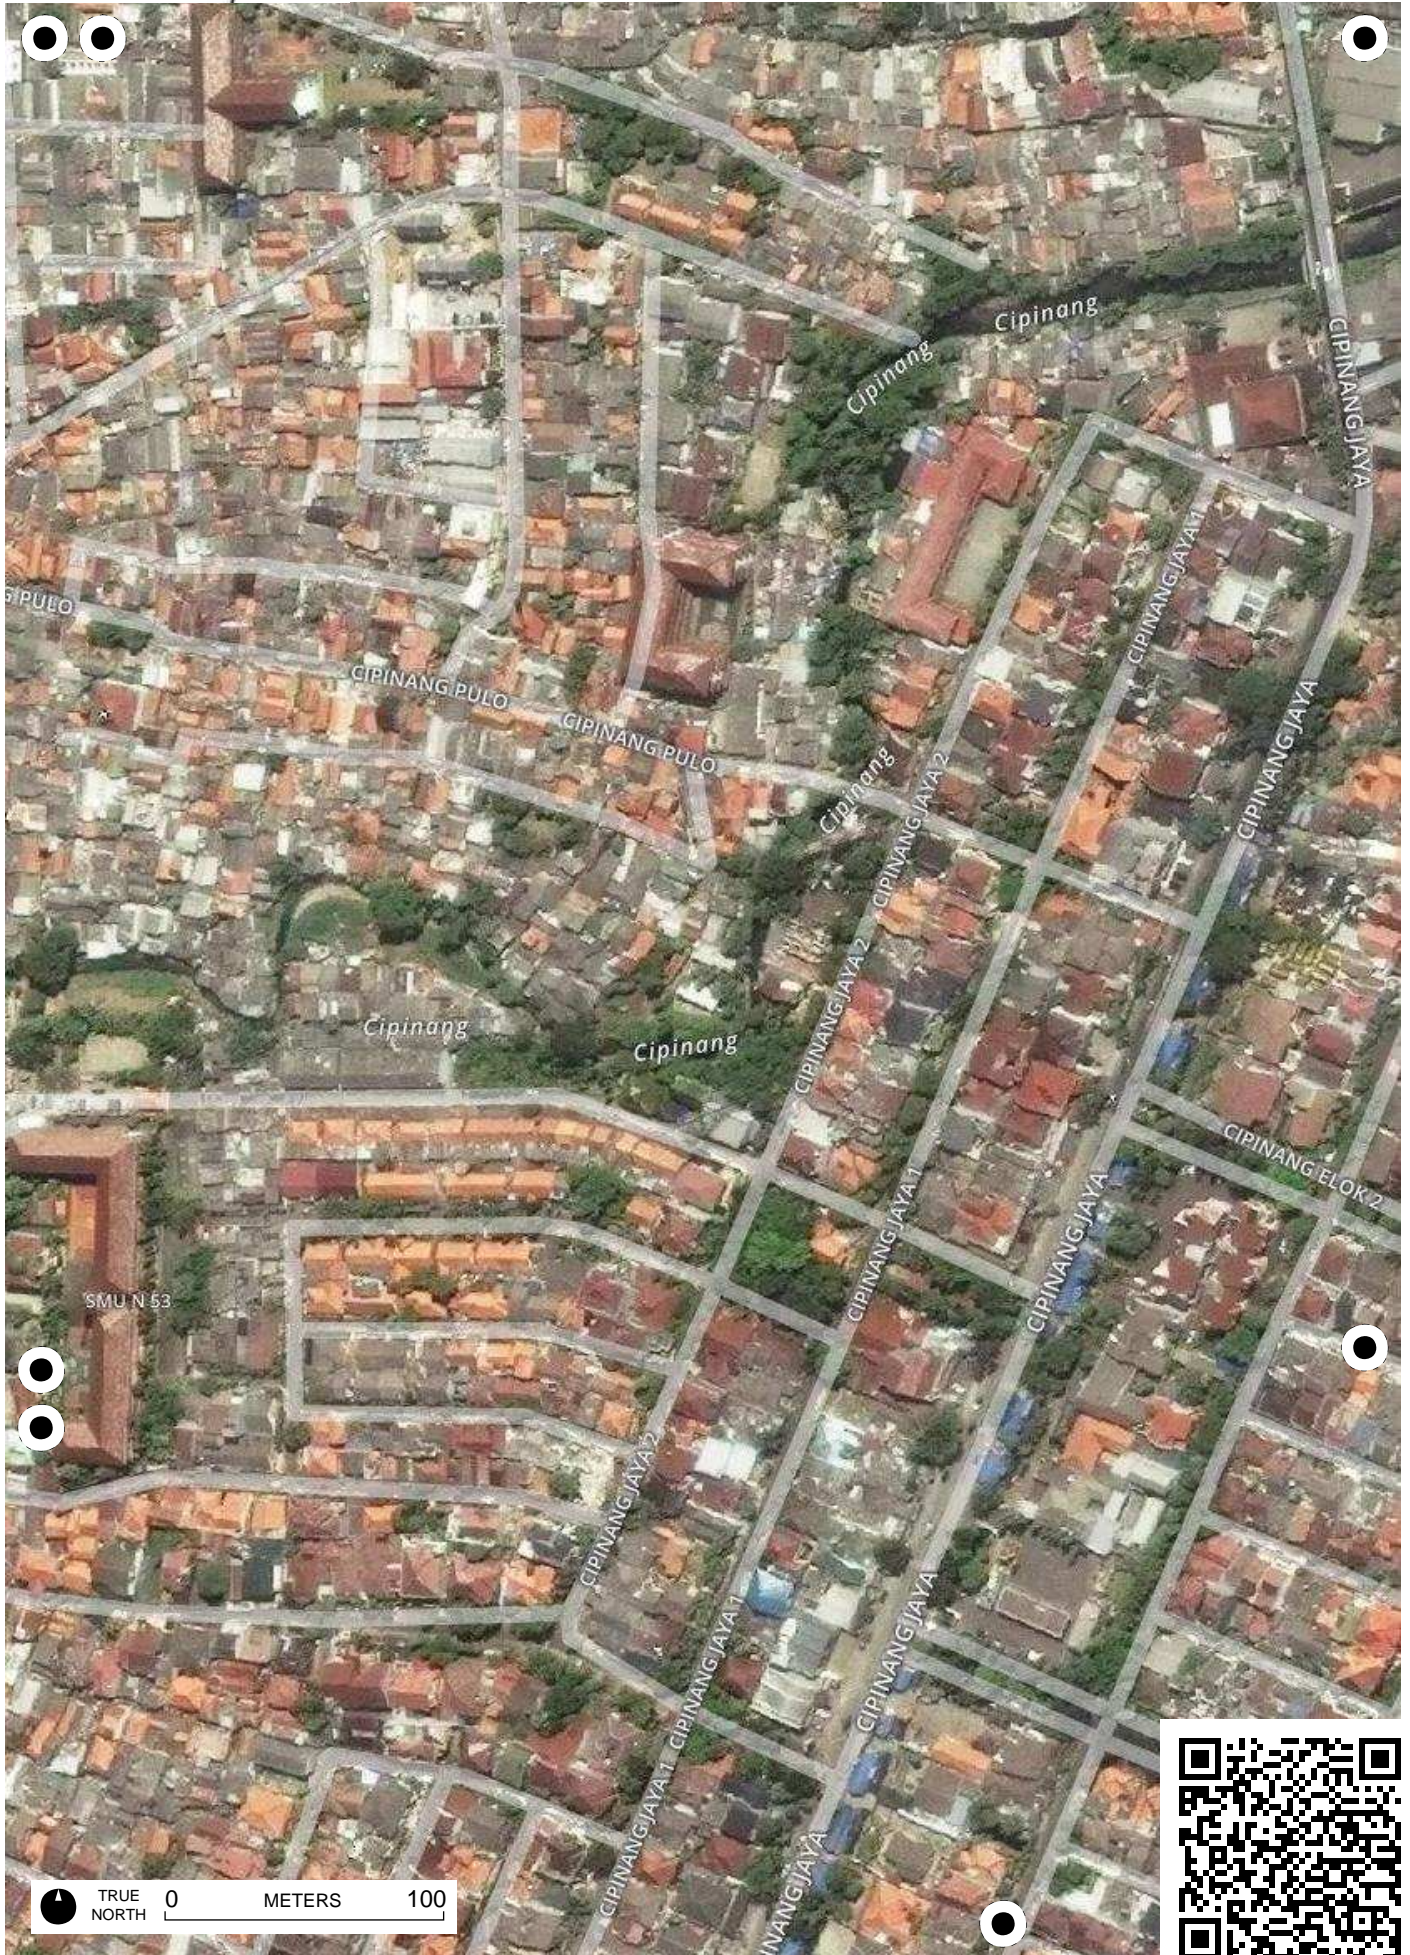



TRUE NORTH 0 METERS 100




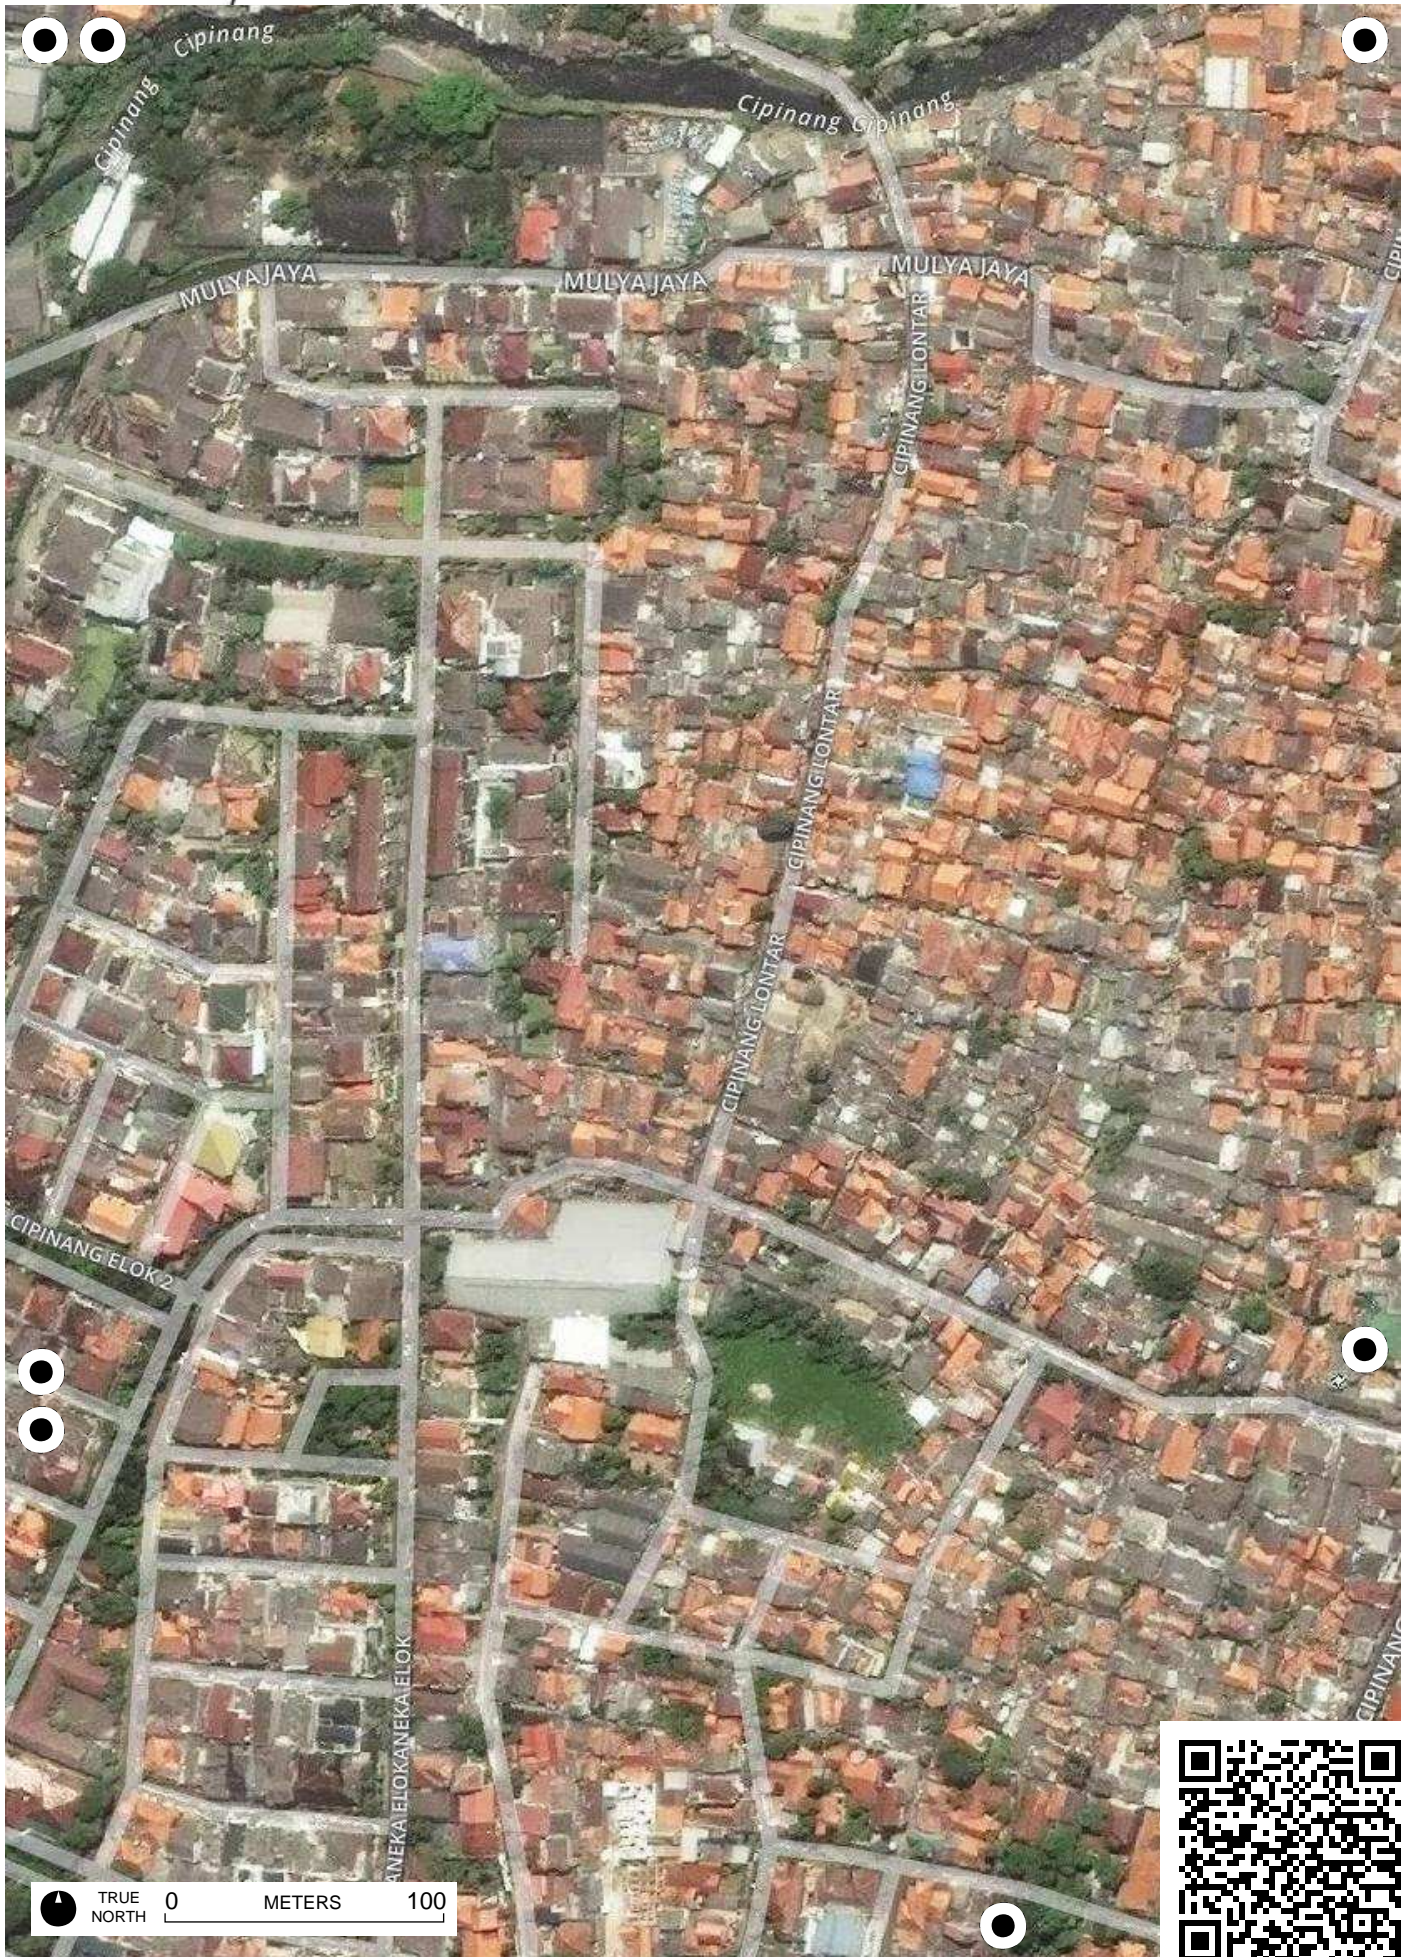




TRUE NORTH 0 METERS 100



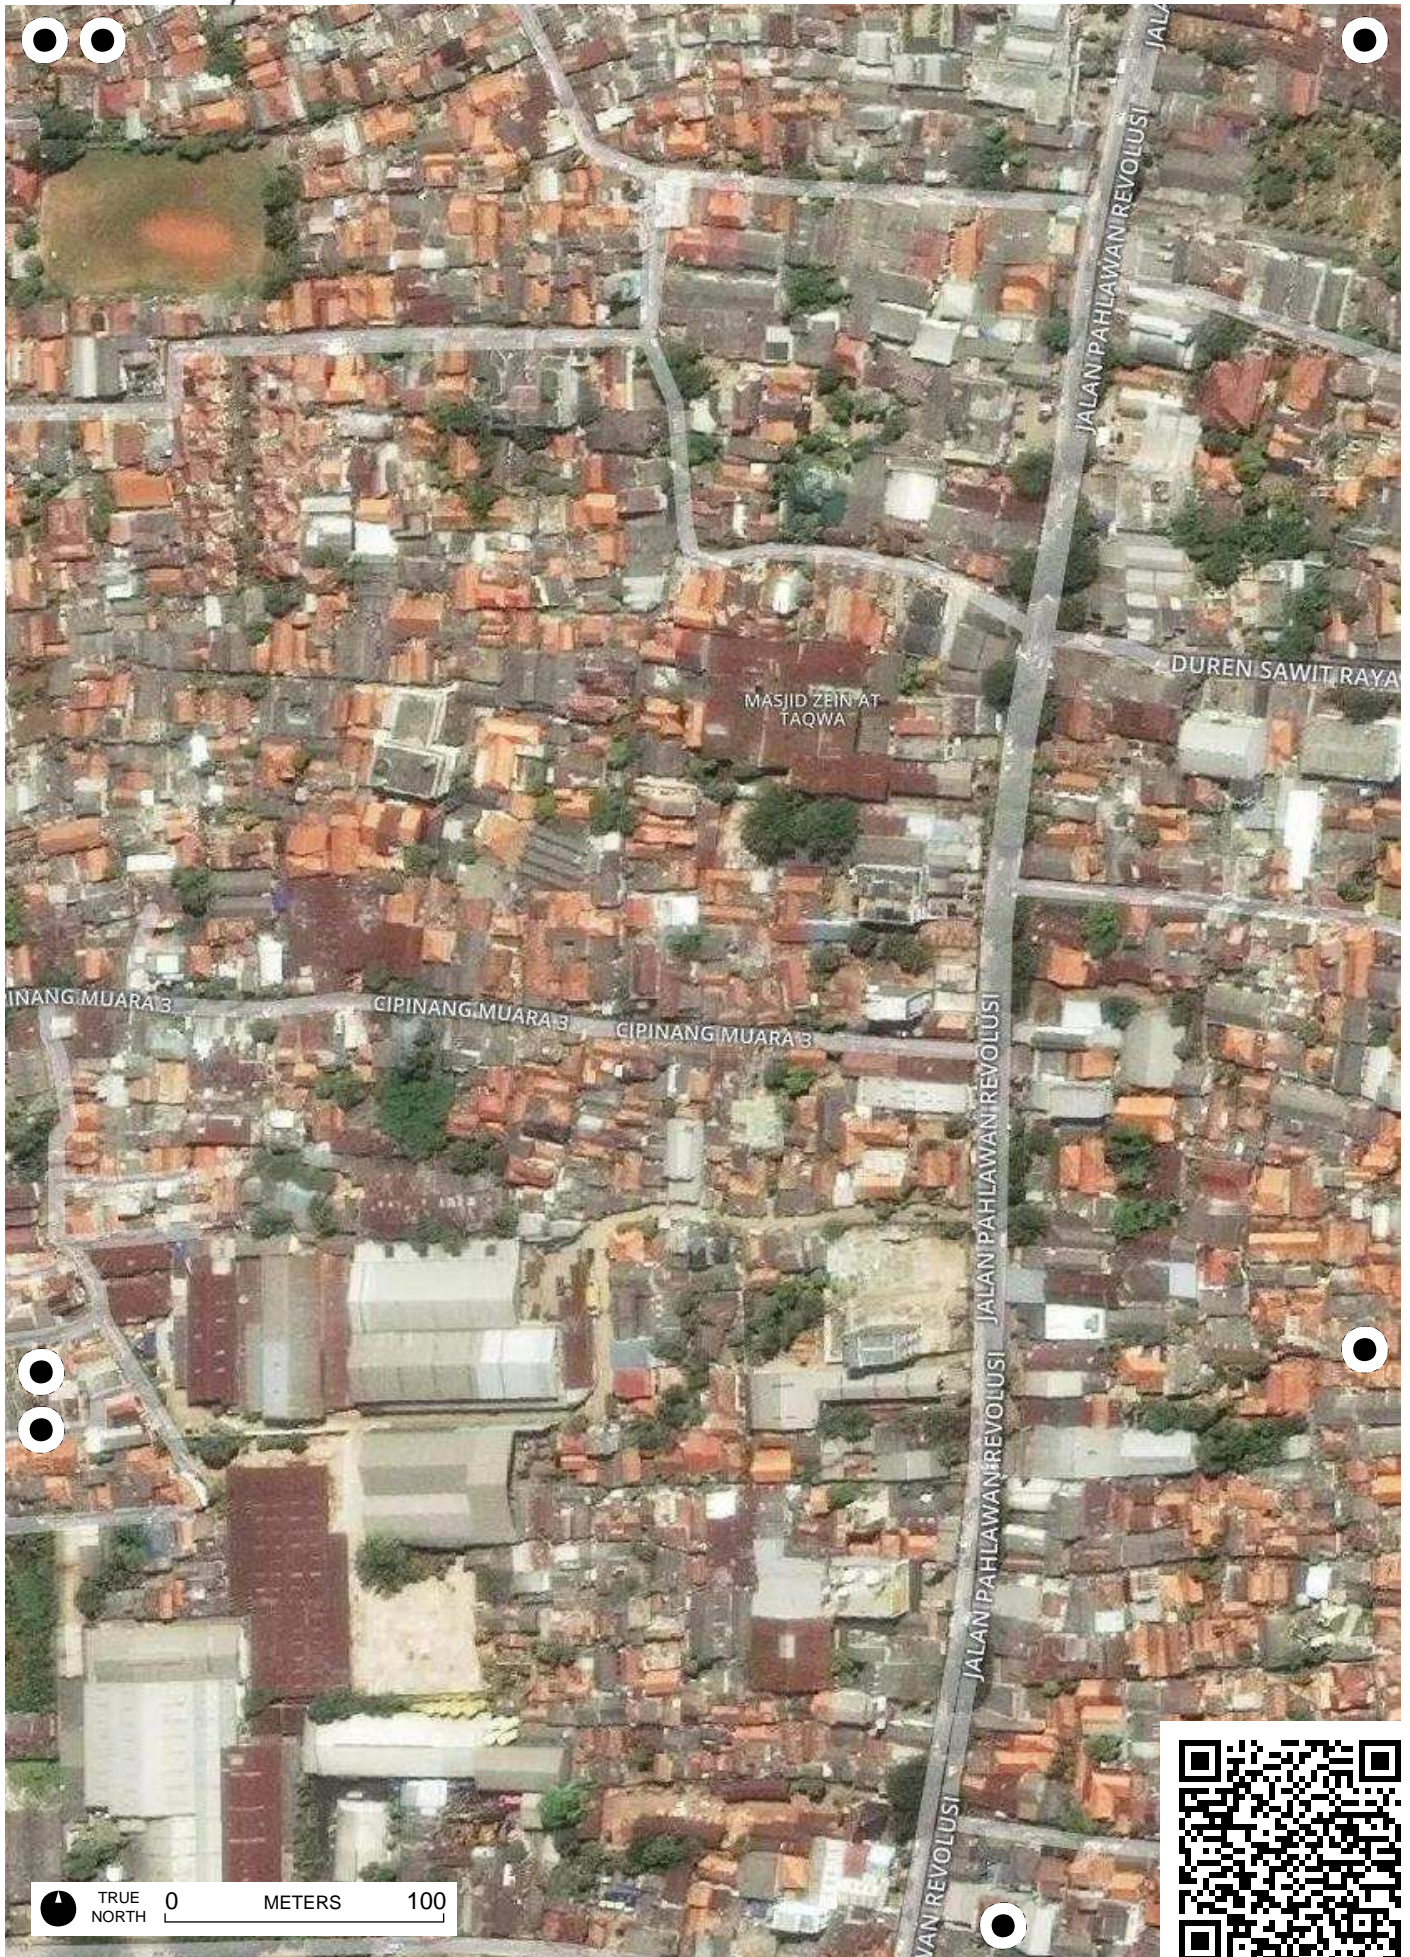

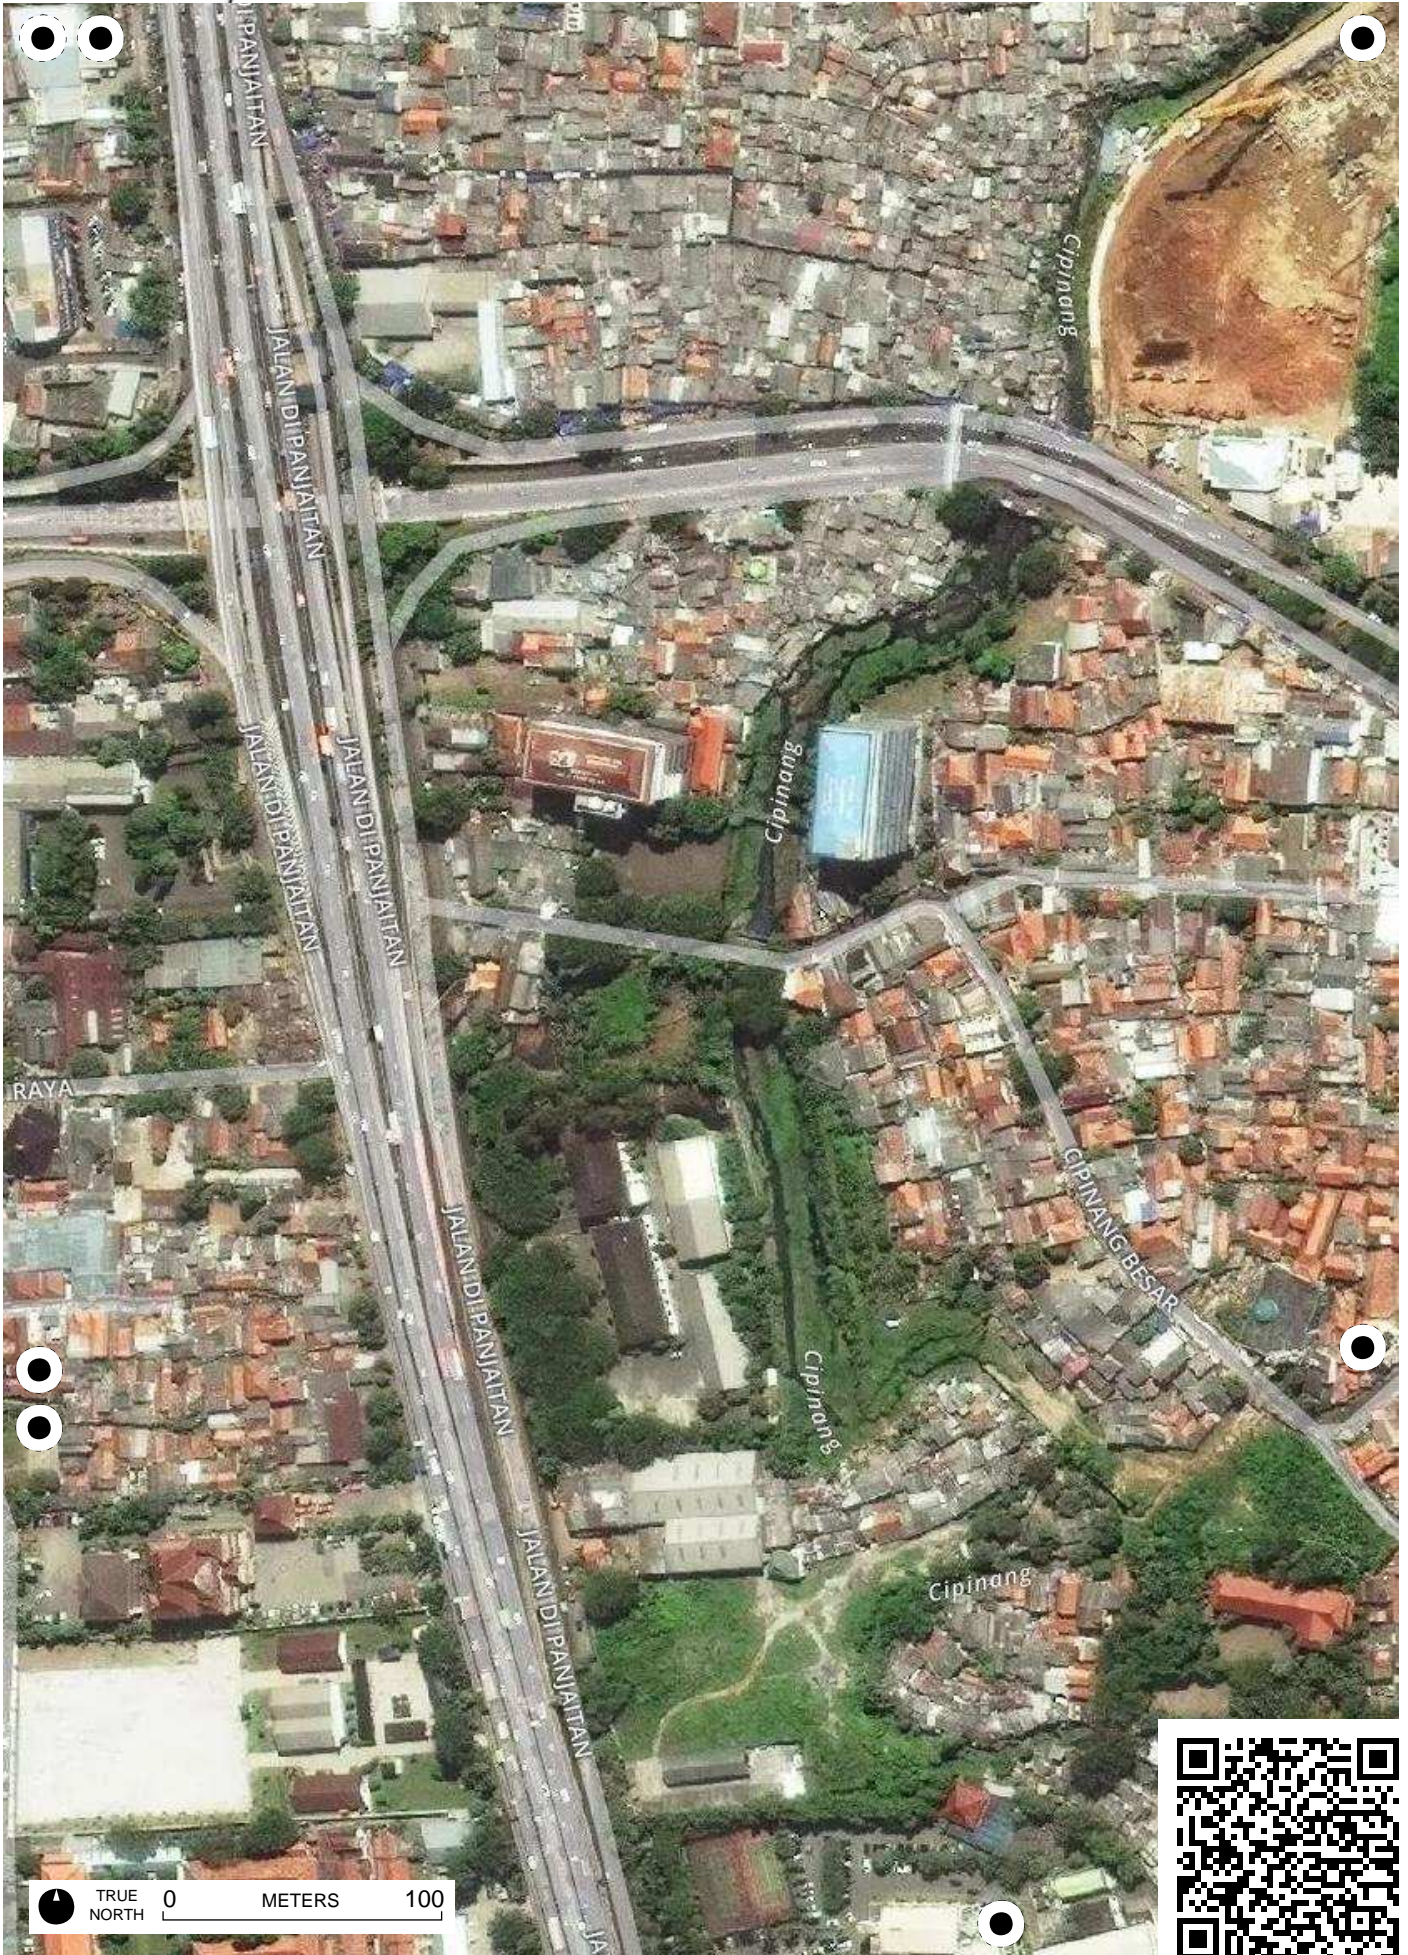


TRUE NORTH 0 METERS 100






TRUE NORTH 0 METERS 100



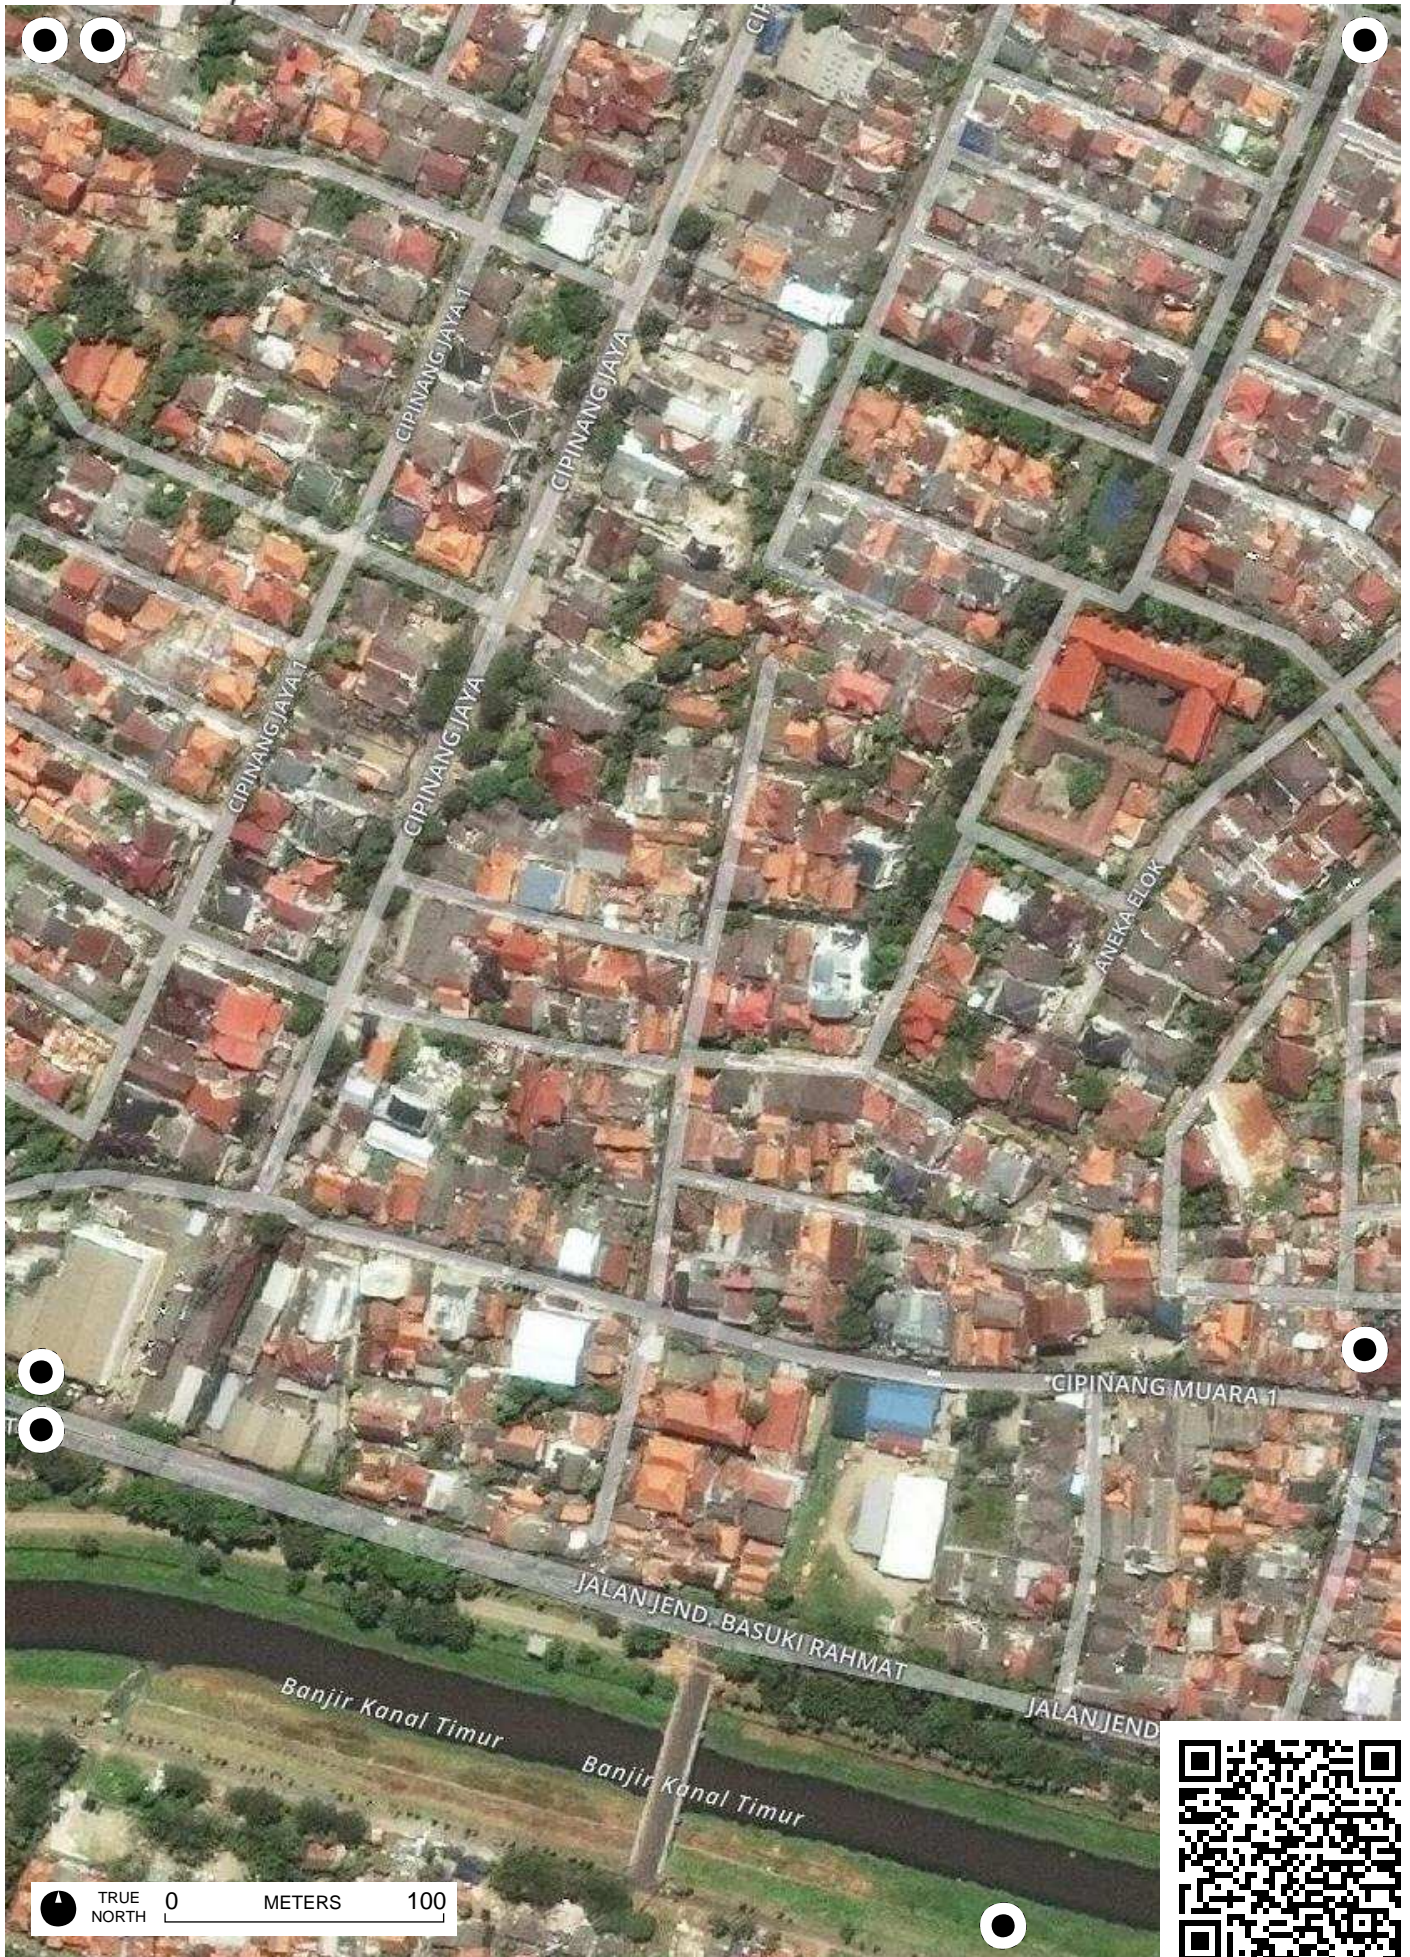


TRUE NORTH 0 METERS 100



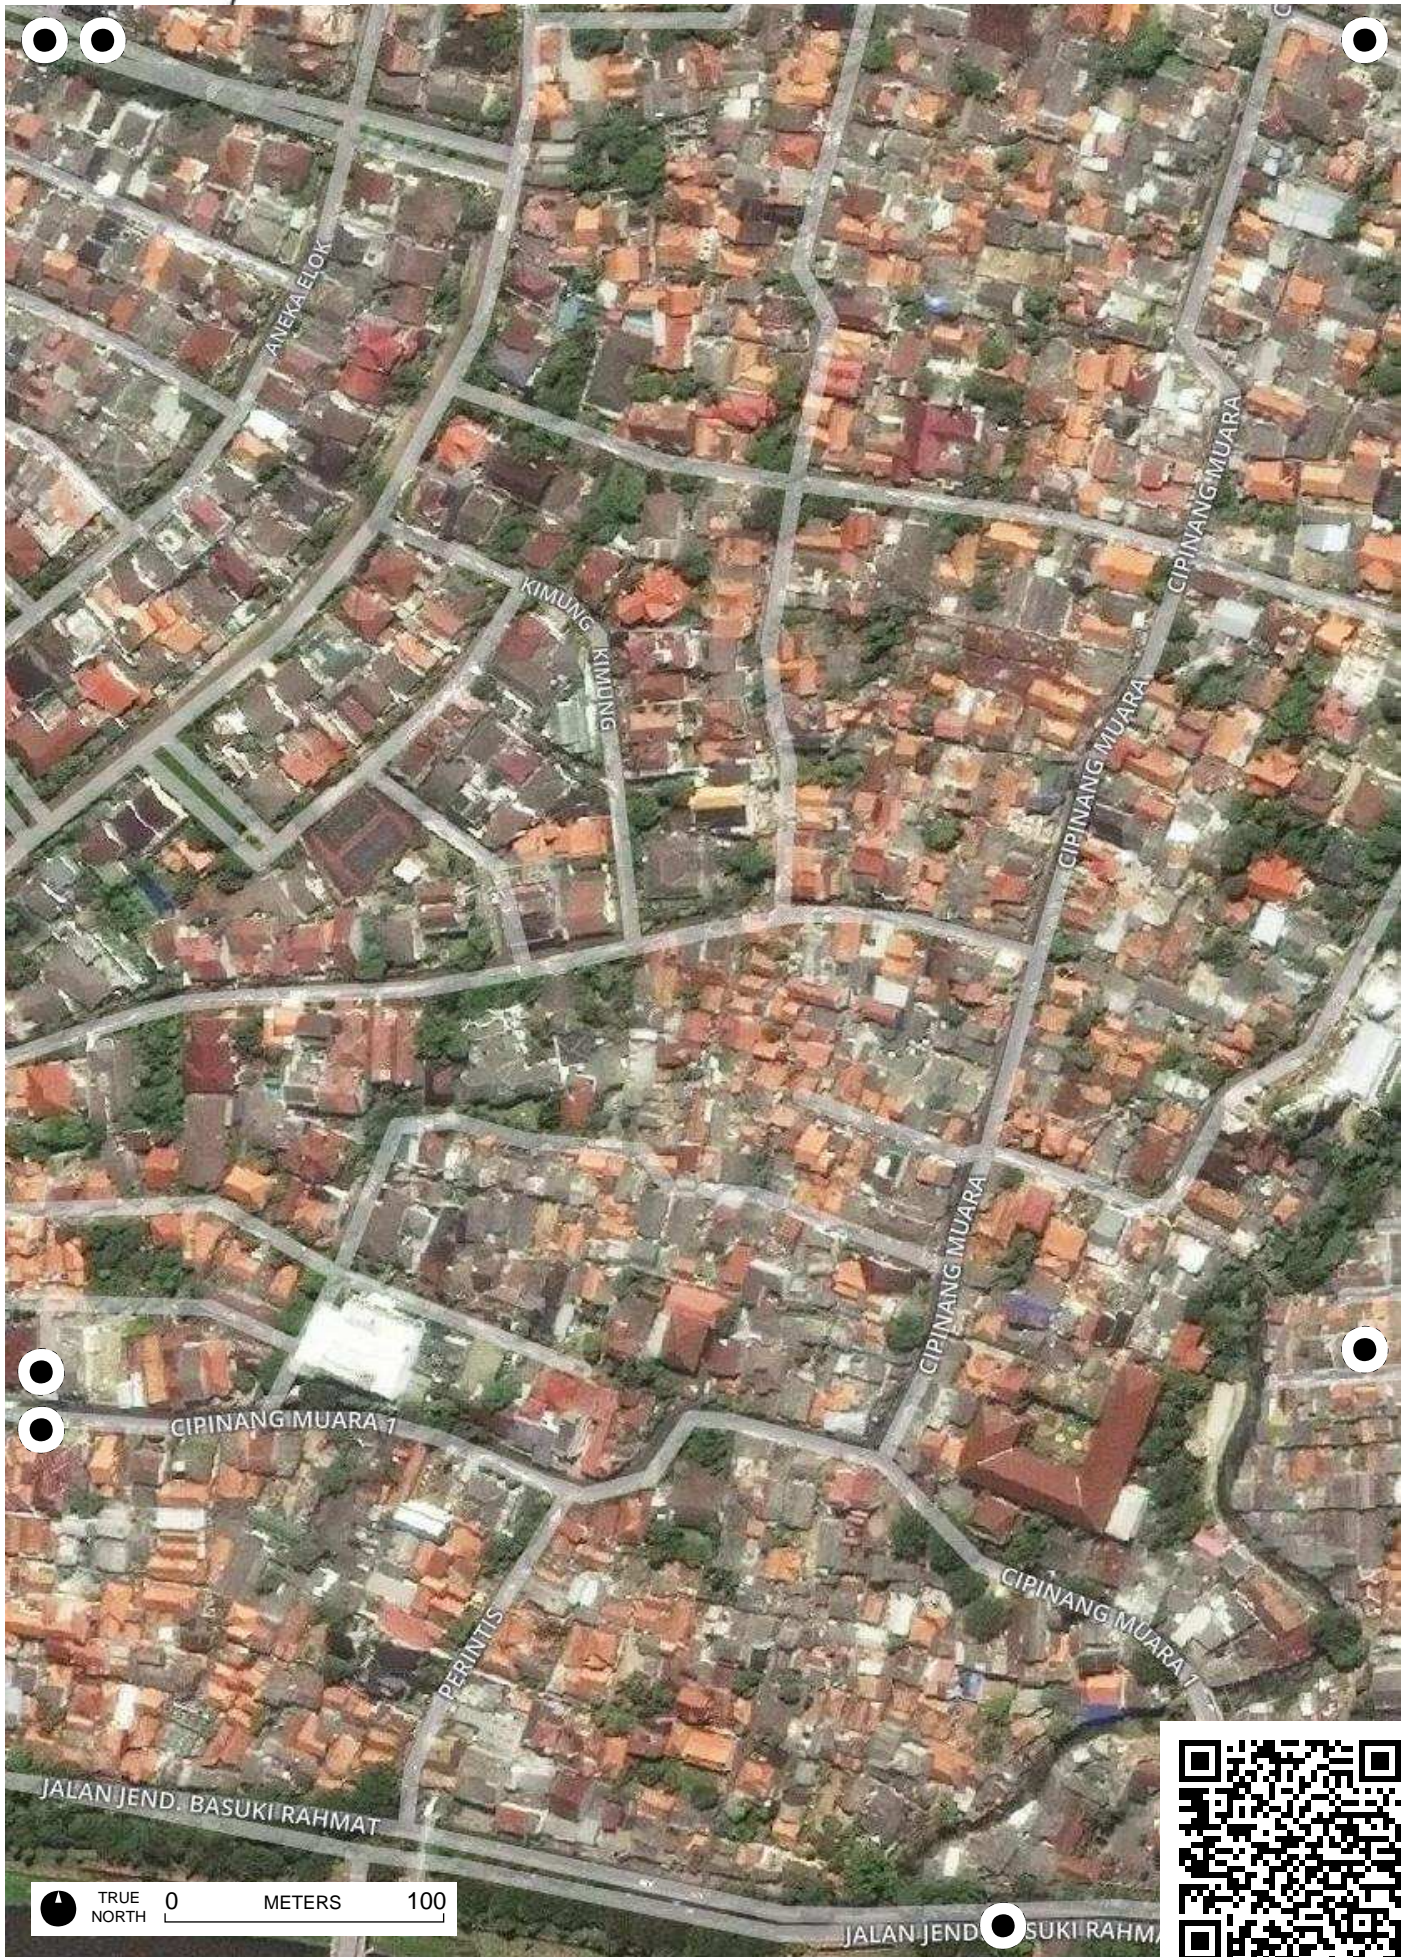

TRUE NORTH 0 METERS 100



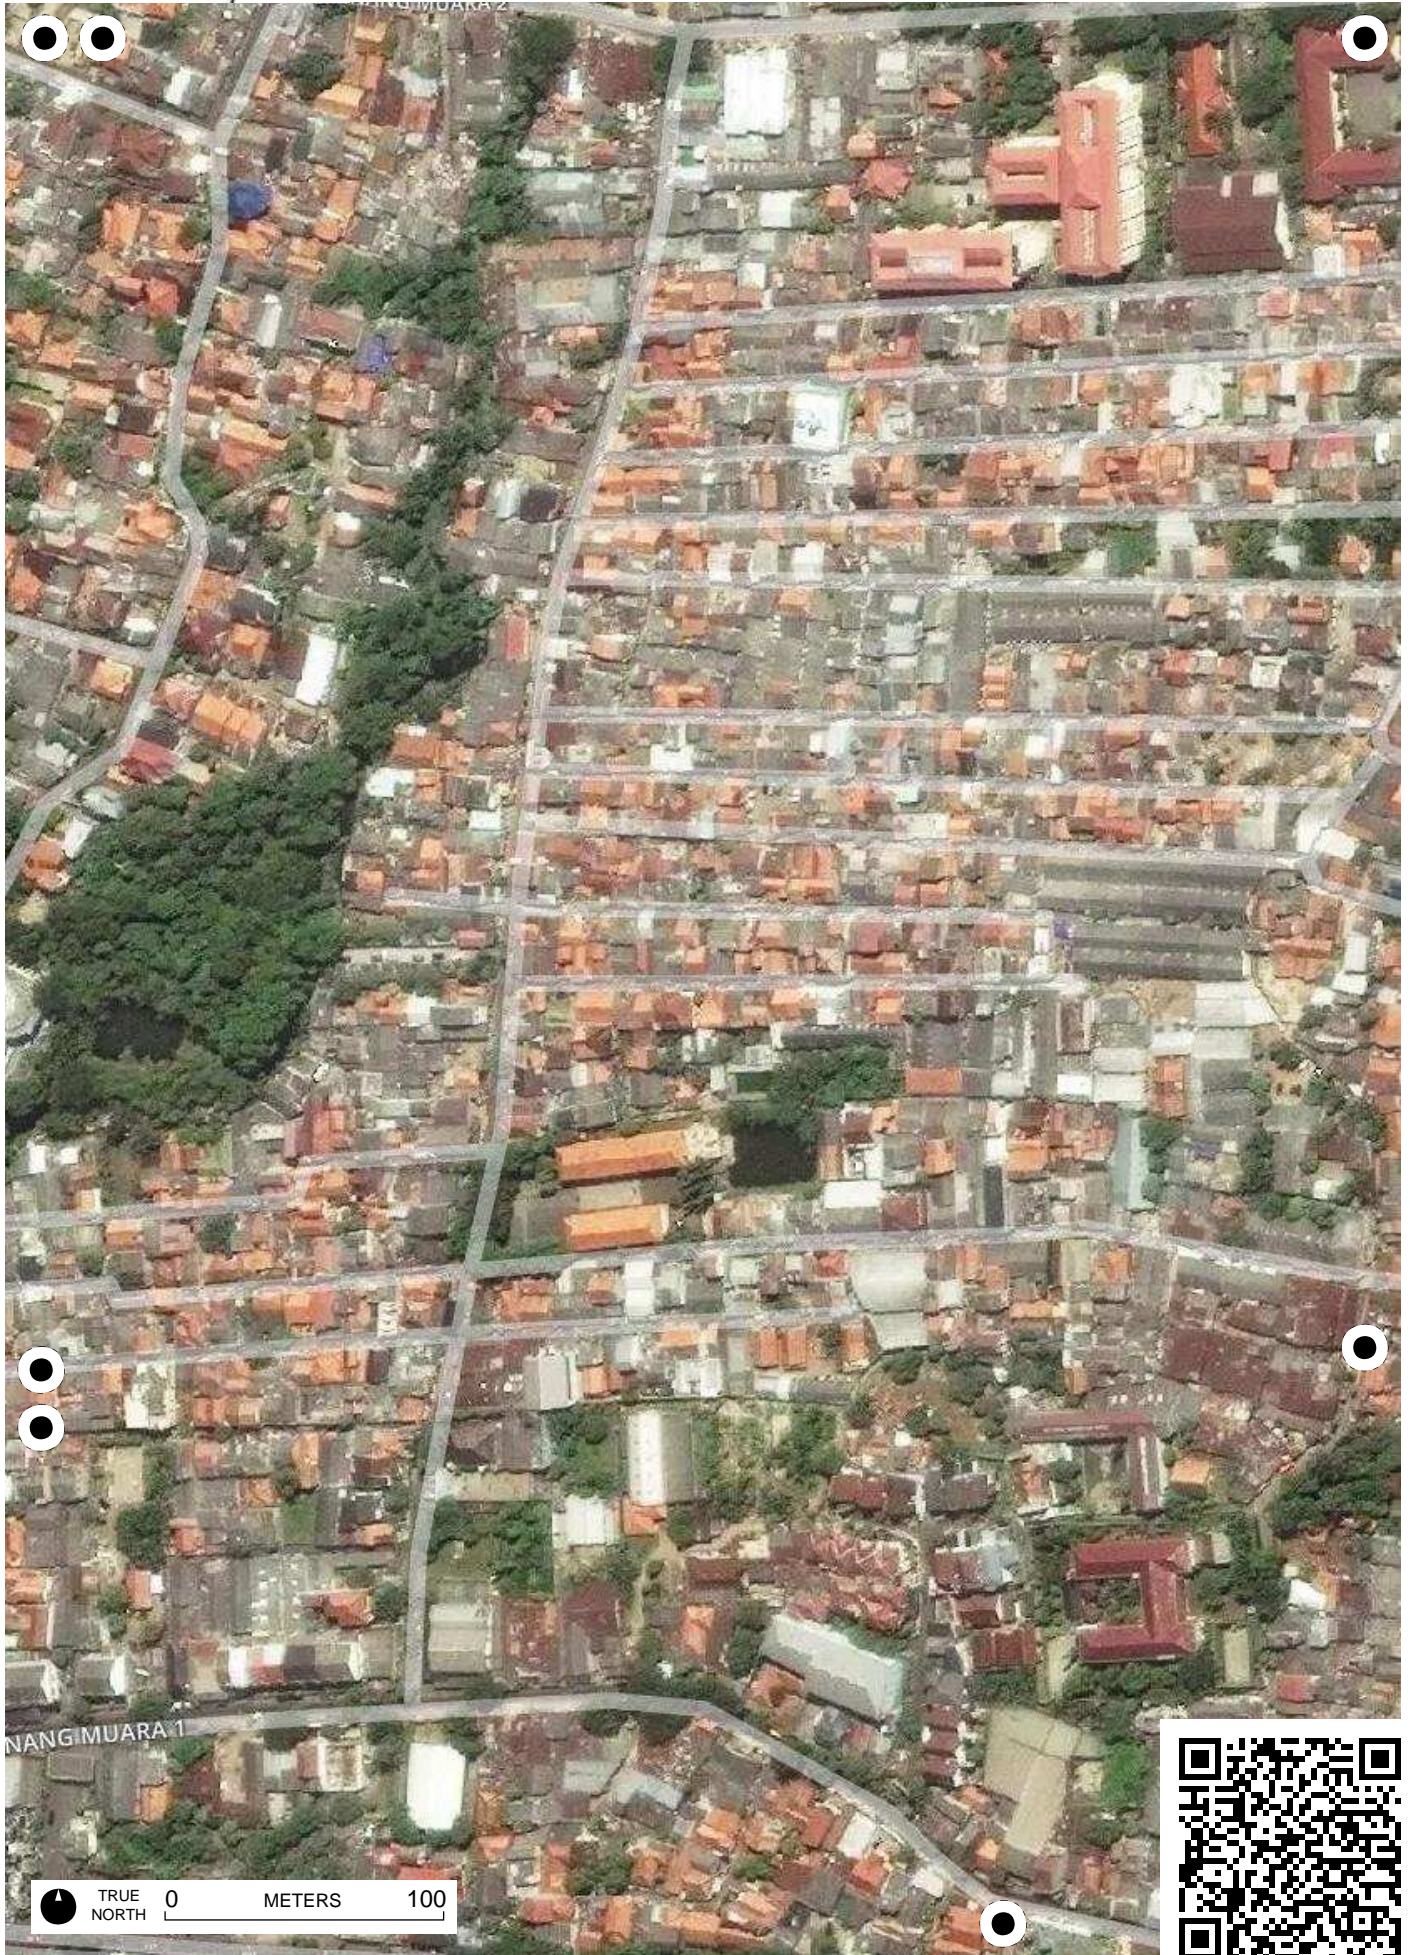


TRUE NORTH 0 METERS 100





TRUE NORTH 0 METERS 100



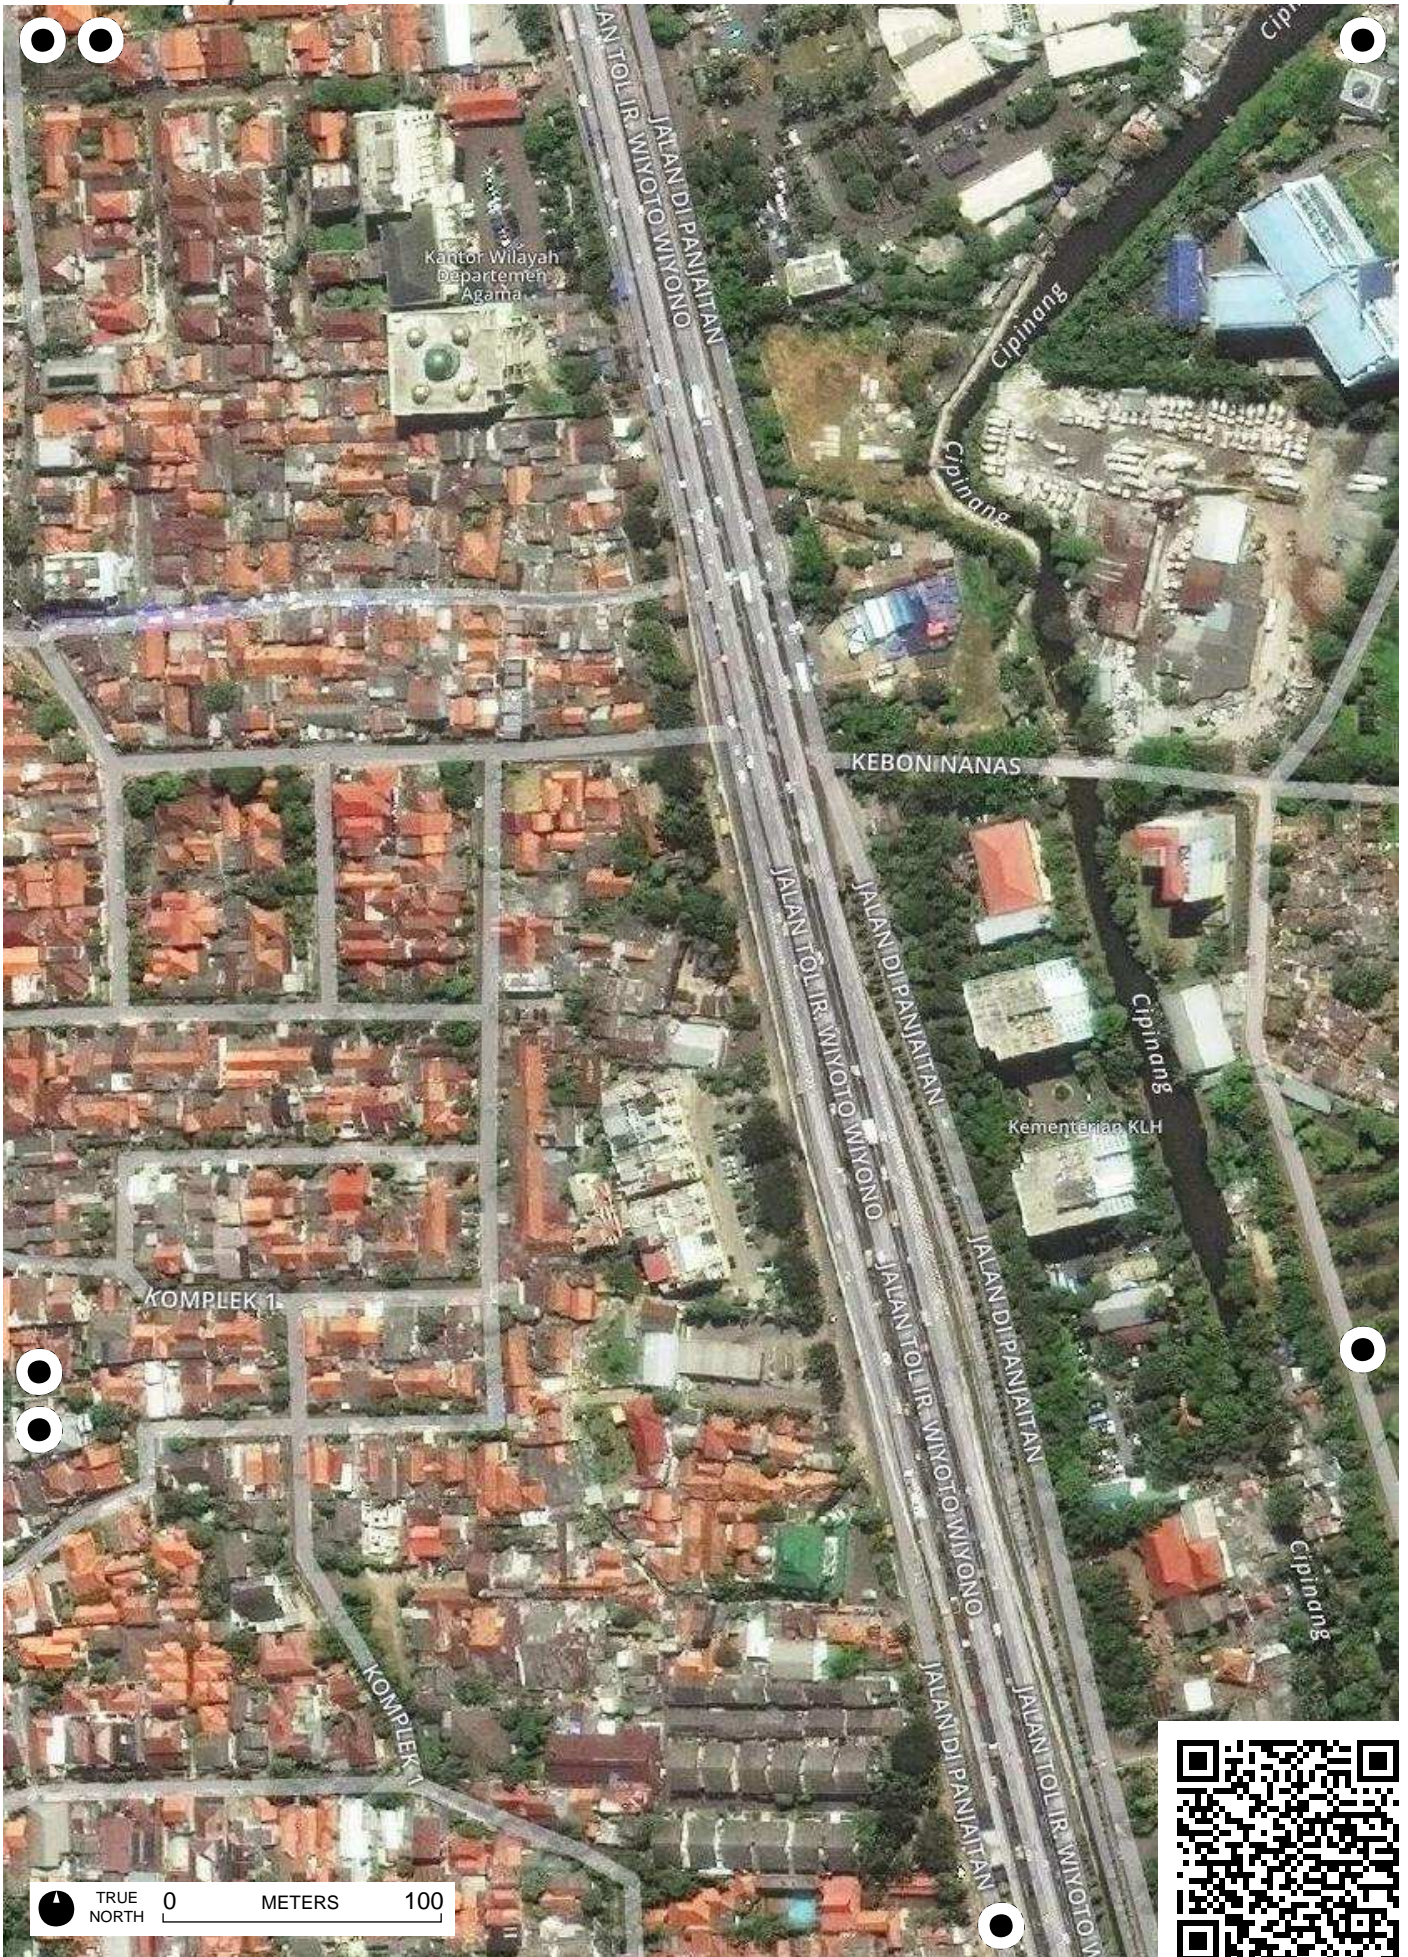



TPU Cipinang Besar


KEBON NANAS


KEBON NANAS

KEBON NANAS

TRUE NORTH 0 METERS 100



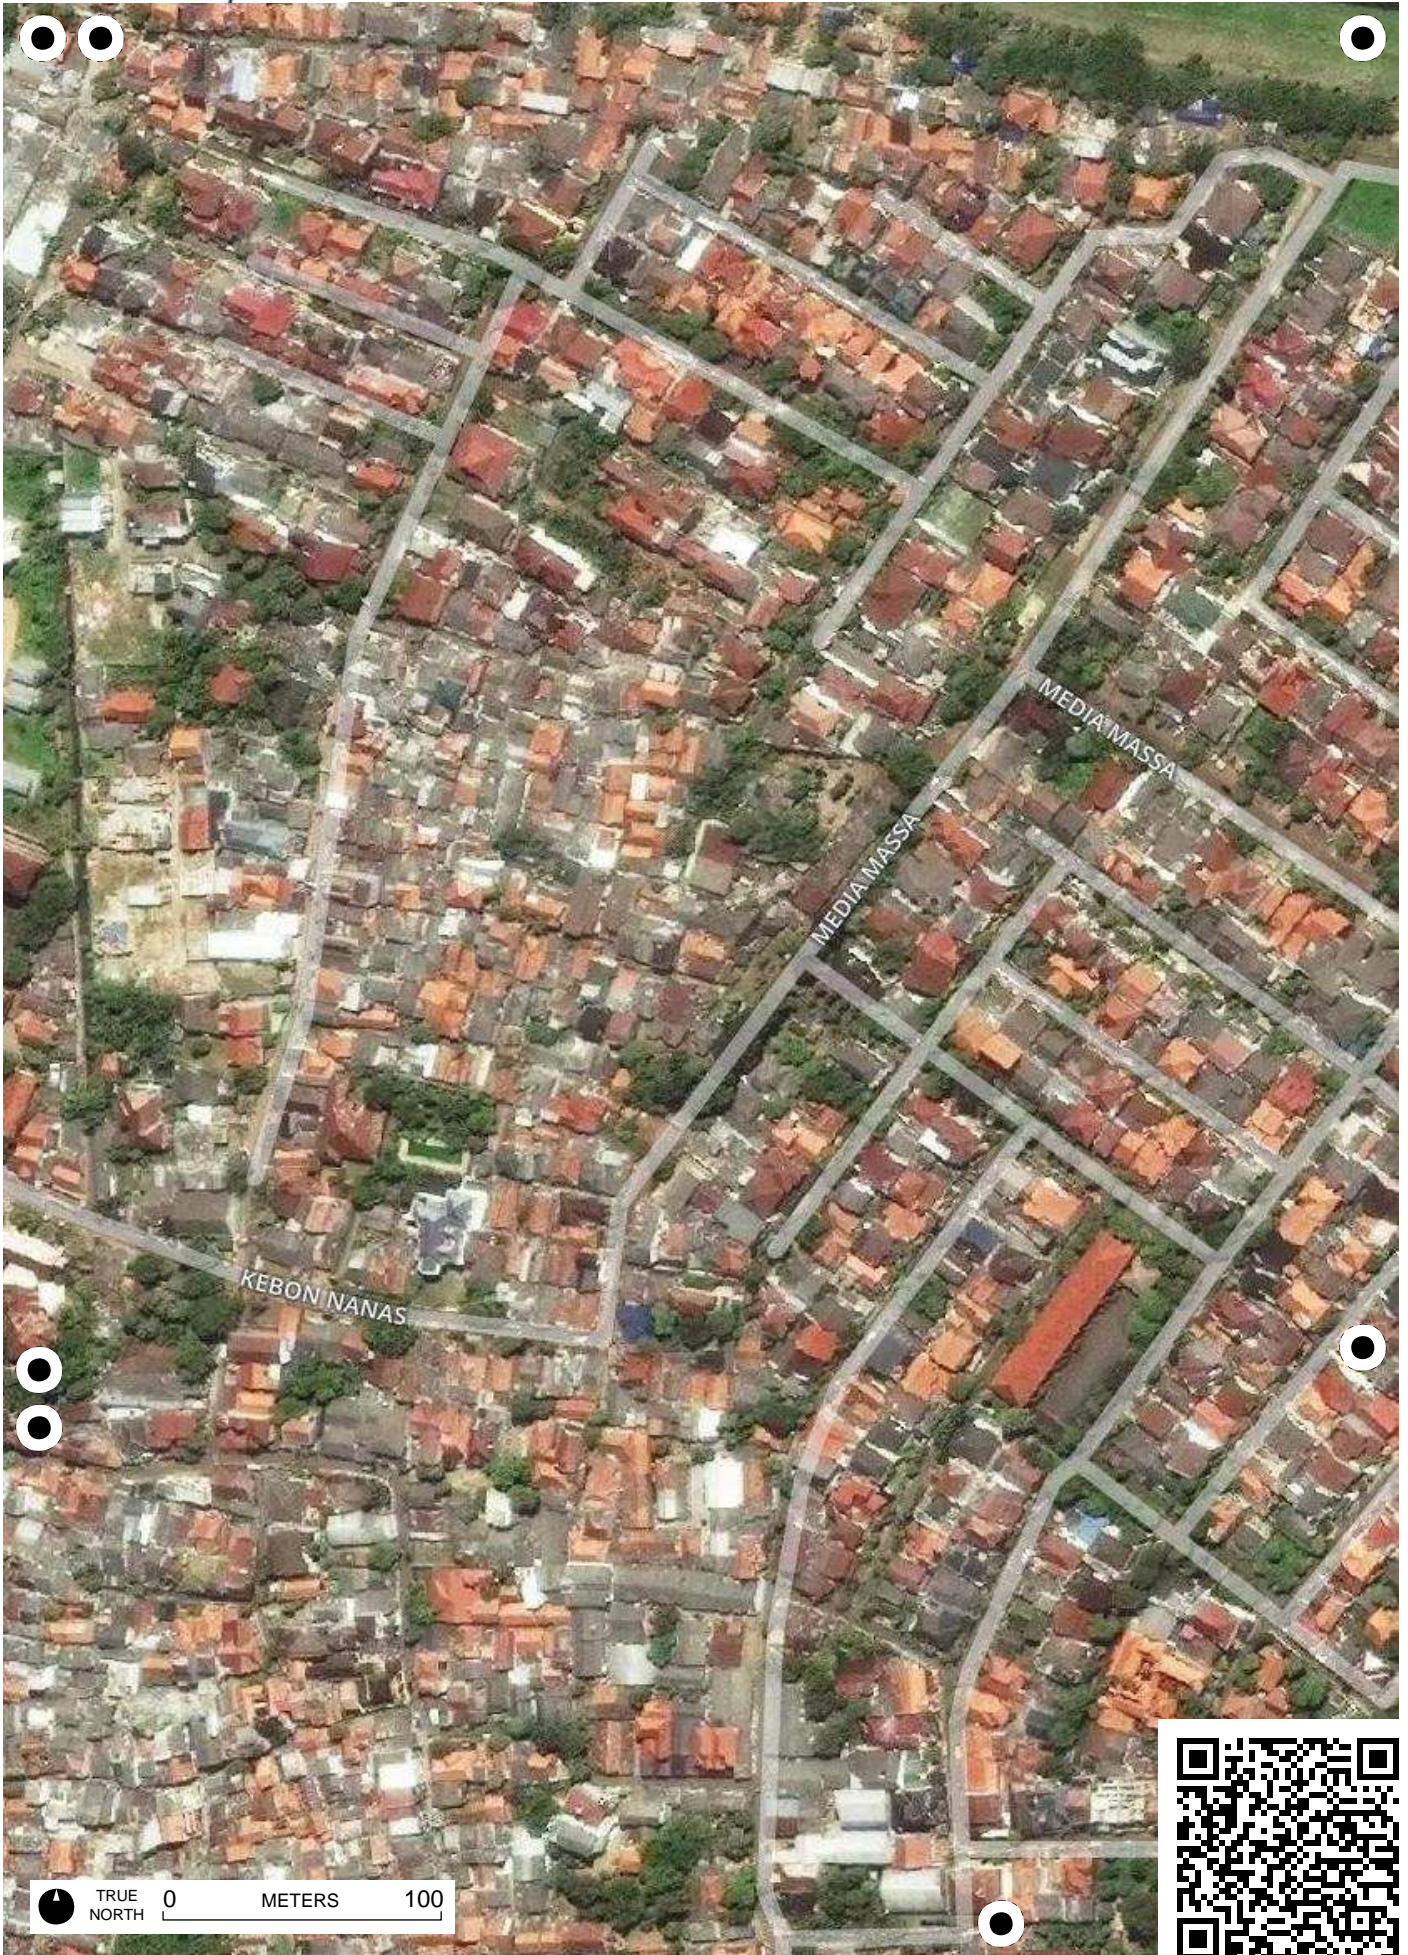

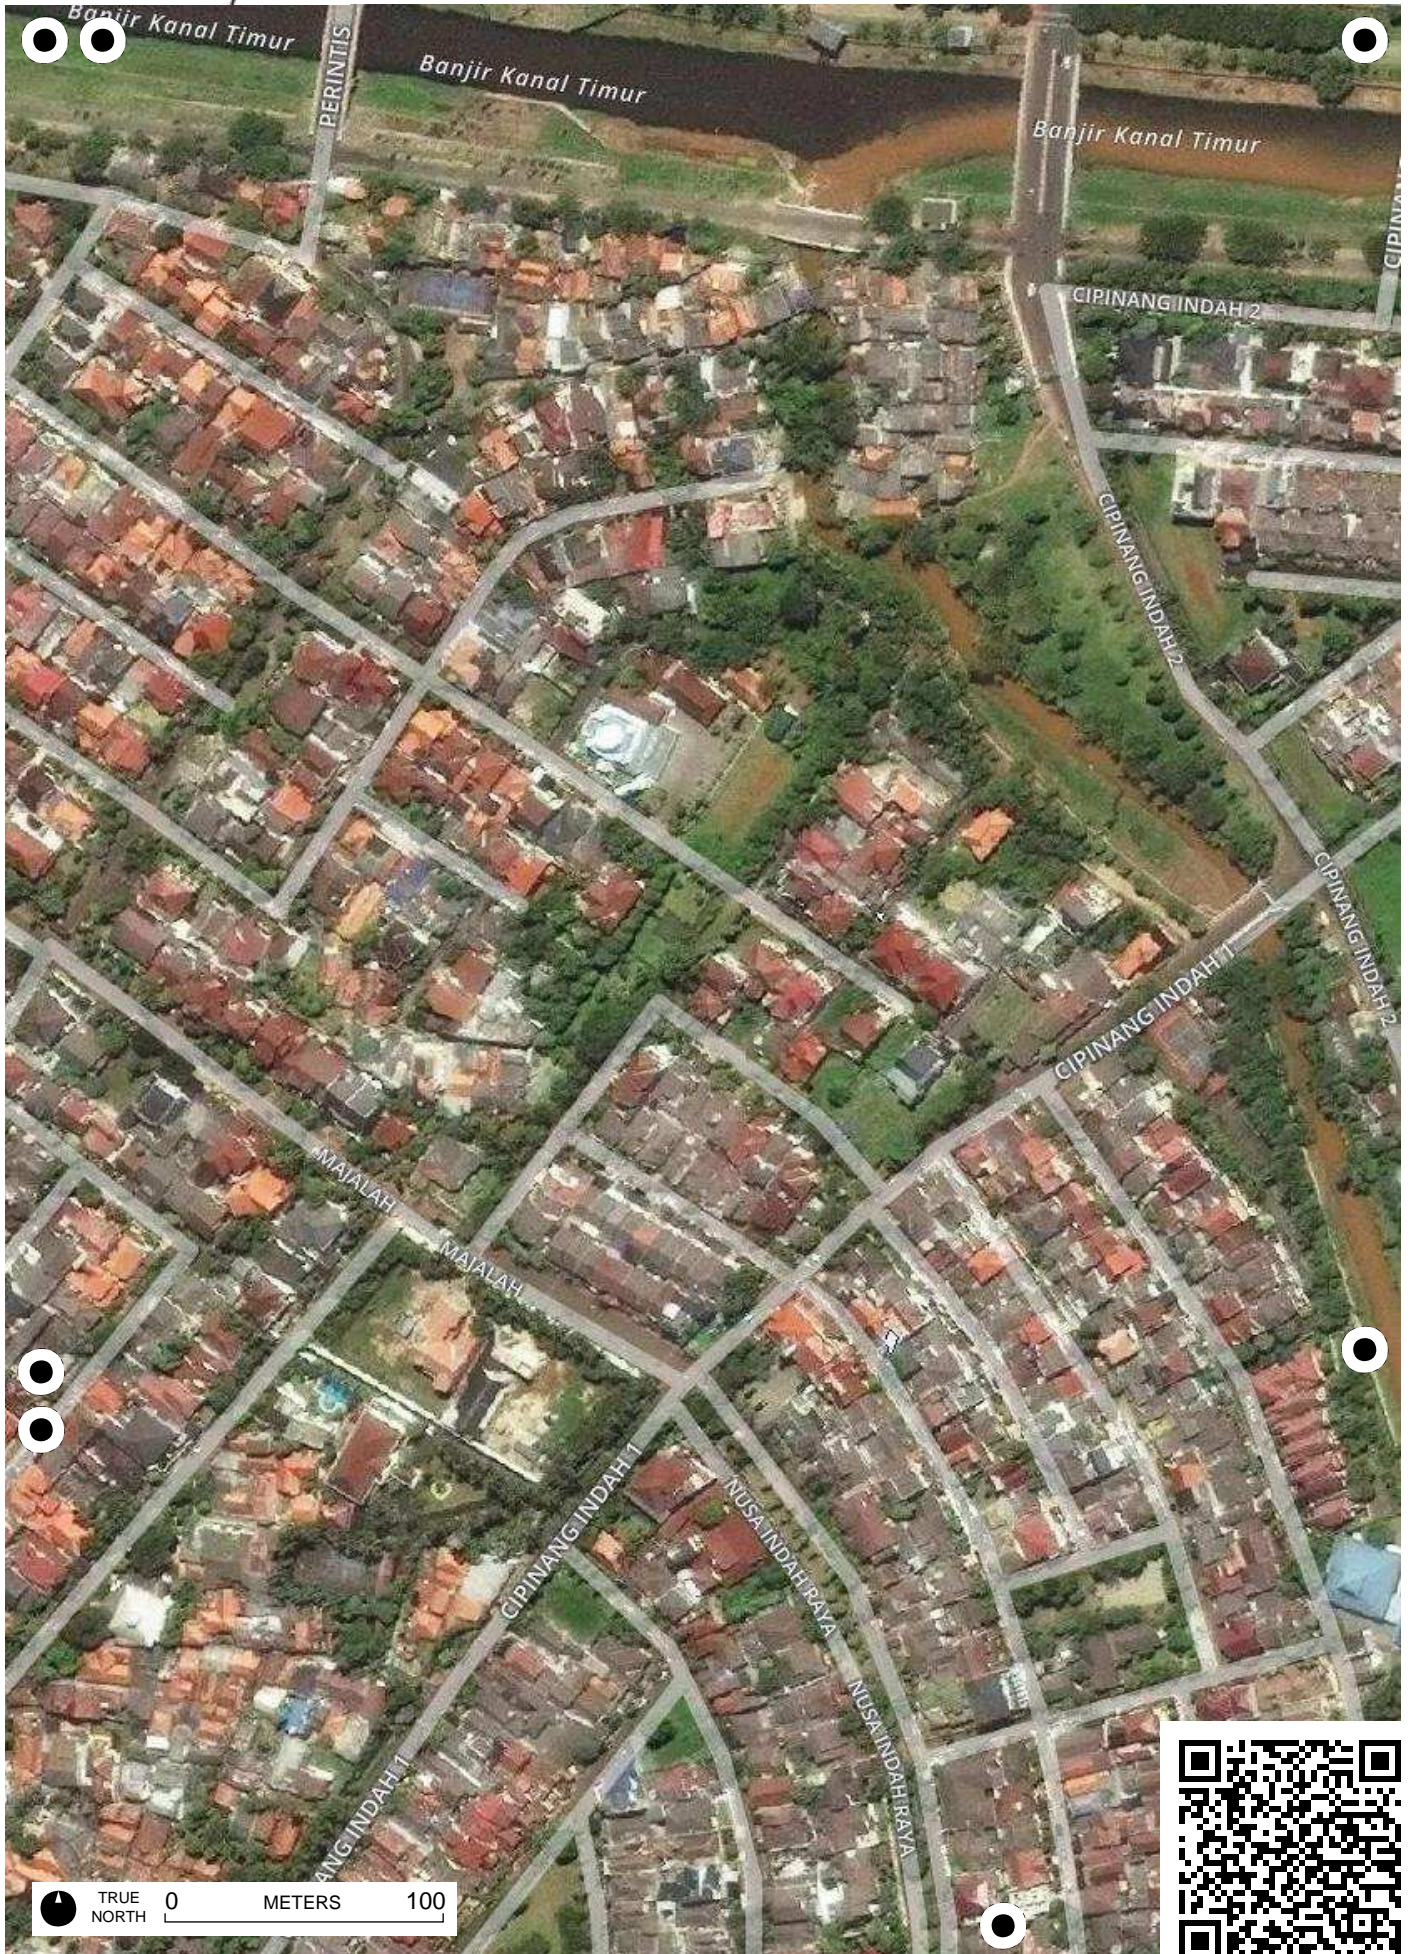








TRUE NORTH 0 METERS 100






TRUE NORTH 0 METERS 100



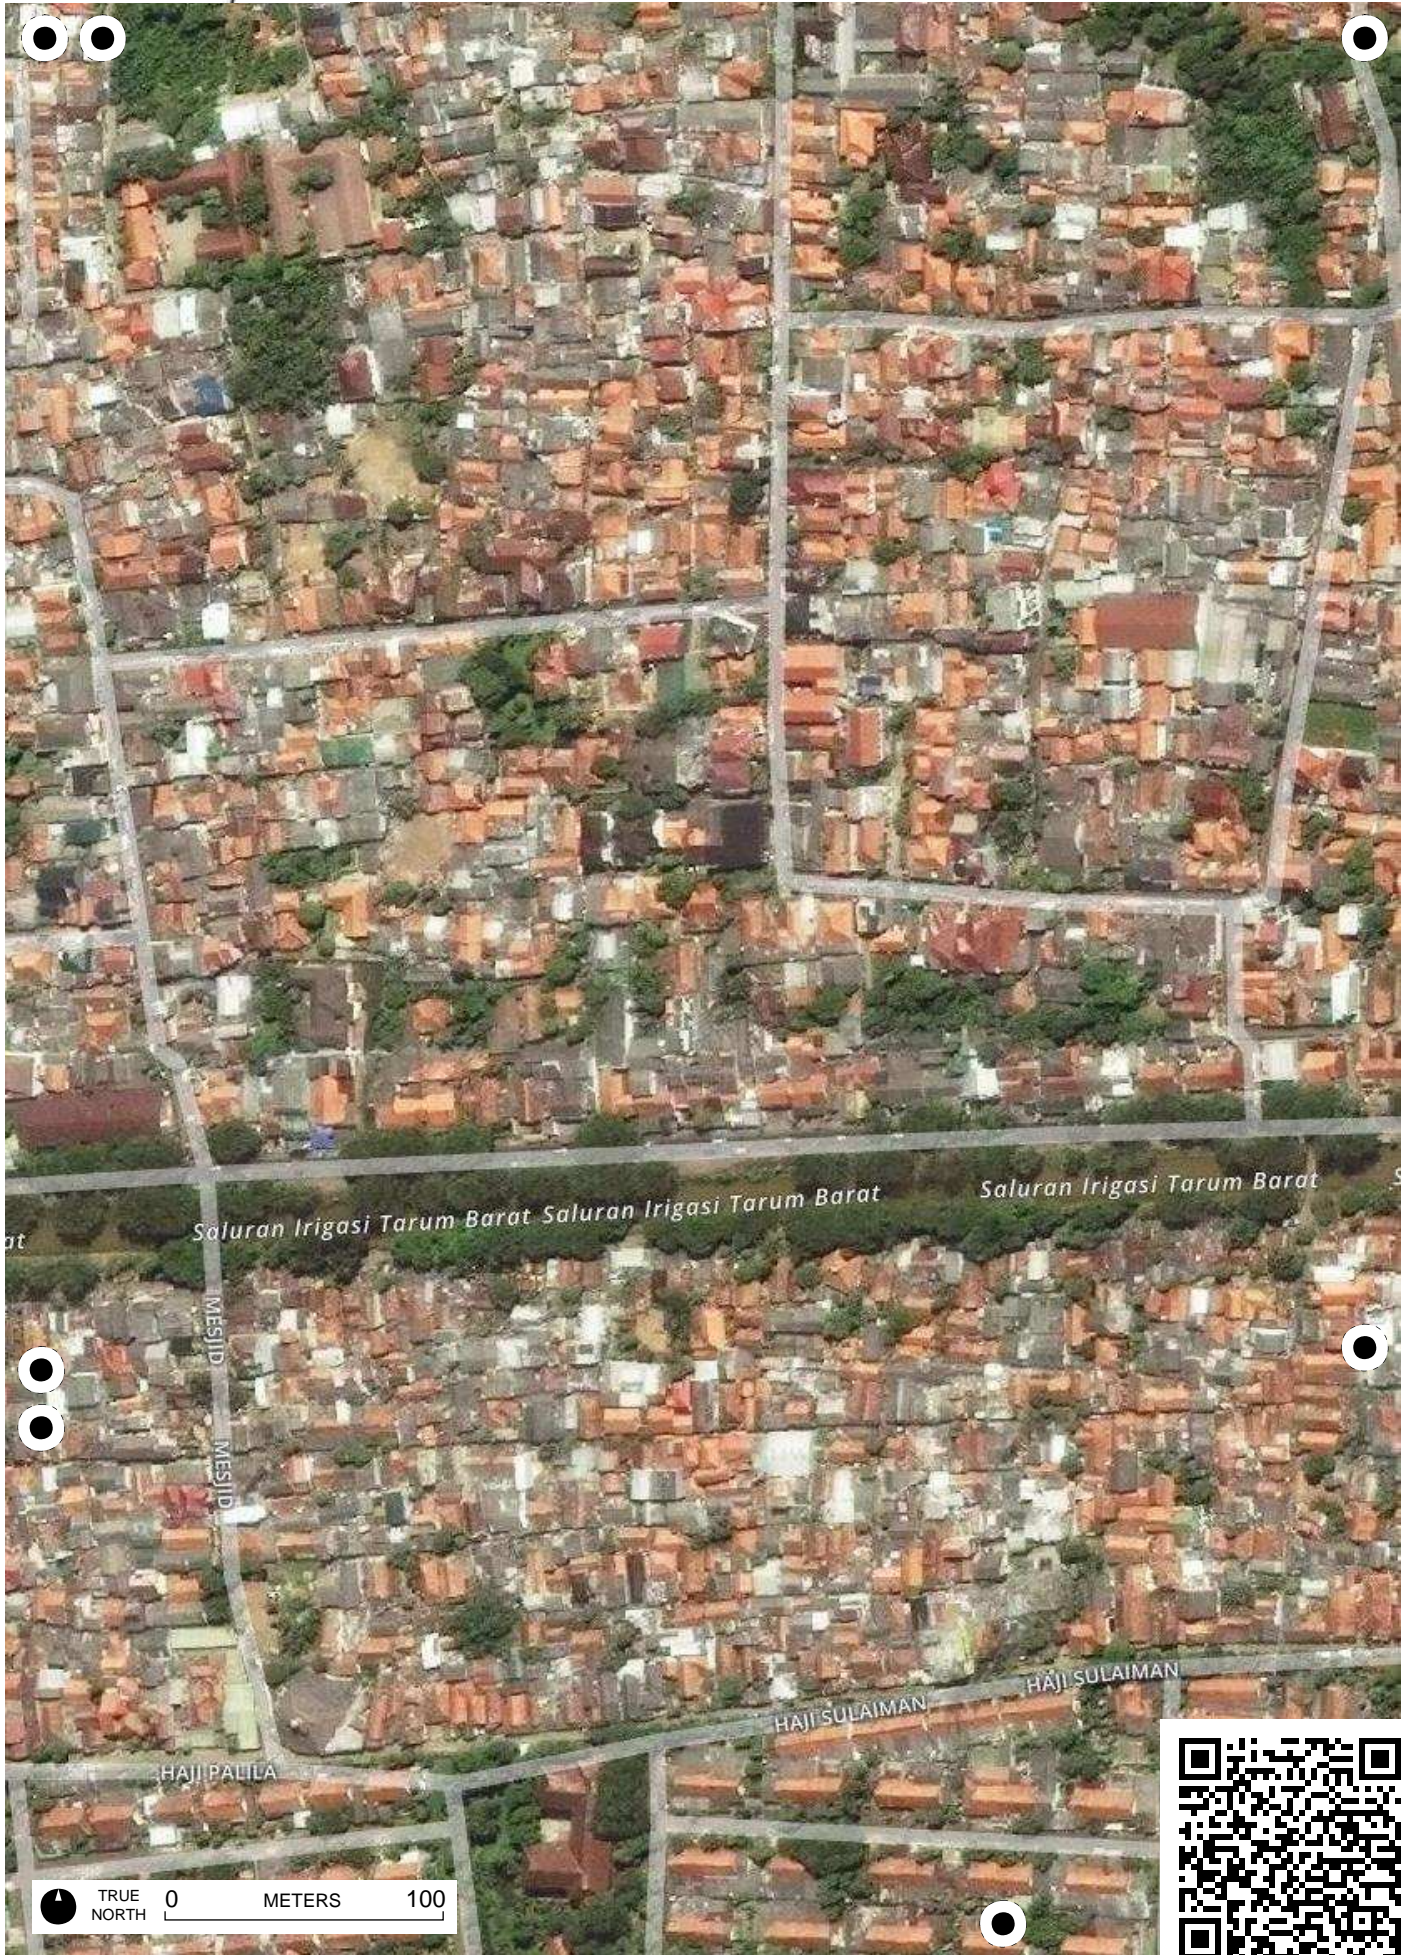

TRUE NORTH 0 METERS 100



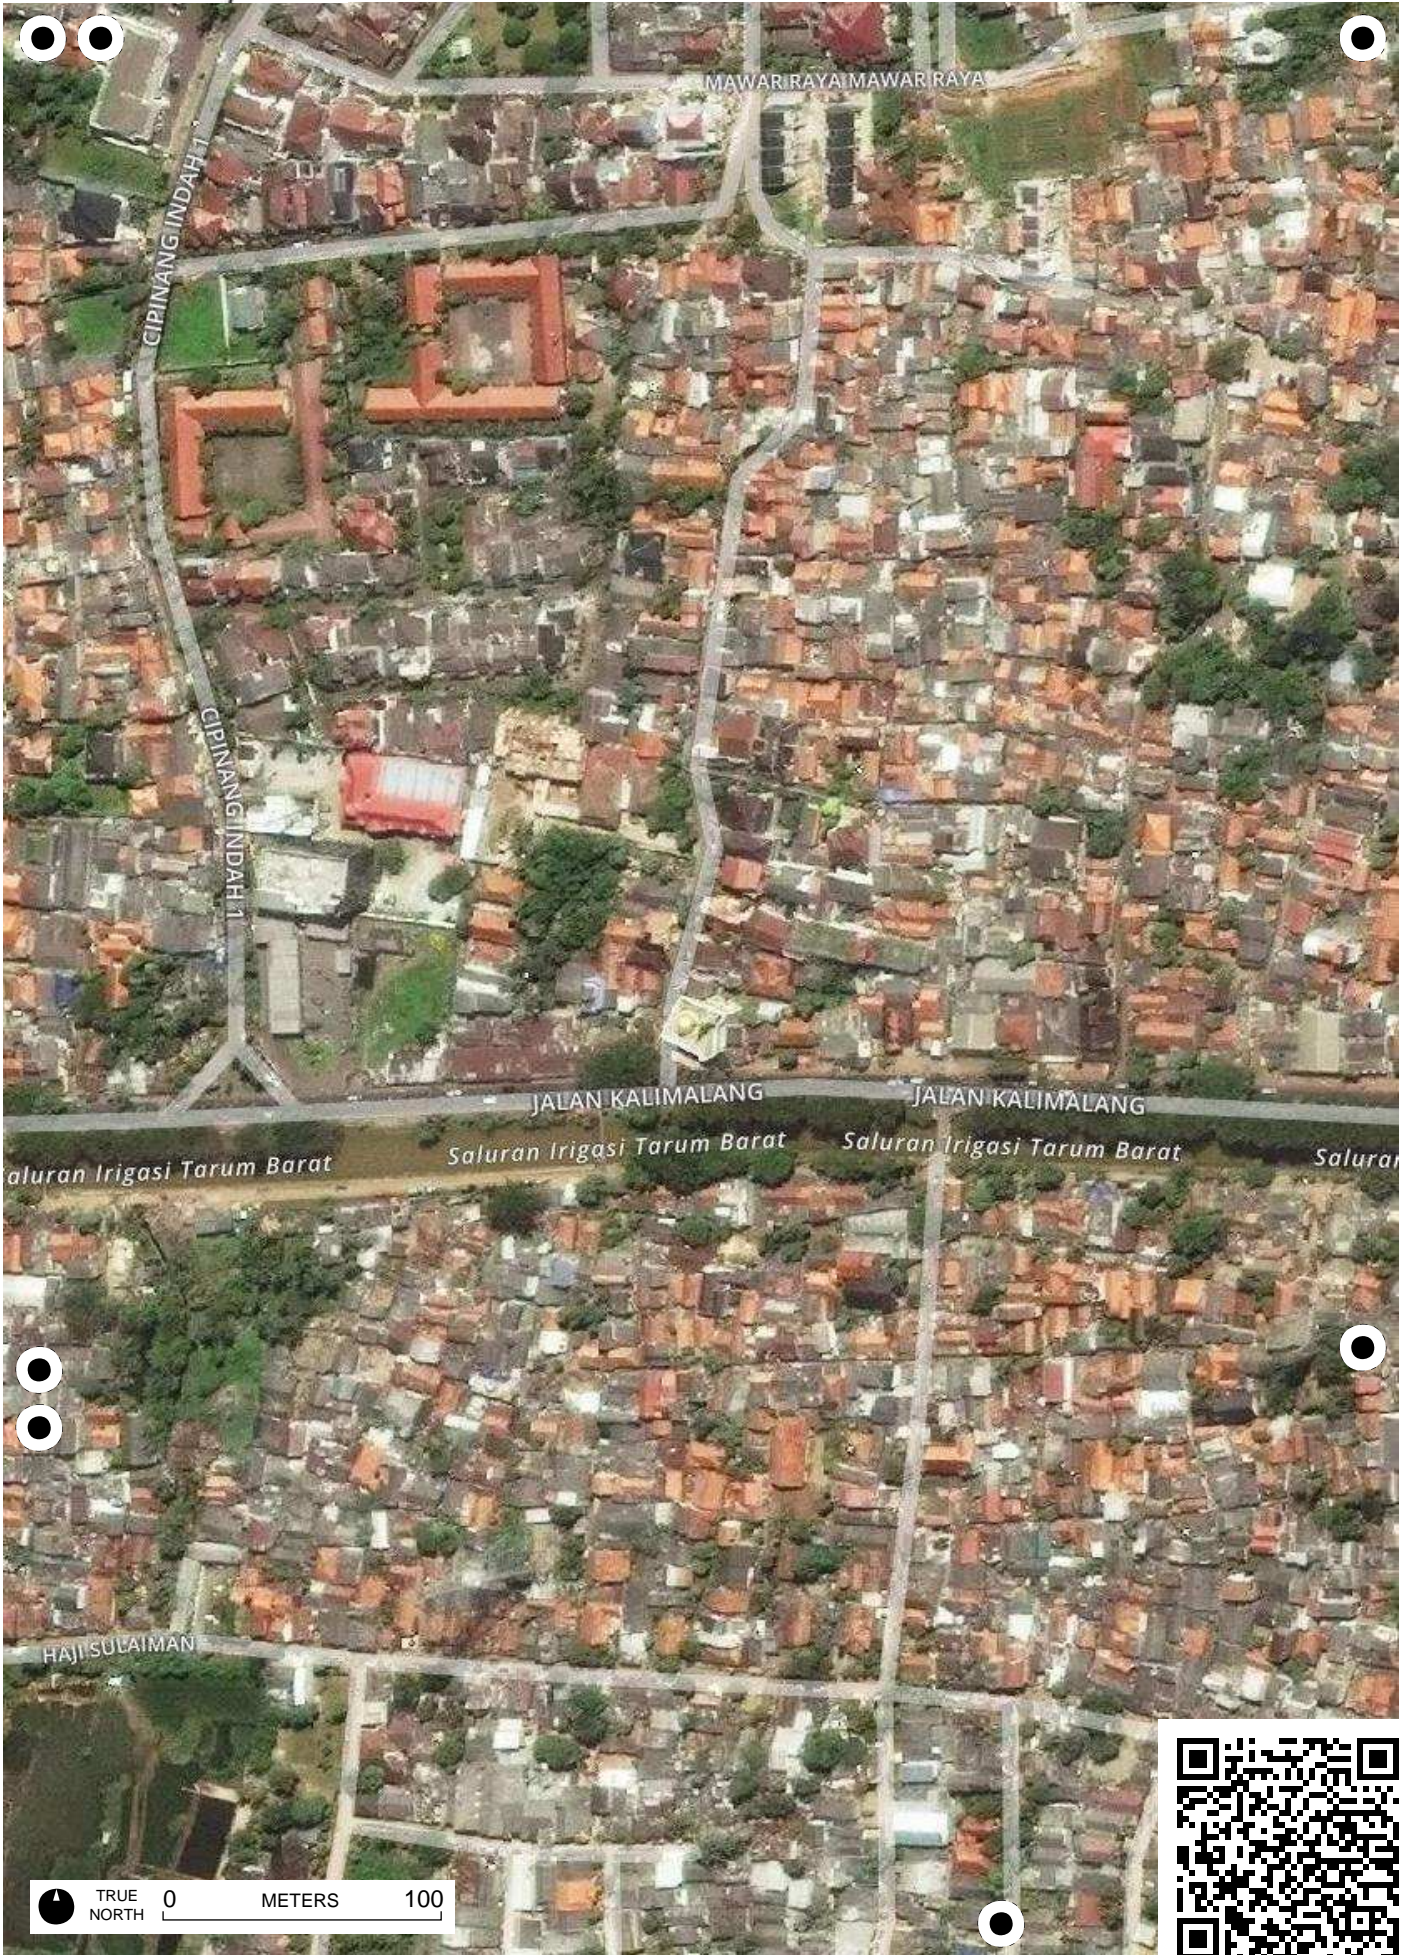

TRUE NORTH 0 METERS 100



