



Note: Rear MTP Cables should be loaded from bottom up for easier access.


12


13a

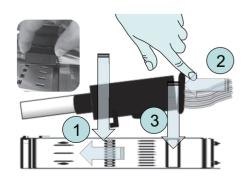


1. Insert back hook clip into clip base plate in enclosure and slide back to secure. 2. Compress lock clip 3. Rotate clip into locked position and release clip. To release reverse steps

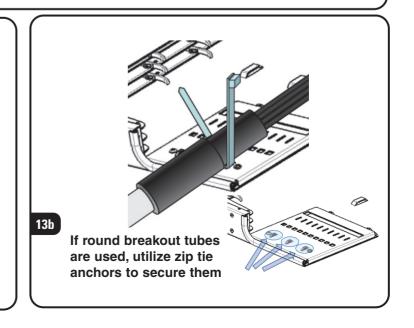

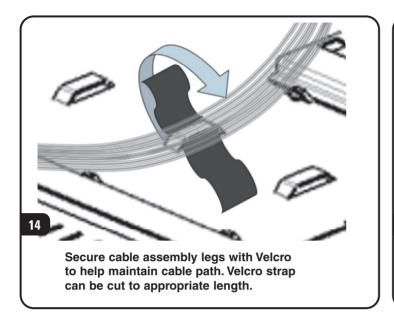

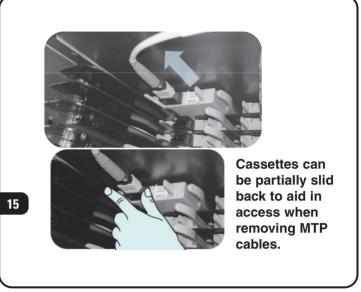

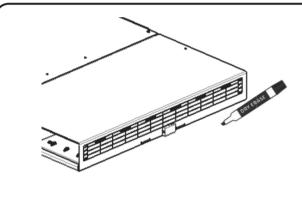

Note: Only use dry erase markers on administrative label.



To assist safe installations, comply with the following:

- A. Use caution when installing or modifying telecommunications circuits.
- B. Never touch uninsulated wire terminals unless the circuit has been disconnected.
- C. Never install this device in a wet location.
- D. Never install wiring during a lightning storm.

Because we continuously improve our products, Siemon reserves the right to change specifications and availability without prior notice.

Worldwide Headquarters North America

Watertown, CT USA Phone (1) 860 945 4200

16

Regional Headquarters India Middle East

Dubai, United Arab Emirates Phone (971) 4 3689743

Regional Headquarters Europe Africa

Chertsy, Surrey, England Phone (44) 0 1932 571771

Regional Headquarters Asia Pacific

Sydney, Australia Phone (61) 2 8977 7500

Regional Headquarters China

Shanghai, P.R. China Phone (86) 215385 0303

Regional Headquarters Latin America

Bogota, Colombia Phone (571) 657 1950/51/52

Siemon Interconnect Solutions Watertown, CT USA

Phone (1) 860 945 4213 US www.siemon.com/SIS

