

Custom A-Pillar Pod Installation Instructions

Part# 31305: Works On: Ford F-150 5.0L, 3.5L, & 6.2L
(with speaker) 2009-2014

WHAT'S INCLUDED:

Screw &
Wellnut



A-Pillar
Pod



Pod
Adapter



STEP 1:

Pull back the weather stripping in the area of the A-Pillar and remove the side panel of the dash located near the driver's door.

STEP 2:

Locate the speaker wire connection plug inside the dash panel opening and disconnect the plug.



STEP 3:

Remove the OEM A-Pillar by pulling on it to unsnap the retaining clips. You may need to use a flathead screwdriver to release top clip.



STEP 5:

Place the speaker assembly into the Bully Dog A-Pillar pod and secure it in place using the original screws.




STEP 6:

Using the supplied screw, insert the screw into wellnut, then slide the wellnut into the top bracket as pictured. Slide the wellnut down about two thirds into groove in the bracket and remove the screw once the wellnut is installed.



STEP 7:

If installing another tuner install the appropriate pod adapter at this time. LWTS+ requires part # 30604 and GTX requires part # 30605, which is not included. Follow instructions on installing the located on the inside of the packaging card. If you have stock speakers be sure to reconnect them at this time.

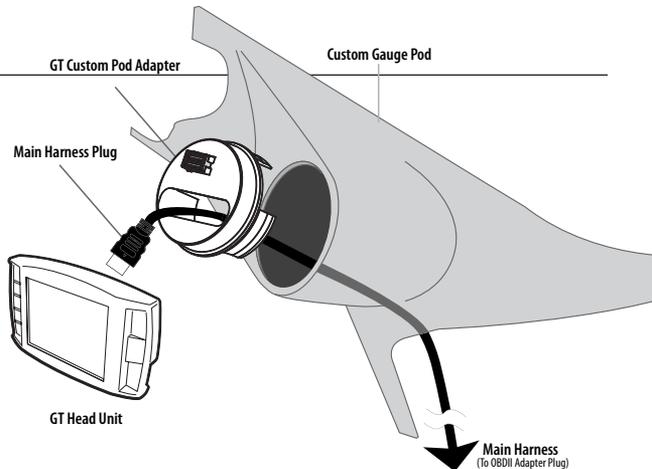

STEP 8:

Run the speaker cable back down to the dash panel opening and reconnect the speaker plug. Slide the A-Pillar into place and fasten it in place using the screw into the wellnut through the hole in the A-Pillar.



STEP 6:

Install the dash panel door and reinstall the weather stripping that you removed in Step 1.

