




How to install your C-Plate.

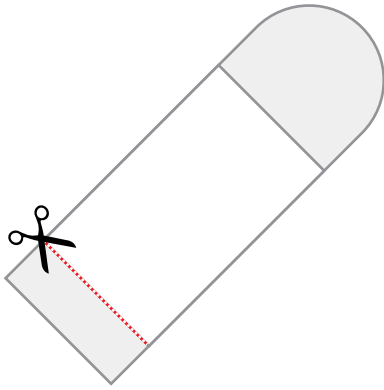


Cut off the end of your command strip

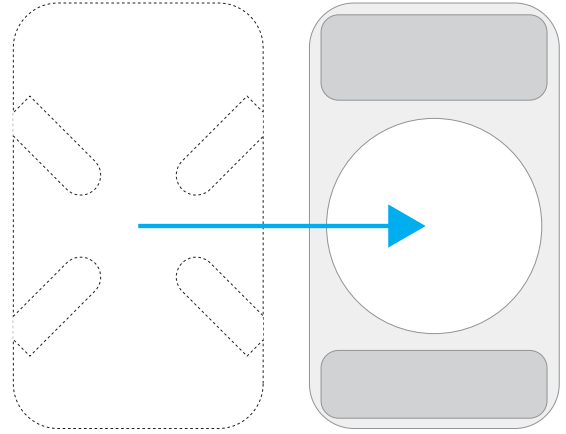

Place the template over back of Lockitron

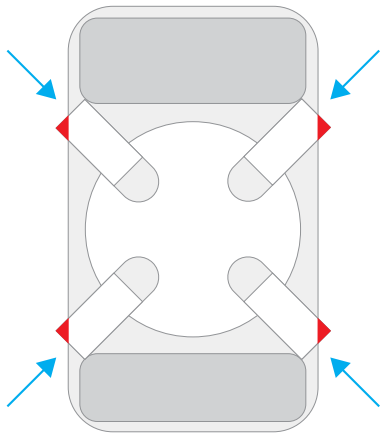

Place command strips on template with the round end facing inward. Cut off excess command strip.

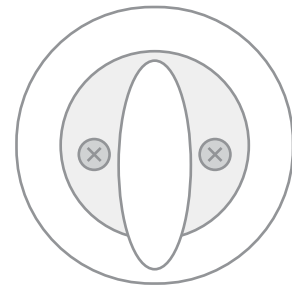

Take off template, and reference the centering guide on how to center your Lockitron on your door.

How to install your C-Plate.

