






MANHATTAN
COMFORT

York Dining Set


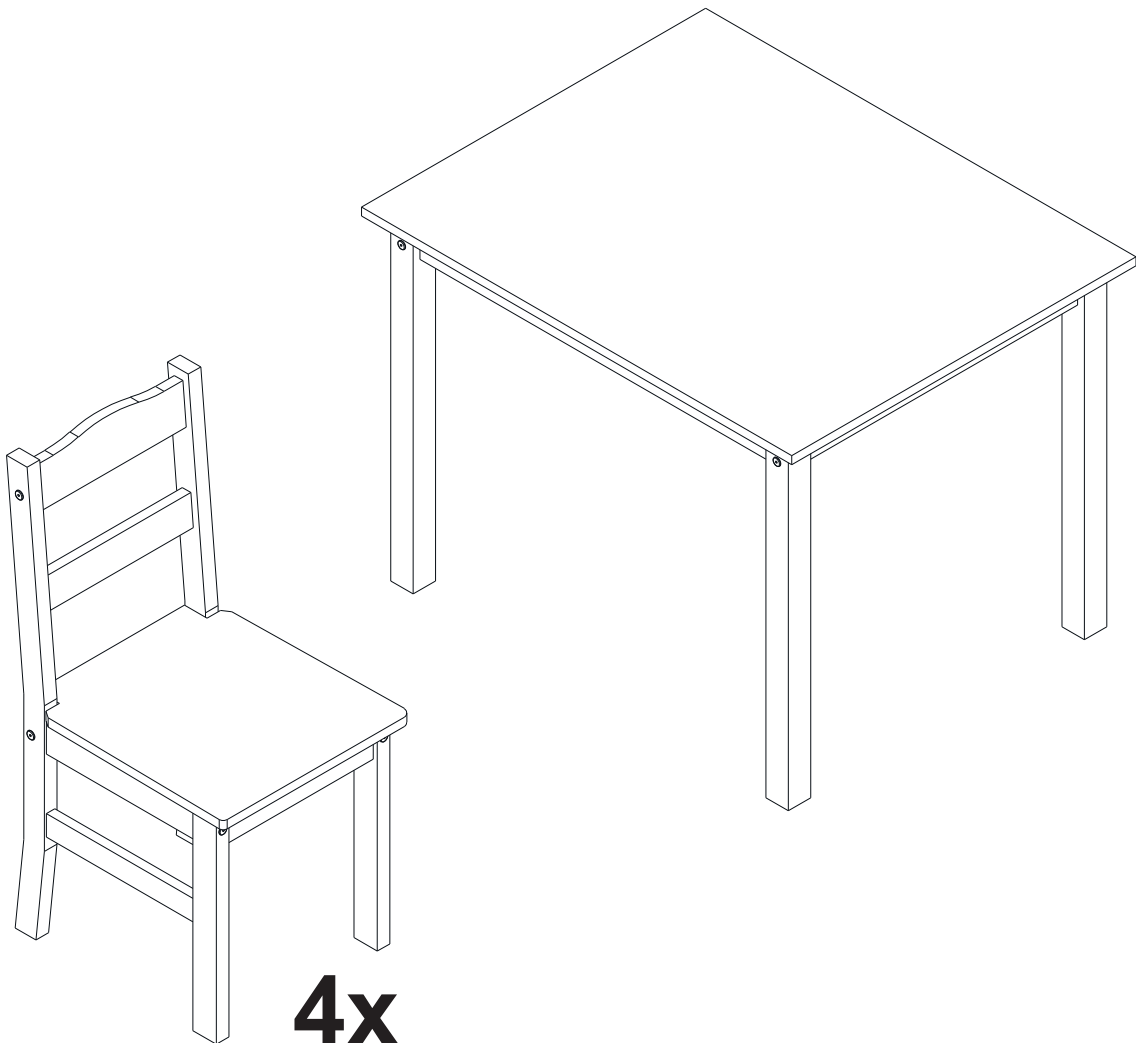


SKU# CS18001 - CS18002 - CS18003 - CS18004 - CS18005 - CS18006 - CS18007

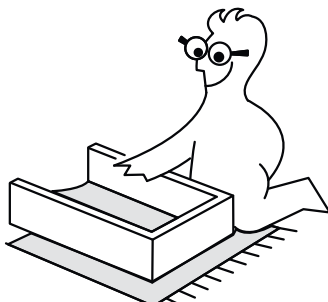
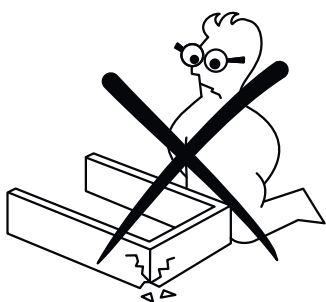


For Best Results

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

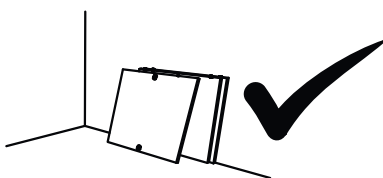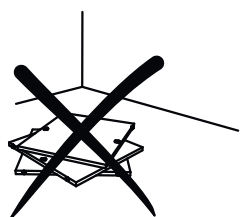


Tools
Required



View our assembly video online

www.manhattancomfort.com

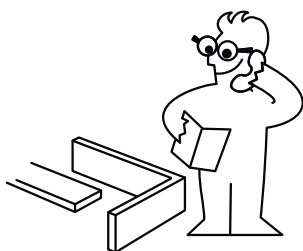


Stuck? Questions? We are here to help.

1-888-230-2225








help@manhattancomfort.com

Included in this Package

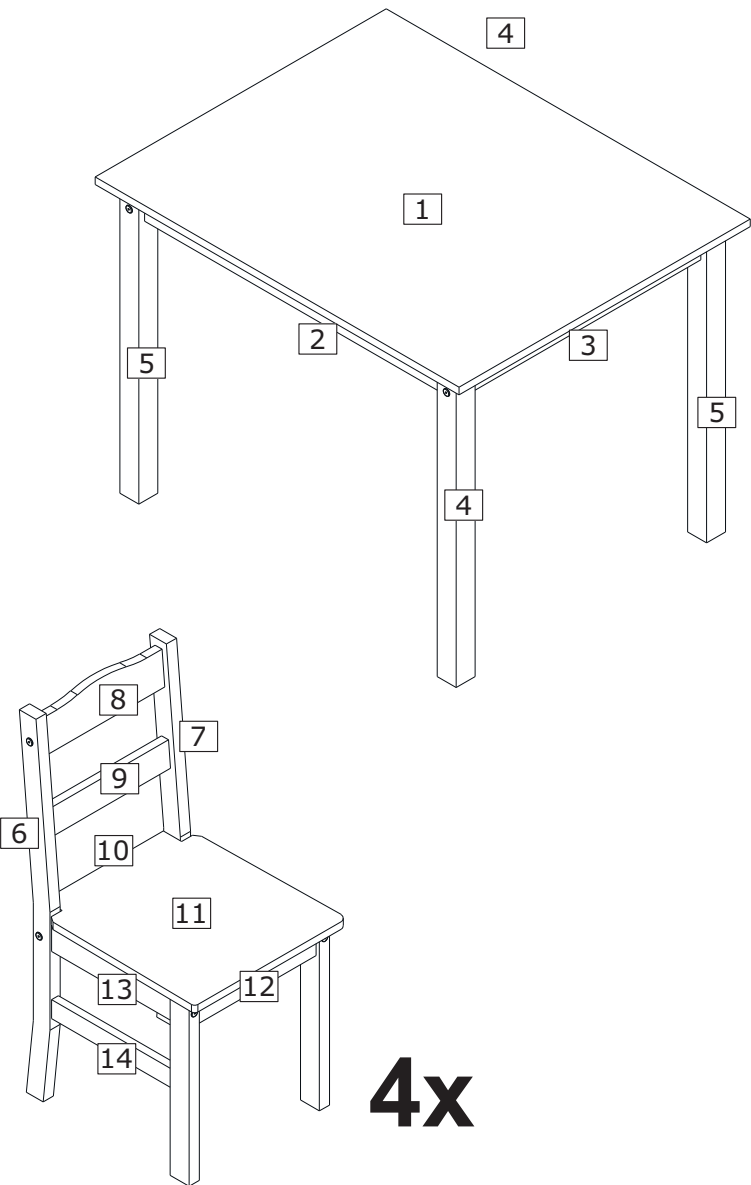






- 1 Top panel x1
- 2 Large cross rail x2
- 3 Small cross rail x2
- 4 Right leg x2
- 5 Left leg x2

- 6 Left back leg x4
- 7 Right back leg x4
- 8 Top back rail x4
- 9 Center back rail x4
- 10 Bottom back rail x4
- 11 Seat panel x4
- 12 Front frame x4
- 13 Large cross rail x8
- 14 Small cross rail x8




<div>A</div> <div></div> <div>40mm Bolt x 8</div>	<div>B</div> <div></div> <div>80mm Bolt x 32</div>	<div>C</div> <div></div> <div>Nut x 32</div>
<div>D</div> <div></div> <div>35mm Screw x 26</div>	<div>E</div> <div></div> <div>Allen key x 1</div>	<div>F</div> <div></div> <div>Wooden dowel x 16</div>
<div>G</div> <div></div> <div>50mm Screw x 16</div>		



STEP 1

<div><div>B</div></div> <div>80mm Bolt x 4</div>	<div><div>C</div></div> <div>Nut x 4</div>	<div><div>E</div></div> <div>Allen key x 1</div>
---	--	---

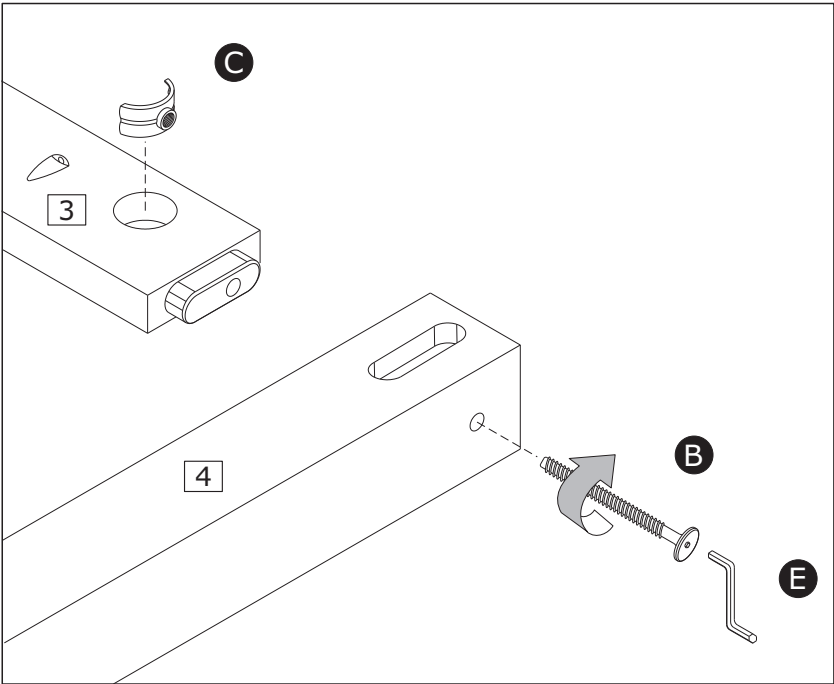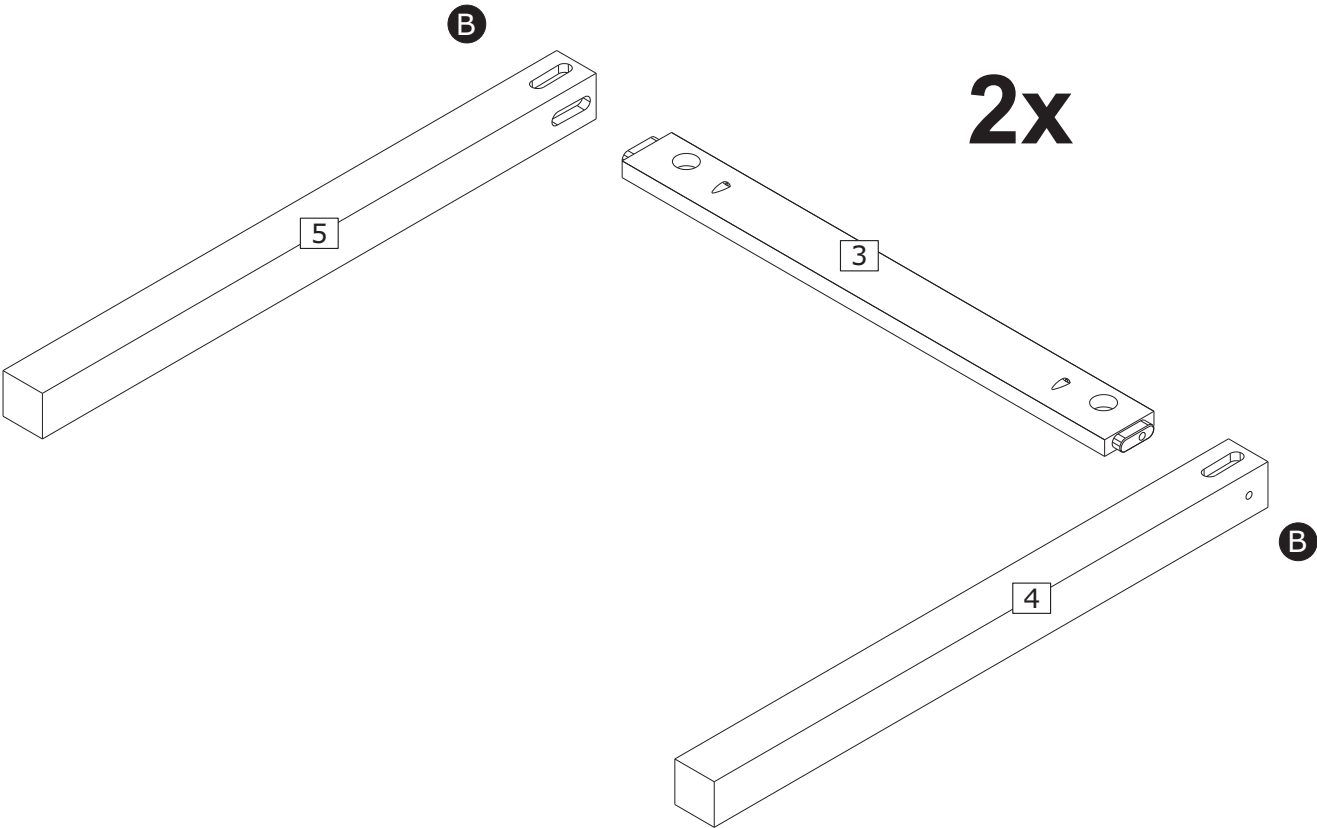


STEP 2

B  80mm Bolt x 4	C  Nut x 4	E  Allen key x 1
---	--	---



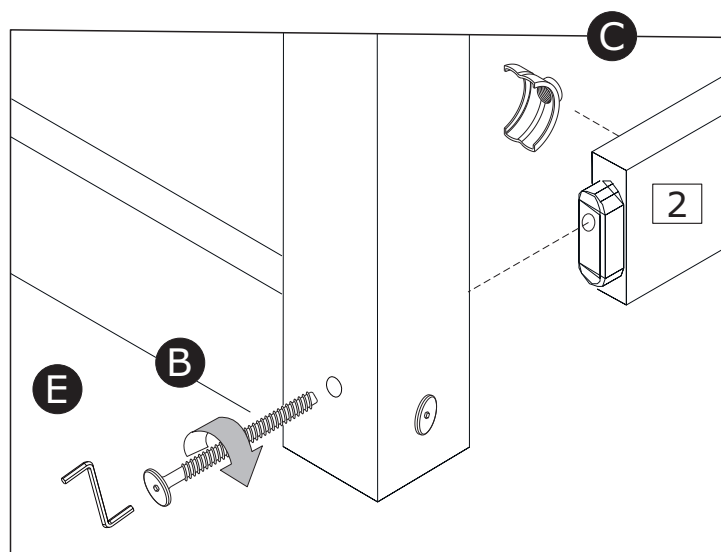
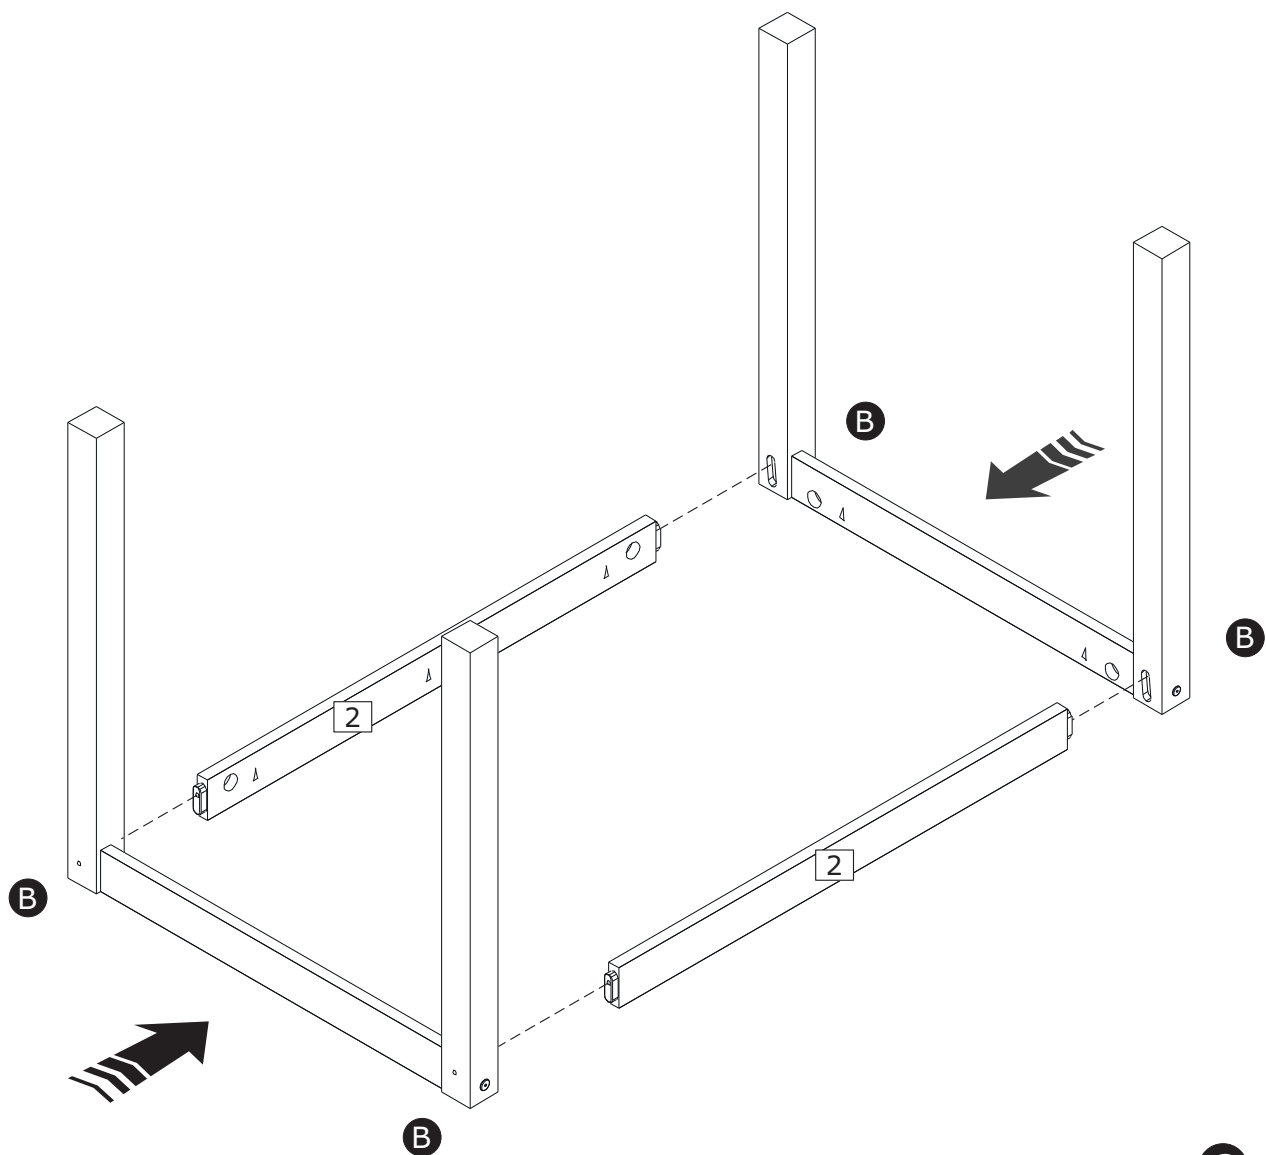


STEP 3





D




35mm Screw x 10

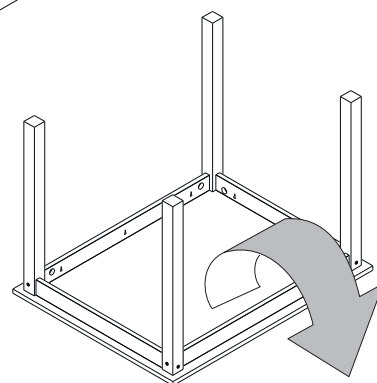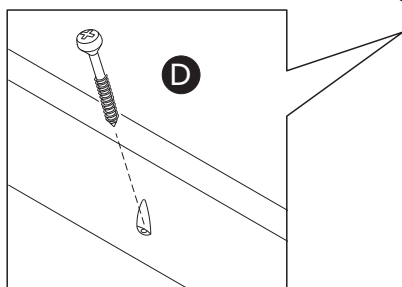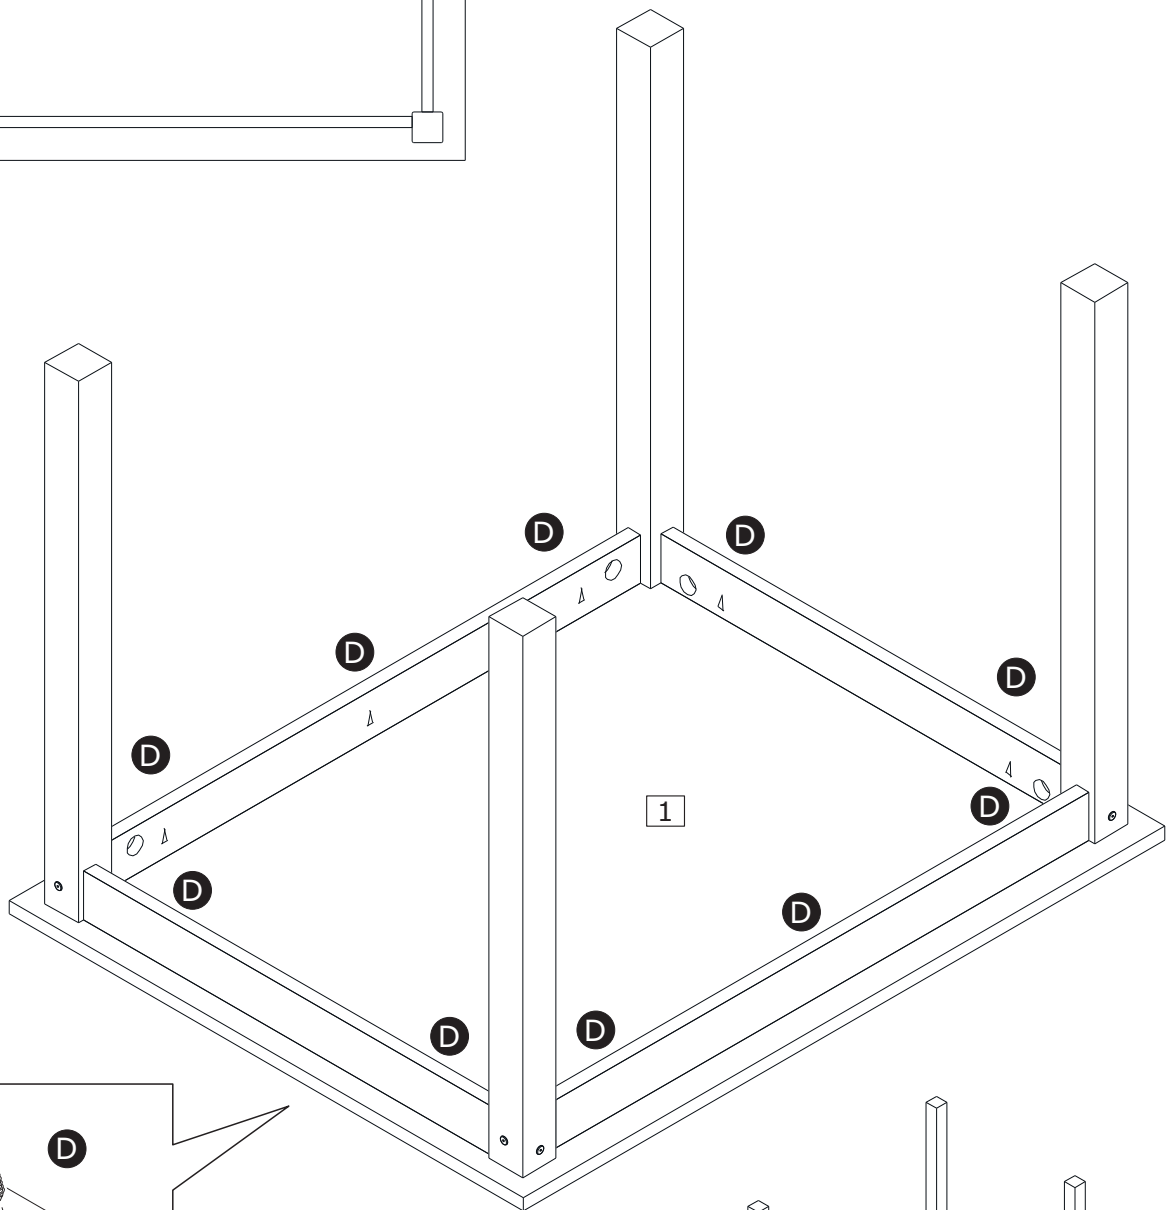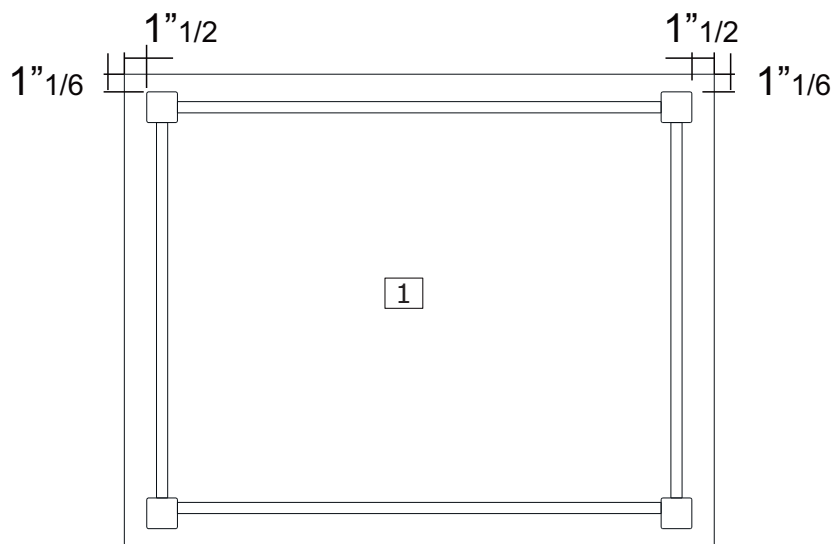


STEP 4


A  40mm Bolt x 8	B  80mm Bolt x 8	C  Nut x 8
E  Allen key x 1		

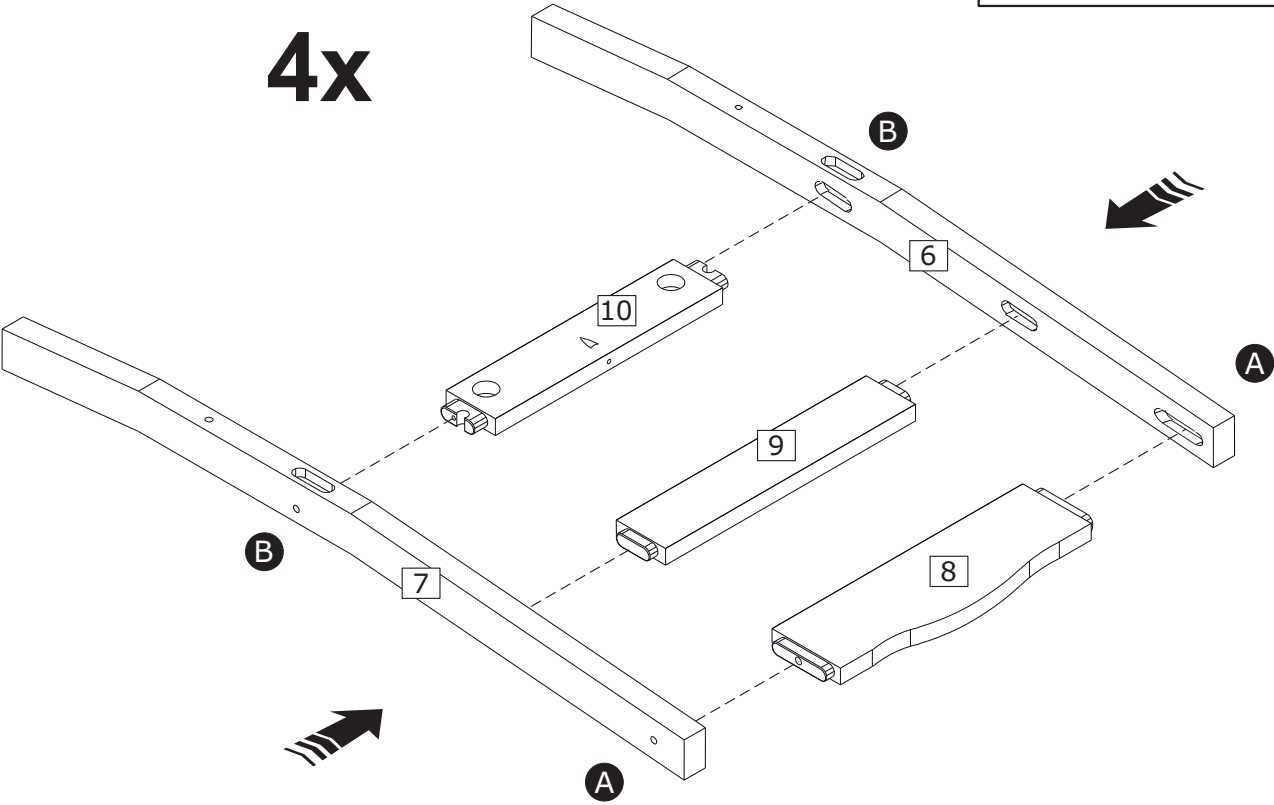






a:

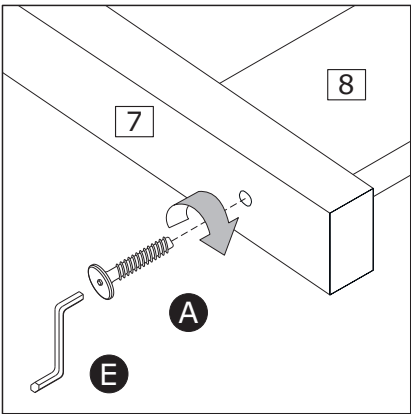


b:

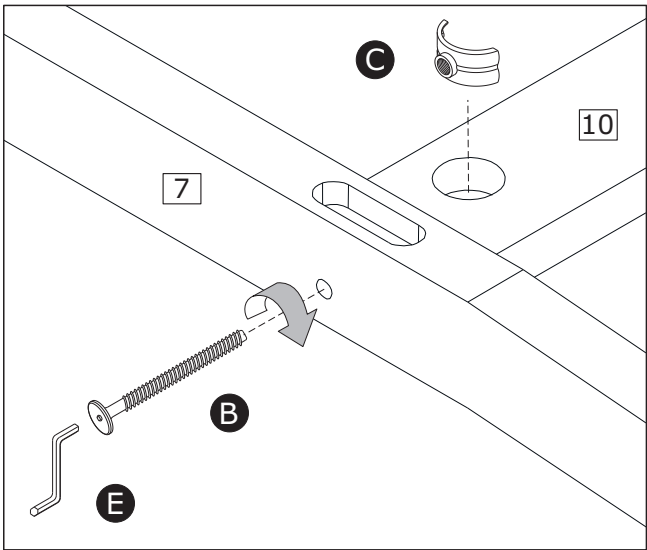


STEP 5


B  80mm Bolt x 8	C  Nut x 8	G  50mm Screw x 8
E  Allen key x 1	F  Wooden dowel x 8	

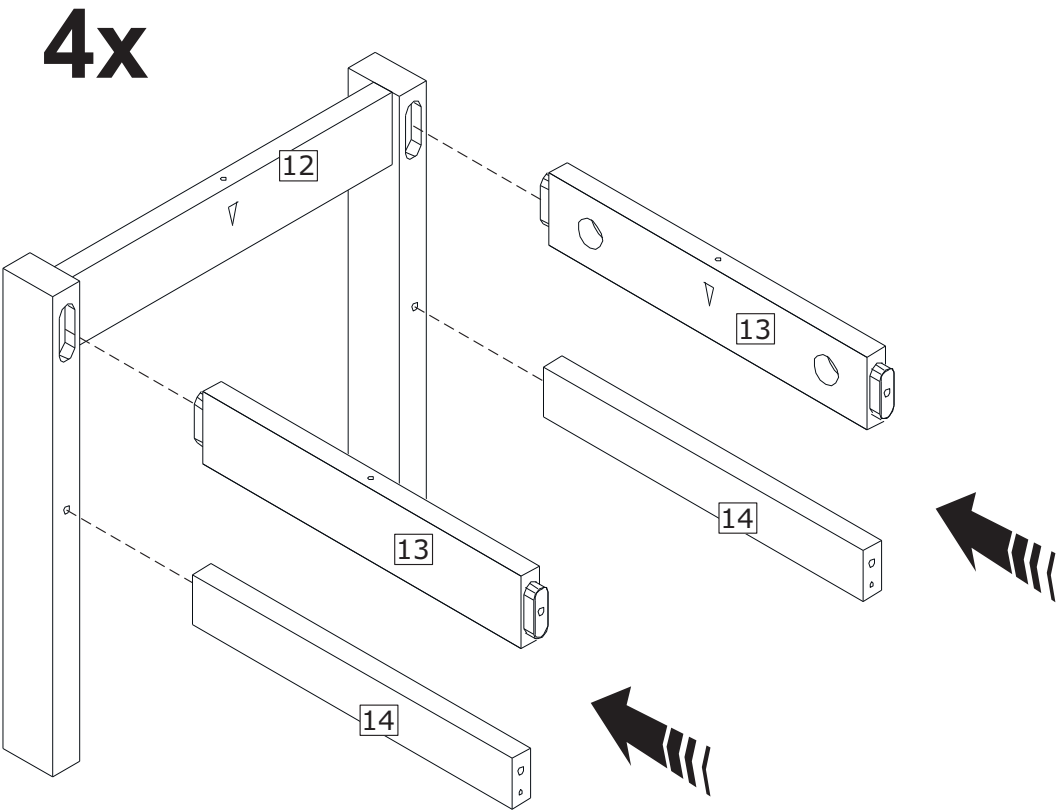






a:

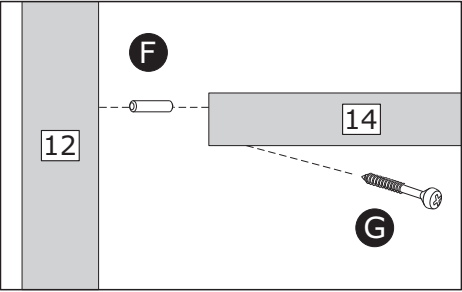


b:

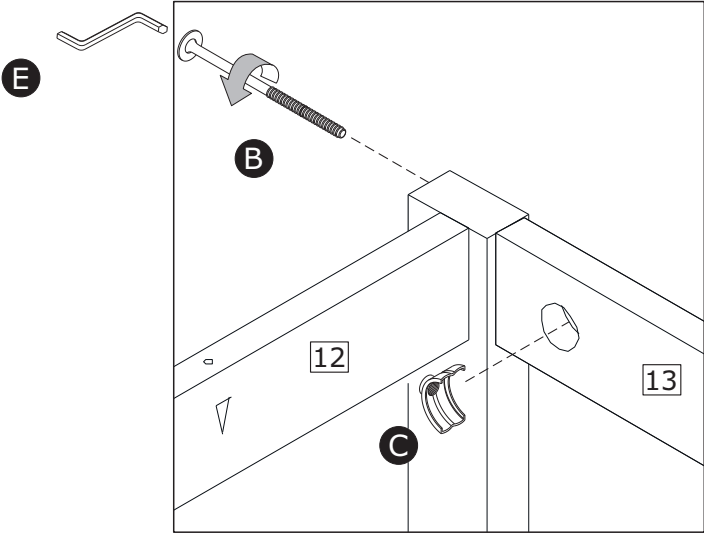


STEP 6


B  80mm Bolt x 8	C  Nut x 8	G  50mm Screw x 8
	E  Allen key x 1	F  Wooden dowel x 8

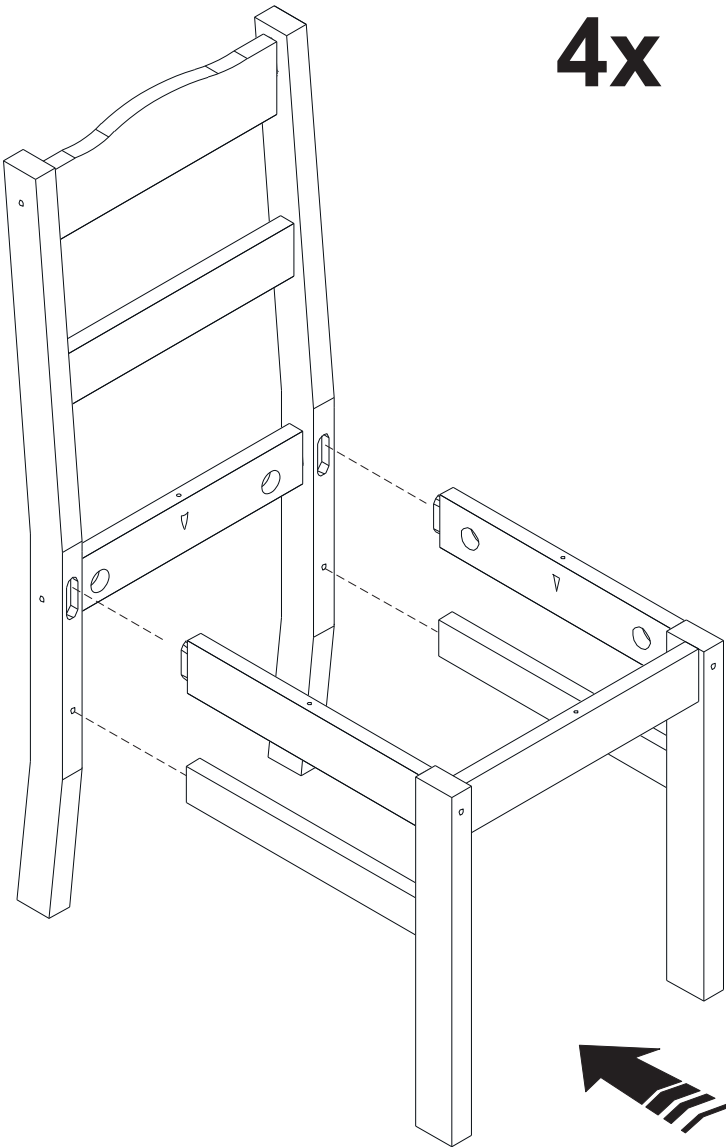


a:

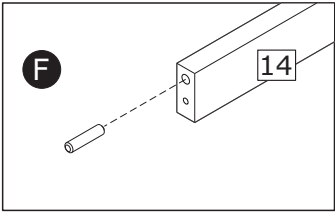

b:

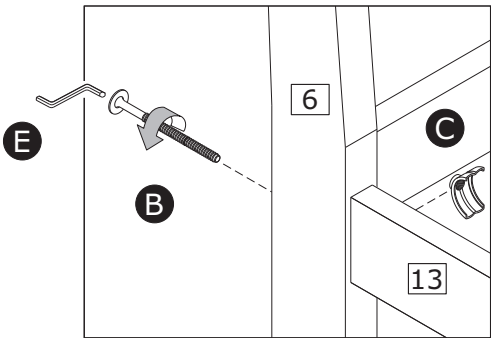


c:

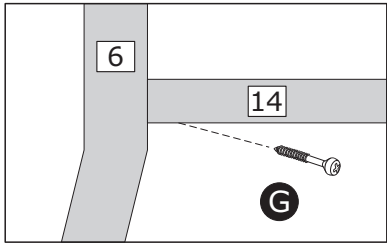

STEP 7


4x

D




35mm Screw x 16

a:

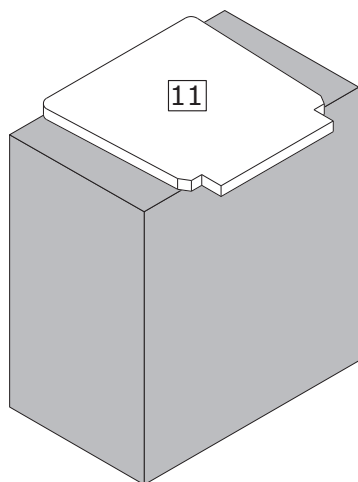

b:

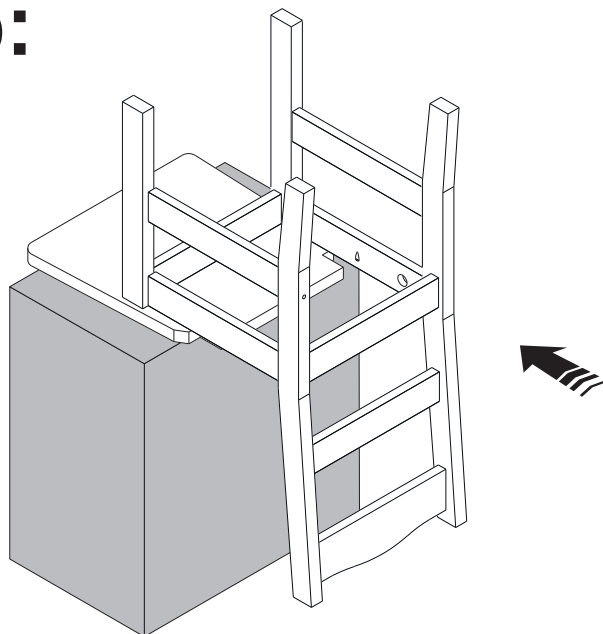

c:

