



MANHATTAN
COMFORT

Joy Coffee Table 90


Model # 350641, 350642, 350643, 350644

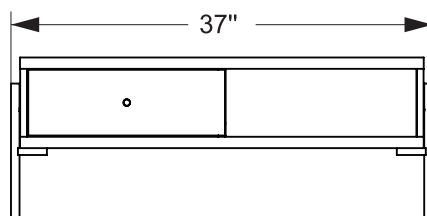

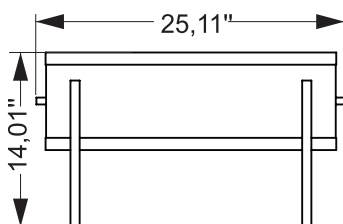

For Best Results


- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

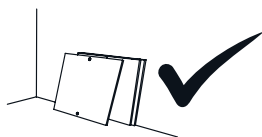

Tools Required




Included in this Package

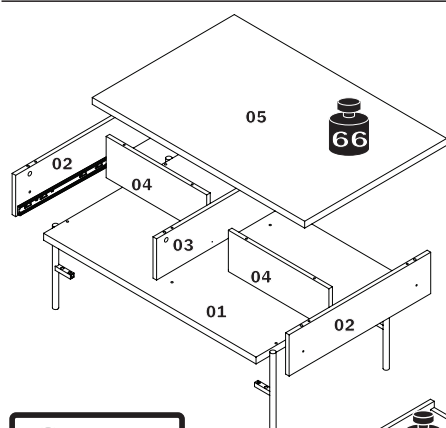






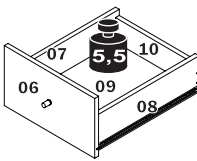








- | | | |
|----|--------------------------|----|
| 01 | LOWER TOP | x1 |
| 02 | RIGHT/LEFT SIDE | x2 |
| 03 | CENTRAL DIVISION | x1 |
| 04 | SMALL DIVISION | x2 |
| 05 | UPPER TOP | x1 |
| 06 | FRONT OF DRAWER | x2 |
| 07 | LEFT SIDE OF THE DRAWER | x2 |
| 08 | RIGHT SIDE OF THE DRAWER | x2 |
| 09 | DRAWER BOTTOM | x2 |
| 10 | BACK OF DRAWER | x2 |
| 11 | FITTINGS | x1 |

 **Maximum weight supported.**




11 Fittings

 A - HANDLE x2	 B - MINIFIX SCREW x10	 C - 15MM CONNECTOR x10	 D - 21MM SCREW COVER (MINIFIX) x10	 E - 7X50 SCREW x6	 F - ALLEN WRENCH x1
 G - 6X30MM WOODEN DOWEL x22	 H - 1/4X25MM SCREW x4	 I - 1/4X35MM SCREW x8	 J - M5X25MM SCREW x2	 K - 3,5X40MM SCREW x8	
 L - FEET KIT x1	 M - WHITE GLUE x1	 N - 13 MM SCREW COVER x2			

Where to find the items

Box 01		
01	06	11
02	07	
03	08	
04	09	
05	10	

Assembly time:  100min

Tip of the number of people required for product assembly.





Prepare the pieces

Step 1

Insert the wooden dowels (G) into parts 02, 03 and 04. Remember to use the glue (M).



It's important to glue the wooden dowel.

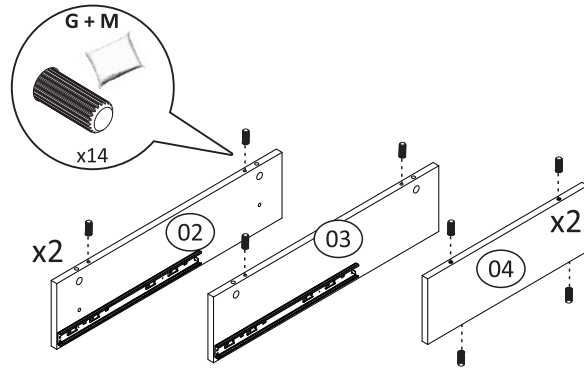
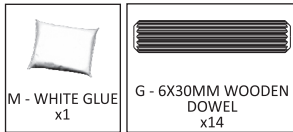


Step 2

Insert the wooden dowels (G) into parts 07 and 08. Remember to use the glue (M).






It's important to glue the wooden dowel.

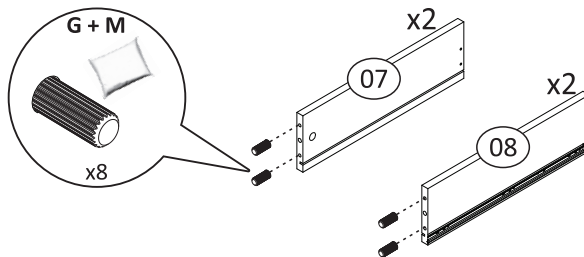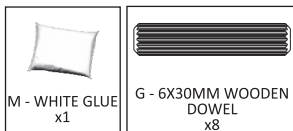

Step 3




Insert the screw B into part 05 and 06. Tighten to the limit.

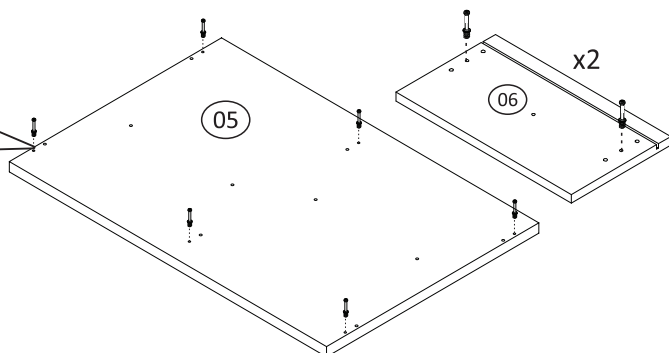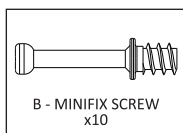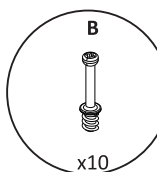

Assembly




Step 4

Put the parts 01 and 02 together and use two screws (E) and the Allen wrench (F).

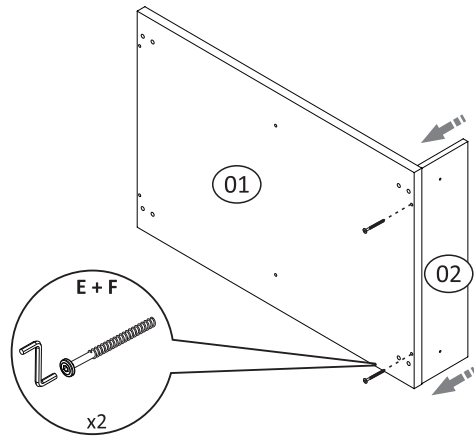




Step 5

Put the parts 01 and 03 together and use two screws (E) and the Allen wrench (F).

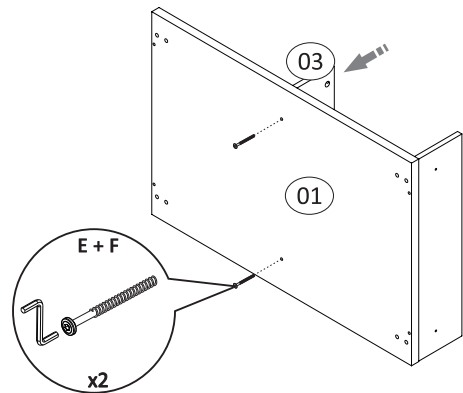

Step 6





Put the parts 01 and 02 together and use two screws (E) and the Allen wrench (F).

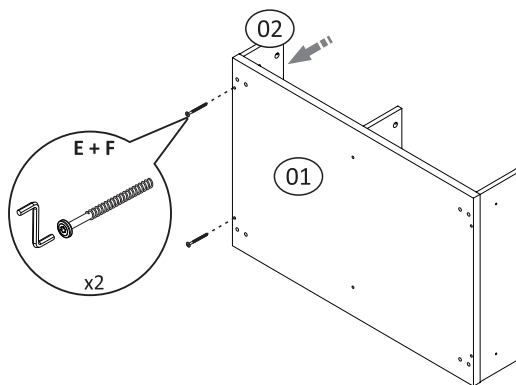

Assembly






Step 7

Put feet on part 01 as the drawing. On each foot (L), use two screws (I) with the Allen wrench (F).

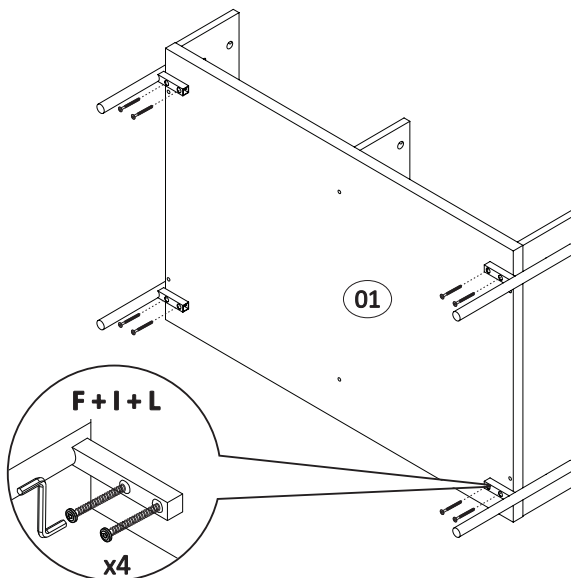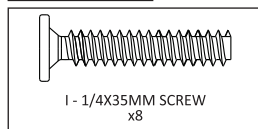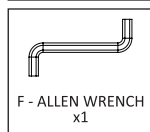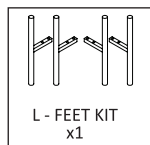

Step 8


Insert the screw (H) through parts 02 according to the drawing using the Allen wrench (F). The screw (H) must fix parts 02 on the feet (L).

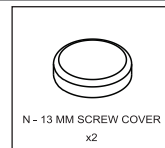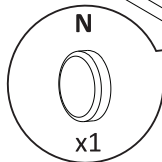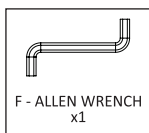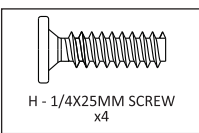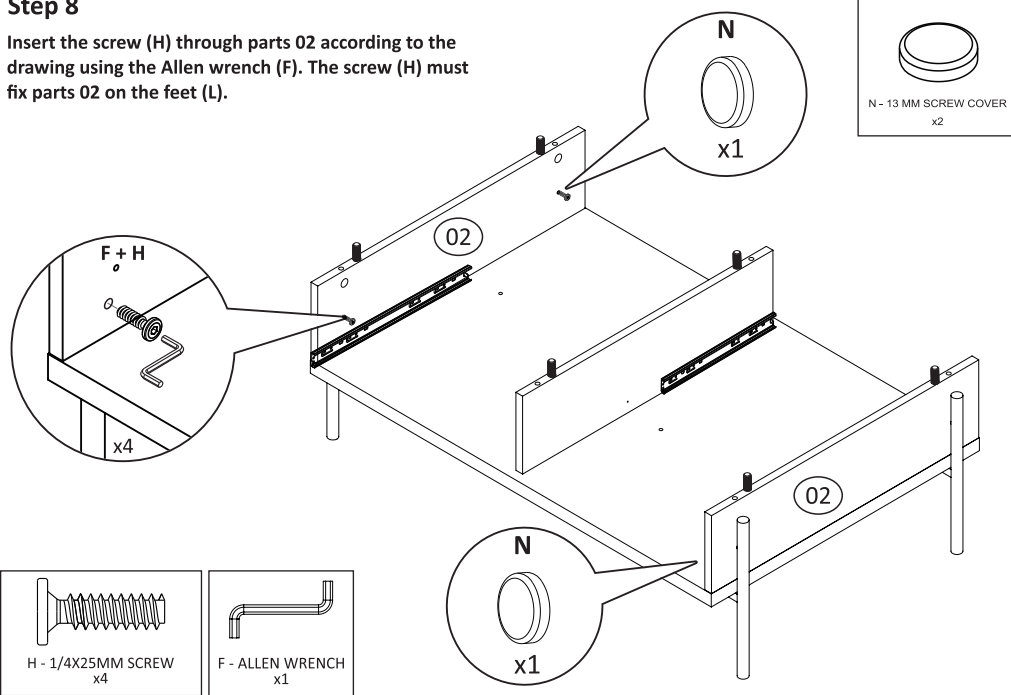

Assembly

Step 9


Put the glue (M) in the wooden dowel (G) already fixed into parts 04. Then put parts 04 together with part 01.

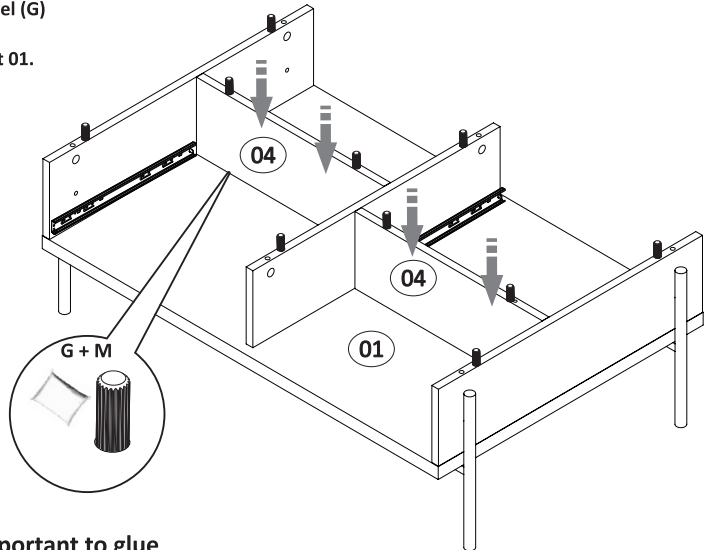



It's important to glue the wooden dowel.

Step 10

Put the glue (M) in the wooden dowel (G) already fixed into parts 02 and 03, then fit part 05 on the parts 02 and 03. Insert six minifix connectors (C) on parts 02 and 03 as shown and rotate clockwise. Tighten to the limit. Put the cover (D) to the minifix connectors (C).



Tighten the minifix up to the limit to assembly don't be slack.

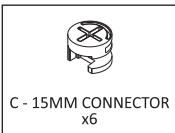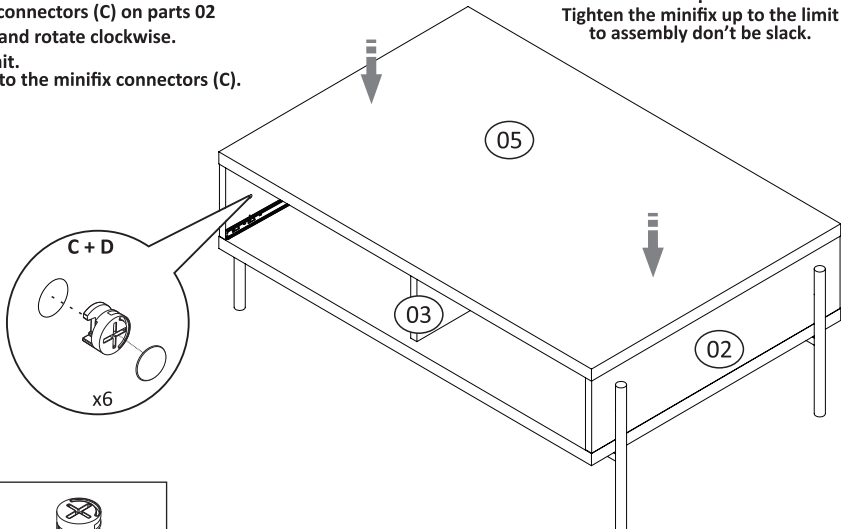


It's important to glue the wooden dowel.

Drawers

Step 11


Fit parts 07 and 08 in part 06. Insert two minifix connectors (C) on parts 07 and 08 as shown and rotate clockwise. Tighten to the limit.

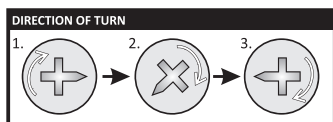

Tighten the minifix up to the limit to assembly don't be slack.




It's important to glue the wooden dowel.

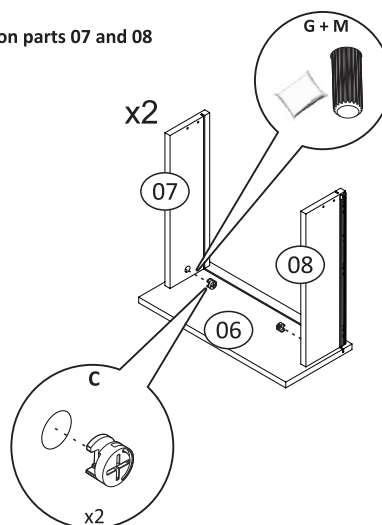



Step 12

Insert the drawer bottom 09 into their drawer.

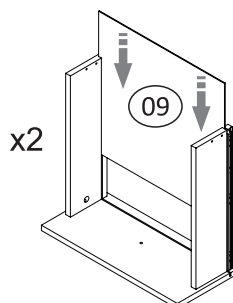

Step 13


Fix parts 07 and 08 to part 10 using four screws (K).

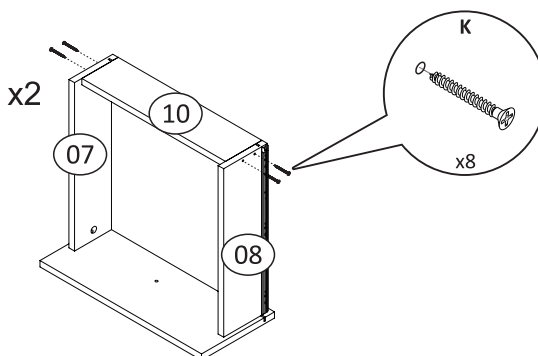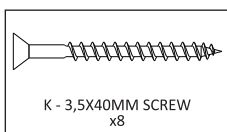

Drawers



Step 14

Put the cover (D) to the minifix connectors (C) in two drawers.

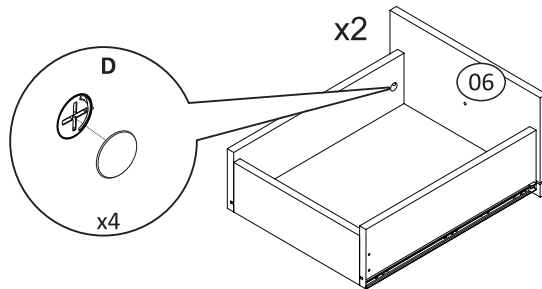

Step 15


Insert the screw (J) from inside the drawer, tighten into the handle (A) on the outside.

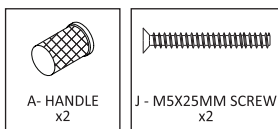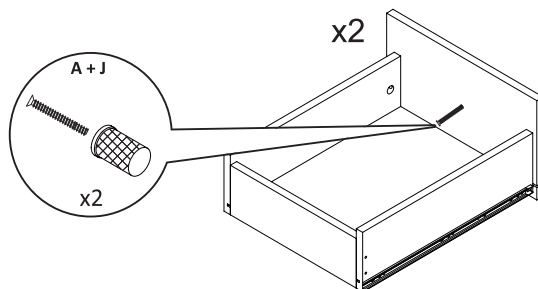

Drawers

Step 16

Put the drawer into the space.
Make sure the slides are firmly.

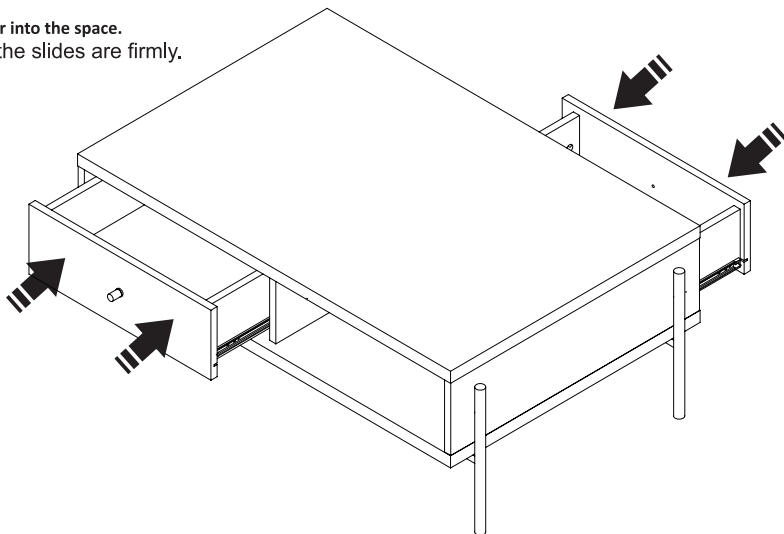

TAKING GOOD CARE OF YOUR FURNITURE

Cleaning and caring instructions:

- Wipe the wood furniture down with a moist cloth to properly clean the furniture.
- Do not forget to dry your furniture out. Humidity can damage the finish or create mould.
- Chemical products are not recommended;
- Never clean the furniture with scouring powders, steel scrubber pads or any other product which can scratch its
- Furniture surfaces should not be covered with colored plastic or paper sheets.
- Avoid dragging objects on top of the furniture. They might scratch the finishing.
- Wood furniture are made of mould and termites resistant materials, however, it is recommended to use termiticides in infested places before installing the furniture.
- Avoid furniture exposure to direct Sun light. Drapers suggested.