






MANHATTAN
COMFORT

Irving Doorway Storage Bench


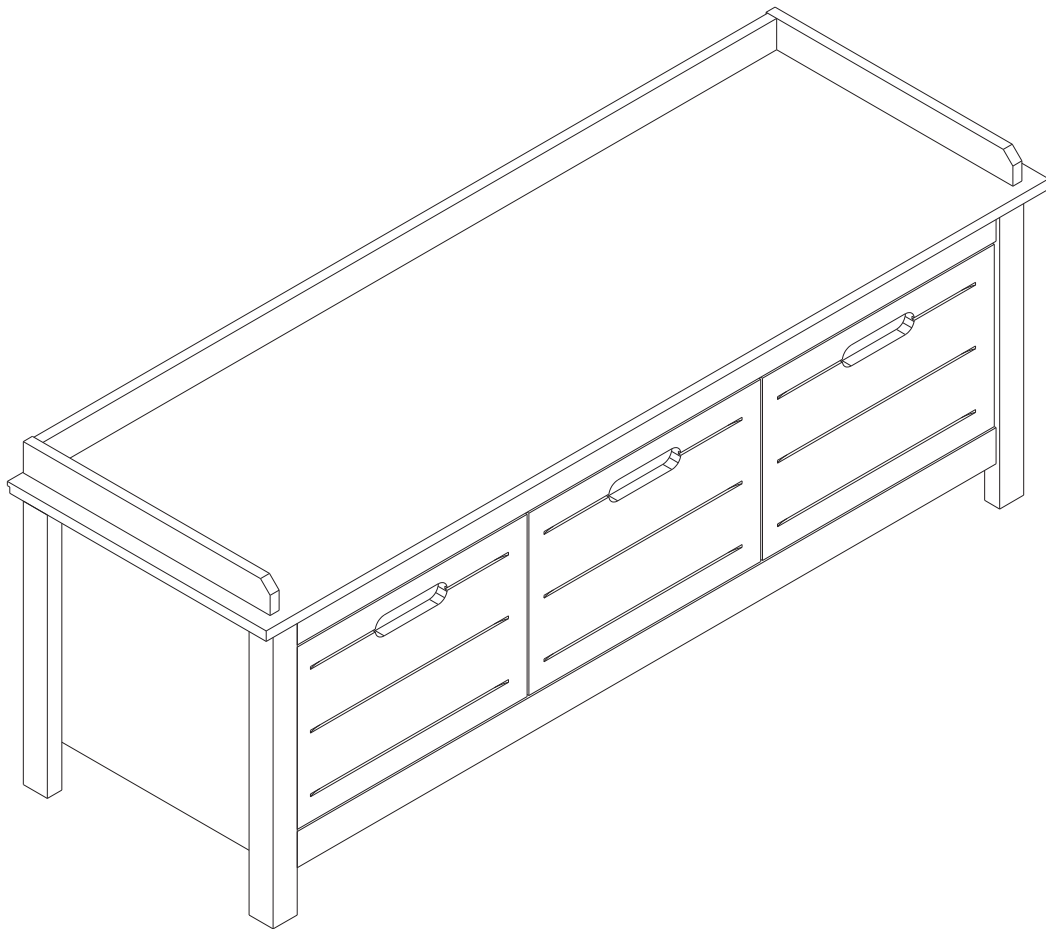


SKU# CS87608

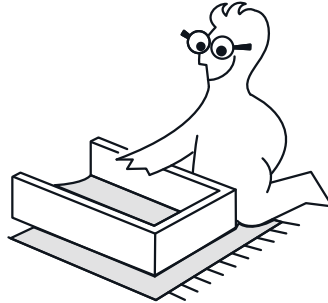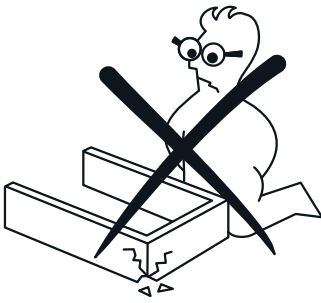


For Best Results


- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

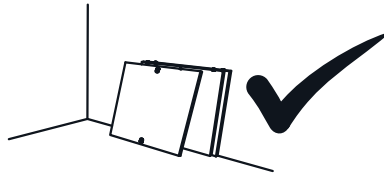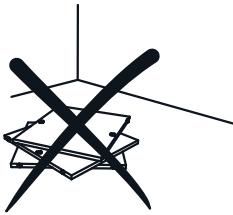

Tools Required

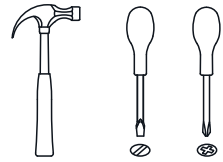


View our assembly video online
www.manhattancomfort.com

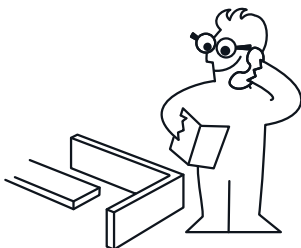





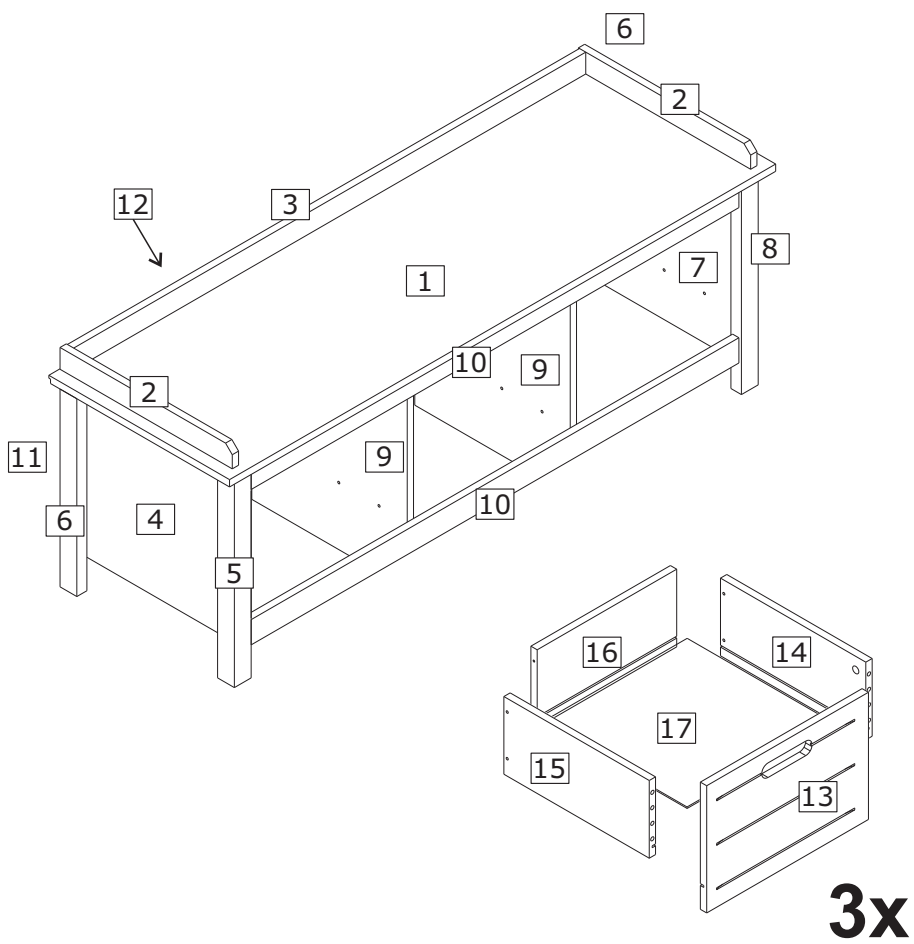







Stuck? Questions? We are here to help.
1-888-230-2225
help@manhattancomfort.com


Included in this Package




- 1 Top panel x1
- 2 Side top moulding x2
- 3 top moulding x1
- 4 Left side panel x1
- 5 Left leg x1
- 6 Back leg x2
- 7 Right side panel x1
- 8 Right leg x1
- 9 Middle wall panel x2
- 10 Front frame x2
- 11 Cross rail x1
- 12 Back panel x1
- 13 Drawer front x3
- 14 Right drawer side x3
- 15 Left drawer side x3
- 16 Drawer back x3
- 17 Drawer bottom x3


<div>A</div> <div></div> <div>Wooden dowel x 38</div>	<div>B</div> <div></div> <div>12mm Screw x 24</div>	<div>C</div> <div></div> <div>35mm Screw x 32</div>
<div>D</div> <div></div> <div>8mm Screw x 12</div>	<div>E</div> <div></div> <div>20mm Screw x 06</div>	<div>F</div> <div></div> <div>Metal dowel x 32</div>
<div>G</div> <div></div> <div>Locking nut x 32</div>	<div>H</div> <div></div> <div>Spacer x 6</div>	<div>I</div> <div></div> <div>Nail x 24</div>
<div>J</div> <div></div> <div>Tape hole x 2</div>	<div>K</div> <div></div> <div>Right runner x 3 pair</div>	<div>L</div> <div></div> <div>Left runner x 3 pair</div>


STEP 1

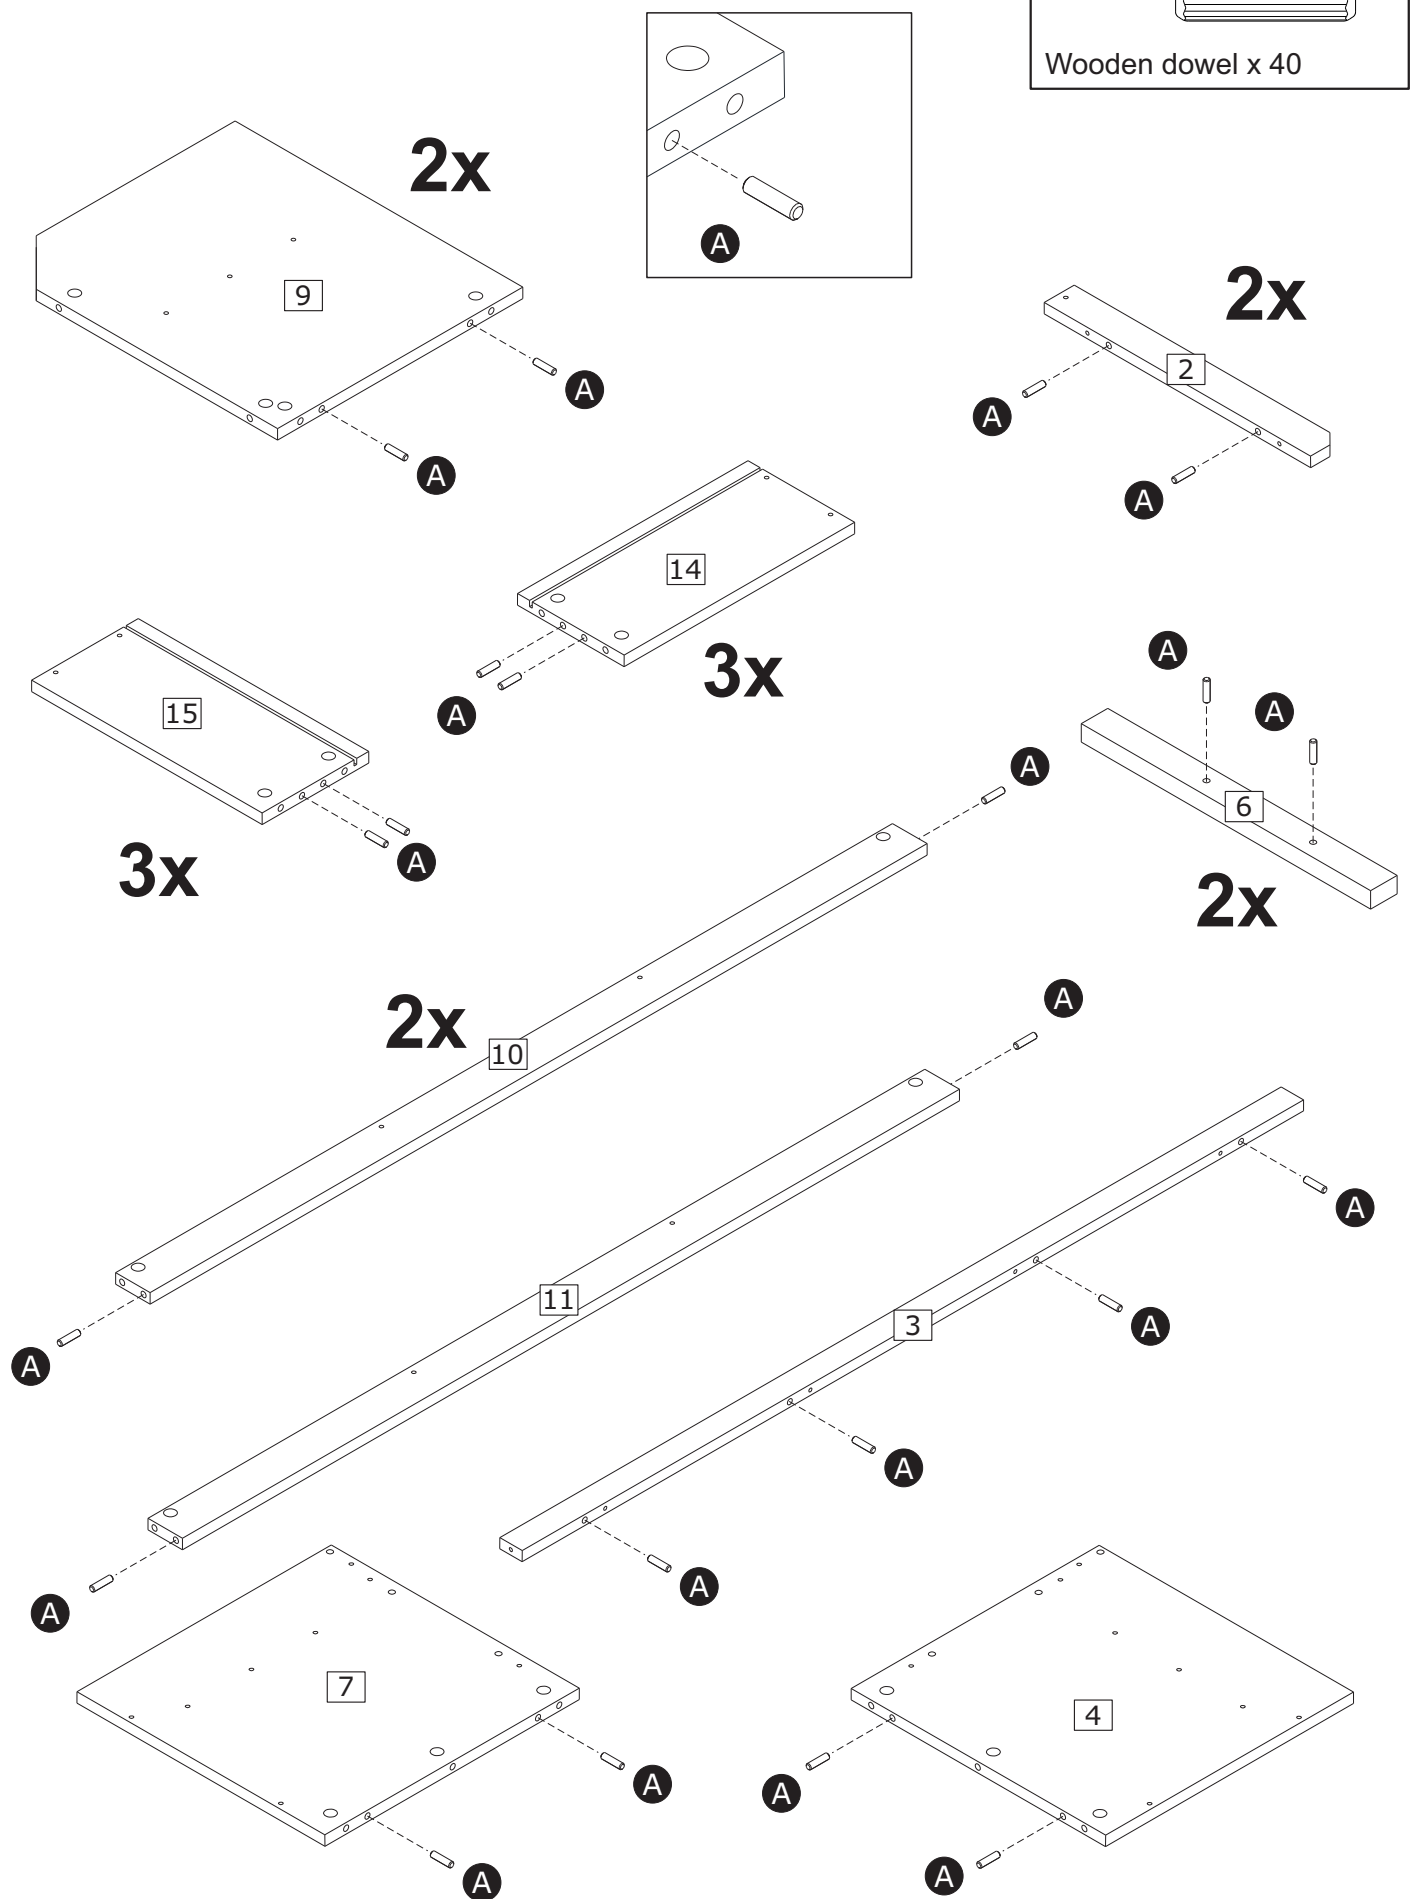



STEP 2


F 
Metal dowel x 30

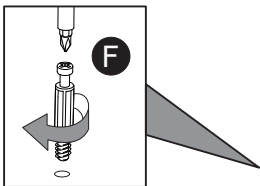
F 

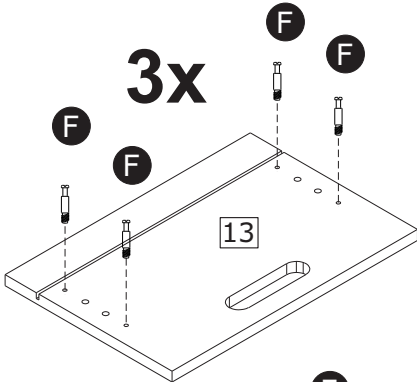
3x 

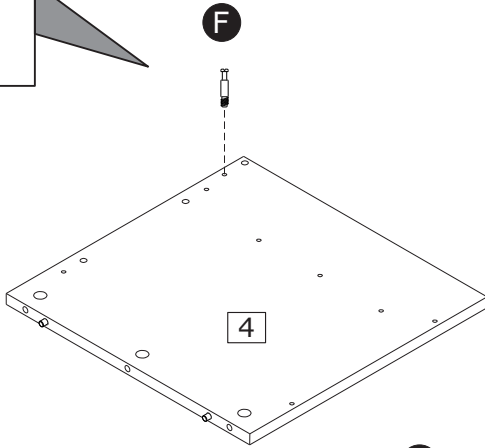
F 

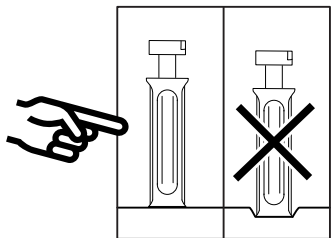


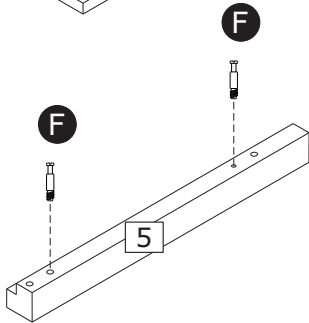F 

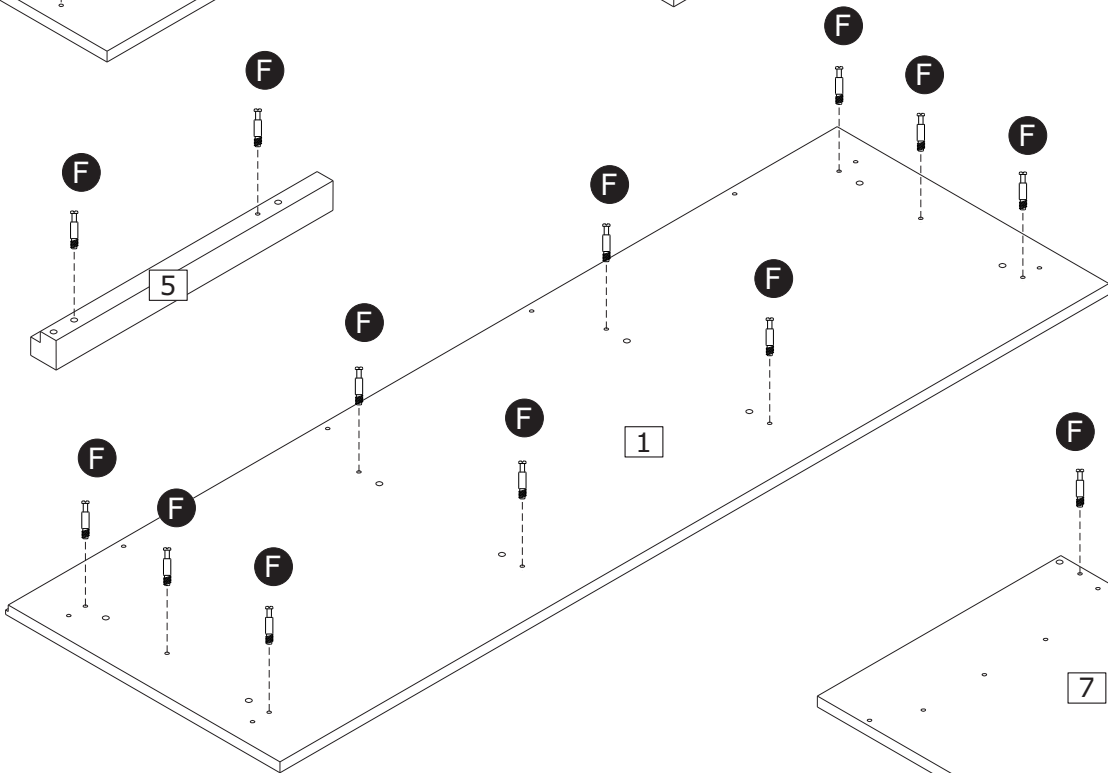
F 

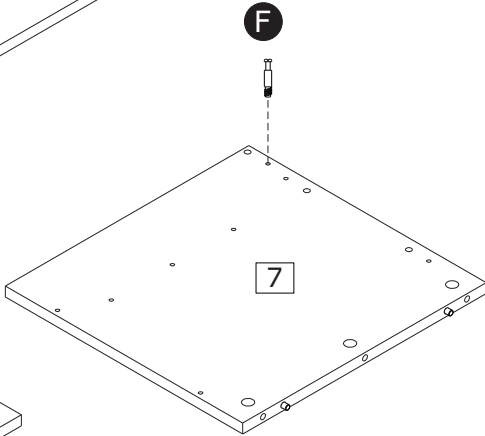F 

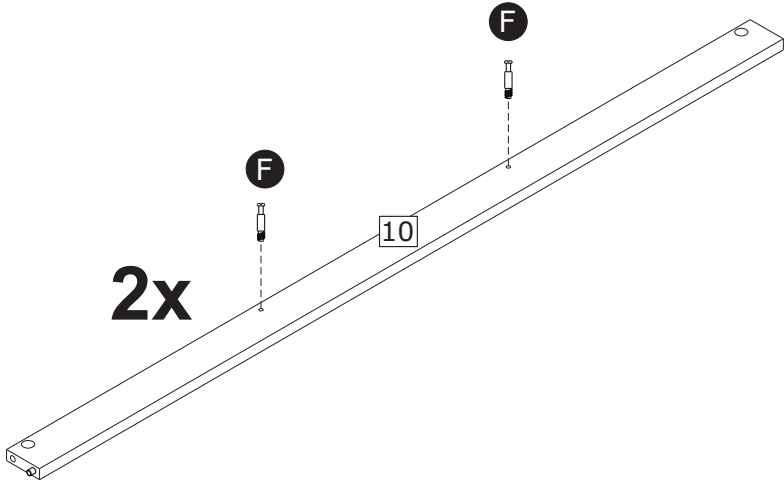

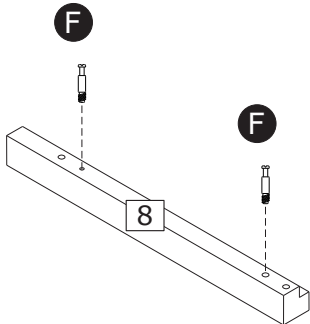


2x 








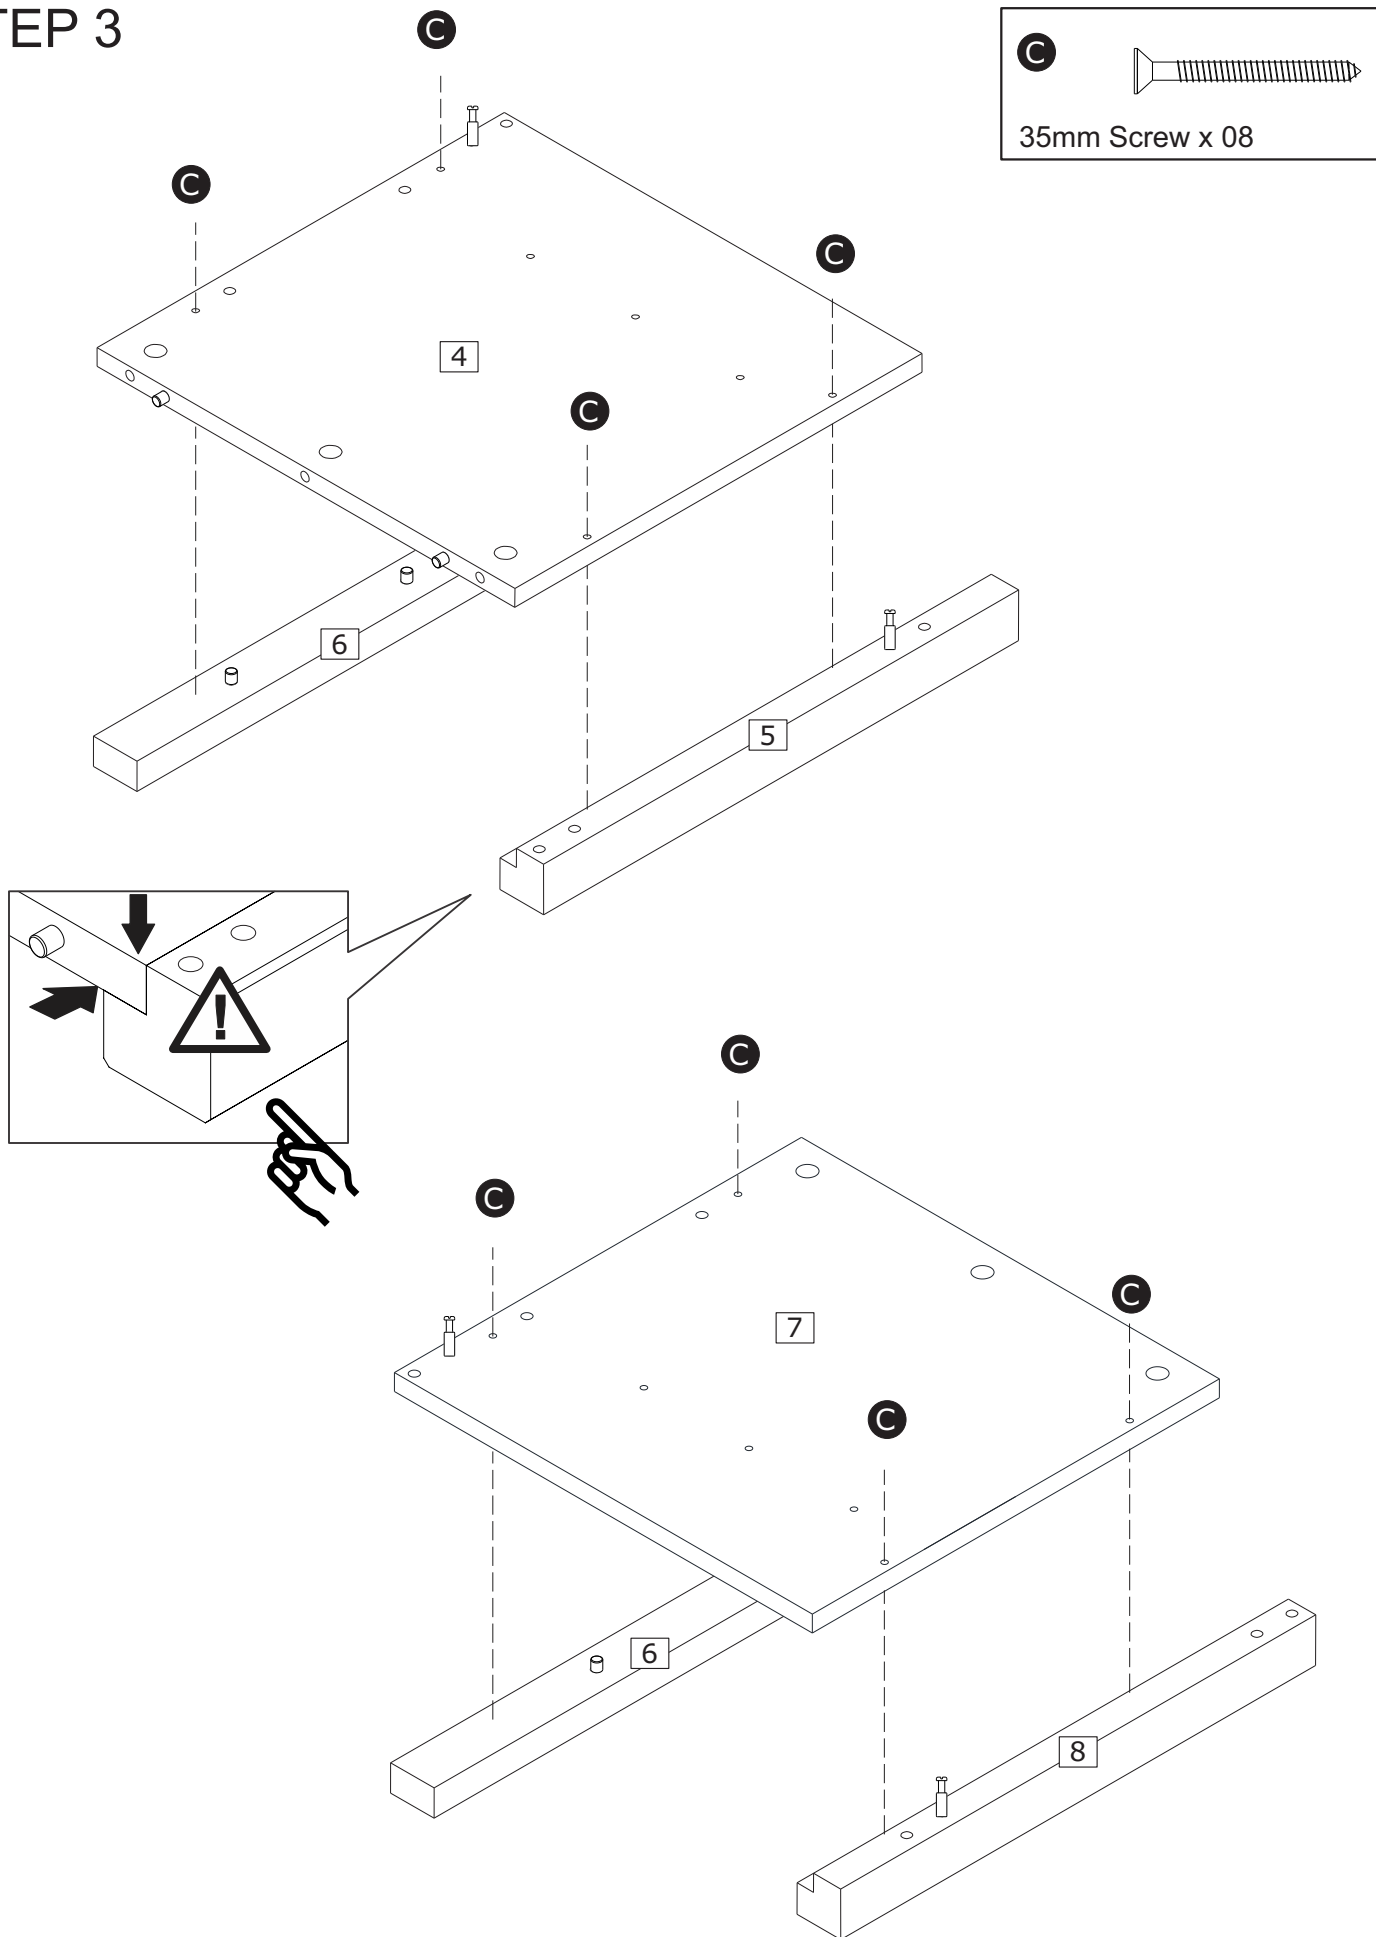
F 

STEP 3



STEP 4

D  8mm Screw x 12	E  20mm Screw x 06	H  Spacer x 6
K  Right runner x 3		L  Left runner x 3

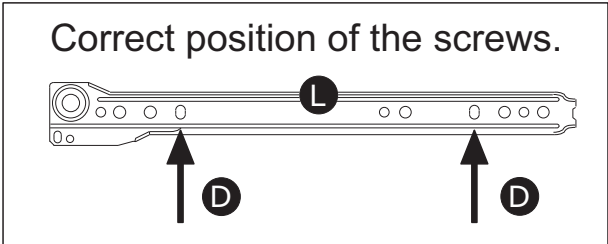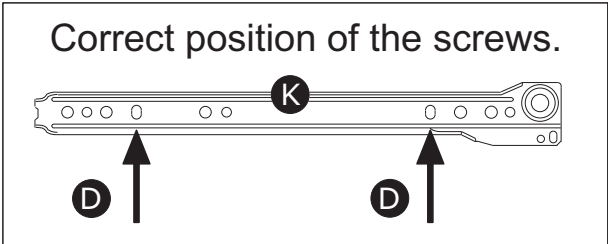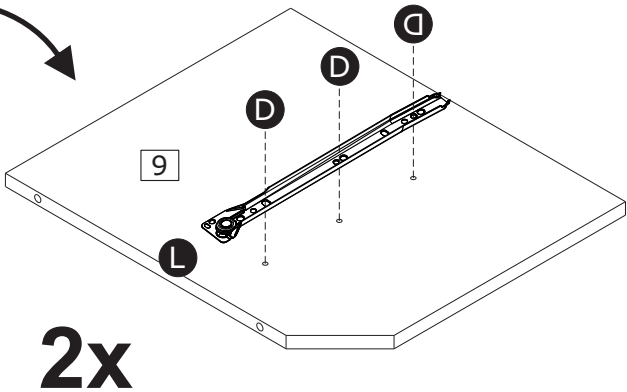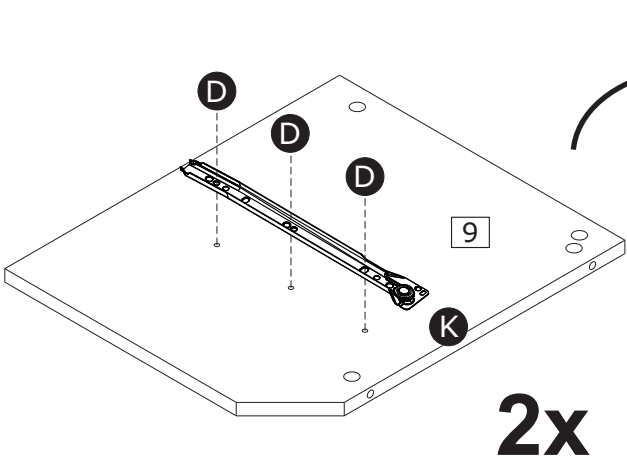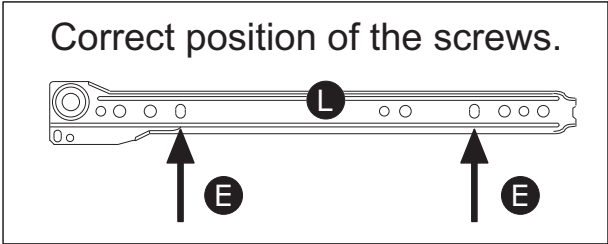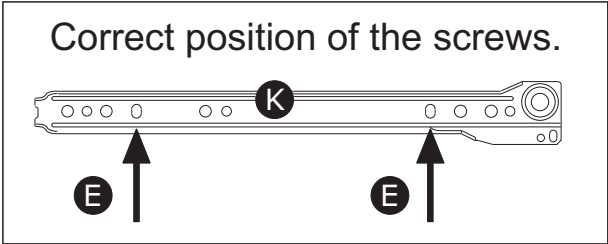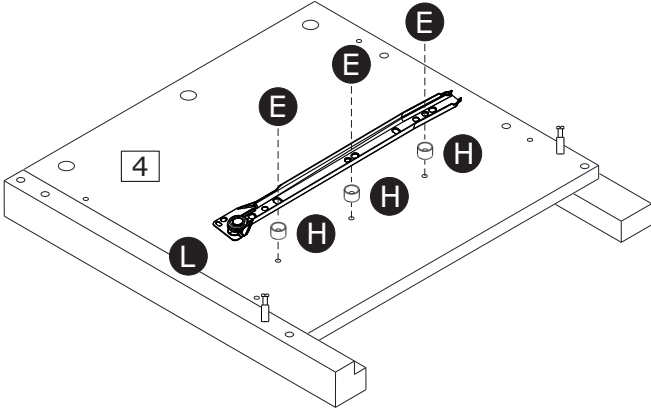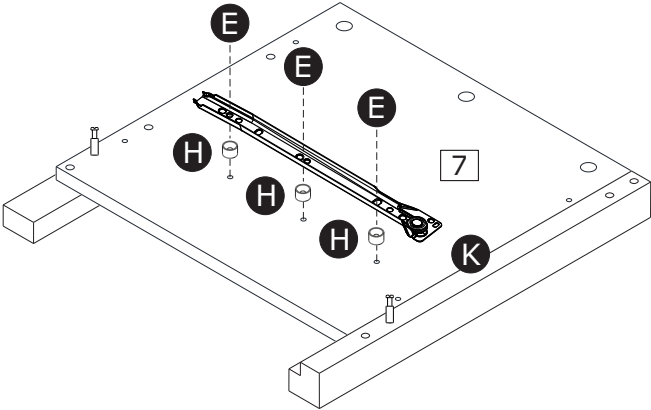


STEP 5

G

Locking
nut x 2

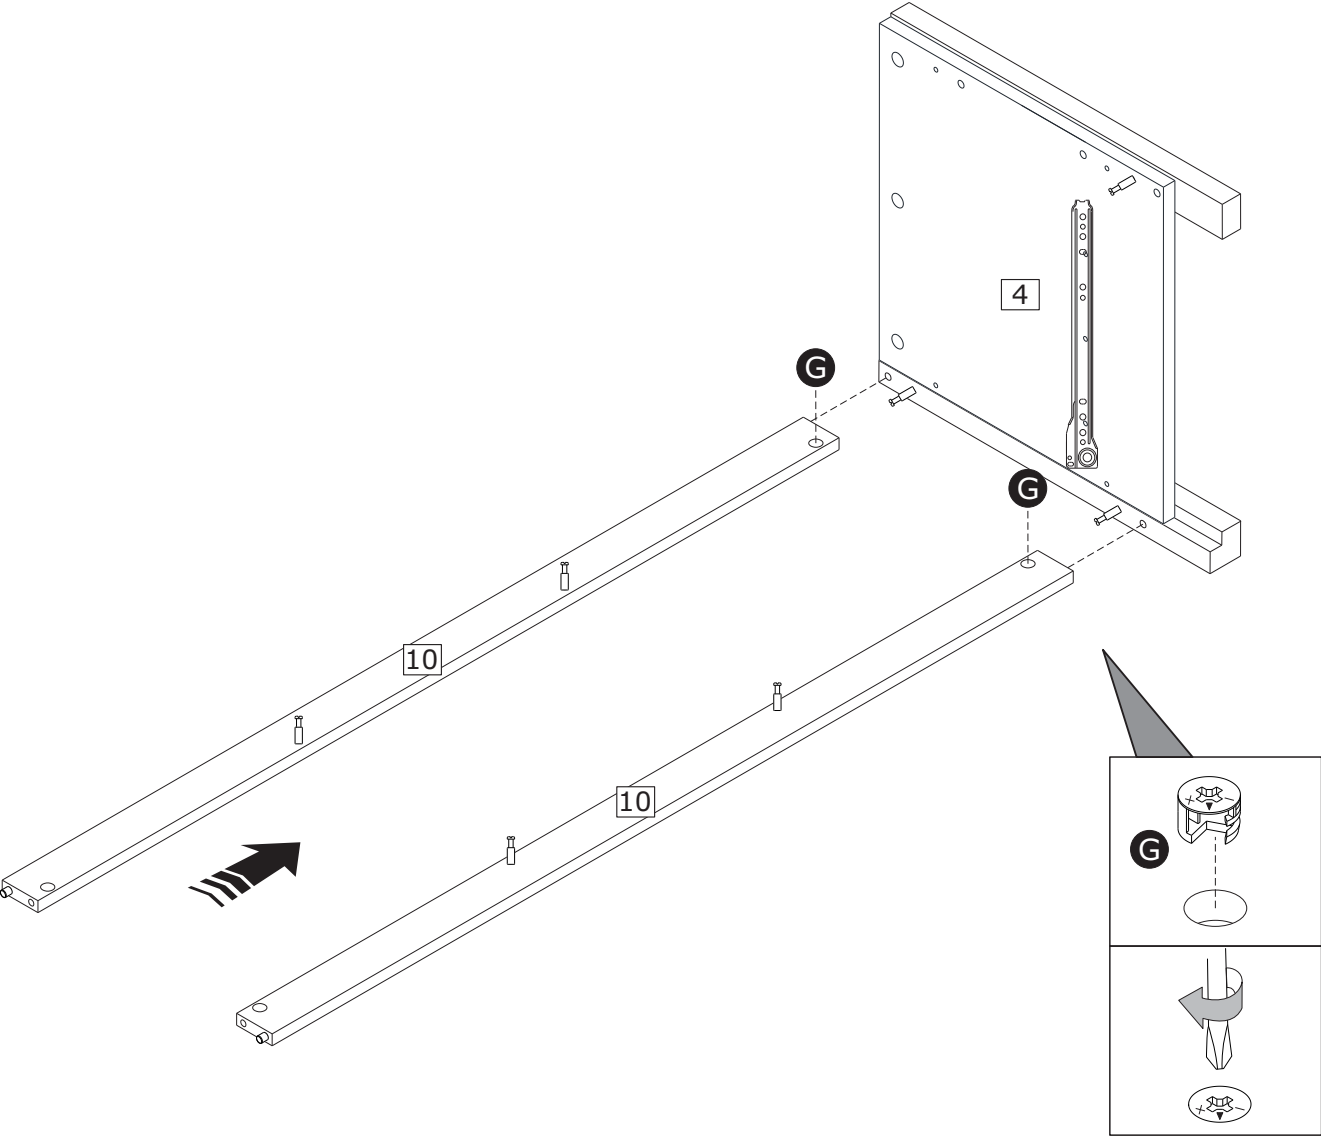


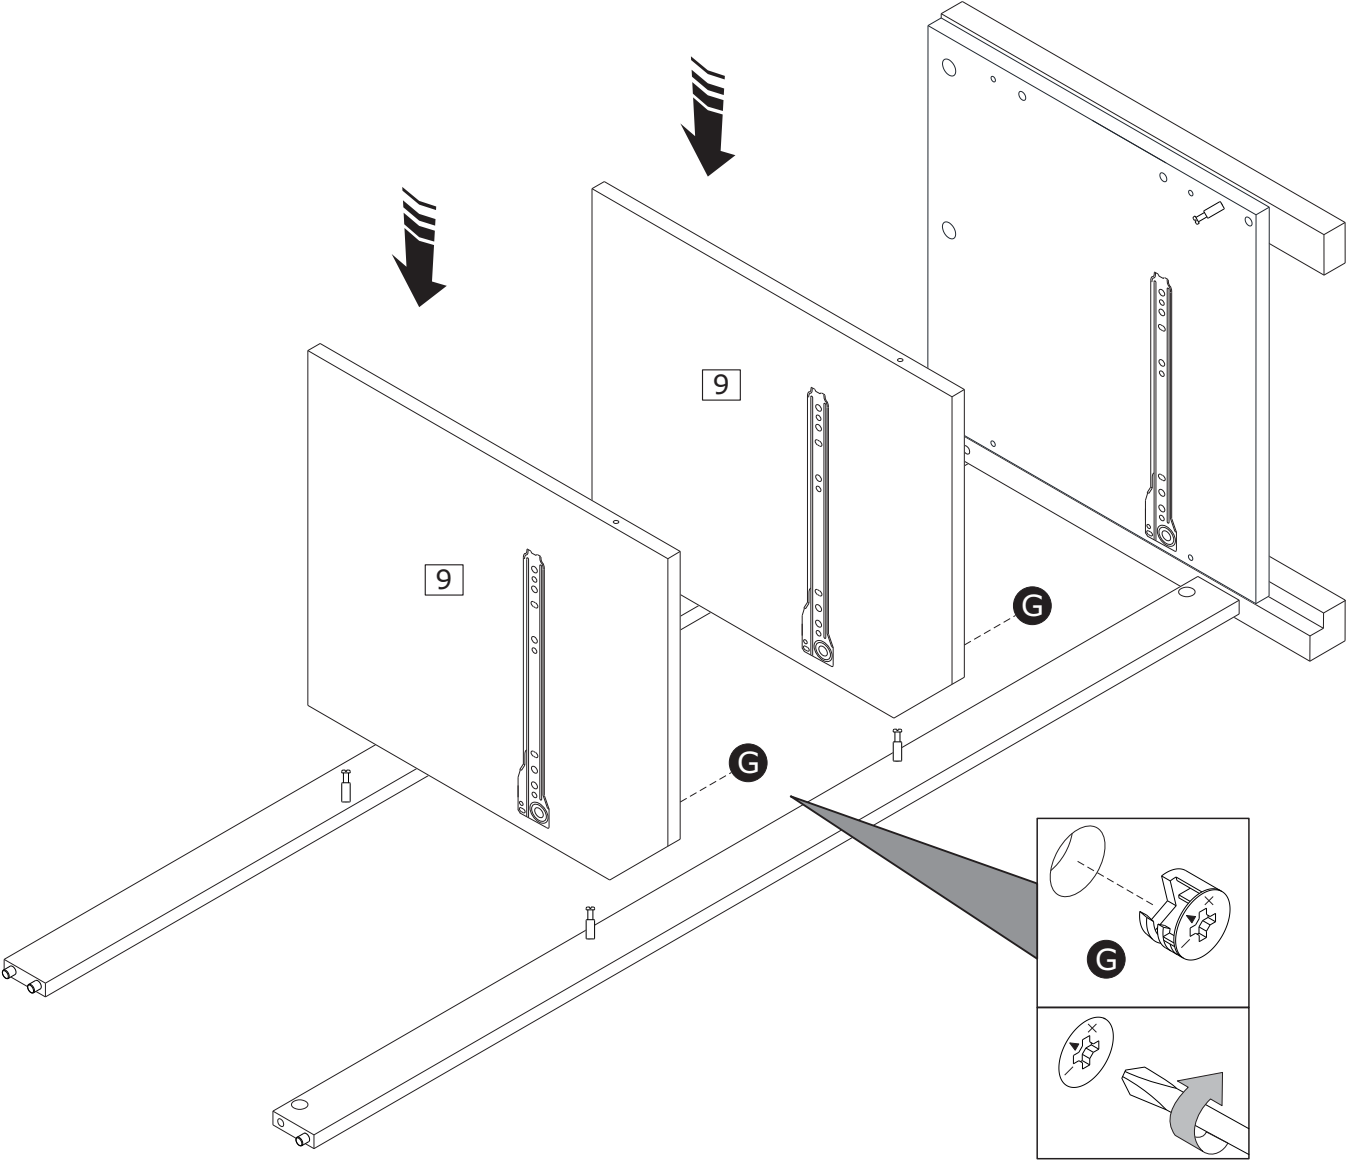


STEP 6

G

Locking
nut x 4








STEP 7


G

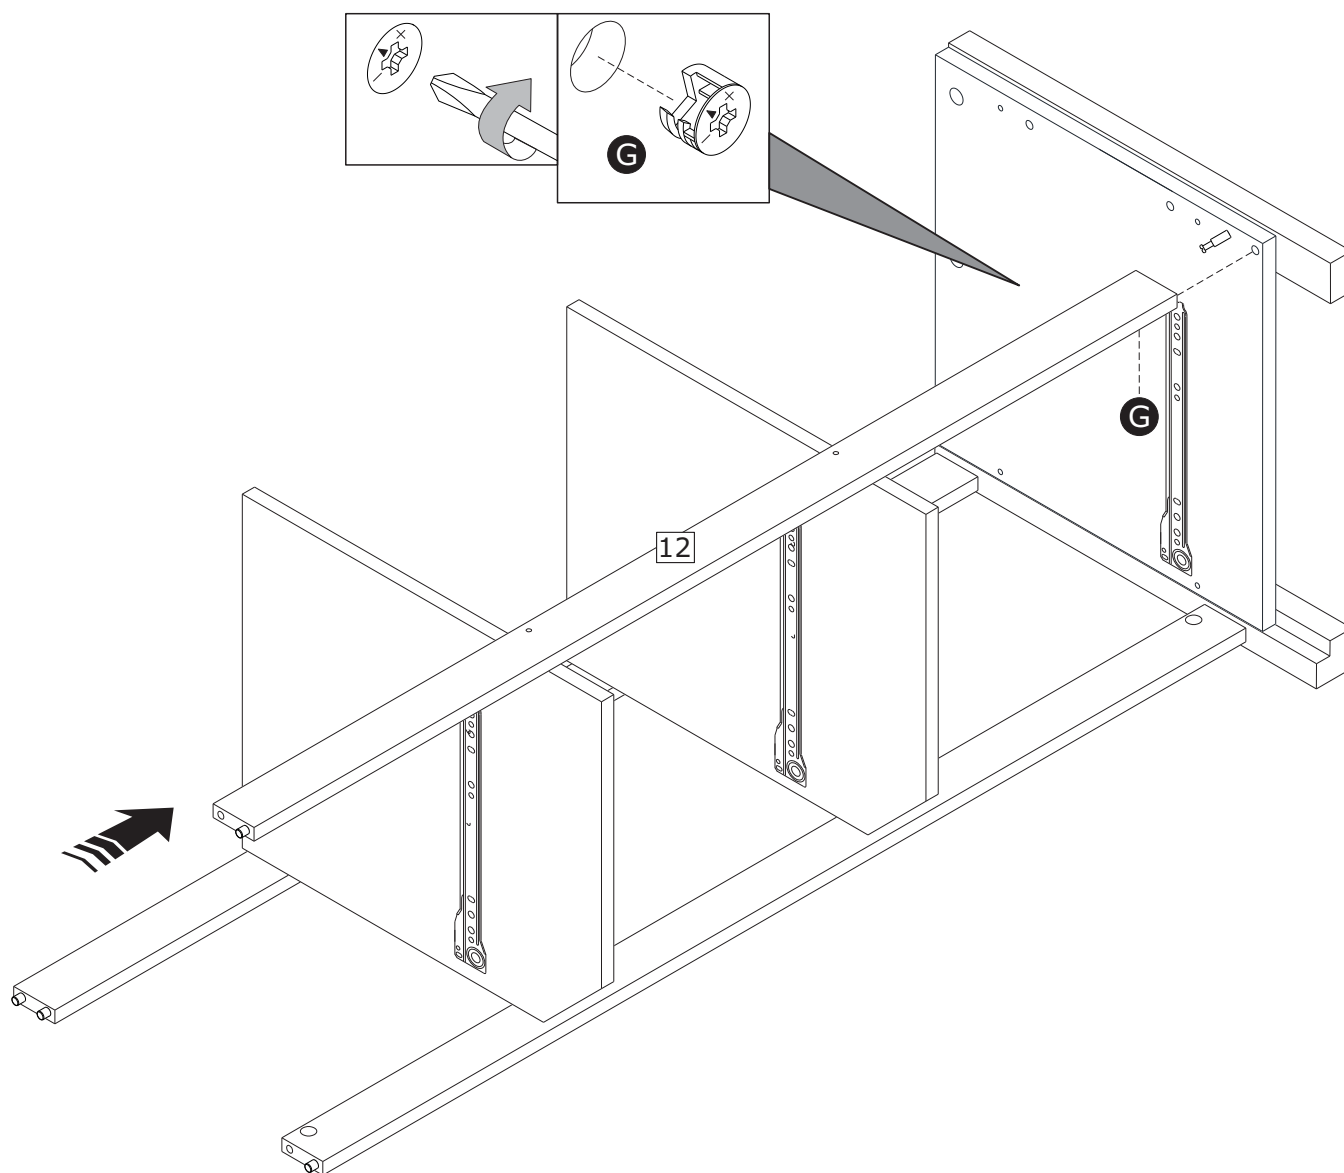Locking
nut x 1





STEP 8

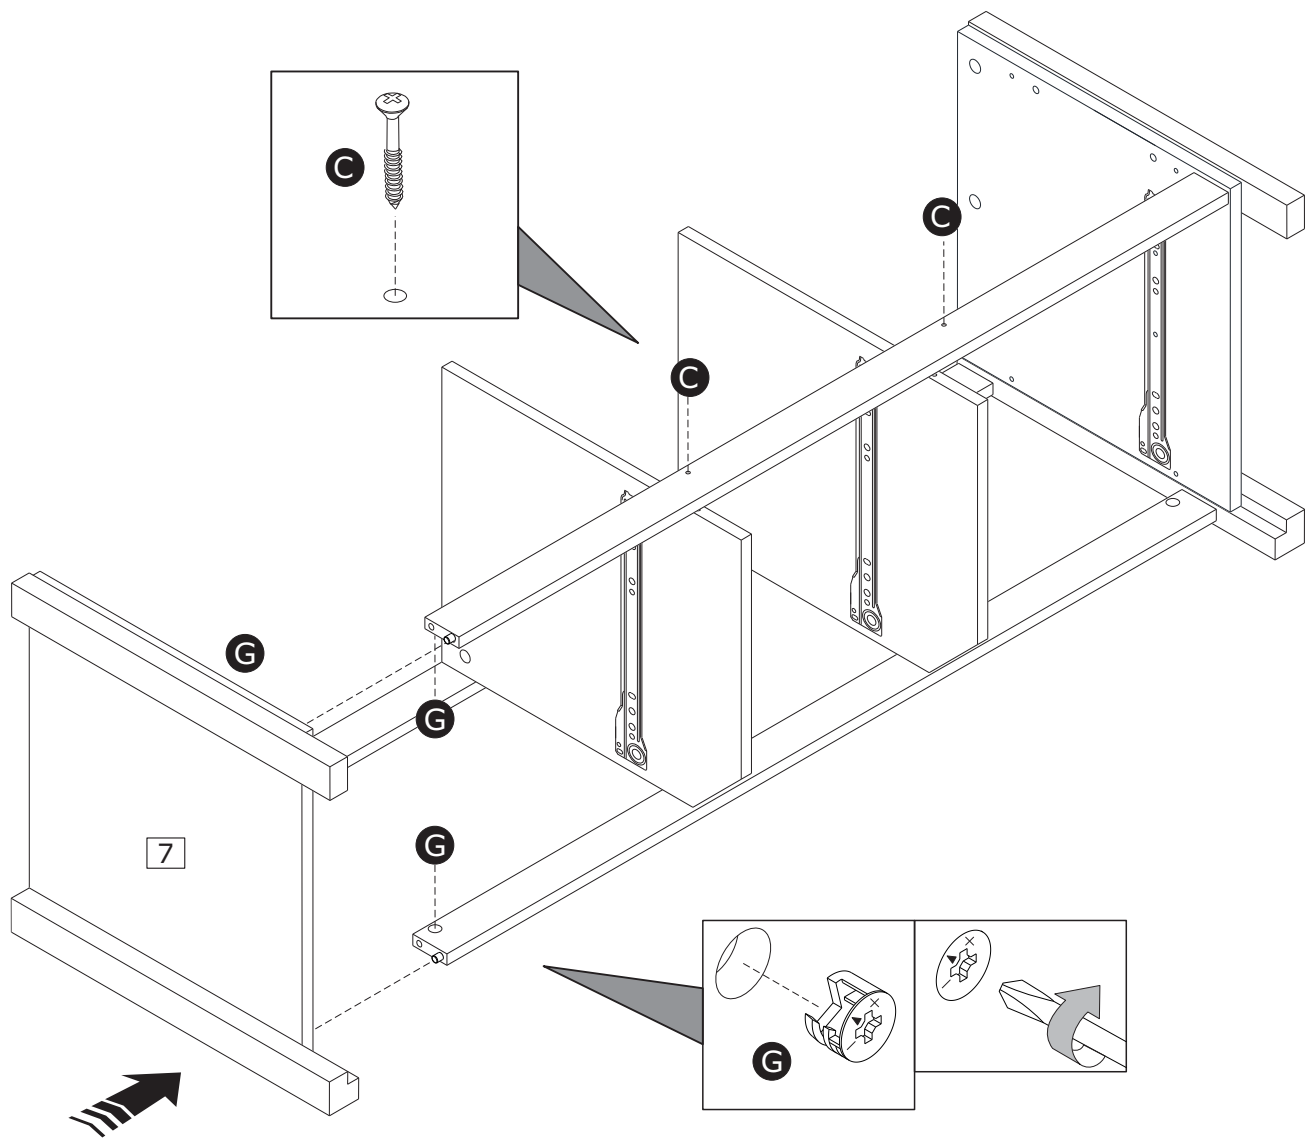
C  35mm Screw x 02	G  Locking nut x 3
---	--




STEP 9

C  35mm Screw x 10	J  Tape hole x 2
---	--

a:

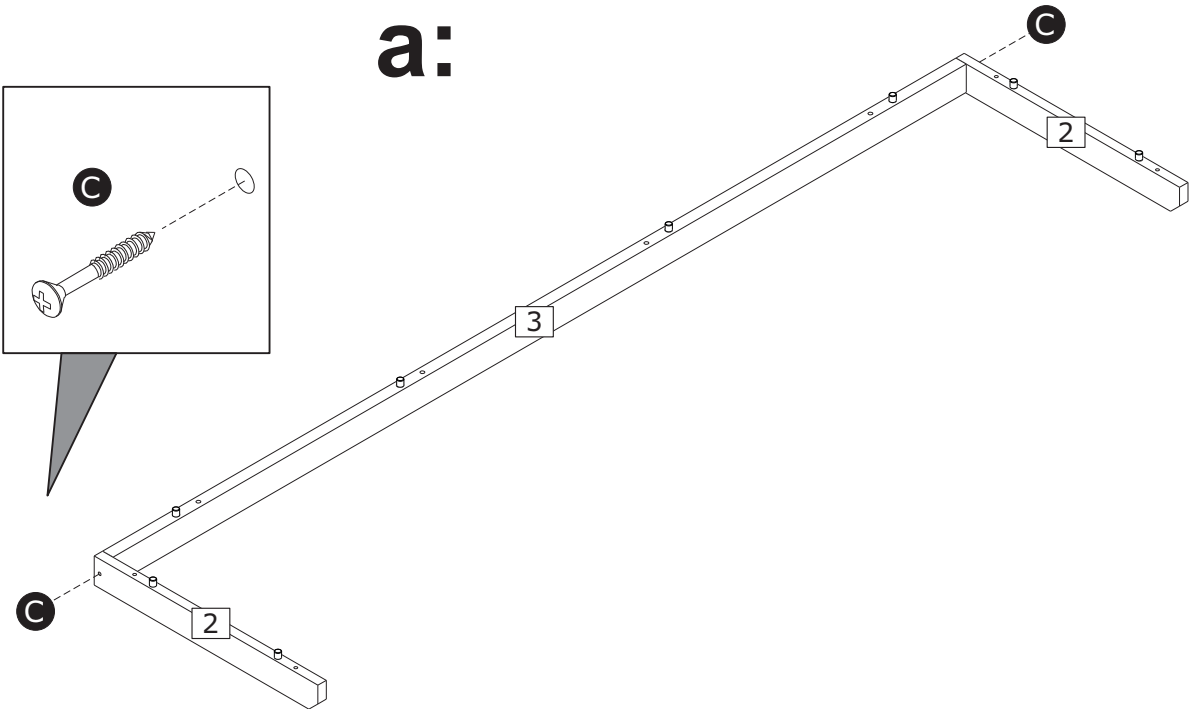


b:

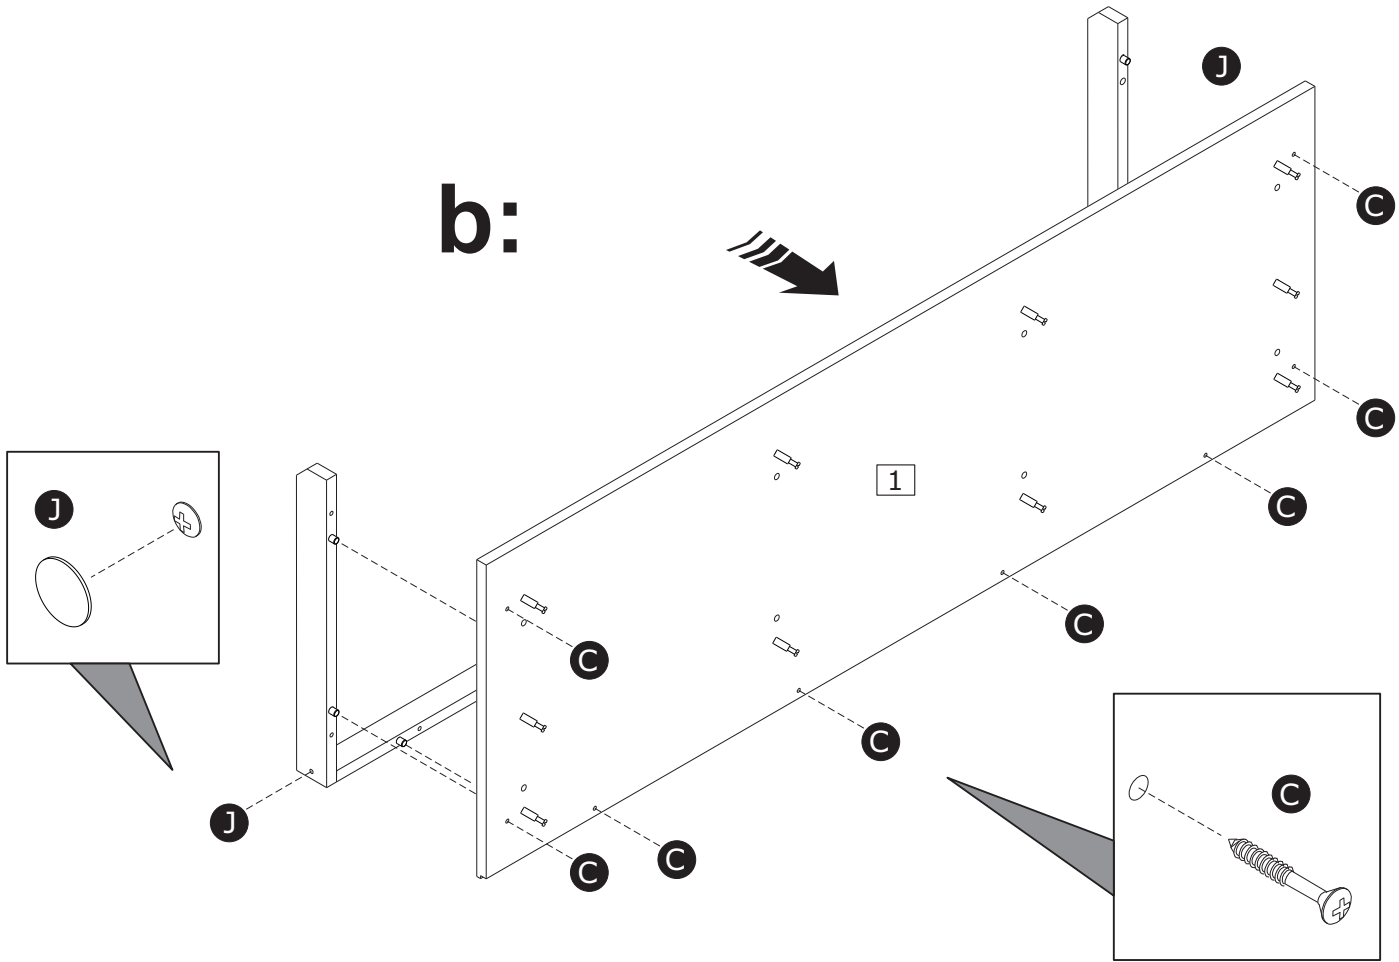

STEP 10


G

Locking
nut x 10

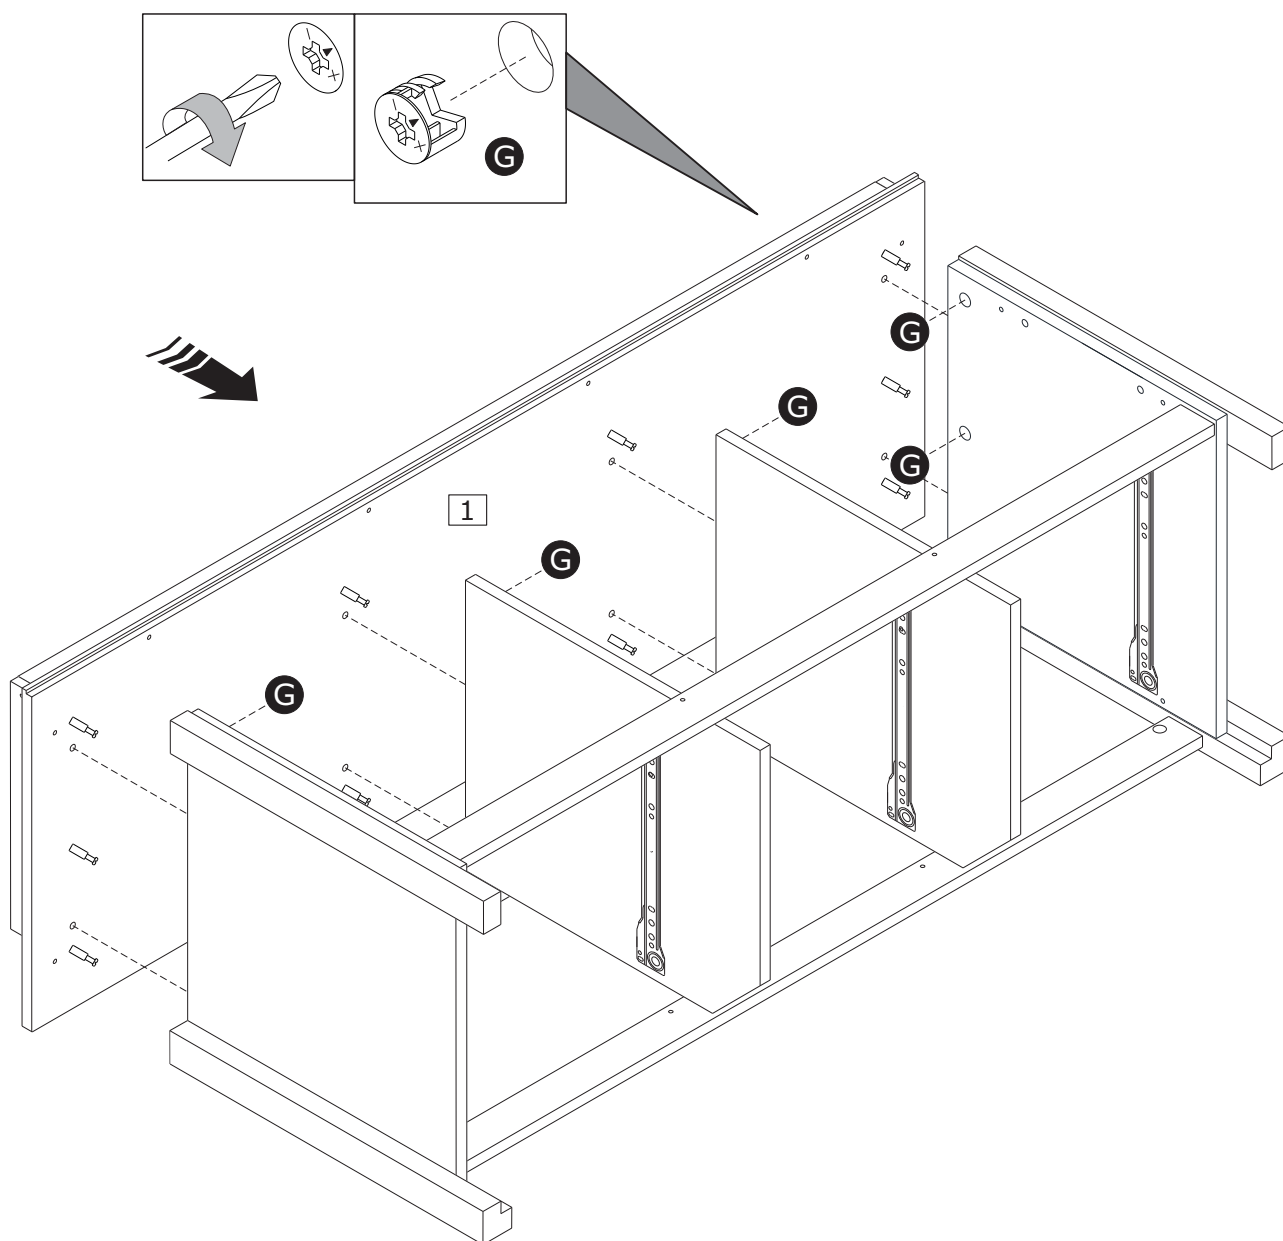


STEP 11

I




Nail x 24


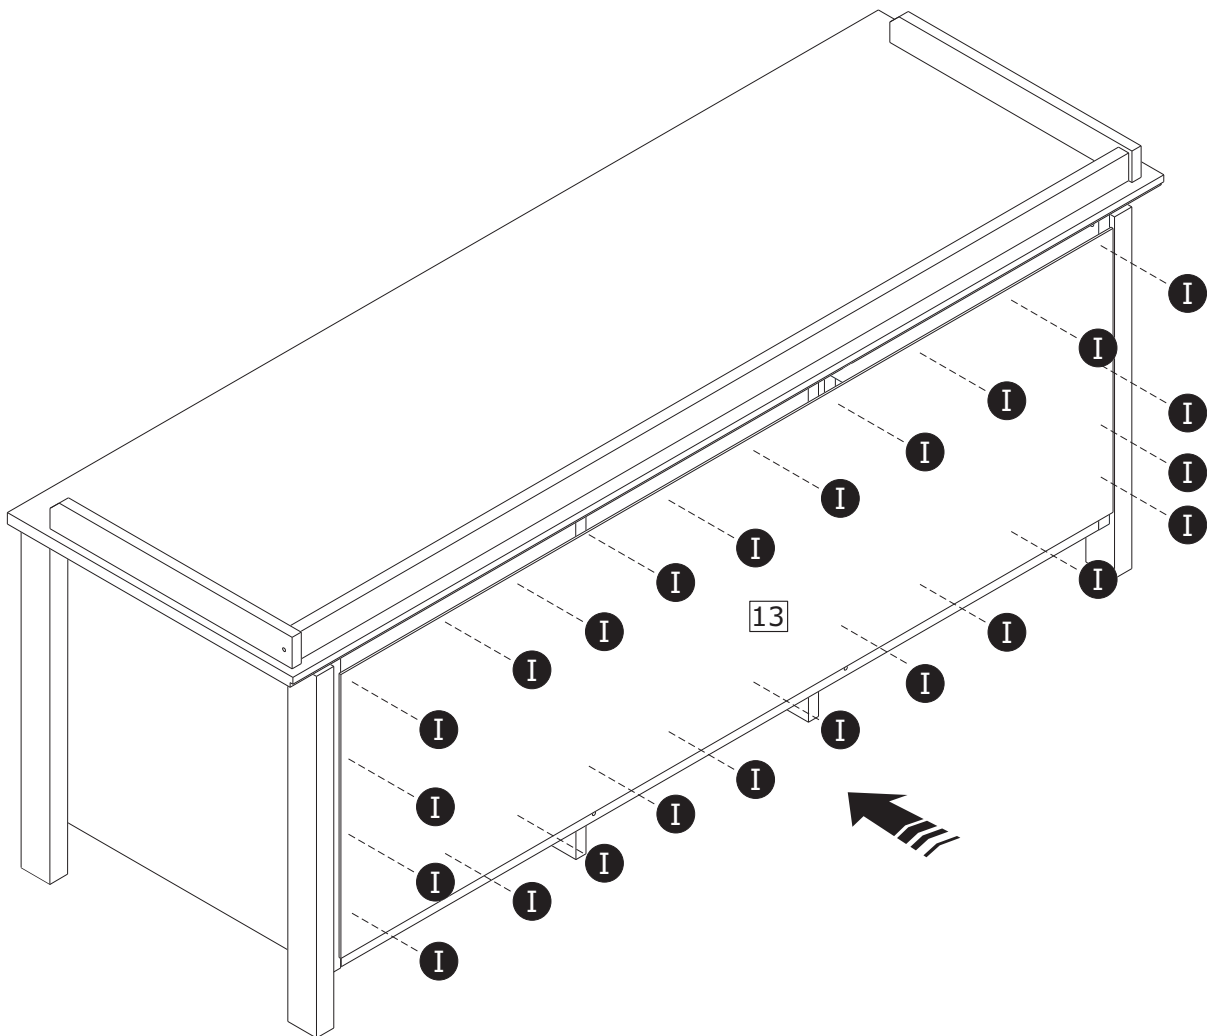



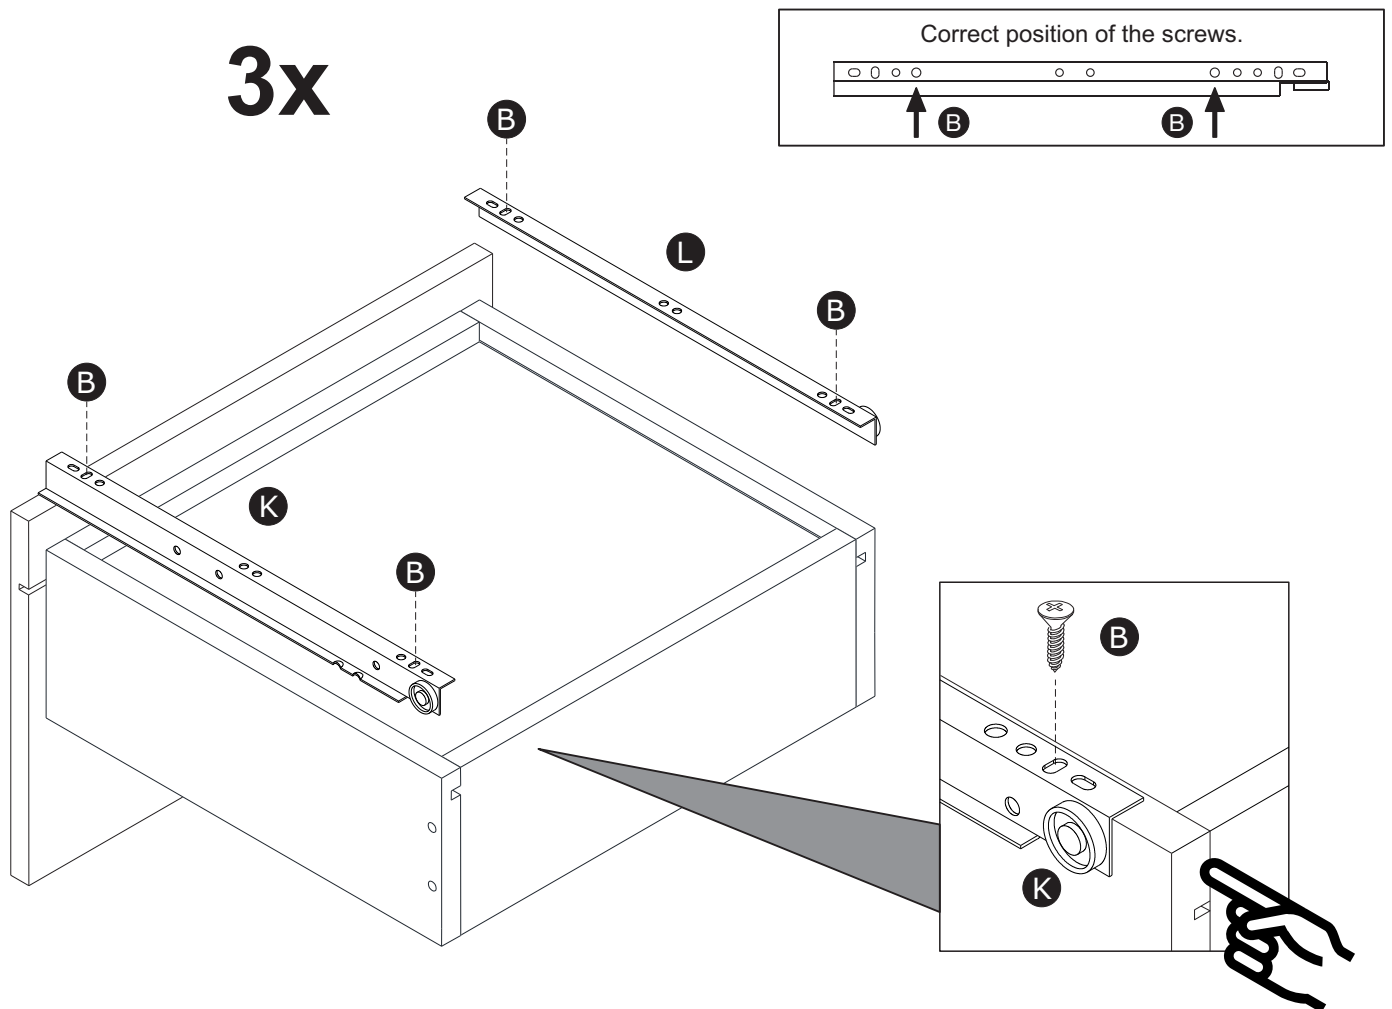
STEP 12

G Locking nut x 12		C  35mm Screw x 12
---------------------------------	--	--

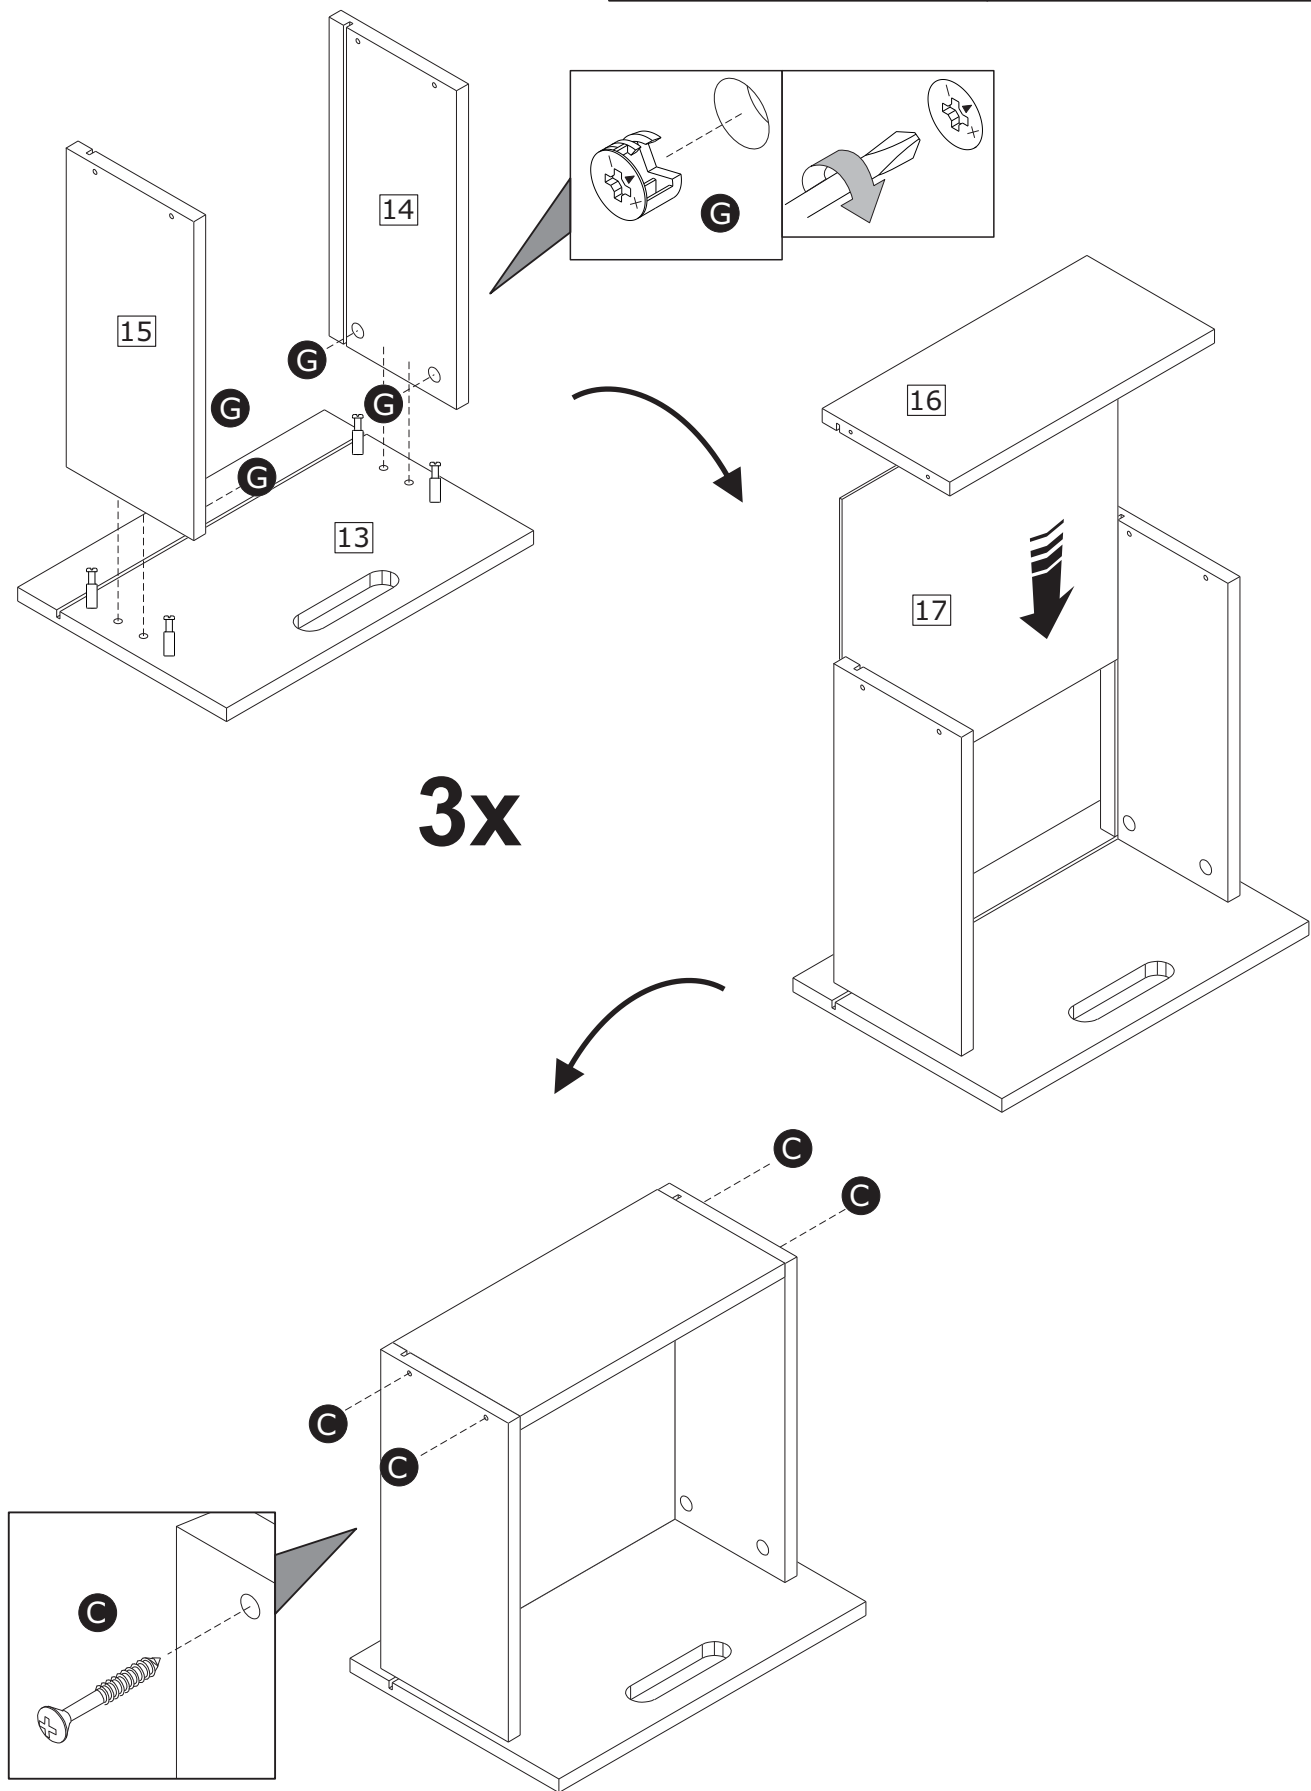


STEP 13

B  12mm Screw x 12	K  Right runner x 3	L  Left runner x 3
---	---	---




STEP 14

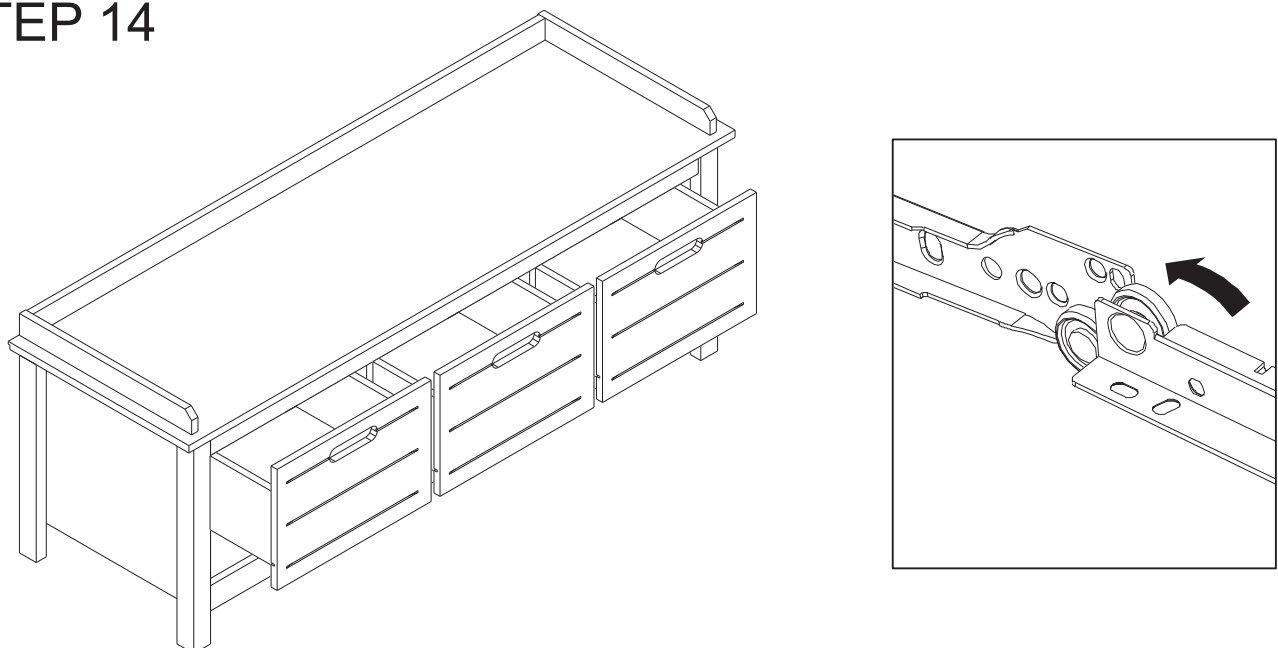

STEP 15

B



12mm Screw x 12

