

BOTTOM DOOR BRACKETS


SUPPORTS DU BAS

STANDARD INSTALLATION

1. Unplug electric operator (if installed).
2. Raise door to open position. Prop door up with a 2 x 4 cut to length, or position a step ladder under the door so that springs are in a relaxed position.
3. Unhook the cable and remove the roller from the old bottom bracket and place in the new bottom bracket.
4. Place the roller in the track and position the new bracket on the bottom of the door. Secure the bracket using the carriage bolts and nuts provided (drill 3 new 1/4" holes if old holes do not align with new bracket).
5. Reattach the door cable to bottom bracket side post.
6. Remove 2 x 4 or step ladder.

INSTRUCTIONS D'ASSEMBLAGE

1. Débrancher l'ouvre-porte électrique (si installé).
2. Soulever la porte complètement, et la soutenir à l'aide d'un 2 x 4 ou d'une échelle pour que les ressorts soient détendus.
3. Retirer la roulette et détacher le câble du vieux support et l'installer sur le nouveau support.
4. Glisser la roulette dans le rail et positionner le nouveau support au bas de la porte. Fixer le support à l'aide des boulons et écrous fournis (si nécessaire, percer 3 nouveaux trous 1/4" si les anciens ne correspondent pas).
5. Réattacher le câble du support.
6. Ôter le 2 x 4 ou l'échelle.

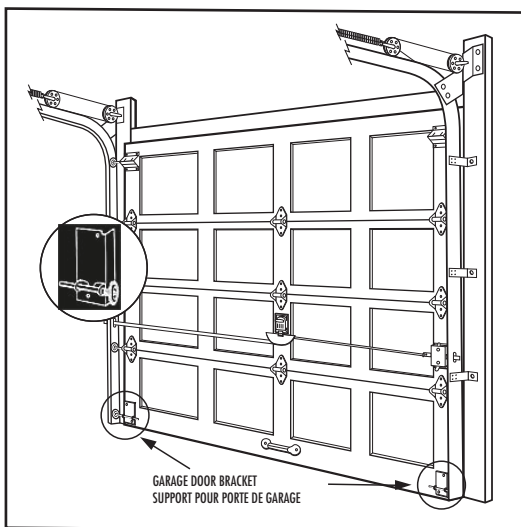

SK7130

IDEAL SECURITY INC.
LASALLE, QC
PRESCOTT, ONT.
CORAOPOLIS, PA.
www.idealinc.com

MADE IN / FABRIQUÉ EN
CHINA/CHINE