


SKDX DRILLING TEMPLATE

1. FOR OUTSWINGING STORM AND SCREEN DOOR ONLY
2. PRINT OUT THIS TEMPLATE USING SCALE 1:1, VERIFY WITH A RULER
3. FOLD TEMPLATE ALONG THE DOTTED LINE ACCORDING TO YOUR DOOR HANDEDNESS
4. CLOSE DOOR, PLACE SIDE A ON DOOR JAMB AND SIDE B ON INSIDE DOOR SURFACE
5. MARK ALL HOLES LOCATIONS WITH A CENTER PUNCH
6. DRILL THREE HOLES DIAMETER 5/16" STRAIGHT THROUGH DOOR
7. DRILL PILOT HOLES DIAMETER 1/16", 1" DEPTH FOR STRIKE PLATE ON JAMB
8. FOR THE TIE DOWN SCREW OF THE BACK PLATE, USE THE BACKPLATE AS A GUIDE TO MARK AND DRILL A PILOT HOLE DIAMETER 1/8" THROUGH THE OUTER SKIN OF THE DOOR ONLY
9. INSTALL ALL PARTS

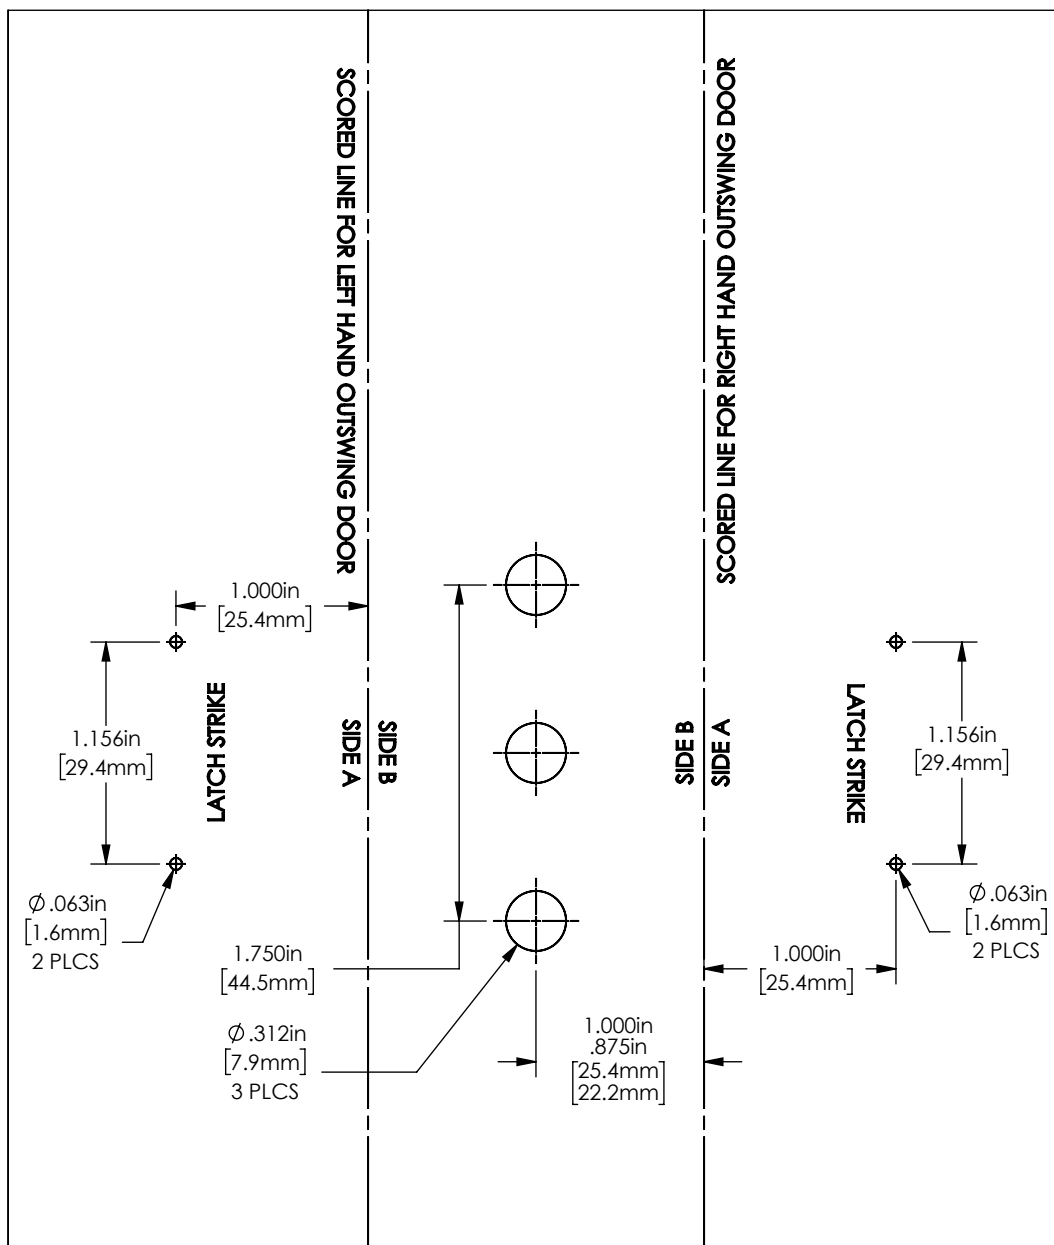

SKDX COMPONENTS

