


Serial No.:

AB-3100

Installation Instruction


① M10x95 bolts , washer , nut x 2




② M8x20 bolts , washer x 6



③ 50x70 foot cover x 2

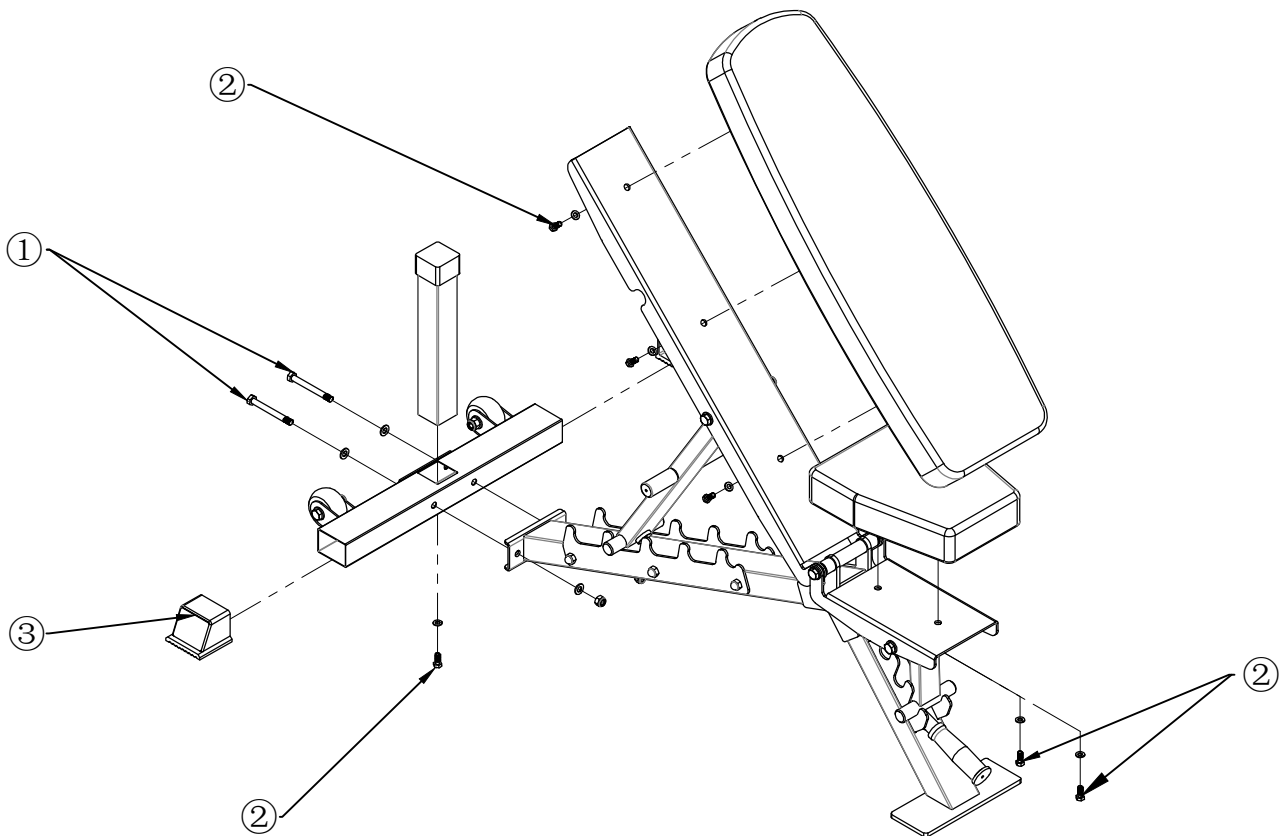

Millimeters

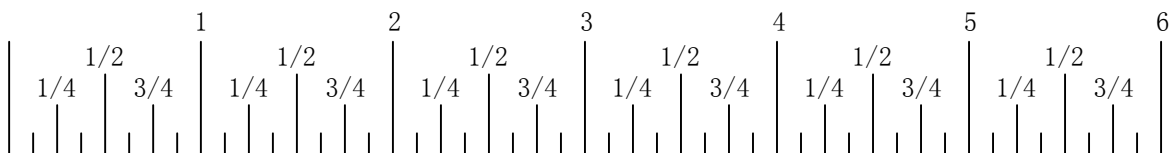

Inches