



LOVESEAT

Instructions for all pillow back styles: Ali, Jovie, Laney, Tux

ASSEMBLY INSTRUCTIONS

TABLE OF CONTENTS

Tools Needed 3

FAQs 5

Arm Frame Assembly 6

Armless Frame Assembly 10

Connecting Unit to Unit 16

Armless Fabric Assembly 17


Arm Fabric Assembly 20

Connecting Arm to Unit 22

Foam and Pillow Fabric Assembly 24


Please Read 26

TOOLS NEEDED

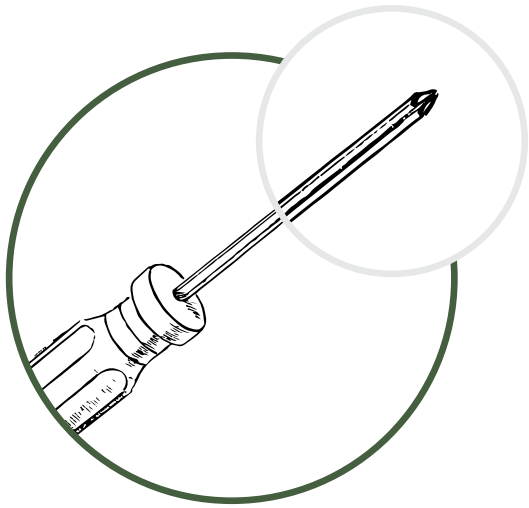

Phillips Screwdriver

OR

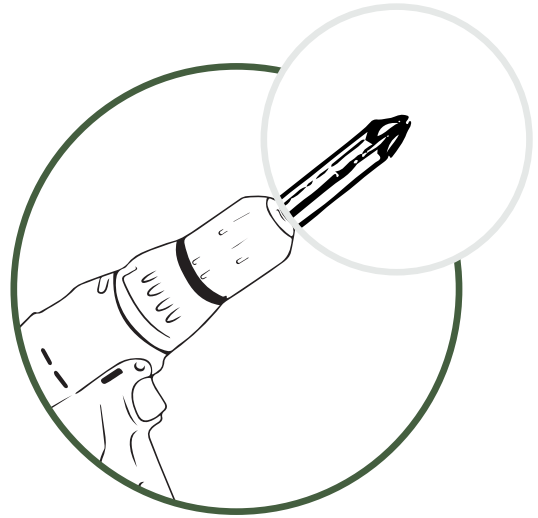

**Power Drill with
#2 Phillips Screwdriver Bit**

— Snacks and drinks are good too! —


Heads up!

Instructions in this Assembly Booklet may say to insert T-Connectors and Foot Glides.

You're a lucky duck! We've already taken care of inserting the T-Connectors and Foot Glides for you. Please use the instructions solely as a reference to locate them on the unit.

If you have questions or need assistance, please reach out to Customer Service at

support@homereserve.com or 800-482-2712

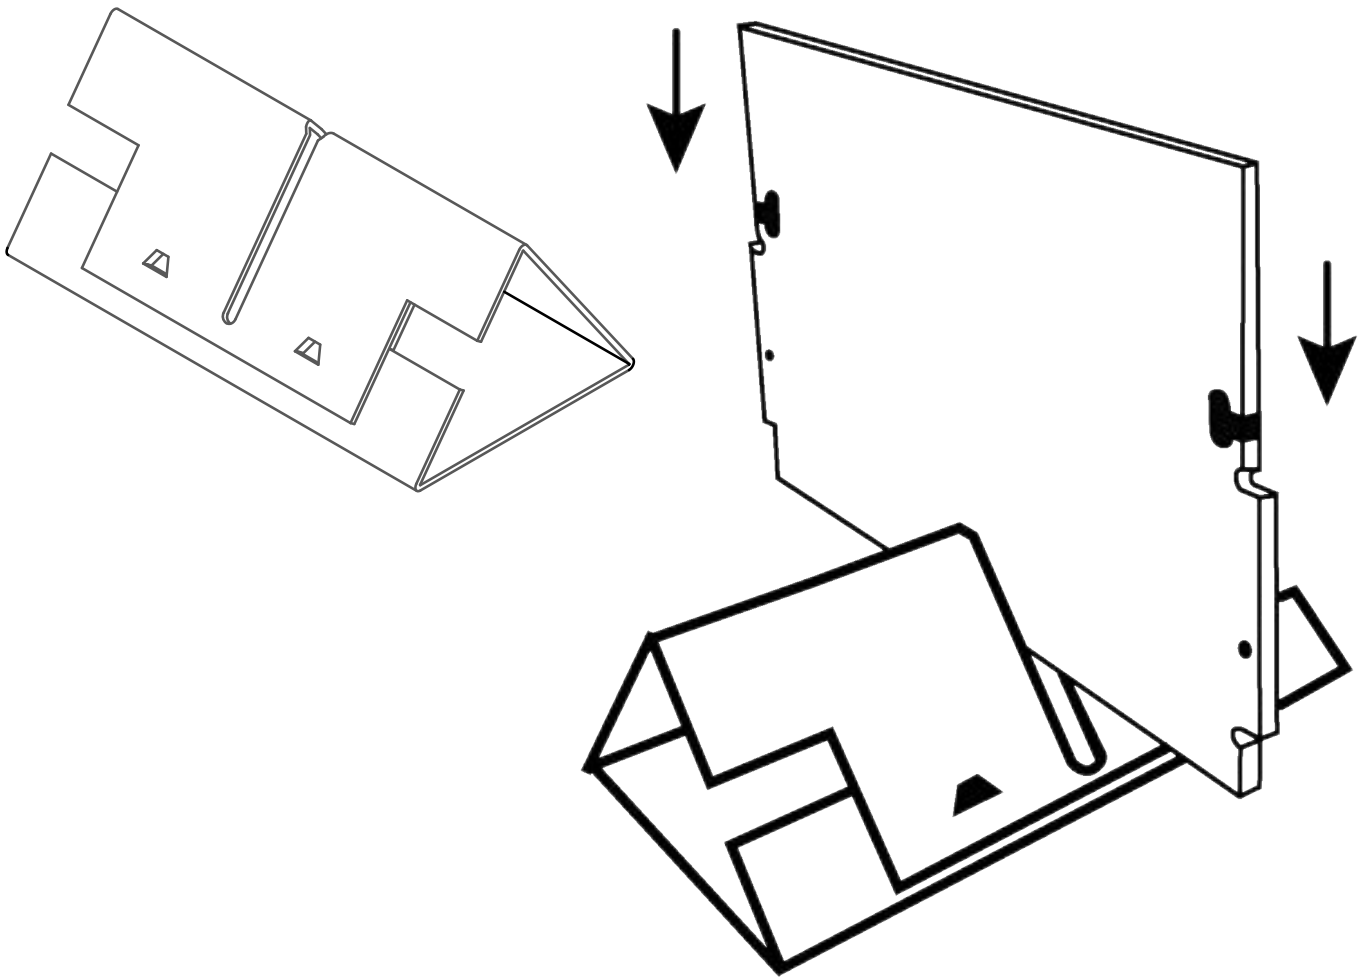

What is the Assembly Aid?!

Follow the instructions on the Assembly Aid to fold it into a triangle, as shown above.

At the start of assembly, you may find it helpful to use the Assembly Aid to hold the first few frame pieces upright while you build the base of the unit.

We recommend removing the Assembly Aid once the frame can stand on its own.

If you have any questions or need assistance, please contact Customer Service at

support@homereserve.com or 800-482-2712

FAQs

Should the foam feel firm?

Yes! The arm foam might feel a bit firm at first, but that's totally normal – we made them that way on purpose! Firm foam lasts longer, so you can enjoy your sofa for years to come. But hey, we get it – you want to kick back and relax ASAP. That's why we recommend putting foam cushions on the floor and walking on them for a few minutes to speed up the break-in process. Trust us, your tush will thank you!

What hardware will I need?


Everything is included!

Here are some common icons you'll see along the way:

Note: T-Connectors can be inserted in either direction.



T-Connector



Foot Glide



Screw

Why is the hardware different colors?

The screws you receive may vary in color - some may be black, and some may be silver. Both can be used interchangeably when assembling our furniture! All screws will be secured into a T-Connector. There should be one extra screw at the end of assembly.

Why is the fabric tight?

As you pull the fabric onto the furniture, you may notice a slight tightness. This is intentional as it helps to minimize wrinkles for a smoother finish. Don't hesitate to tip the furniture on its side or apply some force while pulling to ensure a snug and wrinkle-free fit.


What's the sanding pad for?

We include a sanding pad with every frame, just in case you want to smooth over any surfaces or edges after assembly.


Arm Assembly

Open the boxes and set aside the foam and fabric for later. Leave the wood parts in the boxes, we will take them out as needed.


- 1 Take wood parts 1-7 out of the box. Open the parts bag and insert the black plastic T-connectors into the parts shown here. Throughout these instructions it is okay to use a hammer to tap the T-connectors and wood parts into position.

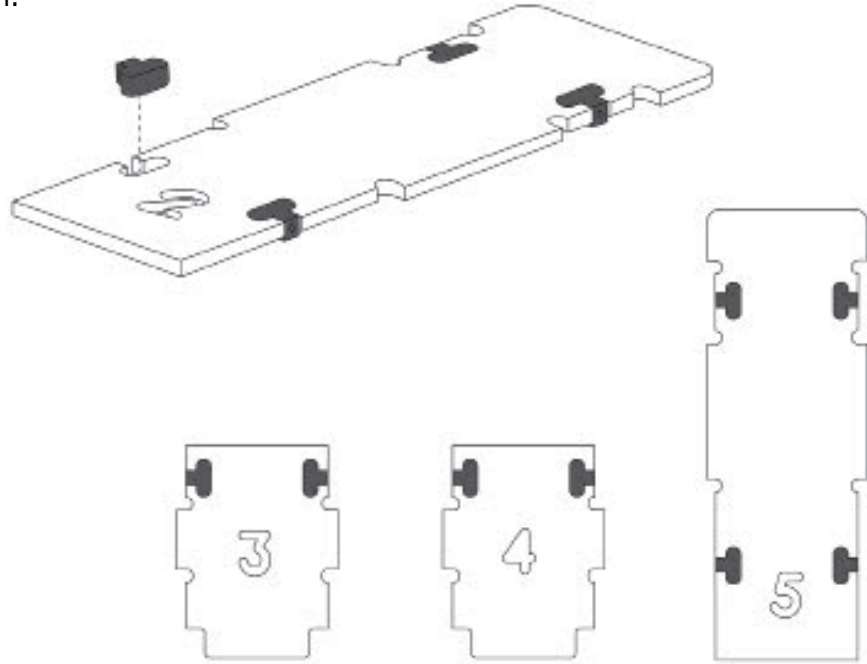


- 2 Connect parts 1 and 2 together and secure with two screws.

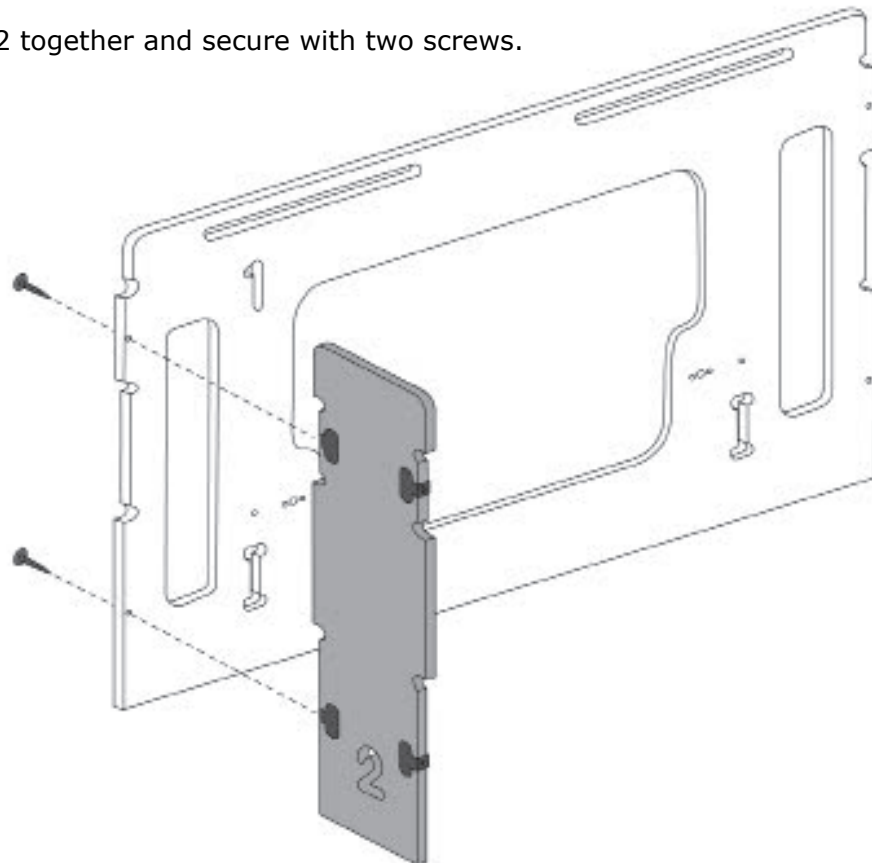

- 3** Place part 3 into position on part 1 and secure with a screw.

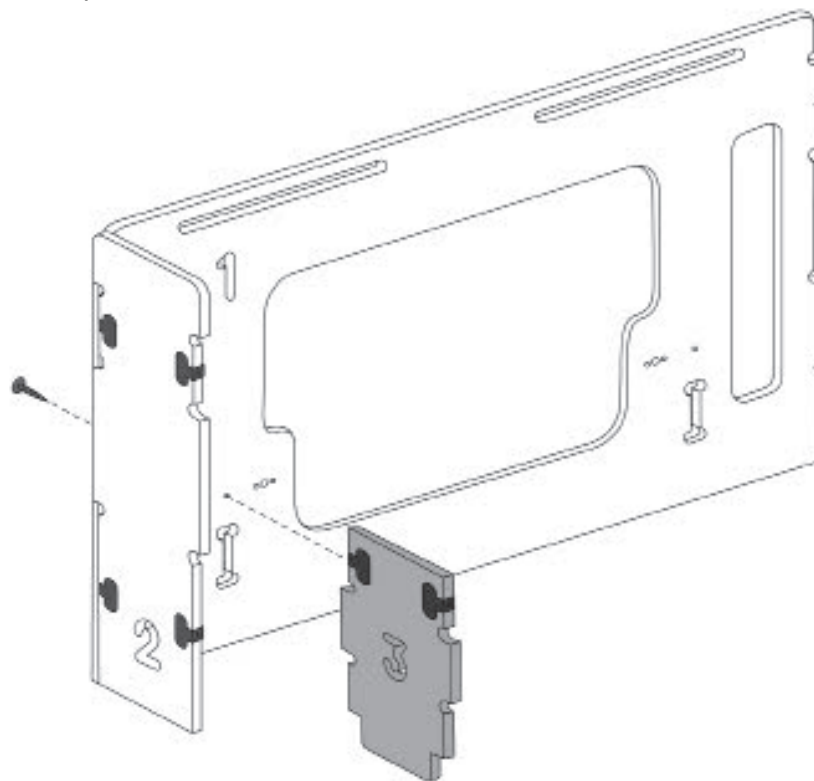


- 4** Place part 4 into position on part 1 and secure with a screw.

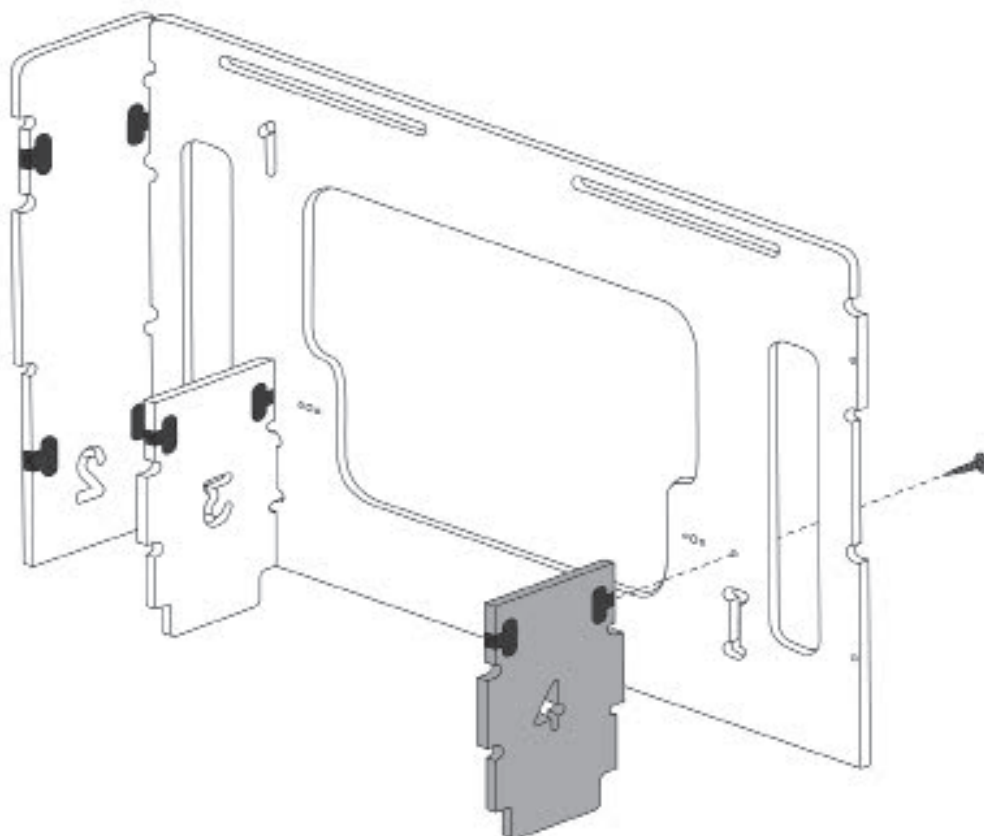


5

Connect parts 5 and 1 together and secure with two screws.

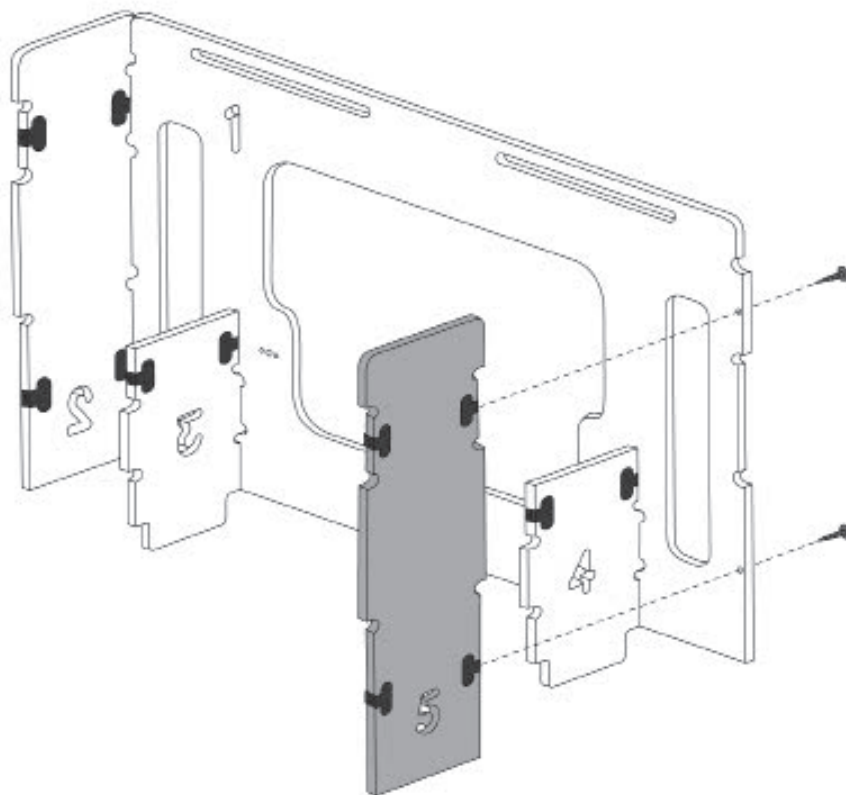


6

Place part 6 into position as shown.

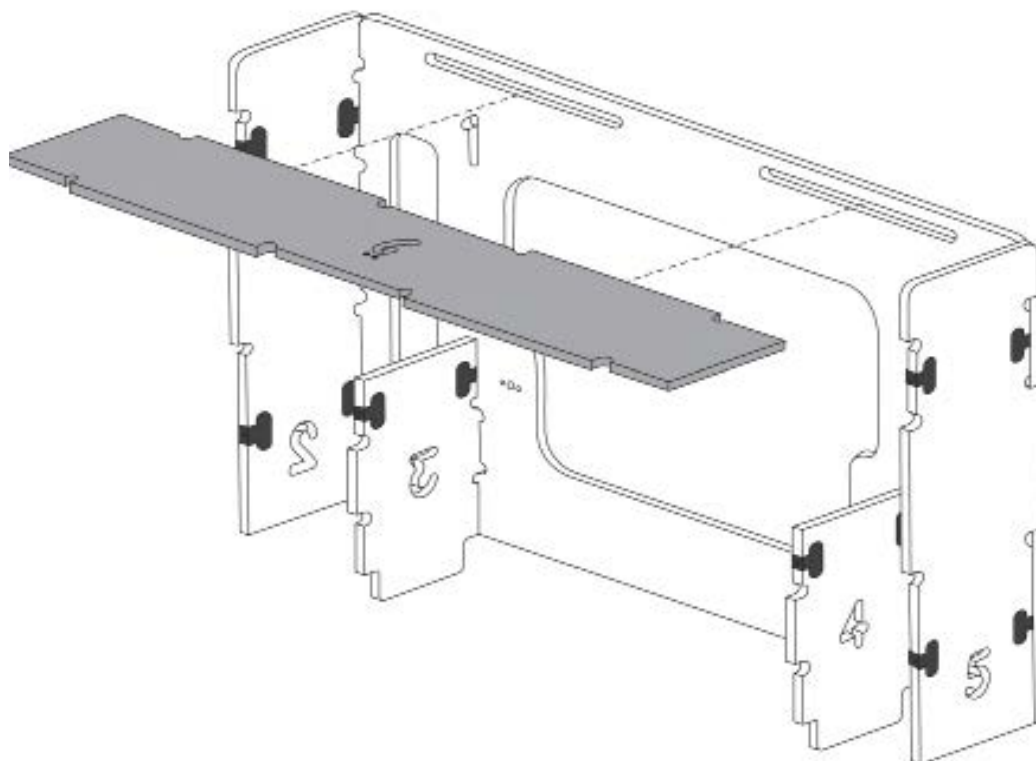


7

While holding part 6 in place, put part 7 into position on parts 2,3,4,5 and 6 and secure with six screws.

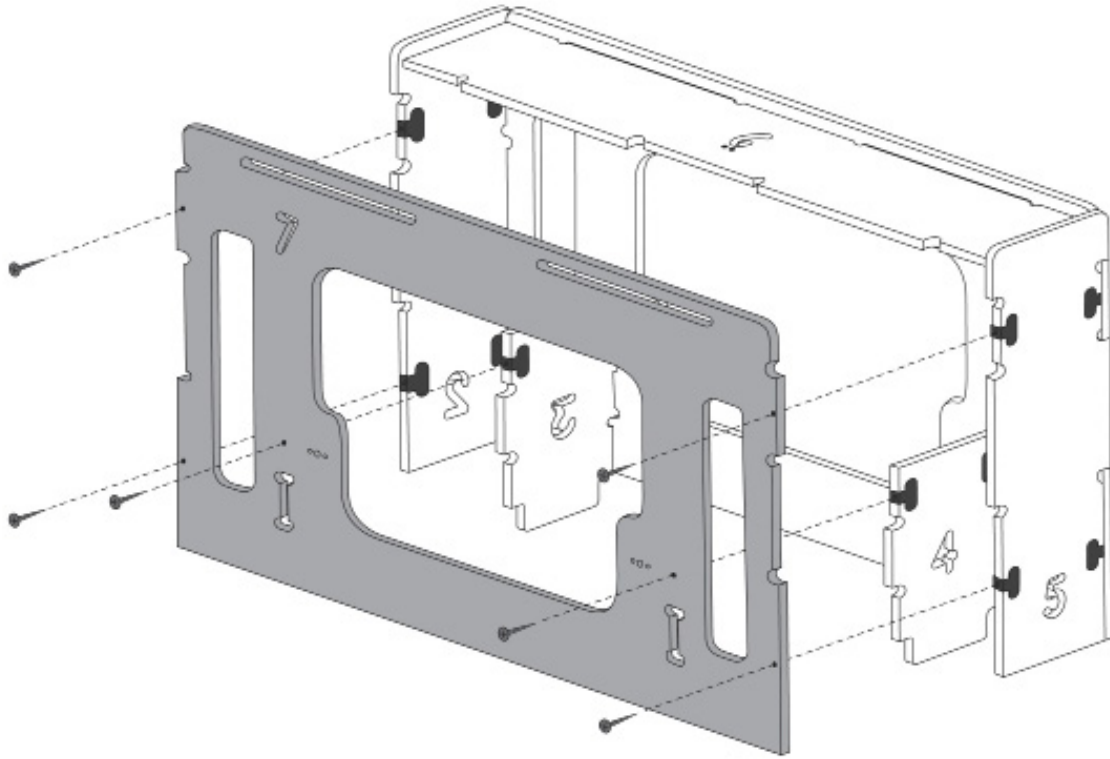

8





Repeat the assembly process for the other arm. There will be another set of wood parts numbered 1-7. Take them out of the box and follow these same steps (1 - 7). Set the arms aside.

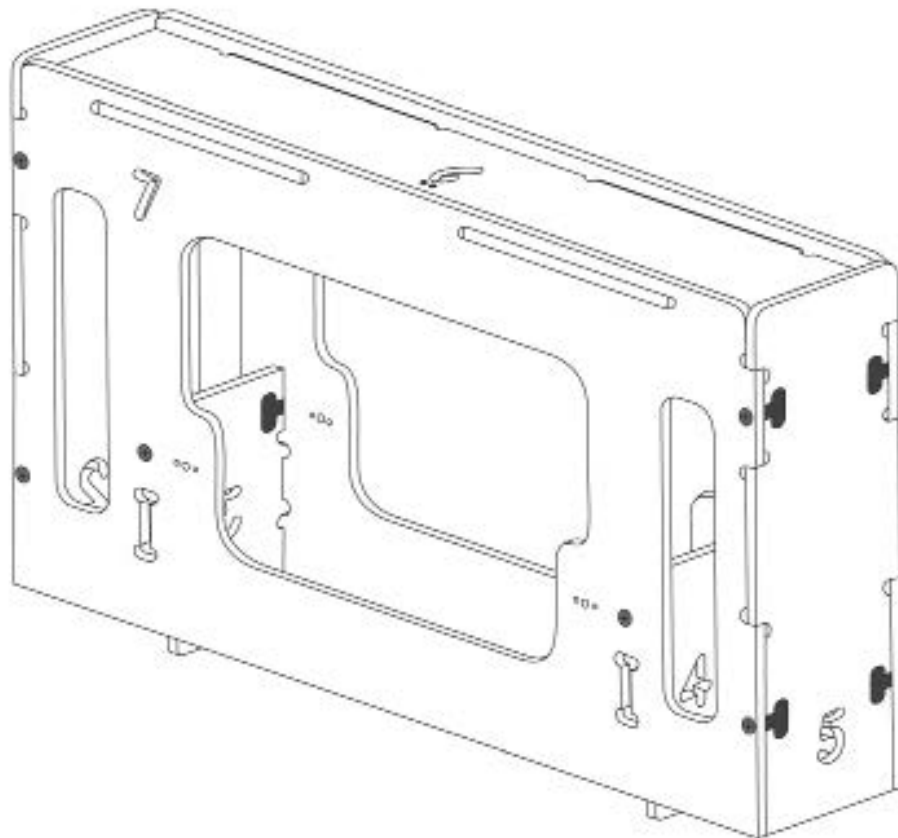

Box #1 Frame Assembly


Now you can take all the remaining wood parts out of box #1. These parts are not packed in order of assembly so don't worry about getting them mixed up. They are all numbered for easy reference.

- 1** Insert the black plastic T-connectors into the parts shown here. Throughout these instructions it's okay to use a hammer to tap the T-connectors and wood parts into position.

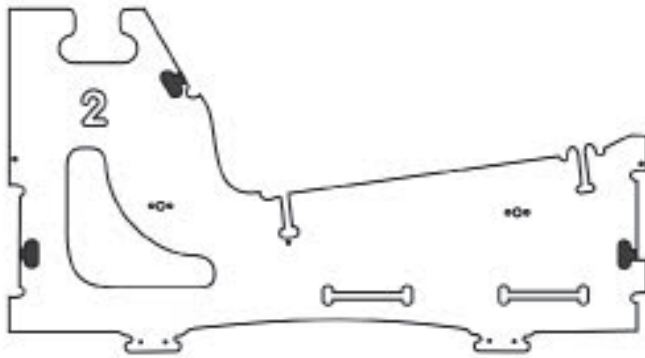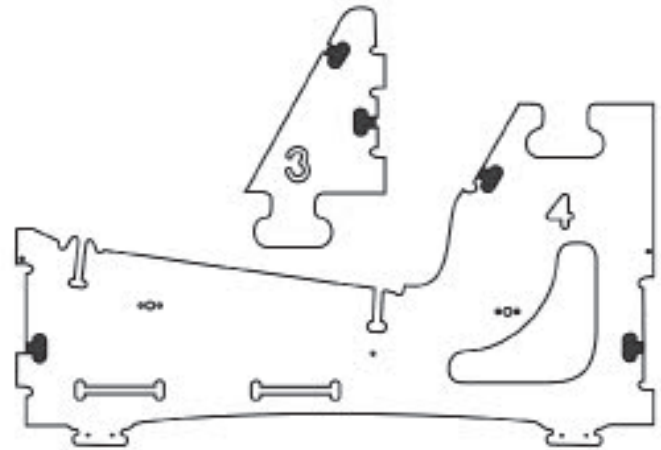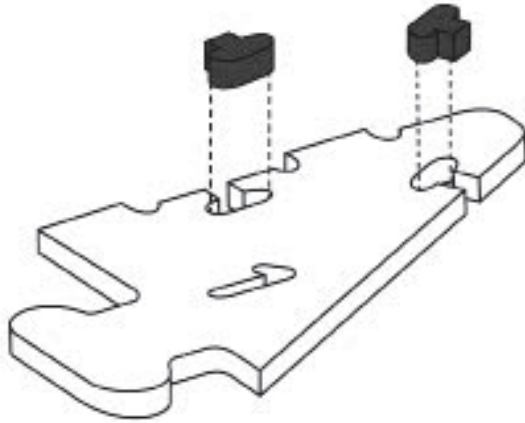


2

Attach black floor glides to the parts shown.

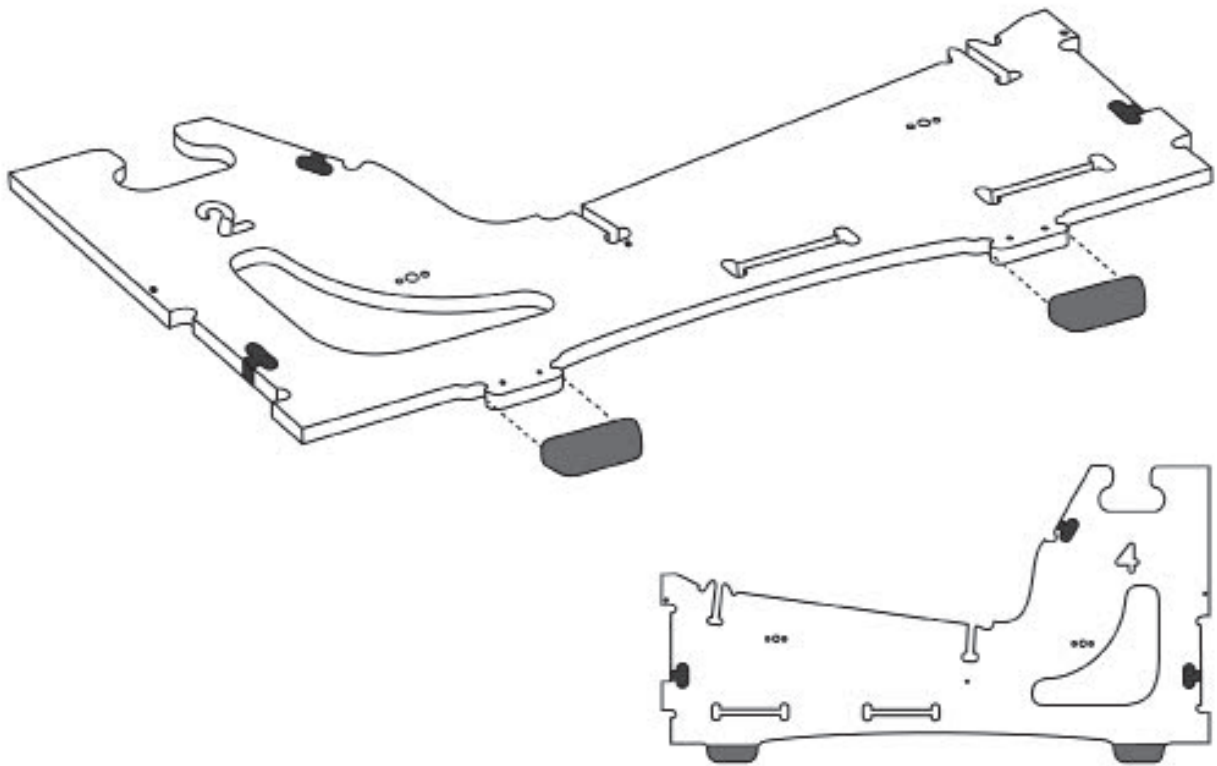


3


Connect parts 1 and 2 together. Repeat for parts 3 and 4.

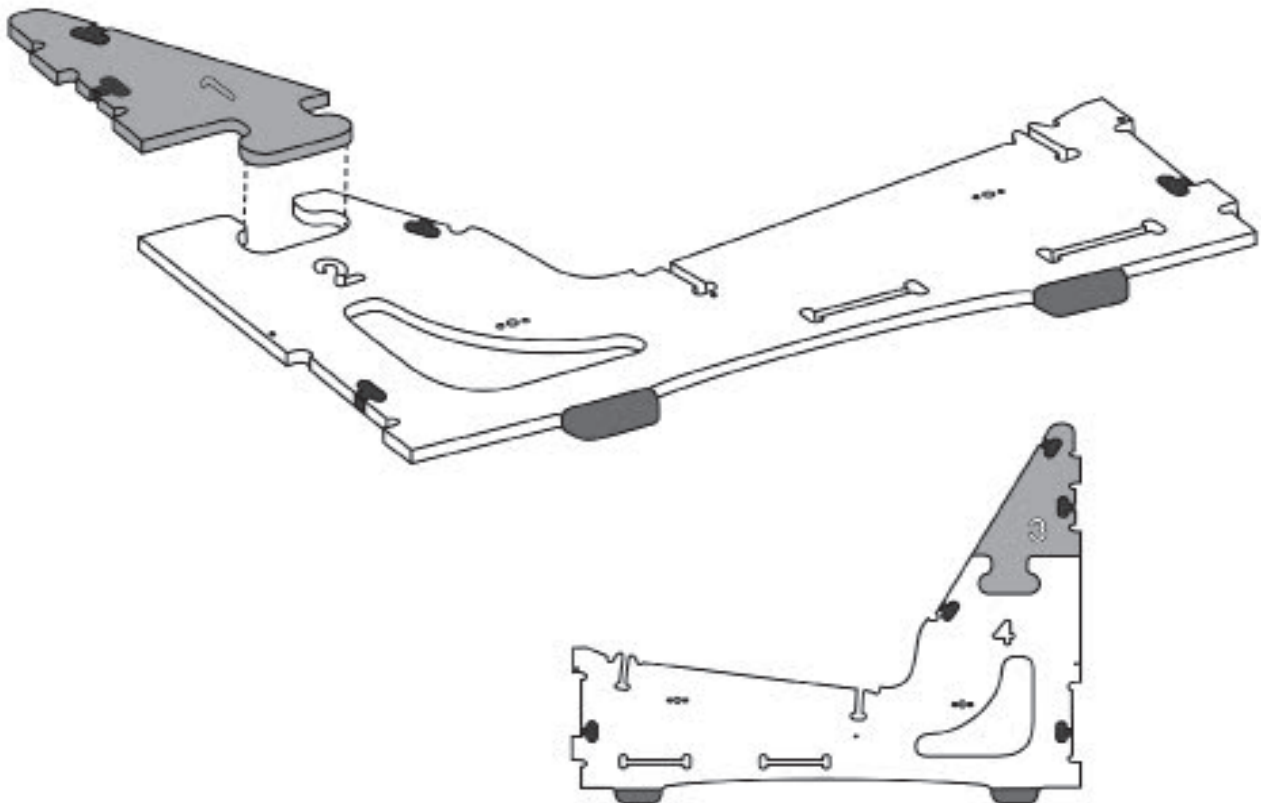

- 4** Slide part 5 onto part 2 and secure with two screws.

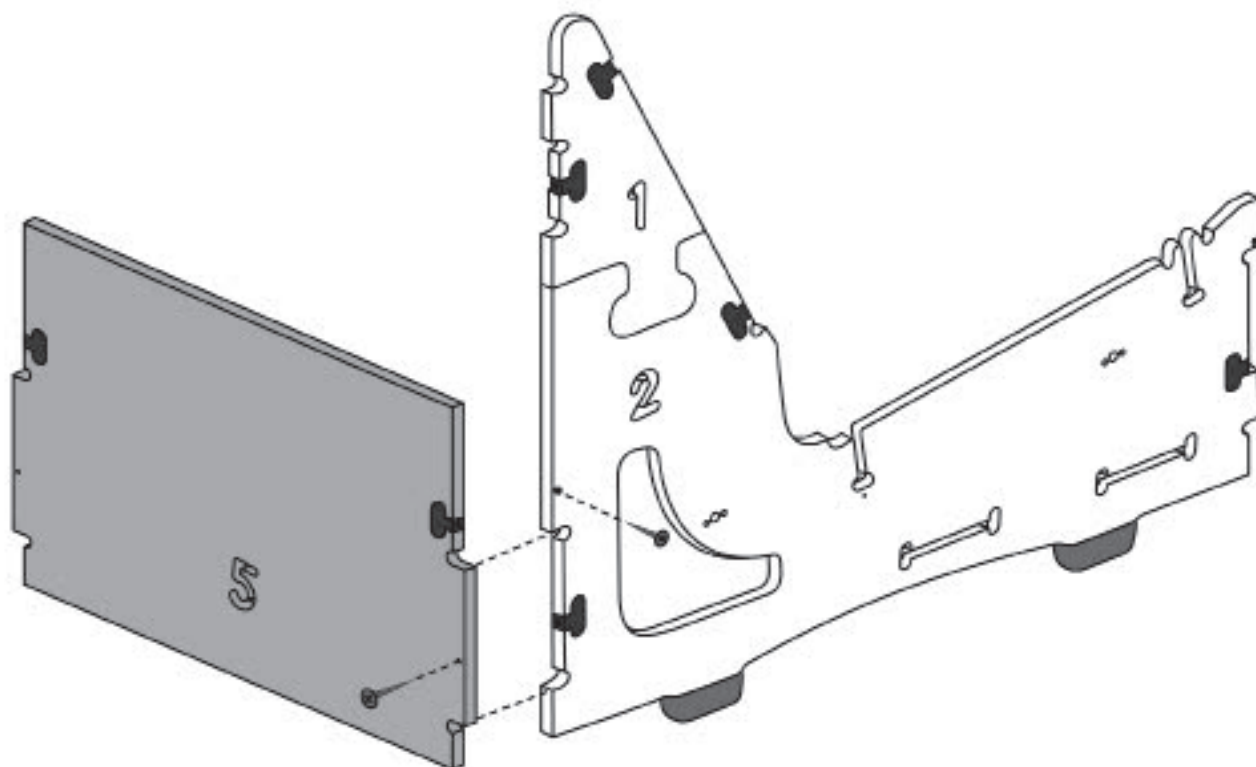


- 5** Slide part 4 onto part 5 and secure with two screws.

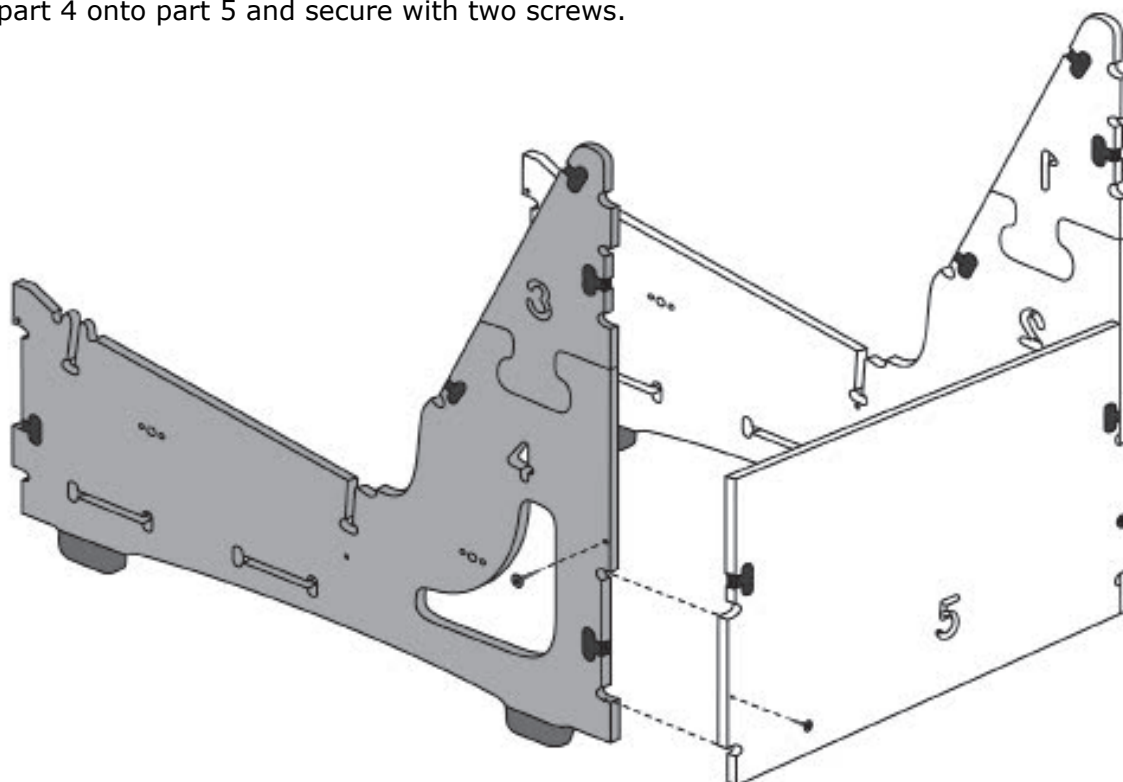


6

Spread parts 2 and 4 apart far enough to slide part 6 into the slots on 2 and 4.

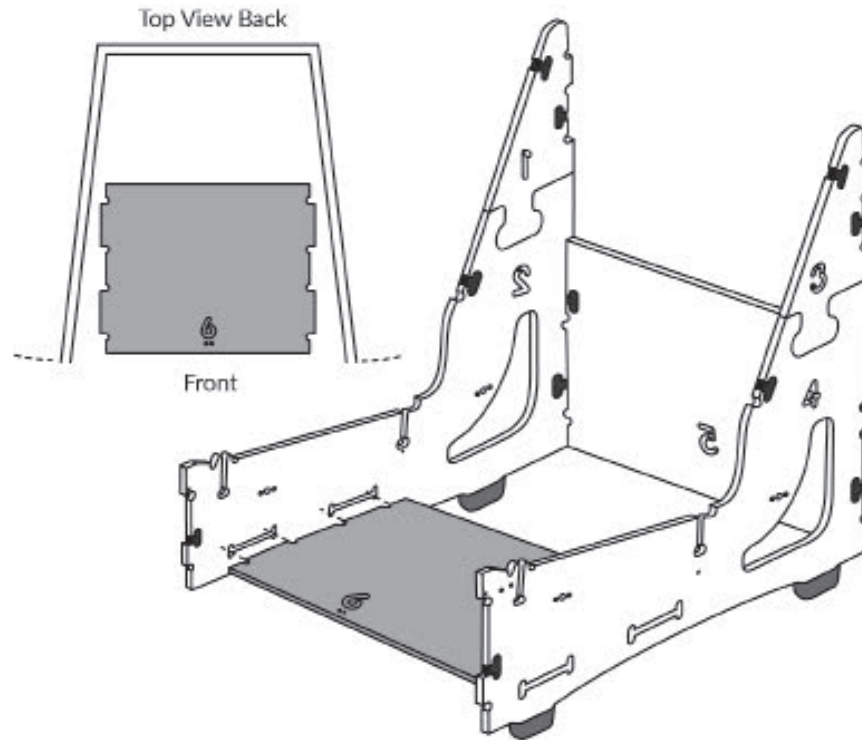


7

Slide part 7 onto parts 2 and 4. Secure with four screws.

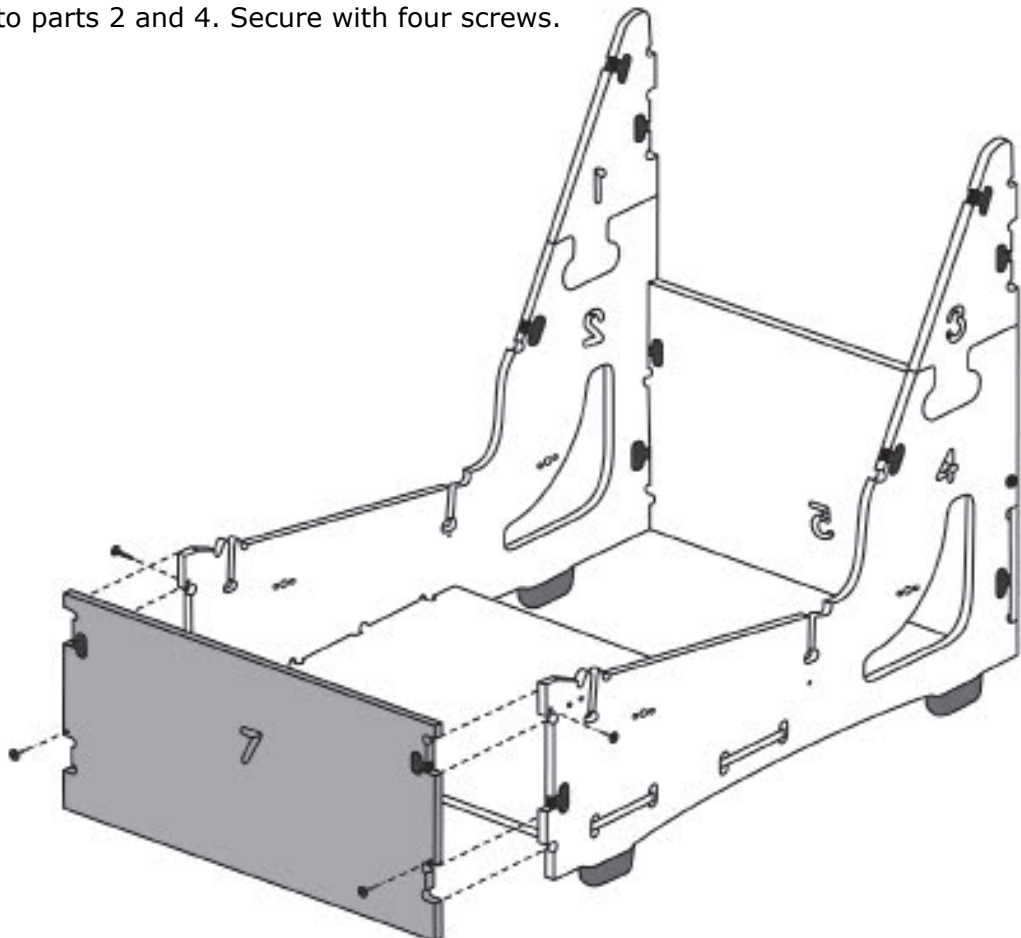


8

Place part 8 onto parts 1 and 2 and parts 3 and 4 and secure with four screws.

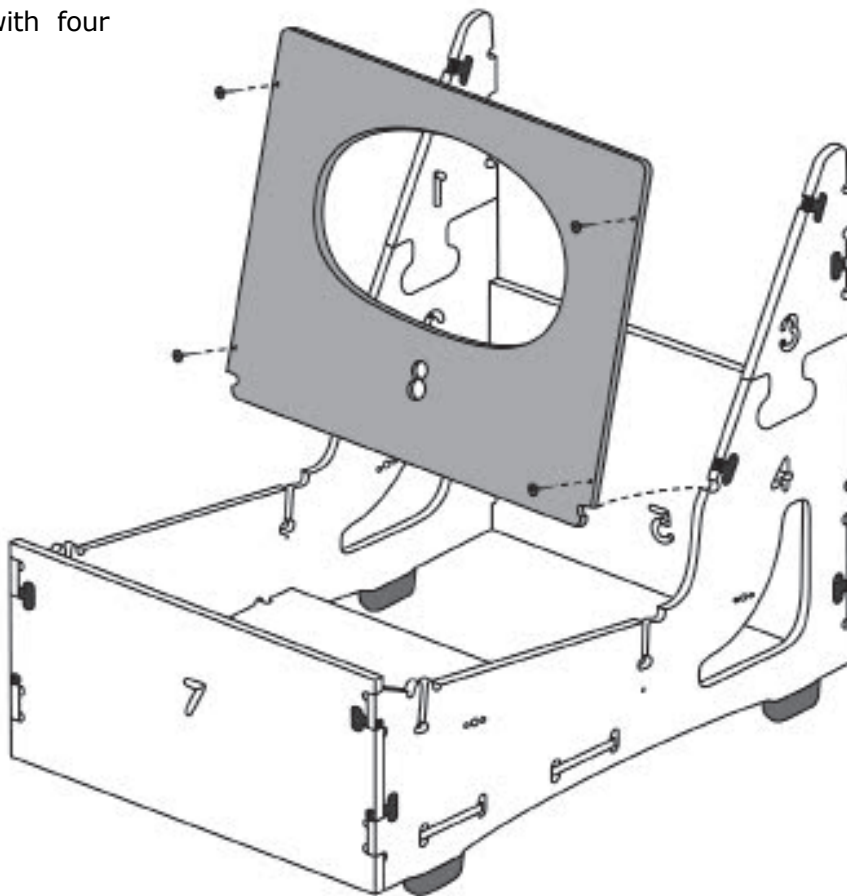


9


Place part 9 onto parts 1 and 3 and secure with two screws.

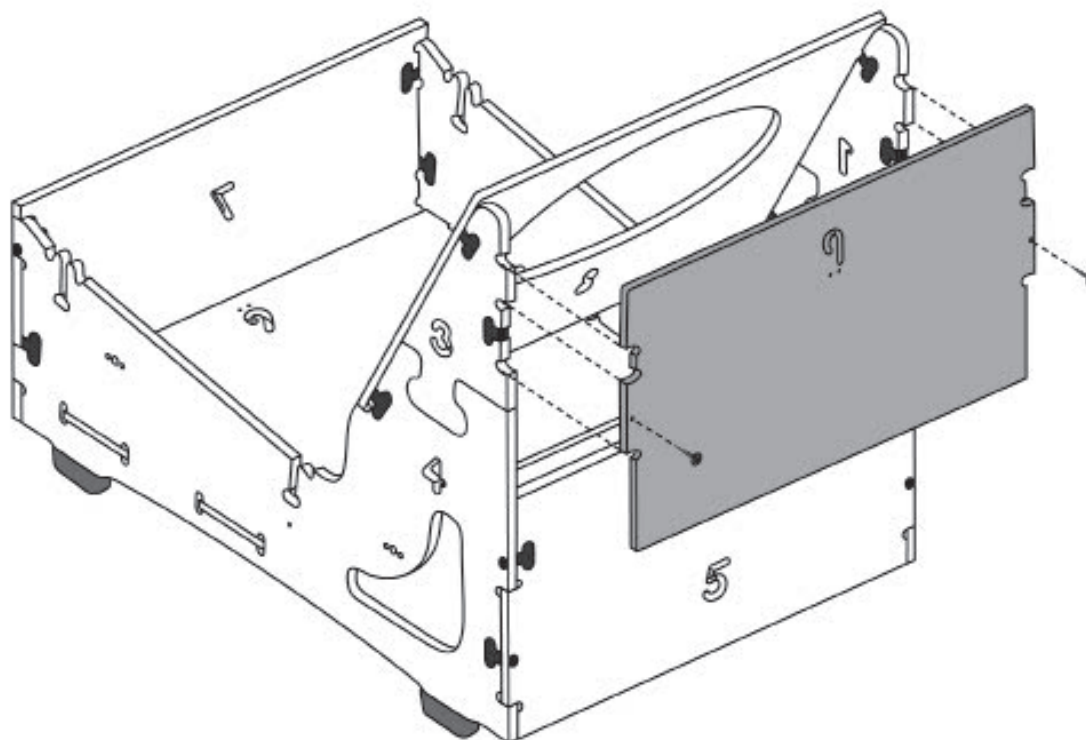


- 10** Slide part 10 into the rear slots located on parts 2 and 4 and secure with two screws.

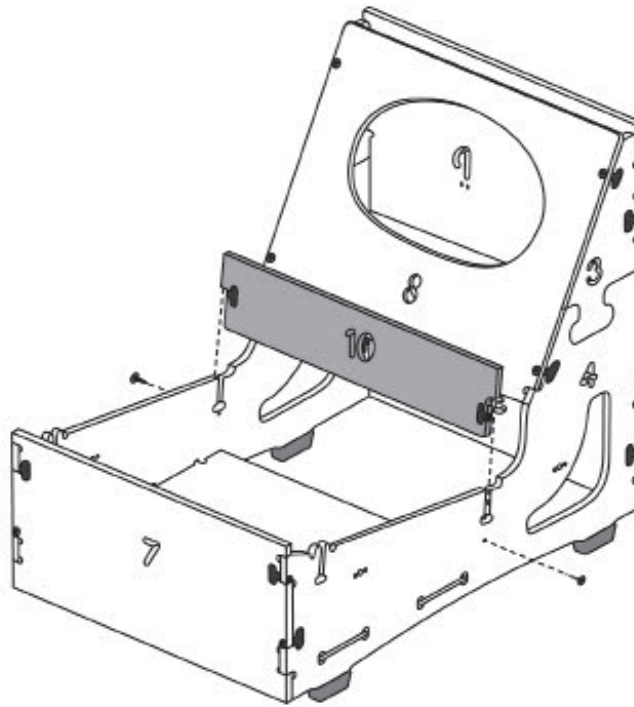

- 11** Slide part 11 into the front slots located on parts 2 and 4. Box #1 frame assembly now complete.

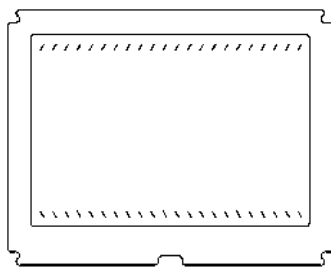

You will have the web seat and part 13 left over. They will be used later on during foam and fabric assembly.

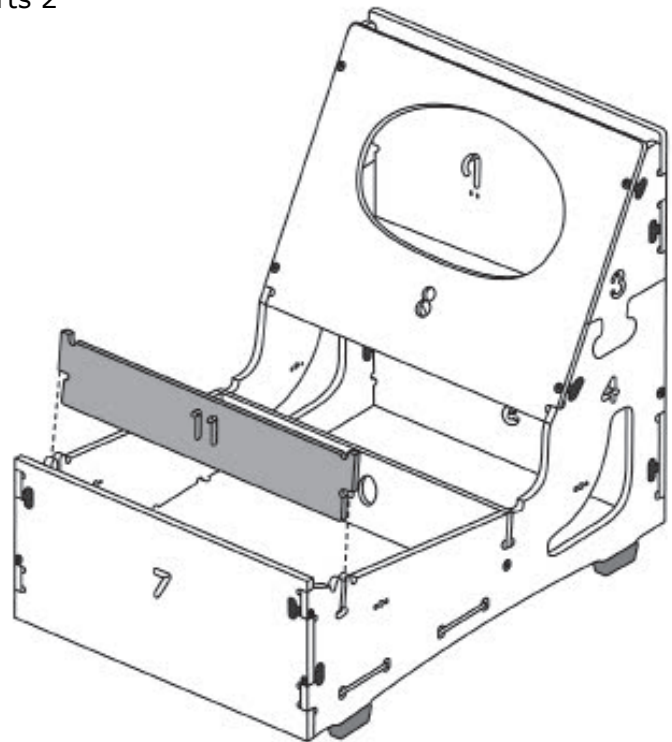


- 12** Repeat these frame assembly steps [steps 1 - 11] for box #2. You'll be making another side to the loveseat frame, an exact match to the one just completed.

Joining The Frames Together


(Arms will be added in a later step.)

Join frames together with the connector bolts from the parts bags.

There are holes for the connector bolts at the front and back of the frames as indicated by the arrows in the diagram below. Align the frames and slide the connectors into the holes. Tighten the wingnuts to draw the frames together.

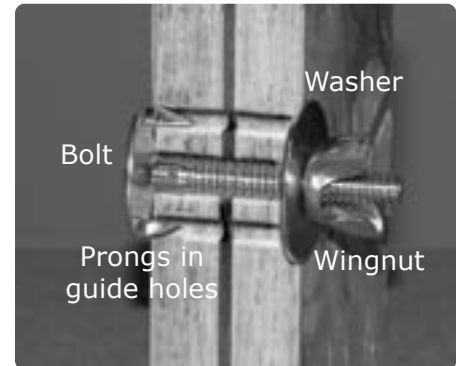

Connector Bolt

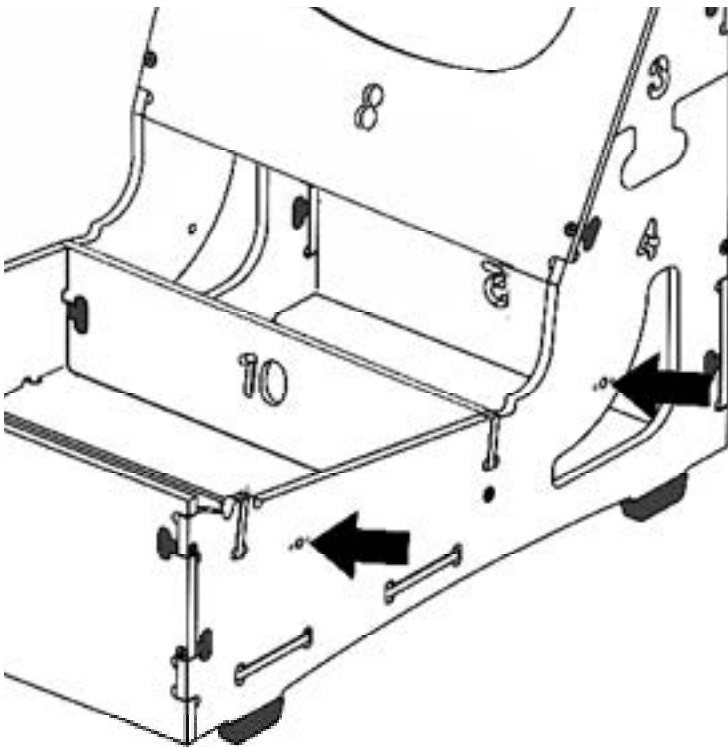

Fabric & Foam Assembly


Most of the fabric covers come inside out (It is the way they are sewn and protects the fabric surface in shipping). Unfold them all in preparation for assembly. To unfold a piece with a zipper, just pull the zipper apart as shown on the right.



You can snip off any hanging threads from the covers. They are left long during automatic trimming in the sewing process. Snipping them won't affect the strength of the seams.

Beauty tips: In addition to these printed instructions, you may want to watch our beauty tips videos on the customer service page of the website. The videos show demonstrations on how to apply the fabric covers and make them smooth and wrinkle free.

Fabrics

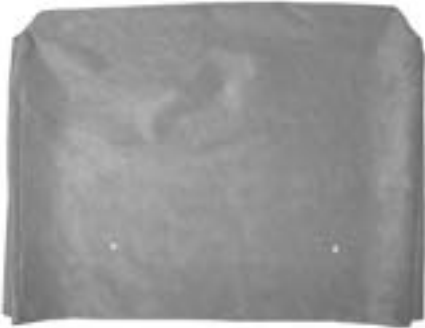

Arm Cover (2)



Seat Cushion Cover (2)



Back Cushion Cover (2)



Frame Back Cover (1)



Frame Front Cover (1)



Elite Fabric (2)

Foam



Seat Cushion (2)



Top Rail (2)



Back Cushion (2)



Arm Foam (2)

- 1** Take the two Top Rail Foam pieces and place them on the top of the frame. Push them down into position between the front and back wood pieces.



- 2**
- 
- 
- 

Take the Frame front cover as shown above.

Insert both wood pieces 13 into the sleeve sewn into the cover... one from each end.
(Use the sanding block if wood doesn't slide smoothly.)

Hold the wood firmly in place...



...and wrap the cover around the end of the wood...



...as you tuck the wood into the cover...



...on both ends.

- 3**
-

Place the cover on the front of the frame...



...to form the front edge.



The wood piece will fit onto the frame as shown.



Put the top corners of the cover in position...



...and then pull the bottom corners of the cover around the bottom of the wood frame as shown.



Repeat the process for the other side of the frame.

4



Take the Frame Back cover and place it over the back of your frame as shown.



Pull the cover down, aligning the cover seams with the edge of the frame.



Wrap the cover around and under the back corner of the frame.



Repeat the process for the other side of the frame.

5



Tip the frame onto its back.



Reach up under the fabric edge, pull out the little elastic bands...



and stretch them around the black floor glides.


Arm Fabric & Foam

1

Position the arm foam onto the arm frame. The bottom of the foam is recessed in order to fit into the arm frame.

Take the elite fabric and place it over the foam arm as shown. The elite fabric is a white silky material that helps you slide the cover over the foam.

Pictured to the side is the arm fabric, right side out, just to give you an idea of what it looks like. Go ahead and keep it inside out for the next step.

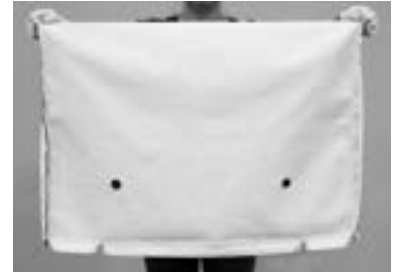

2

Stick your hands into the corners of the fabric. Align the seams with the edges of the frame. Start to wiggle the fabric onto the arm, getting a good grip.



Pull your hands out. Begin working the cover down an inch or two at a time, alternating between both ends to gradually guide the fabric onto the frame.



- 3** Flip the arm over. Each edge of the fabric has a velcro strip that extends past the arm frame. Pull up on each fabric edge to make it tight, then wrap it around to meet the velcro strips on the inside of the arm frame. Start with the longer sides, and save the smaller ends for last.



- 4** Once the arm cover is in place, smooth the fabric. If necessary, reposition the velcro flaps on the bottom of the arm to remove any wrinkles. This completes the fabric assembly!



Joining Unit to Arm

In the following steps, we'll be joining the arm to the frame using those trusty connector bolts from the parts bag. It's all coming together now!

Arms have built-in threaded connection points, making it easier to attach these bolts.



1

Take the seat lid off and set it to the side. Push the arm with fabric to the side of the frame, lining up the front and back edges.



2

Locate the holes at the front and back of the arm and armless unit that correspond to the pictures shown.



Front



Back

3

Making sure the front holes in the armless unit and arm are aligned, begin to thread the connector bolt through. Tighten the connector by twisting clockwise (to the right). This will pull the arm to the frame.


Repeat the same process for the back of the unit.

Continue to tighten the bolts by switching back and forth from the front to the back of the unit until the frames are connected and completely secured.



4

Replace the seat lid and add on the cushions and pillows!

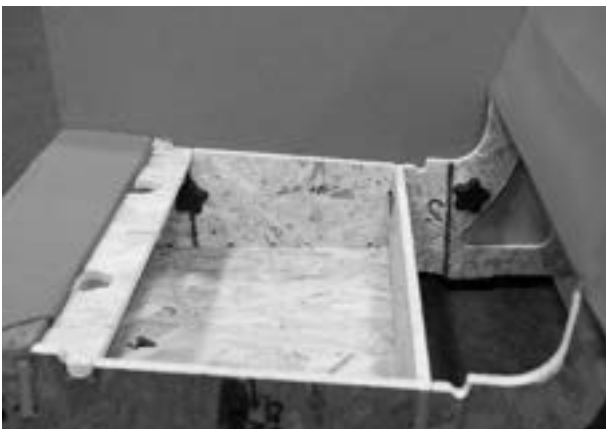

Assembly is now complete. You're a rockstar!

Pillow and Cushion Fabric



1

Turn the loveseat upright. Take the web seats and place them into position as shown.

These are the lids to the storage compartments

2

Find the Seat Cushion Covers and Seat Cushion Foams and follow the sequence below.



Match the rounded front edge of the seat cushion foam with the rounded edge of the seat cushion cover.



Position the cover over the foam and align the corners of the foam cushion with the corner seams of the cushion cover.



You can stick your hand right up in there to get everything smooth.

3



Working your way around the sides of the cushion pull the corners of the cover onto the foam...



...and zip up the cover.



Place the seat cushion on the frame. The rounded edge of the cushion goes toward the front.

Find the Back Cushion Covers and the dacron filled Back Cushions and follow the sequence below.



When filling the back cushion, match up the rounded corners of the back cushion with the rounded corners of the cover.



Push the filler into the cover. You can reach way up in there to fill out the corners.



Zip up the cover.



You can knead the cushion on the floor to straighten and smooth it out.



You can further straighten and smooth the back cushion by striking it on the floor with several good whoops. Change ends of the cushion and repeat .



Change ends of the cushion and repeat.



This is also the way you can "fluff" the cushions in the future.



Place the back cushions on the frame.



Congratulations, assembly is complete.



PLEASE READ



Warranty

Our frames are designed to last, and we're confident that they'll hold up to years of use. But we understand that accidents happen, which is why we offer our 10 Year Frame Warranty with a no-hassle replacement policy. If any piece of your frame breaks or becomes damaged, reach out to Customer Service and we'll send you a replacement part — no cost, no questions asked, and nothing to ship back. It's that simple!



Renewability

Individual foam and fabric parts are available. You no longer have to worry that something will happen and you'll just have to live with it. From pet attacks to paint spills, it's easy to recover from a furniture accident. Or, to change your fabric color or sectional style.



Sustainability

When it comes to our frame materials, we believe in using sustainable options that are both strong and beautiful. Our frames are made from sustainably farmed young, quick-growing trees — not old-growth forests — and our production process incorporates all usable wood to minimize waste. While our OSB may not be as smooth as plywood, it's up to 2-times stronger in shear strength, making it a smart choice for your home.



Scan Me!

Enjoy our YouTube playlist of beauty tips and tricks.

Keep Your Furniture Looking New!

We want your furniture to look its best – today and for years to come. In addition to these printed instructions, you'll find a treasure trove of helpful tips and tricks on our customer service page. Be sure to check out our beauty tips videos, where we demonstrate how to apply our fabric covers and make them smooth and wrinkle-free.

Home Reserve

Home Reserve products are
made in the USA under patents:

#6,267,446

#6,568,058

#6,981,747

#7,044,557

#7,523,989

Follow us:



@HomeReserve

Get Support

1-800-482-2712

support@homereserve.com

Copyright © Home Reserve, L.L.C.

All Rights Reserved Worldwide.

06/2023