
Home Reserve

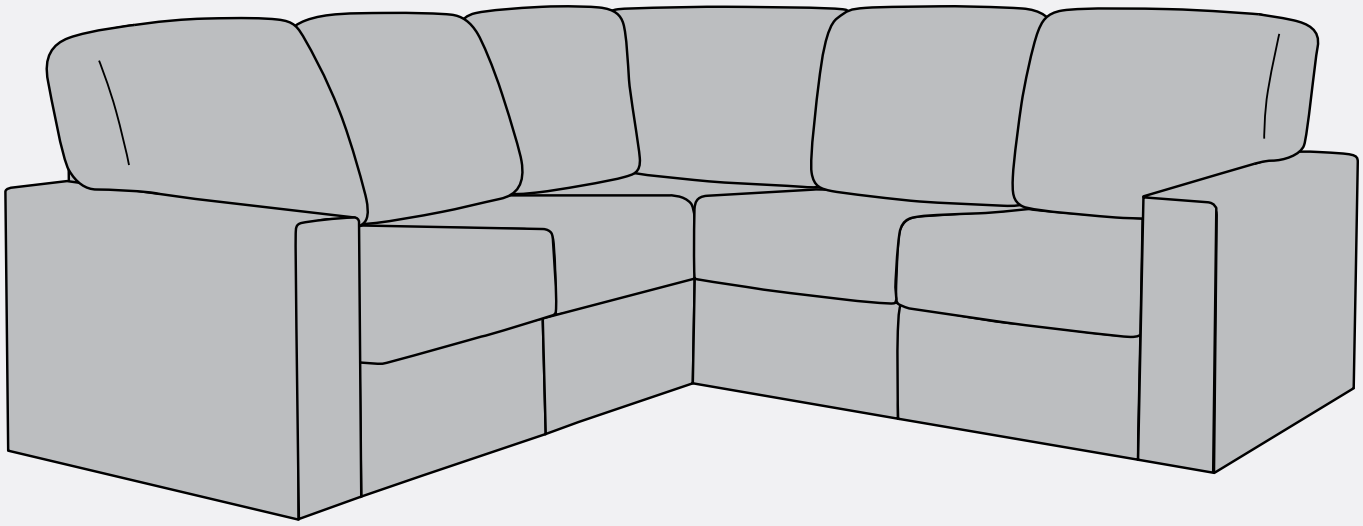

DEEP SEAT SECTIONAL

Instructions for all pillow back styles: Ali, Ava, Brynn, Ezra, Laney, Millie, Tux

ASSEMBLY INSTRUCTIONS

Scan the code to visit our video instructions!

TABLE OF CONTENTS

Tools Needed **3**

FAQs **3**

*Armless Frame Assembly** *4*

*Armless Fabric Assembly** *16*

Wide Armless Frame Assembly¤ *22*

Wide Armless Fabric Assembly¤ *35*

Corner Frame Assembly *42*

Corner Fabric Assembly *58*

Arm Frame Assembly¤* *65*

Arm Fabric Assembly¤* *68*

Connecting Unit to Unit *71*

Connecting Arm to Unit *72*

End Panel Assembly *74*

Please Read **77**

*See for Chair Assembly
¤See for Deep Wide Chair Assembly

Heads up!

Instructions in this Assembly Booklet may say to insert T-Connectors and Foot Glides.


You're a lucky duck! We've already taken care of inserting the T-Connectors and Foot Glides for you. Please use the instructions solely as a reference to locate them on the unit.

If you have questions or need assistance, please reach out to Customer Service at

support@homereserve.com or 800-482-2712


Copyright ® Home Reserve, L.L.C.
All Rights Reserved Worldwide.

TOOLS NEEDED

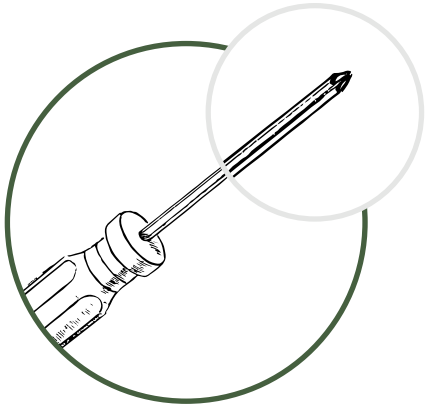

Phillips Screwdriver

OR

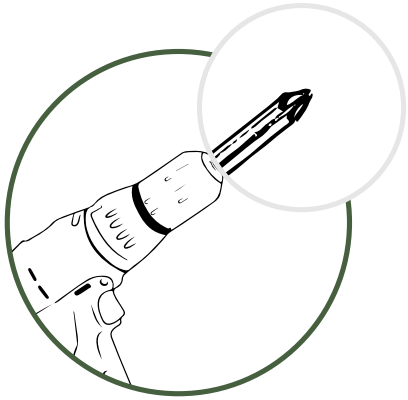

Power Drill with #2 Phillips Screwdriver Bit

Snacks and drinks are good too!

FAQs


Should the foam feel firm?

Yes! The arm foam might feel a bit firm at first, but that's totally normal – we made them that way on purpose! Firm foam lasts longer, so you can enjoy your sofa for years to come. But hey, we get it – you want to kick back and relax ASAP. That's why we recommend putting foam cushions on the floor and walking on them for a few minutes to speed up the break-in process. Trust us, your tush will thank you!

What hardware will I need?

Everything is included! Here are some common icons you'll see along the way:
Note: T-Connectors can be inserted in either direction.

 **T-Connector**

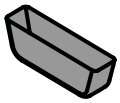 **Foot Glide**

 **Screw**

Why is the hardware different colors?

The screws you receive may vary in color - some may be black, and some may be silver. Both can be used interchangeably when assembling our furniture! All screws will be secured into a T-Connector. There should be one extra screw at the end of assembly.


Why is the fabric tight?

As you pull the fabric onto the furniture, you may notice a slight tightness. This is intentional as it helps to minimize wrinkles for a smoother finish. Don't hesitate to tip the furniture on its side or apply some force while pulling to ensure a snug and wrinkle-free fit.

What's the sanding pad for?

We include a sanding pad with every frame, just in case you want to smooth over any surfaces or edges after assembly.

FRAME ASSEMBLY

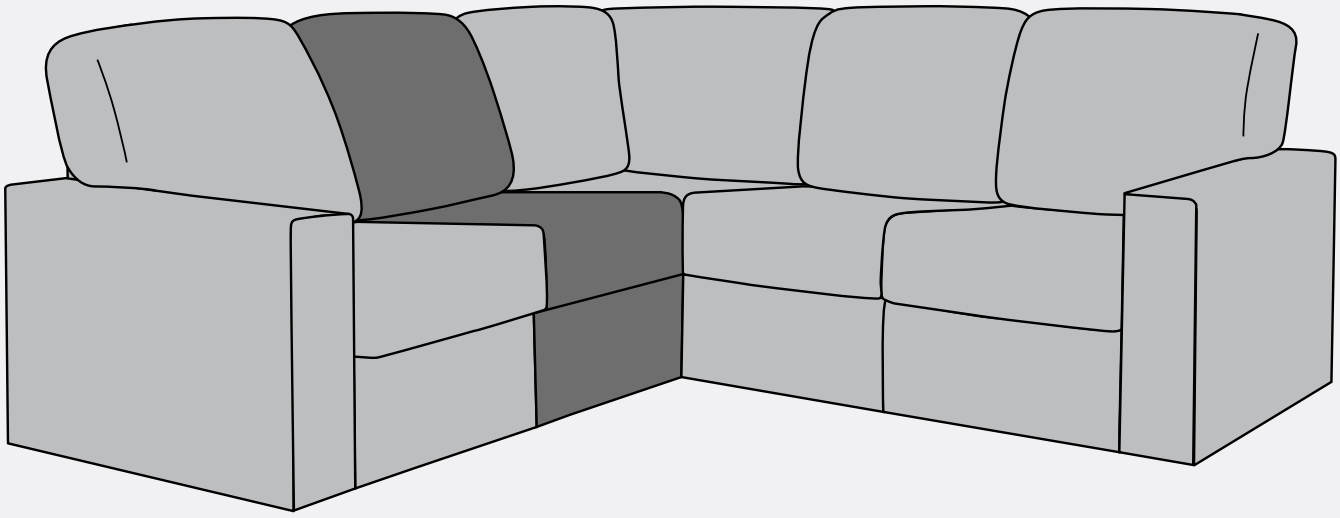


DEEP SEAT ARMLESS

Instructions for all pillow back styles: Ali, Ava, Brynn, Ezra, Laney, Millie, Tux

Before you begin


Open the box, and remove the foam and fabric. Lift up the cardboard Assembly Aid and also set aside piece 9 and the Seat Lid. These will be used later on in the fabric dressing process.

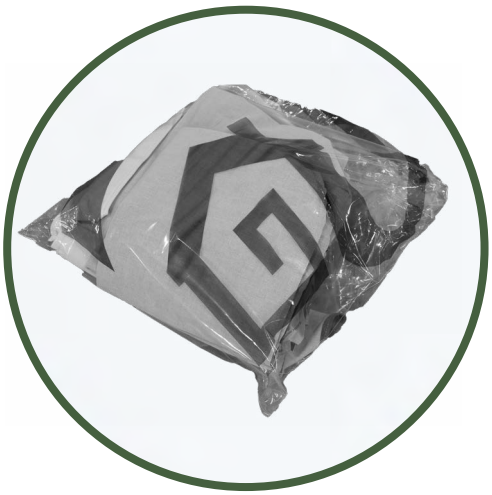


Fabric Bag




Foam Bag

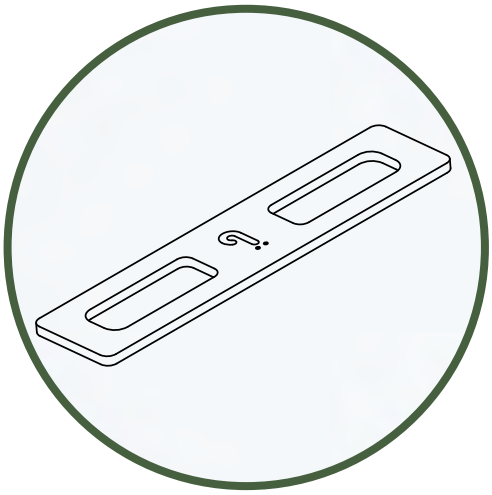

Piece 9

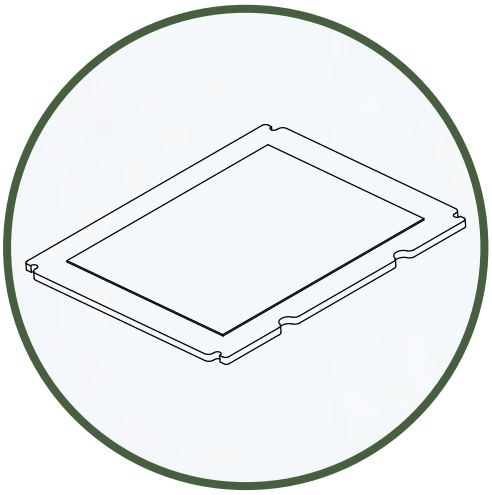

Seat Lid

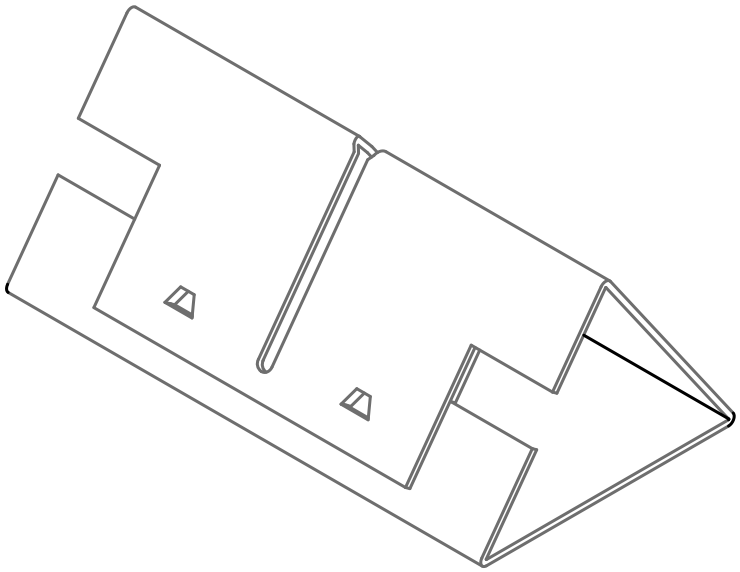



Follow the instructions on the Assembly Aid to fold it into a triangle.

1

Find piece 1 and insert two T-Connectors into the slots shown. Hammer them in if needed. Fit will be snug.

Slide piece 1 down into the Assembly Aid to hold it upright.

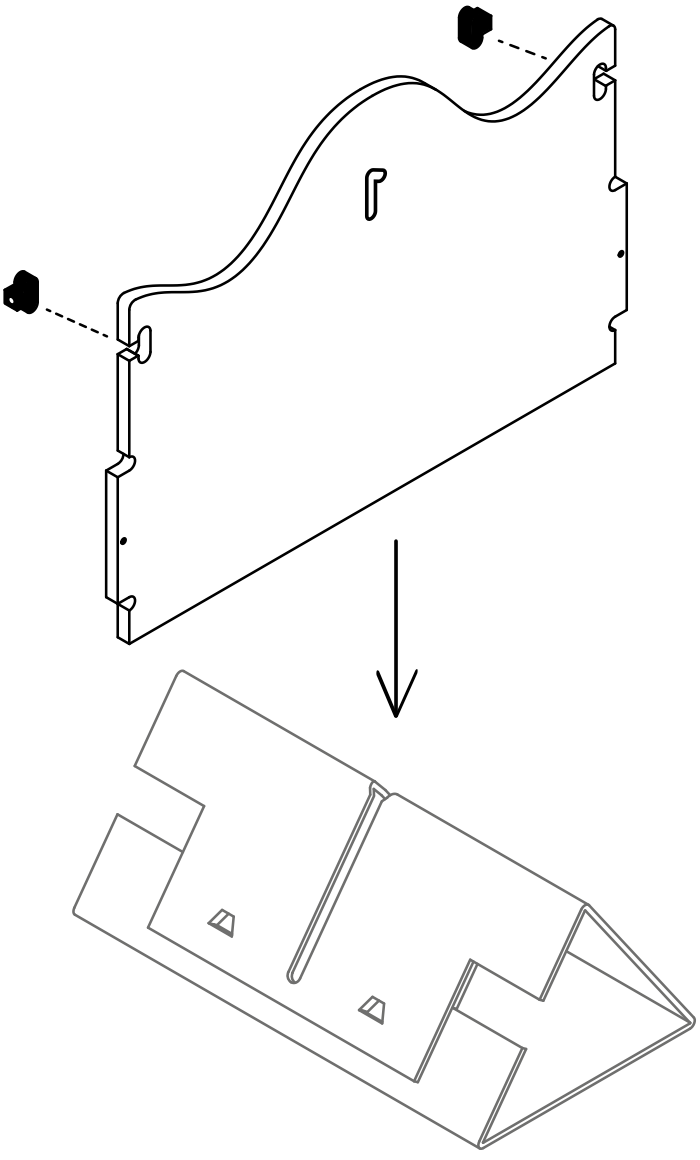


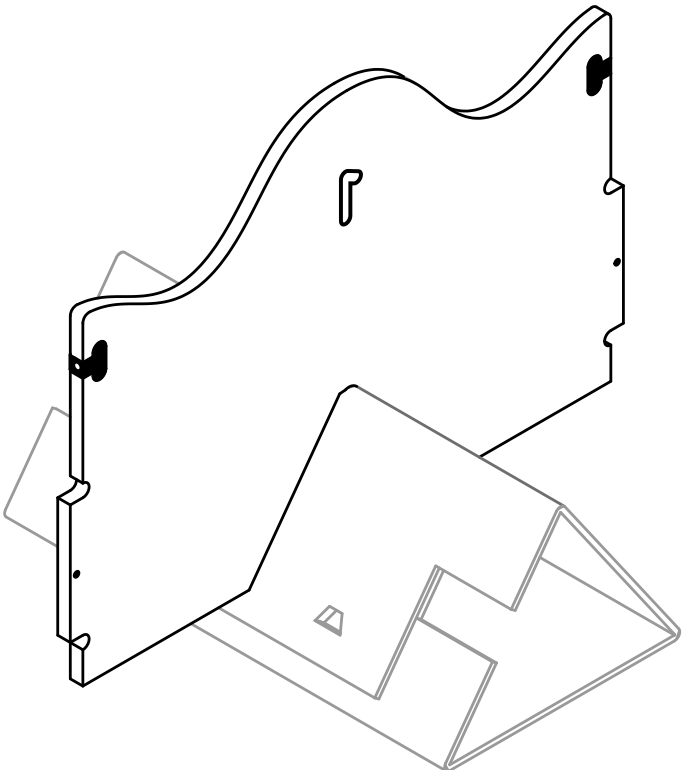


2

Take out piece 2. Insert four T-Connectors and two Foot Glides as shown.


With the smooth side facing out, fit piece 2 into piece 1 and secure with two screws.

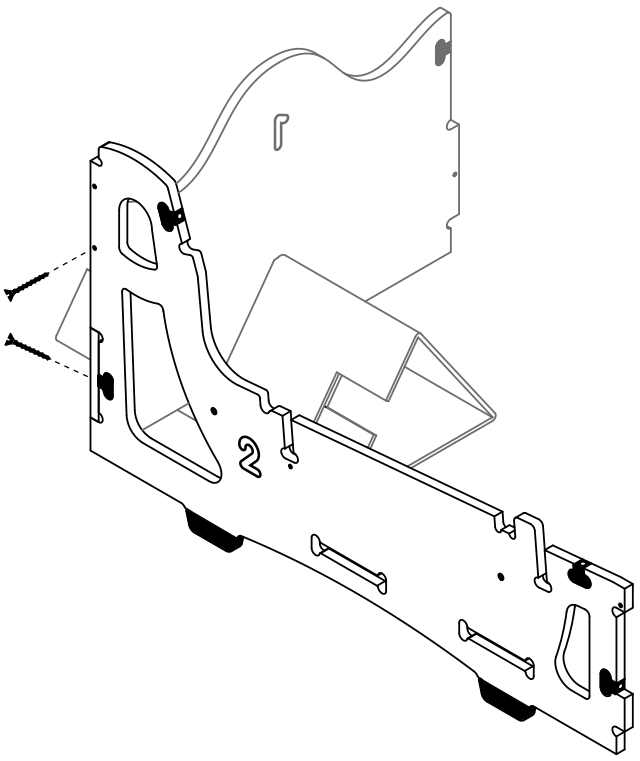

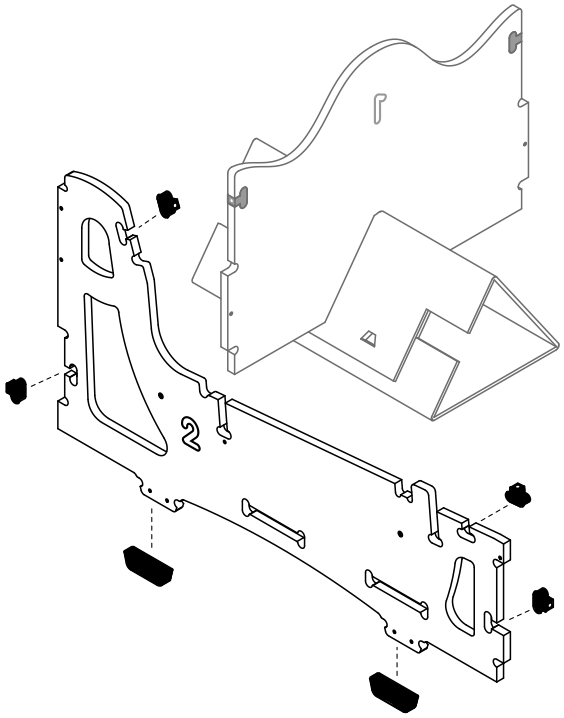



3

Remove piece 3. Similar to step 2, insert four T-Connectors and two Foot Glides.

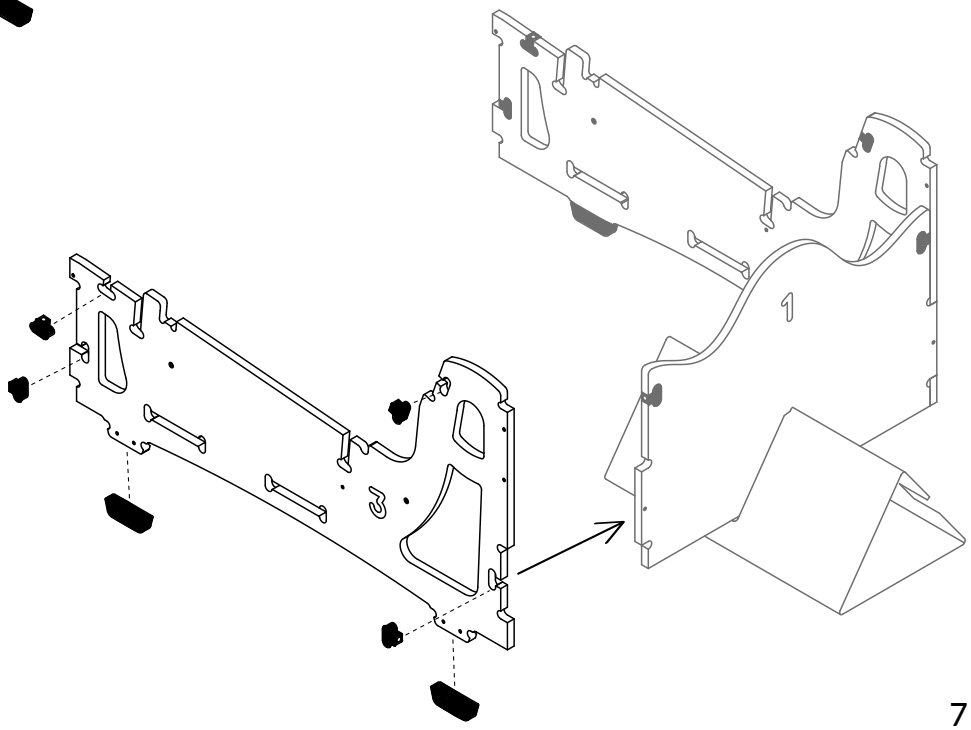

With the smooth side facing out, attach to piece 1 and secure with two screws.

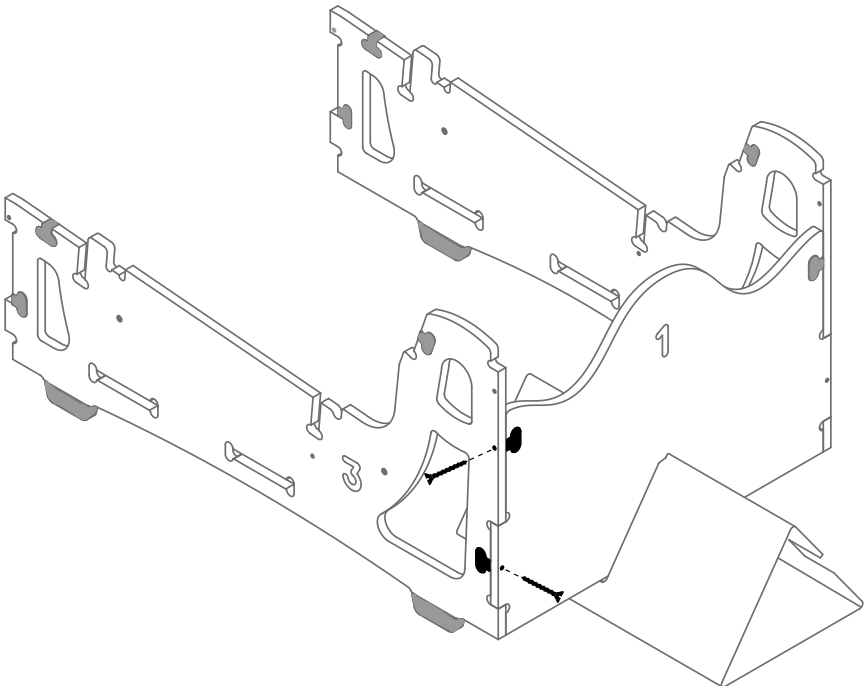

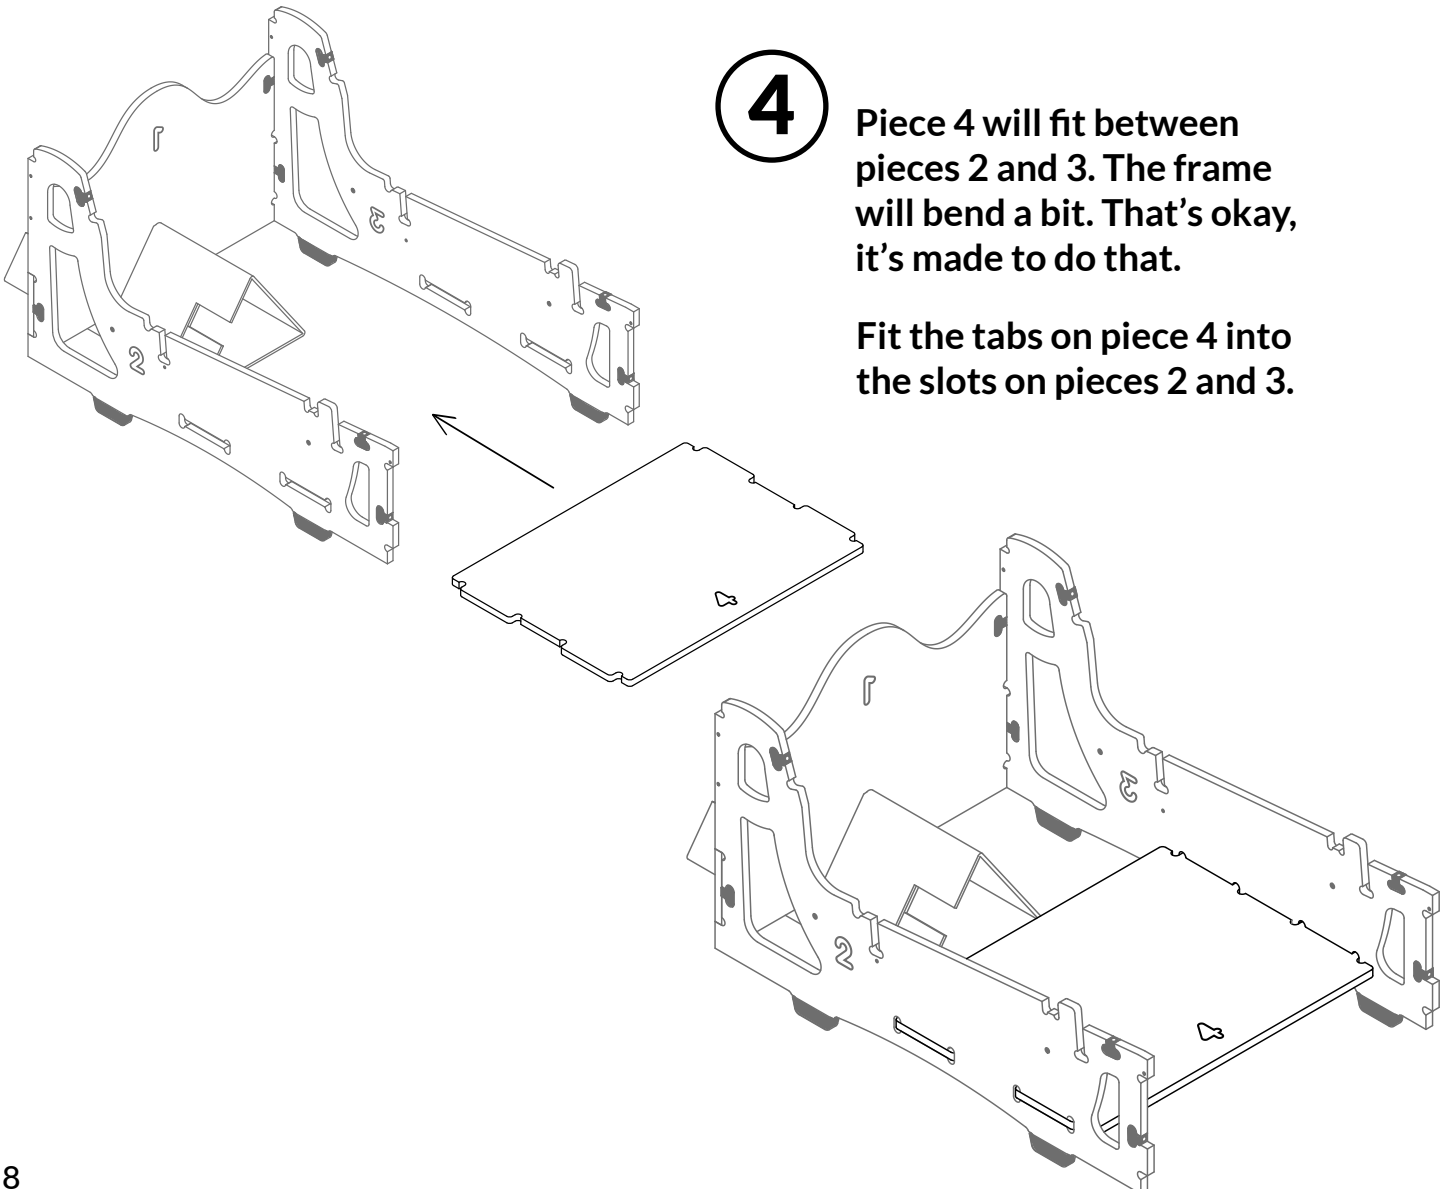


4

Piece 4 will fit between pieces 2 and 3. The frame will bend a bit. That's okay, it's made to do that.


Fit the tabs on piece 4 into the slots on pieces 2 and 3.

5

Insert two T-Connectors into piece 5. Slide piece into place with the smooth side facing front.

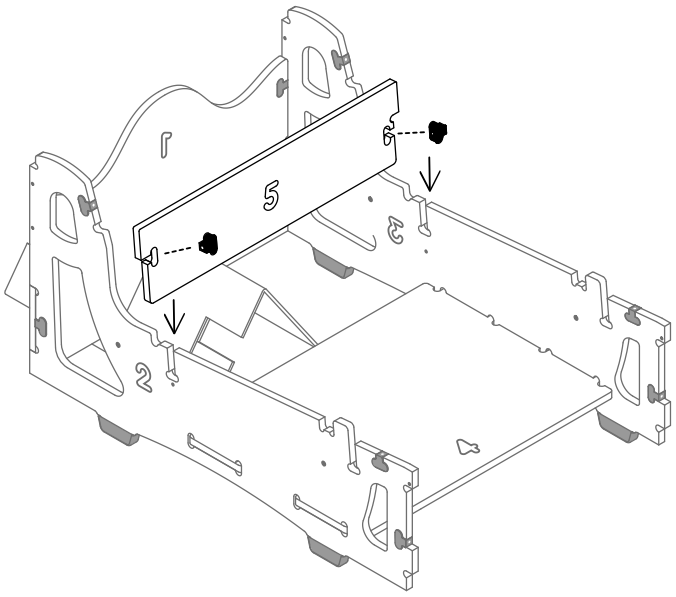


Secure with two screws.

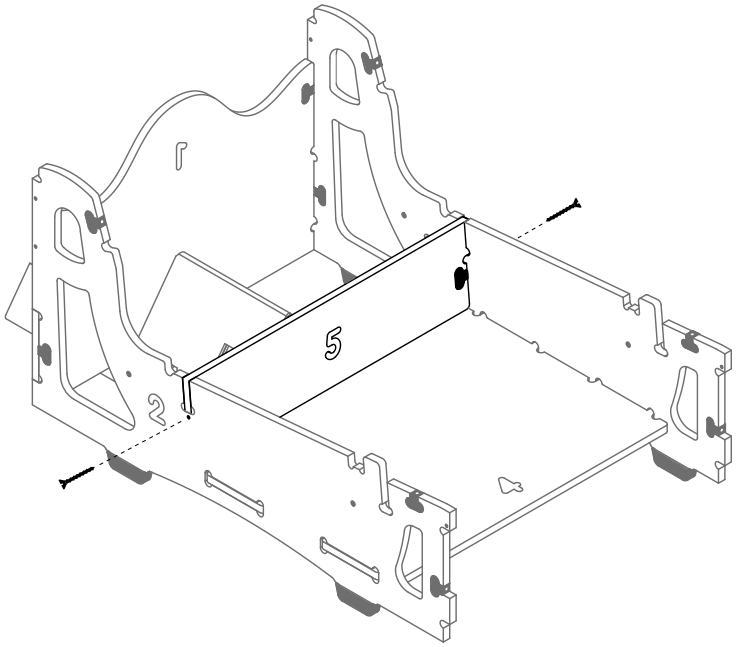


6

Insert two T-Connectors into piece 6. Slide into place between pieces 2 and 3 with the smooth side facing front.

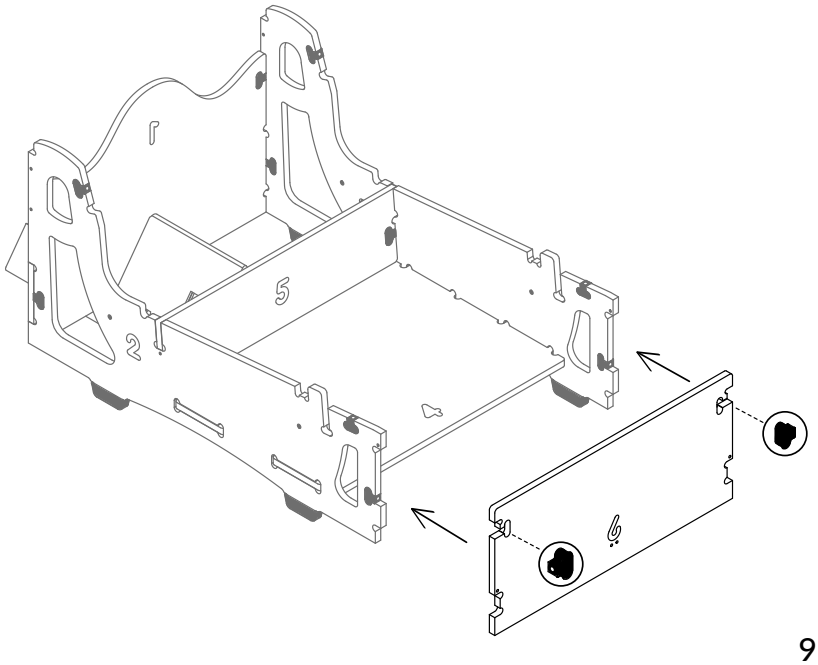


Secure with four screws.

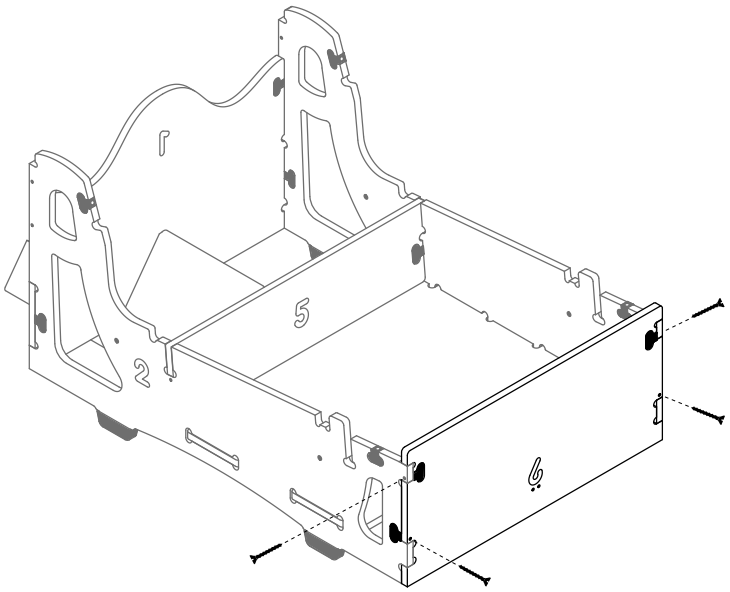



7

Slide piece 7 into place as shown, with the smooth side facing piece 5.

No T-Connectors needed.

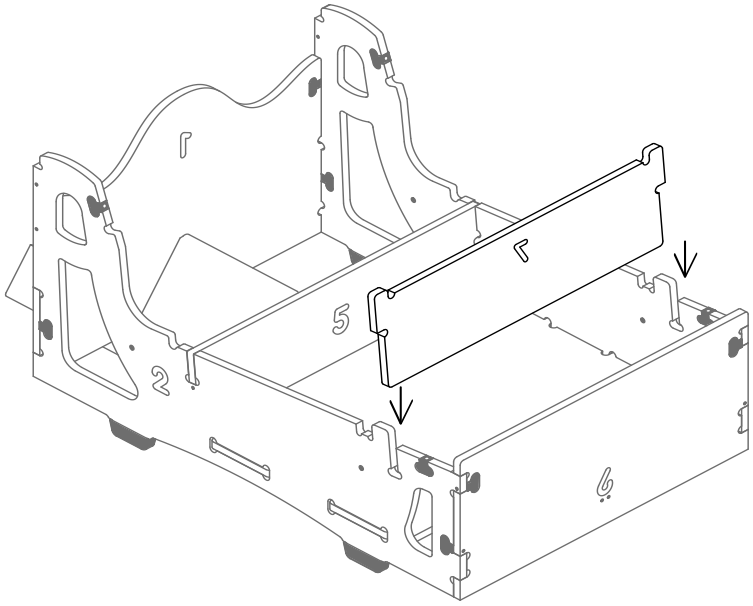

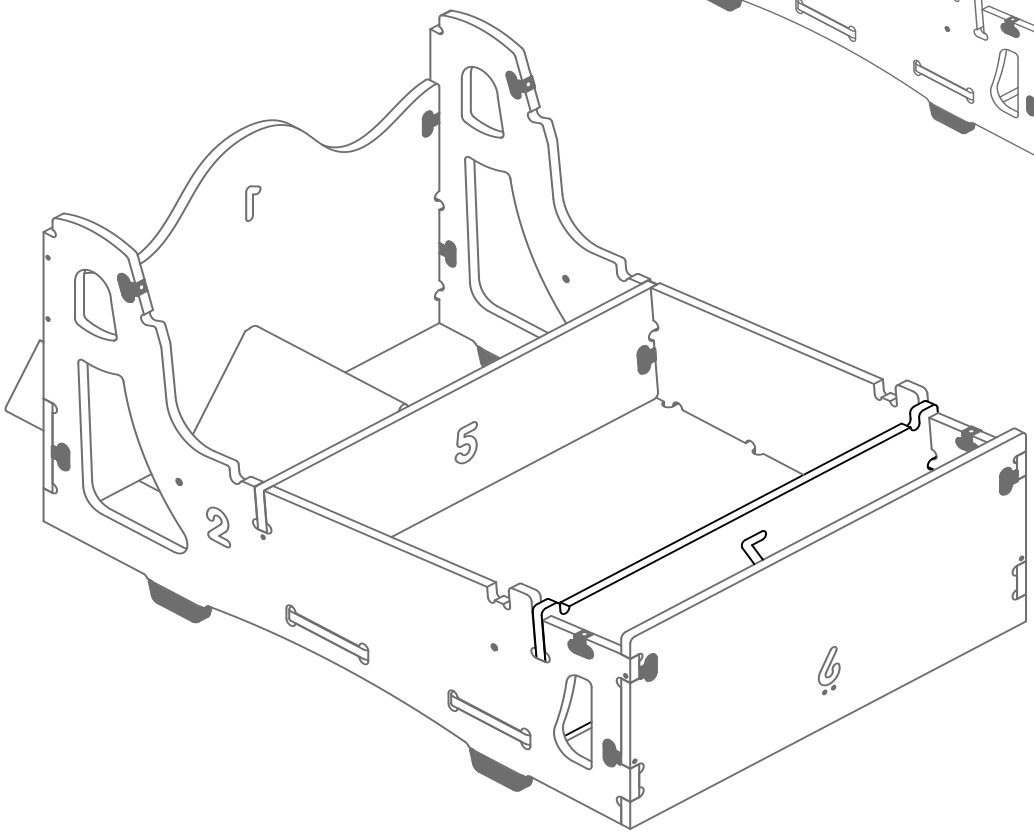


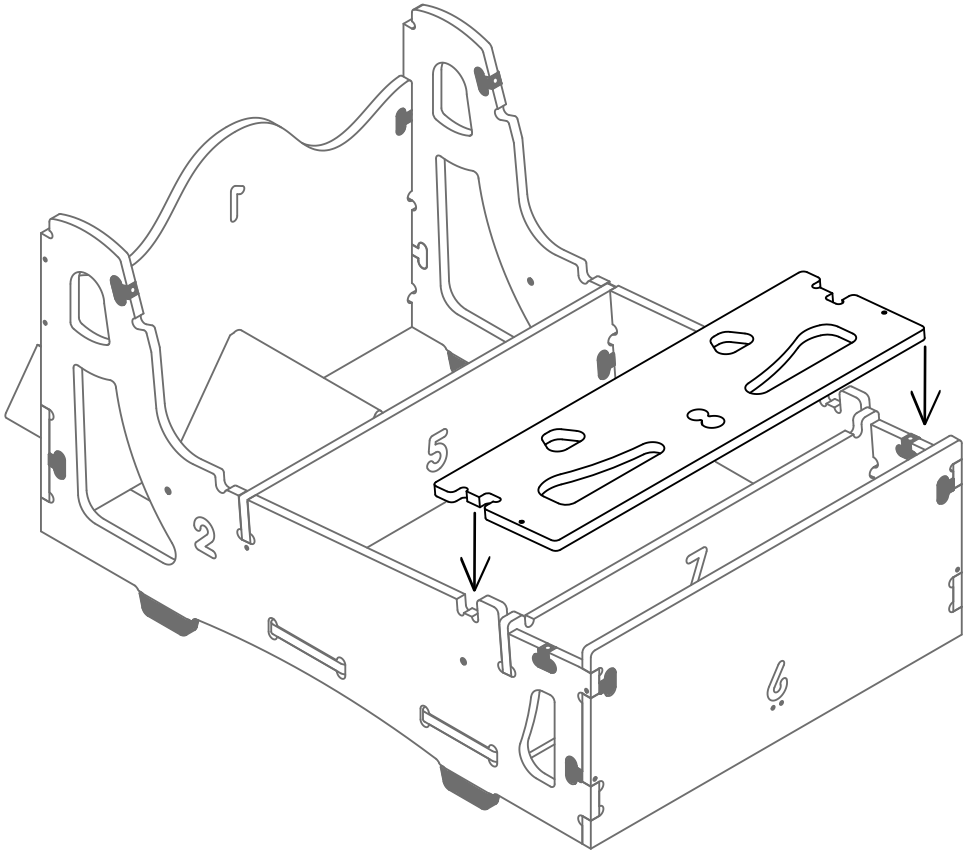


8

Piece 8 sits on top of pieces 6 and 7. The smooth side should face up.

Secure with two screws.

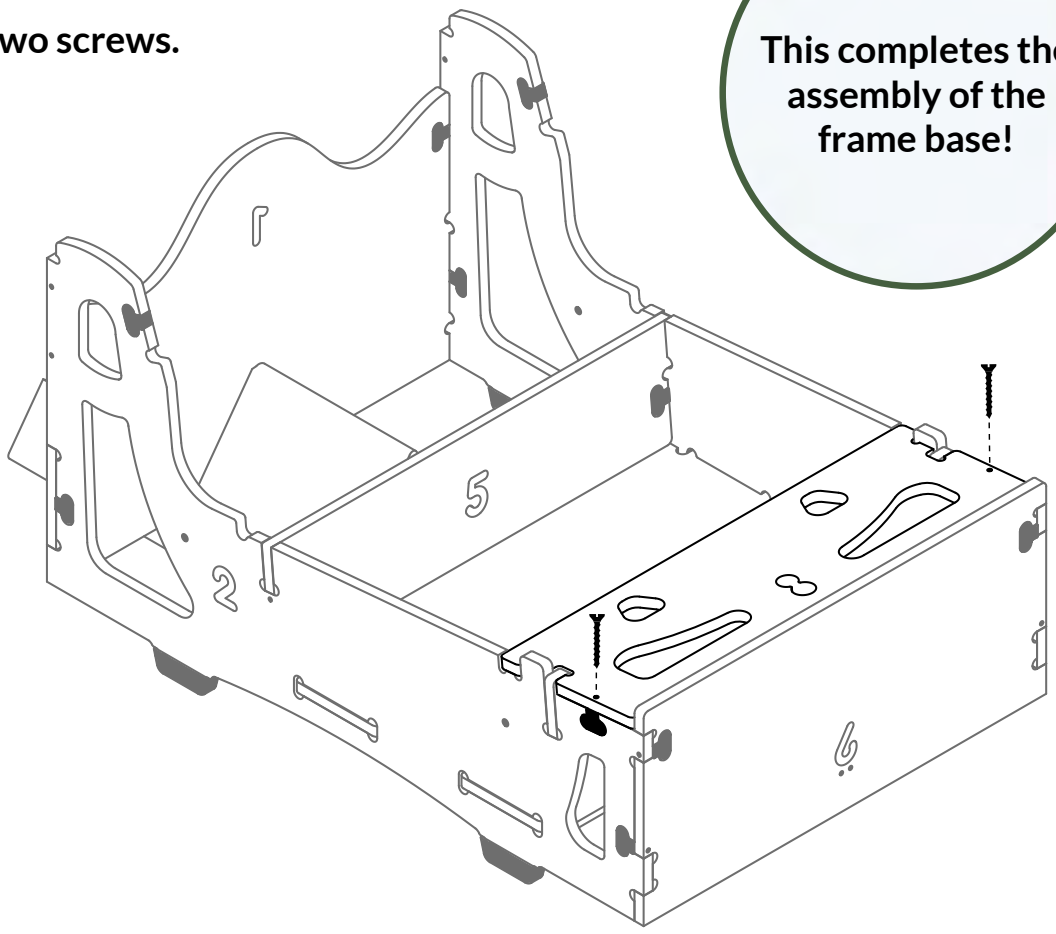

This completes the assembly of the frame base!

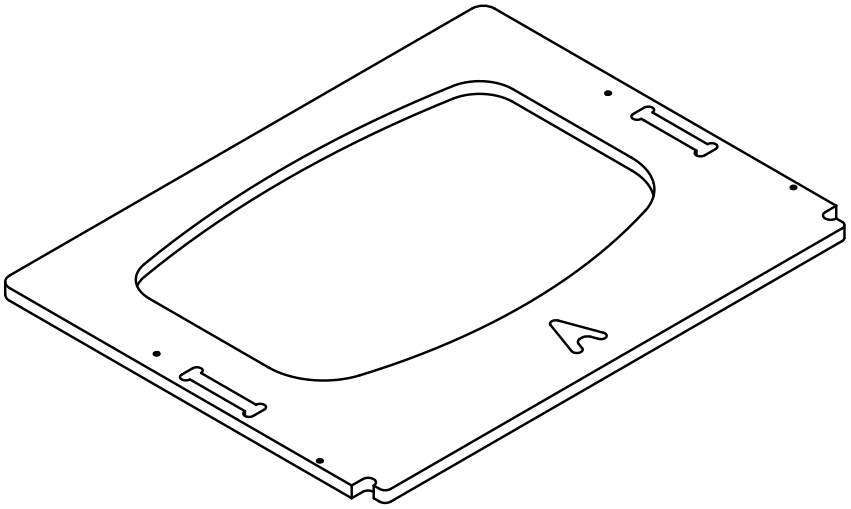

Now, let's start assembling the top of the frame.


These are the lettered pieces.


9


Find pieces A and B. Place piece A on the floor with the smooth side facing down.

Insert two T-Connectors into piece B.

With the smooth side facing out, slide the lower tab on piece B into the slot on the right side of piece A.

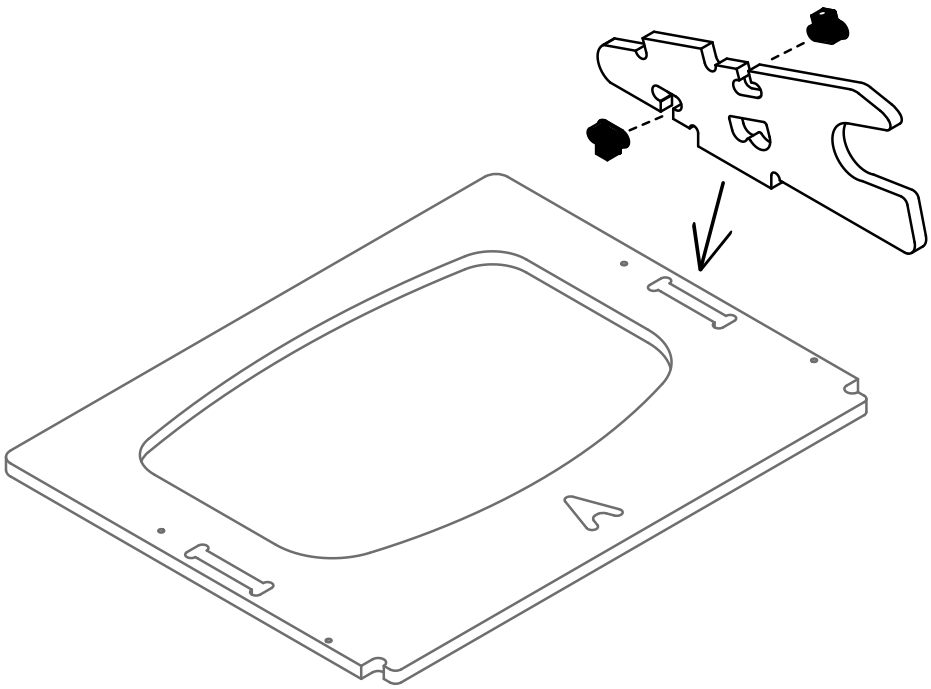

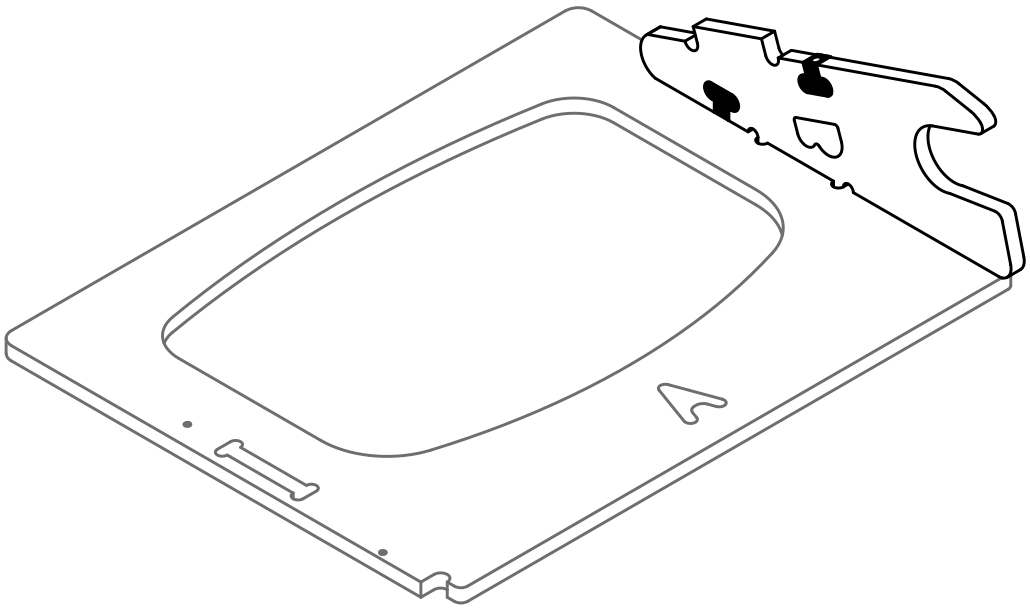


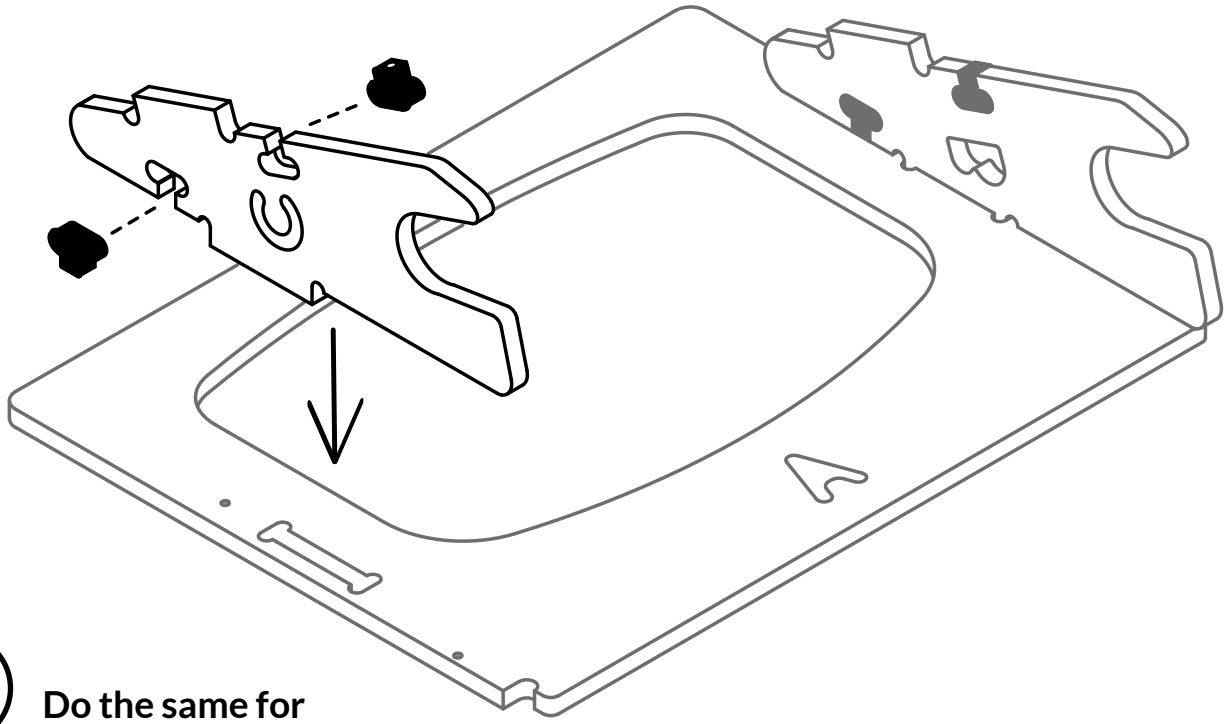


10

Do the same for piece C. Insert two T-Connectors into piece C.

With the smooth side facing out, slide the lower tab on piece C into the slot on the left side of piece A.

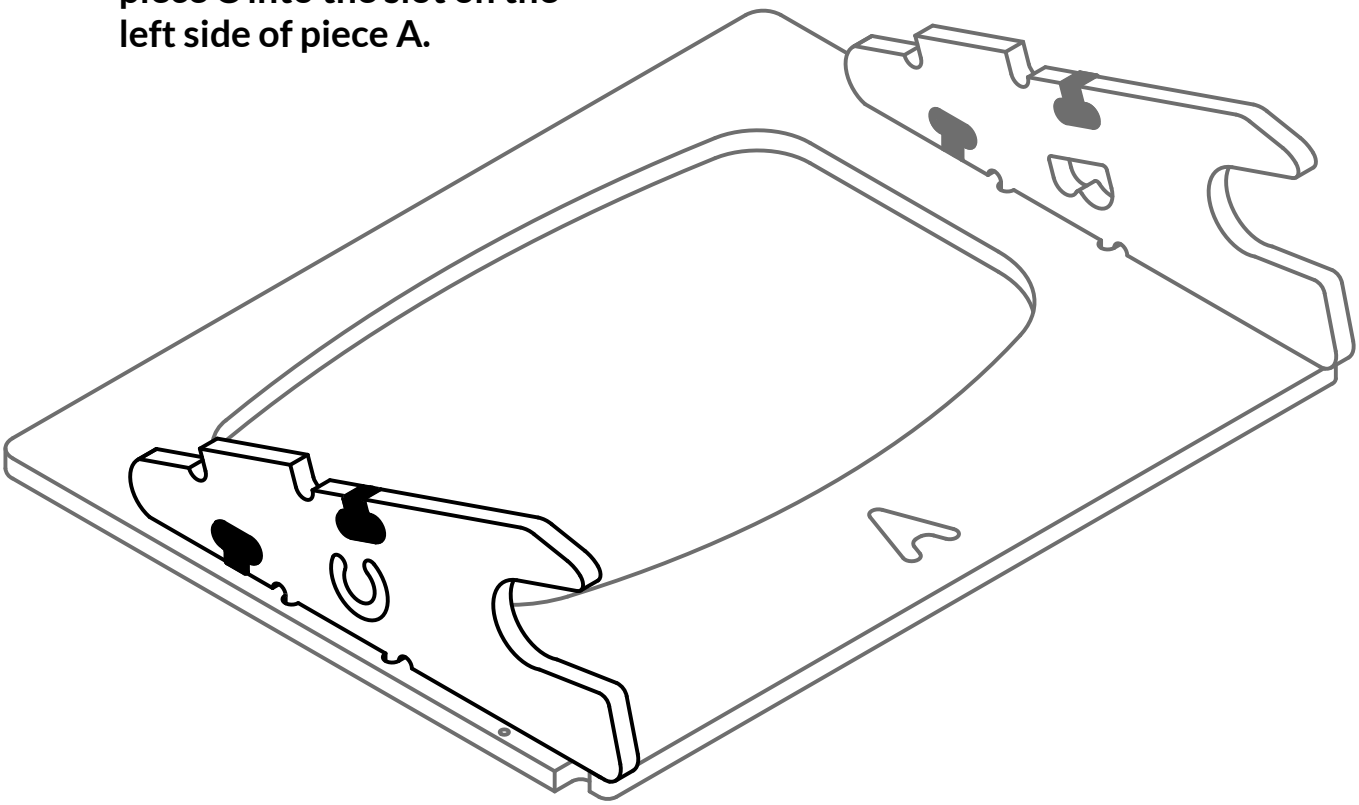

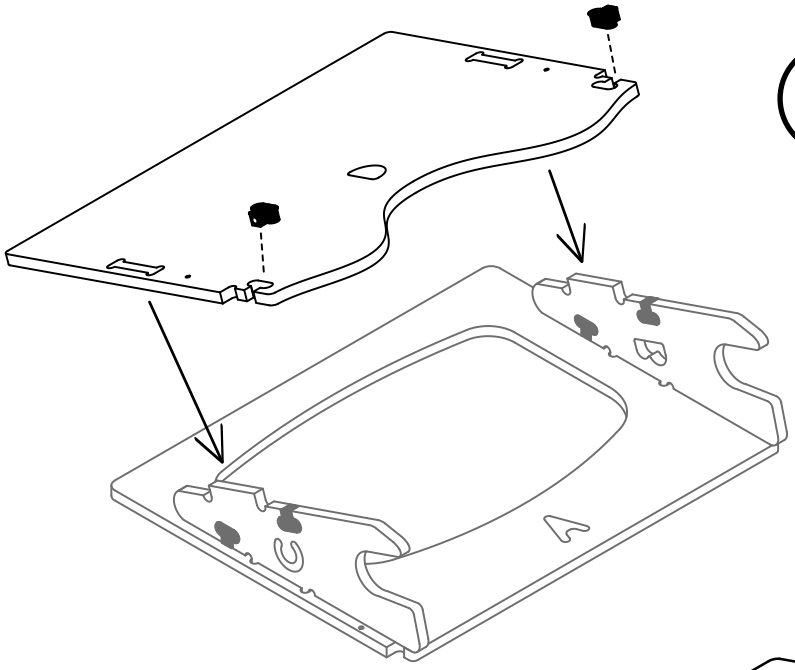


11

Insert two T-Connectors into piece D.


With the smooth side of piece D facing out and up, slide the tabs on pieces B and C into the slots on piece D.


Secure piece D with two screws.

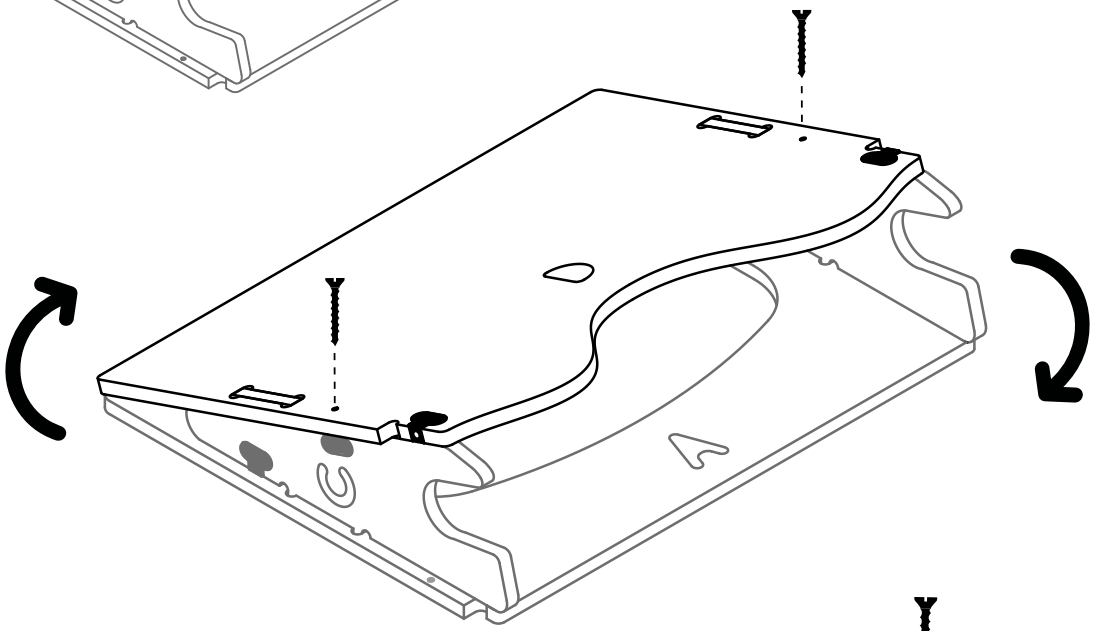

Flip entire unit over, and secure piece A with two screws.

Part A might disconnect from the other pieces. That's okay! Just re-slot it into position and screw it into place.

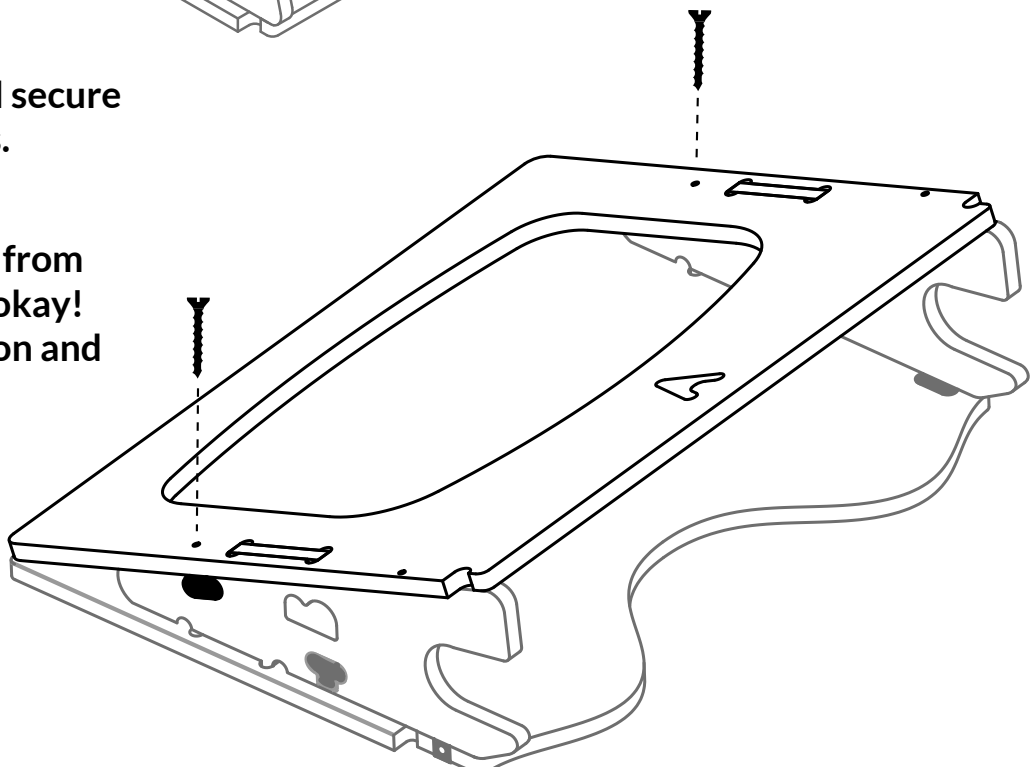

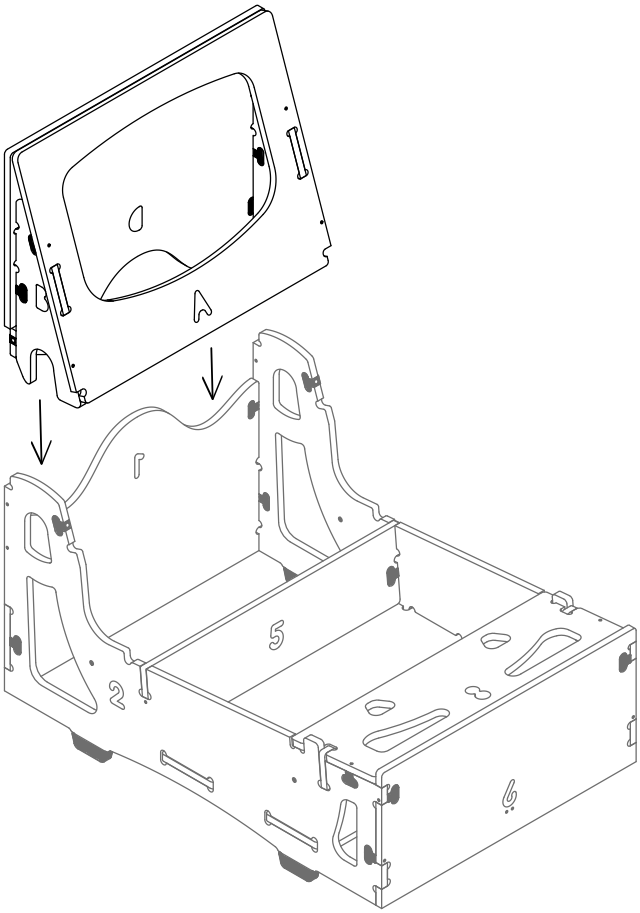


12


Slide the top of the frame onto the base of the frame. Pieces B and C should be on the inside of pieces 2 and 3.

Secure with four screws. Two on the front and two on the sides.

If you haven't already, you can now remove the Assembly Aid.

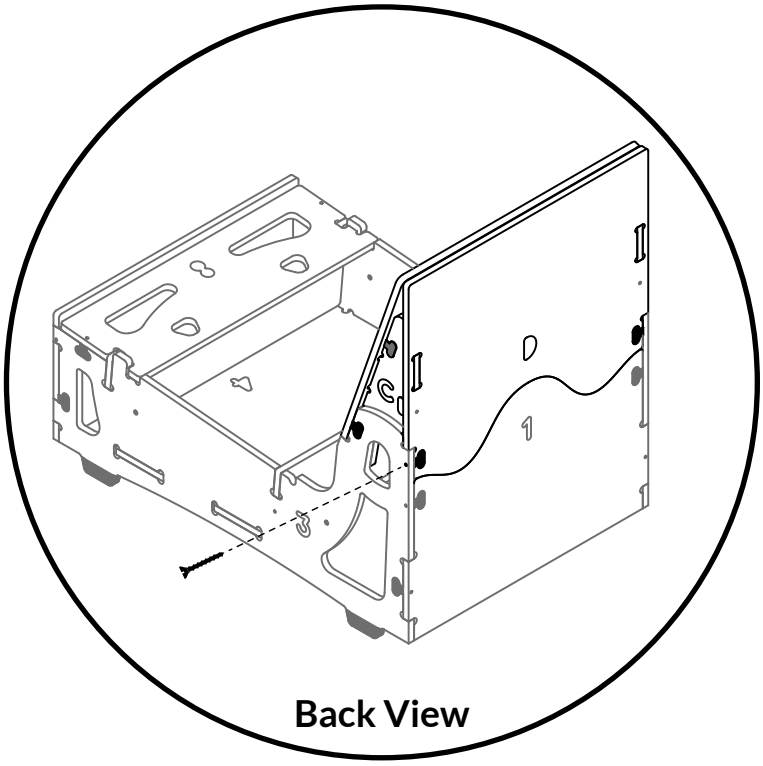

Back View

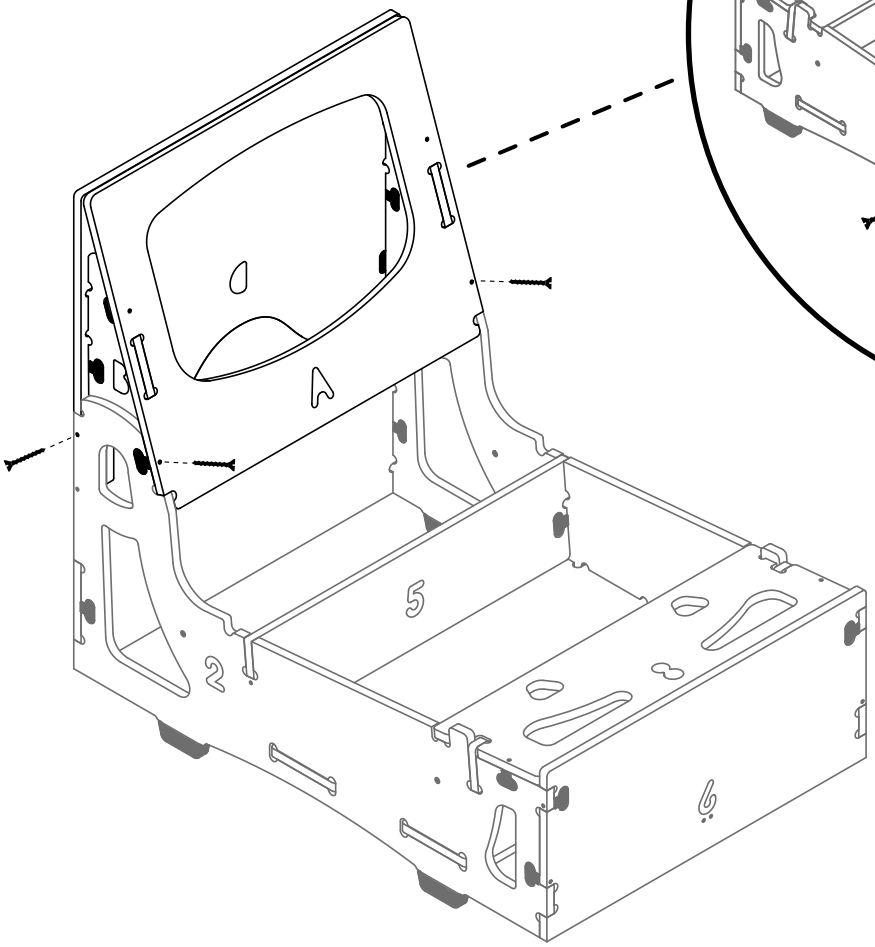

Yay! You're done with frame assembly.

FABRIC ASSEMBLY


We will now use the foam, fabric bag, piece 9, and the Seat Lid we set aside earlier. You will have two pieces of foam and four pieces of fabric, two with zippers and two without zippers. The fabric will come inside out. This is to protect it during shipping. Locate the zipper and pull gently to open the fabric.

Pro Tip!

We suggest cleaning your area before assembling fabric. This helps keep the fabric fresh and looking great!



Seat Cushion Cover

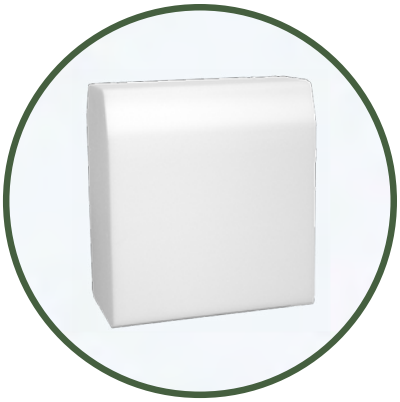

Seat Cushion




Back Pillow Cover



Back Pillow




Frame Front Cover

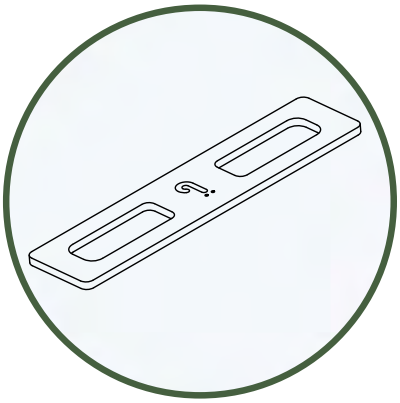

Piece 9




Frame Back Cover

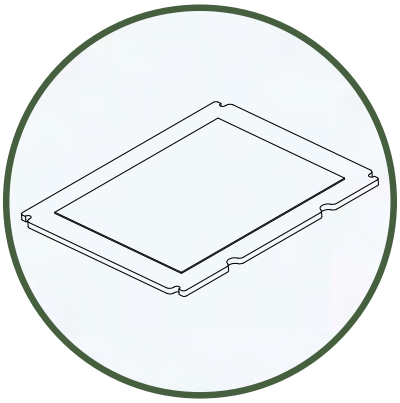

Seat Lid


1 **Select the Front Frame Cover. This is the smallest piece of fabric without a zipper. Also locate wood frame piece 9 (the long and narrow one).**
Slide frame piece 9 into sleeve sewn into the Front Frame Cover as shown.


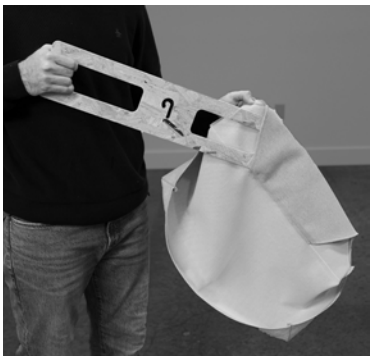

Place wood frame piece 9 with the Front Frame Cover on top of part 8, behind the back edge of part 6 and in front of the notches on parts 2 and 3.




2 **Tip the entire wooden frame onto its back. Pull the cover tight over both corners on the front of the frame, as shown. This will secure the Front Frame Cover.**



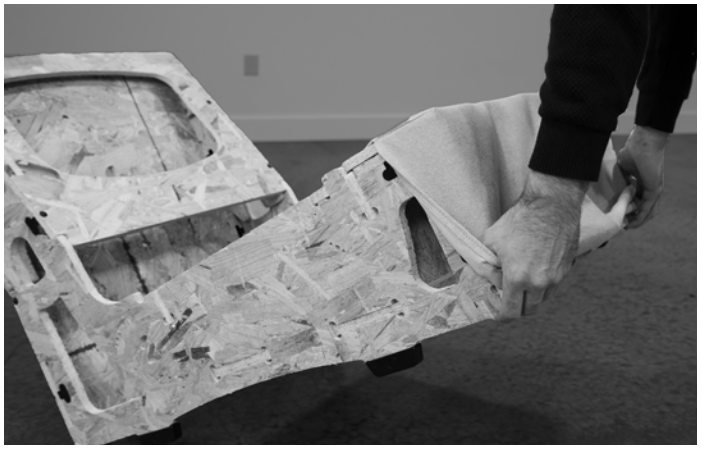

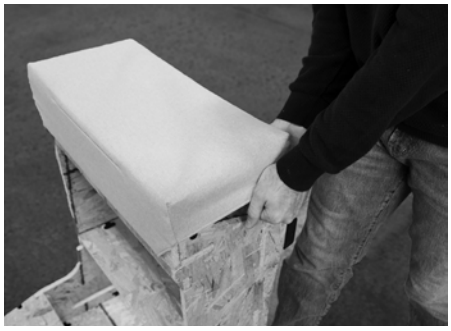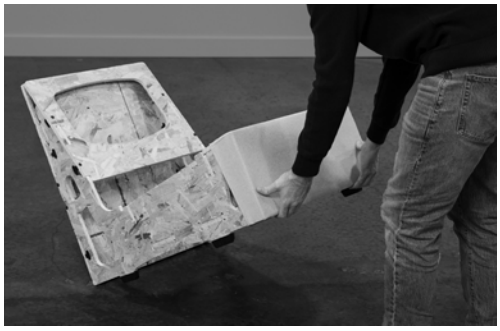3 **Sit the frame upright. Find the Back Frame Cover. This is the big piece of fabric without a zipper.**

Stick your hands into the corners of the Back Fabric. Aligning the corner of the fabric to the coners of the frame, begin to wiggle the fabric down the frame. Once you've got a good grip, start to pull down from the outside.





Incrementally pull the fabric down the back of the chair, one inch at a time. Align the seams of the fabric with the sides of the frame. Pull down a little bit at a time and go back and forth between sides.





4 **Once the Back Frame Cover is pulled down as tightly as it can be, tip up the frame so that its front panel is on the floor. Keep the frame in place by resting your foot on the bottom panel as shown.**

Just as we did on the front, take the corners and pull them over the bottom of the frame. This will be tight to ensure a good fit. Pull on the sides to smooth out the fabric.






5 **Place the frame back down on its feet so it's sitting upright. Find the Seat Lid that was set aside earlier. Place it on top of the unit, resting it in the appropriate notches on front and back (no screws needed).**




6 **Find the Seat Cushion Cover. That's the fabric with a zipper that's shaped like a "U". Locate the zipper and gently pull to open up the fabric. Stick your hands into the corners of the inside-out fabric. Match the rounded front edges of the seat cushion foam with the rounded edges of the Seat Cushion Cover.**





7 **Match the rounded front edges of the seat cushion foam with the rounded edges of the Seat Cushion Cover. Don't be afraid to stick your hand in the cover to get everything smooth.**




8 **Once it's secured on the foam, start to pull the fabric down around the sides. Locate the zipper. Pull the fabric together by pushing down on the foam or squeezing the cushion between your knees to help with zipping.**





At this point, we suggest setting the cushion on the ground, removing your shoes, and stepping on it. This pushes the foam all the way to the corners so it looks its best.
You can now set the seat cushion on your unit.





9

Locate the last piece of fabric, the Back Pillow Cover. Find the zipper, gently pull to open, and flip the fabric right-side out.

The zipper opening should be parallel to the horizontal lines in the back pillow. Begin to stuff the pillow into the case.





The pillow is oversized to ensure a plush look and supportive feel.

10

Once it's in, place your hand inside the fabric. Adjust the corners of the pillow to match the corners of the fabric. Zip up the pillow, the zipper will be tight. You can push down on the fiber pillow with your hand as you pull the zipper to help. Just like the seat cushion, we recommend placing the pillow on the ground and stepping on it with your feet to push the fill into the corners of the fabric. This back pillow can now go onto the rest of the unit.








And voila - your armless unit is completely assembled!

FRAME ASSEMBLY

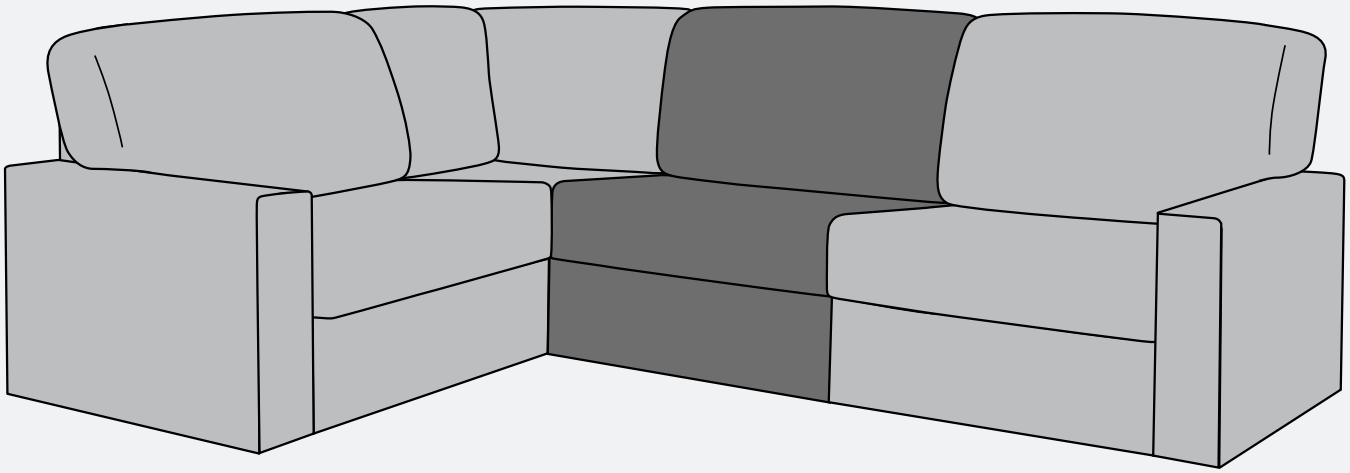


DEEP SEAT
WIDE ARMLESS

Instructions for all pillow back styles: Ali, Ava, Brynn, Ezra, Laney, Millie, Tux

Before you begin


Open the first box. Remove the foam and fabric. You can set these aside. Piece 11 and the Seat Lid, will be in the second box and will be used later on in the fabric dressing process.

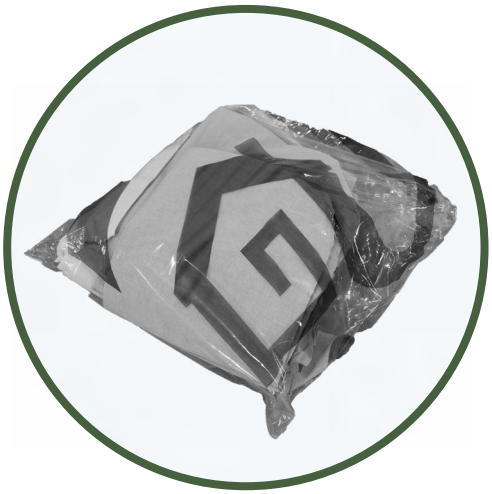


Fabric Bag



Foam Bag

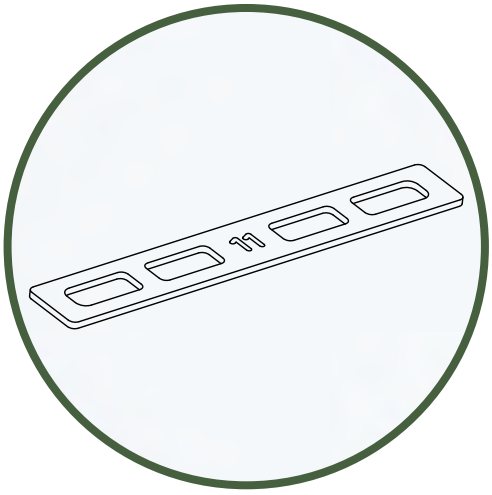


Piece 11

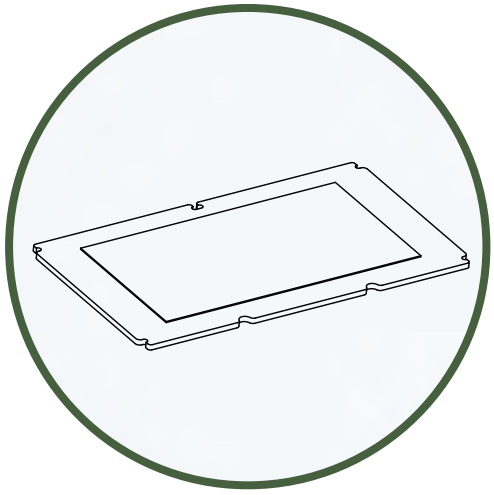

Seat Lid

Wide Armless units ship in two boxes. Once you have used all of the frame pieces in the first box, open the second for additional frame pieces.

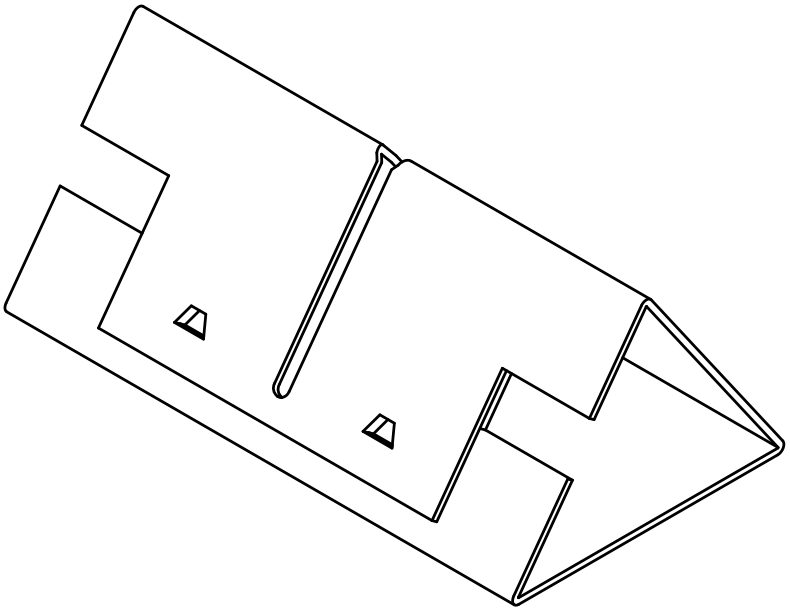



Follow the instructions on the Assembly Aid to fold it into a triangle.

1

Find piece 1 and insert two T-Connectors into the slots shown. Hammer them in if needed. Fit will be snug.

Slide piece 1 down into the Assembly Aid to hold it upright. The point of the Assembly Aid should be directly below the “1”.

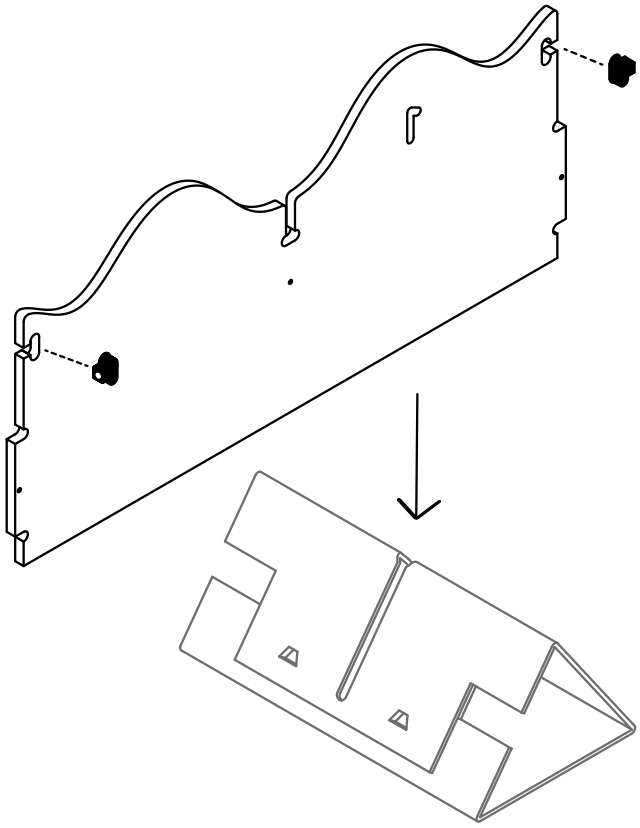


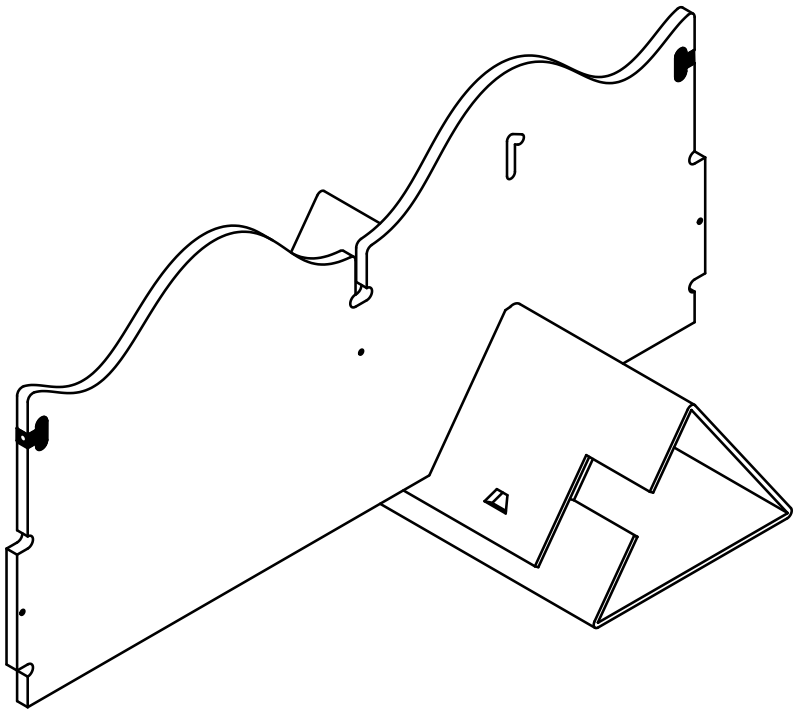


2

Take out piece 2. Insert four T-Connectors and two Foot Glides as shown.

With the smooth side facing out, fit piece 2 into piece 1 and secure with two screws.

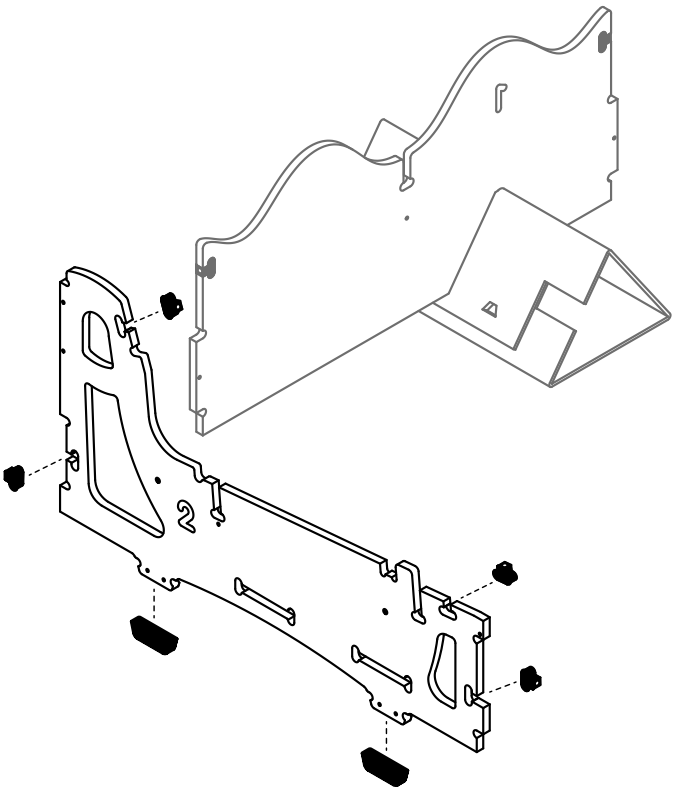


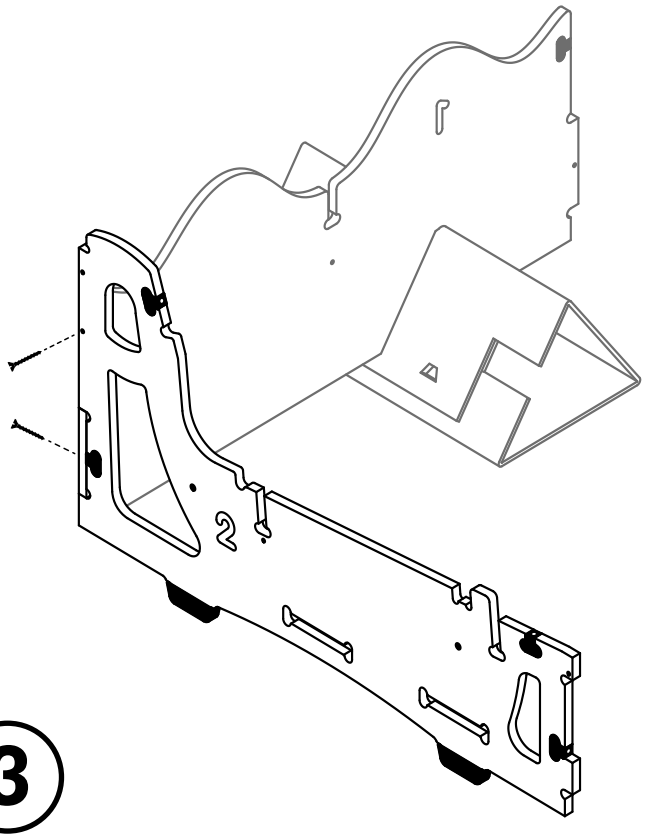


3

Remove piece 3. Similar to step 2, insert four T-Connectors and two Foot Glides.

With the smooth side facing out, attach to piece 1 and secure with two screws.

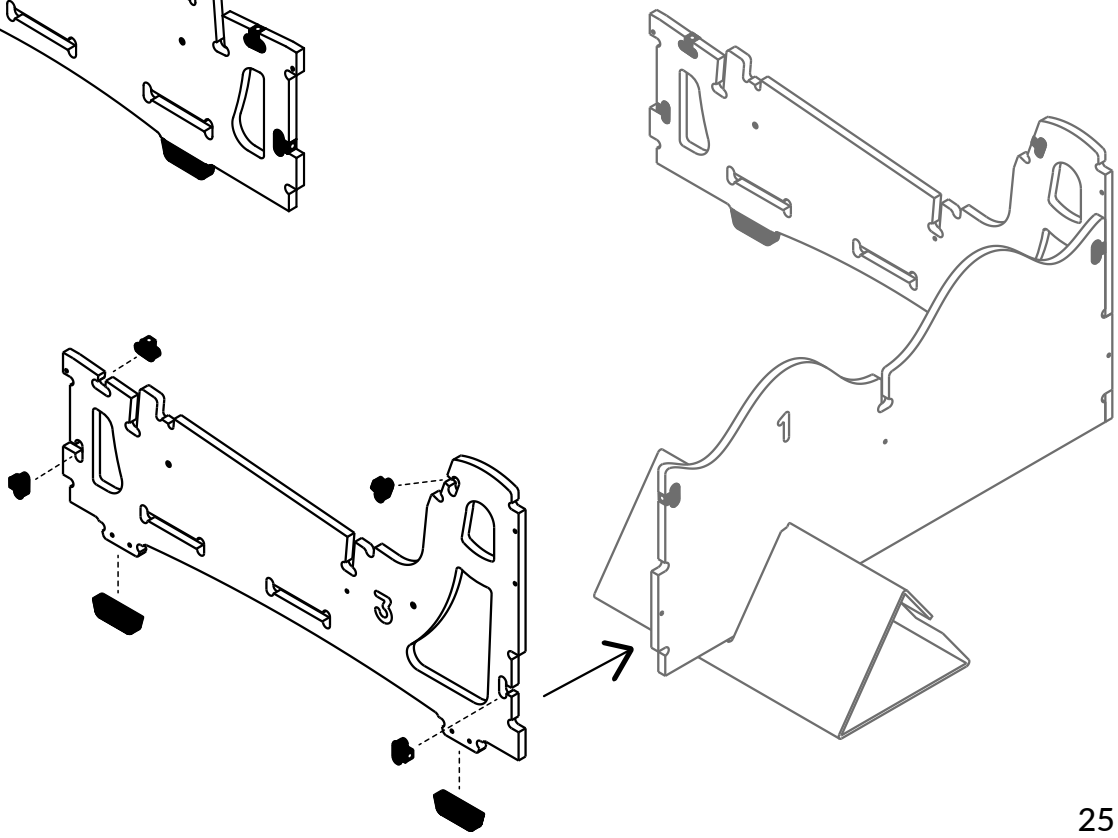


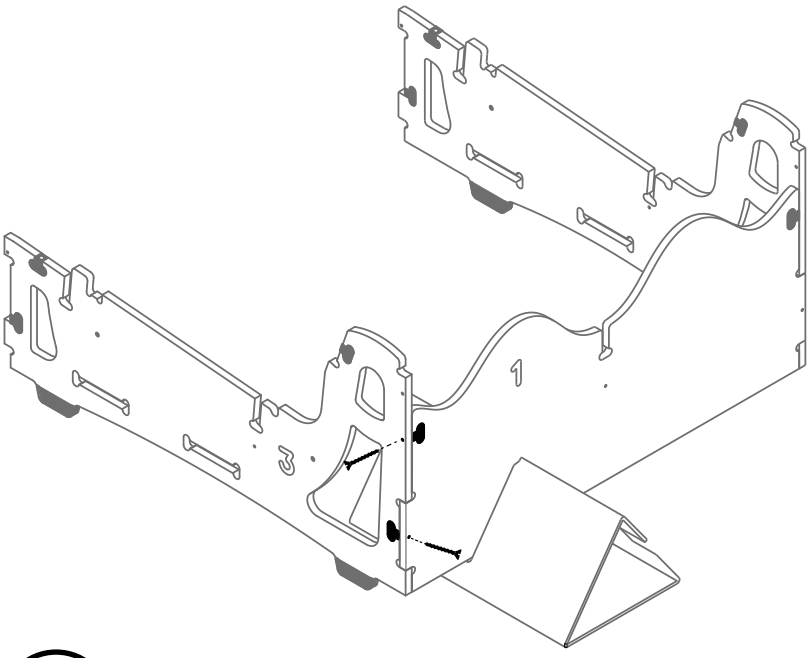


4

Insert three T-Connectors and two Foot Glides into piece 4 and slot it into piece 1, between pieces 2 and 3.

Secure piece 4 with one screw.

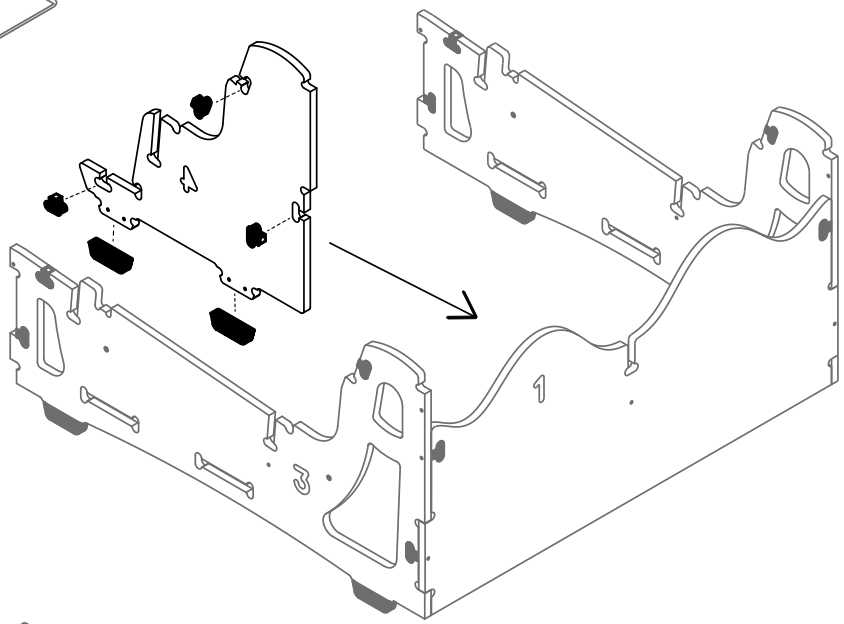

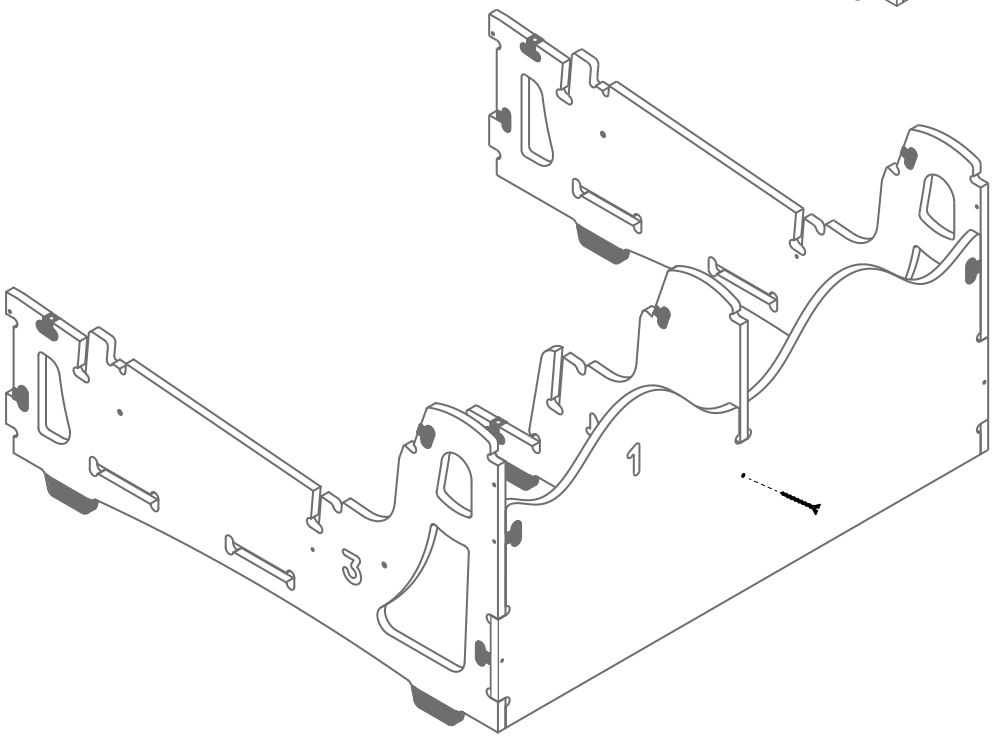



5


Piece 5 will be the bottom of the storage area. With the smooth side facing up, fit the tabs on either side of piece 5 into the horizontal slots on pieces 2 and 3. The middle slot will match up and rest on piece 4.

The frame will bend a bit. That's okay, it's made to do that.

Secure with one screw.

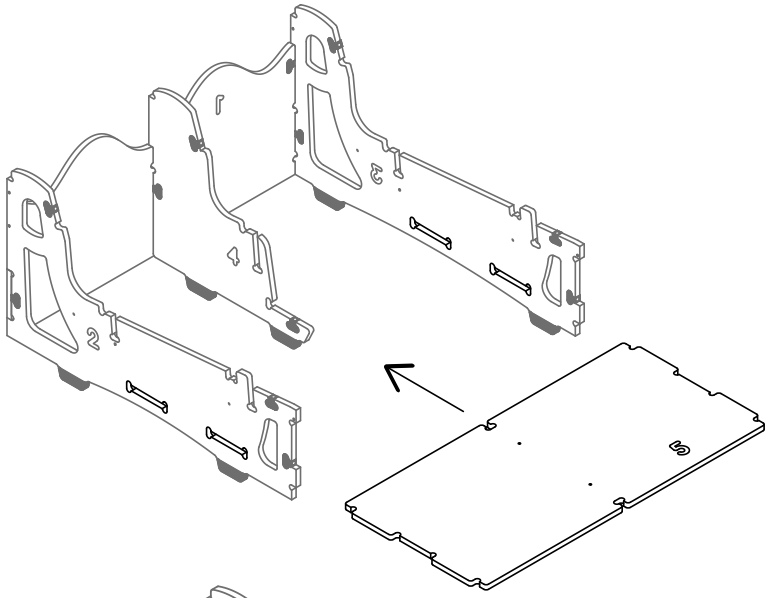

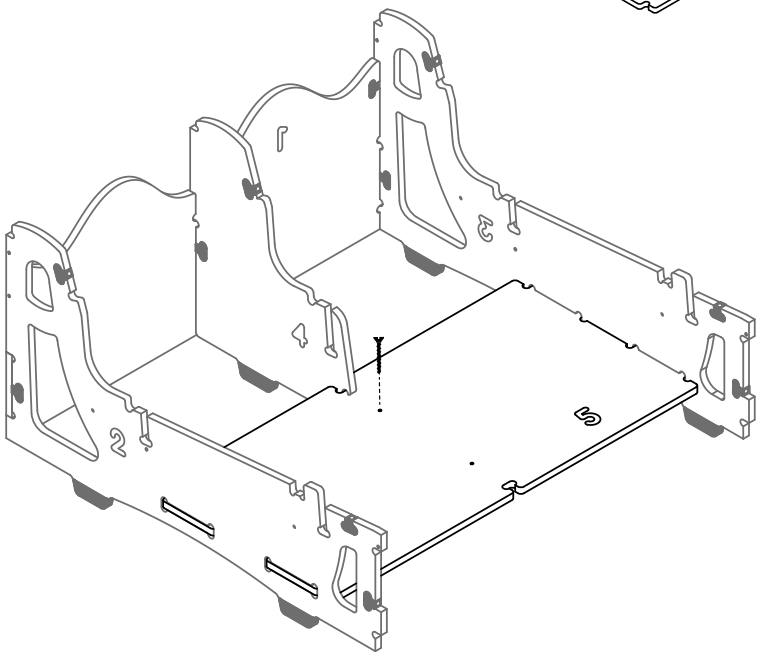


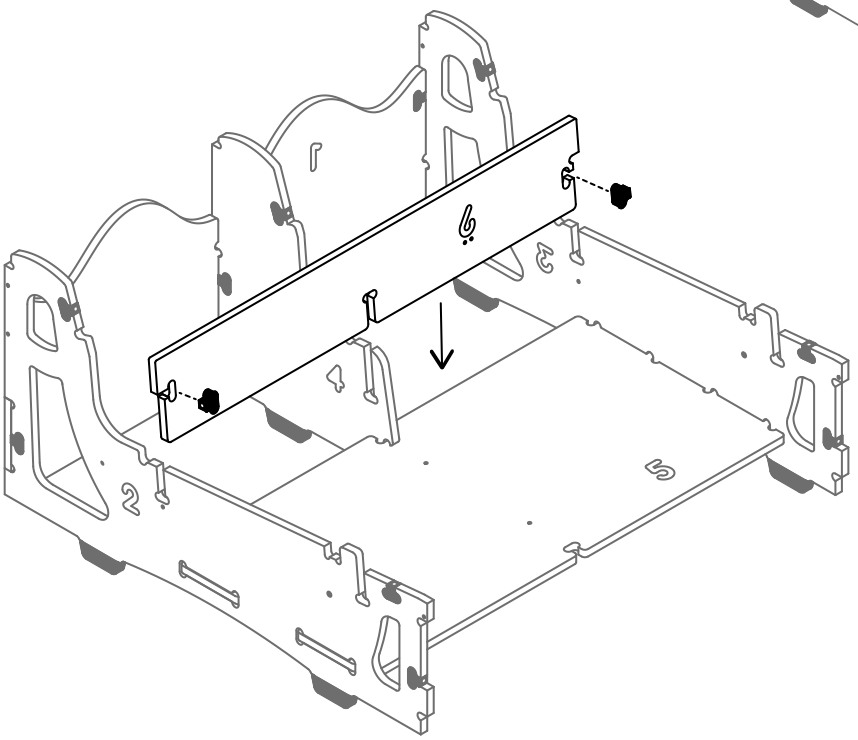

6

Insert two T-Connectors into piece 6. Slide into place between pieces 2, 3 and 4 with the smooth side facing front.

Secure with two screws.

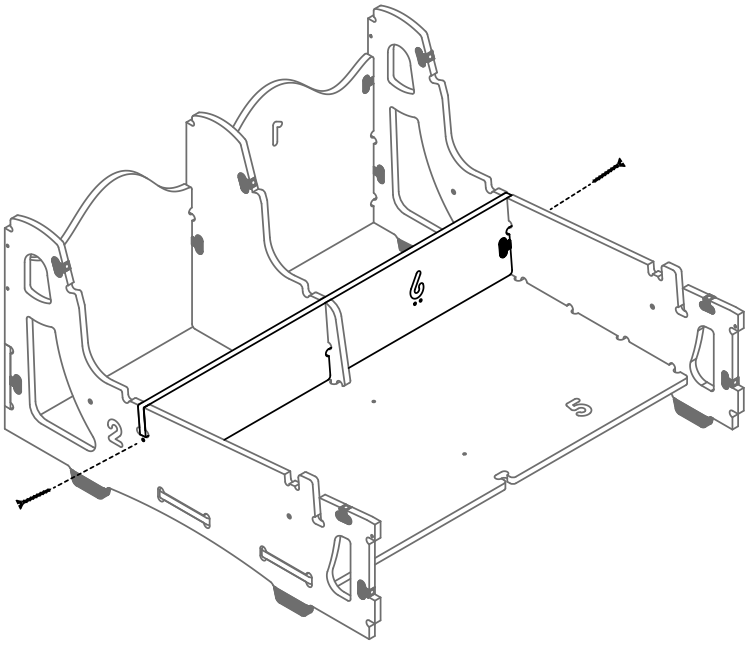



7

Insert two T-Connectors and one Foot Glide into piece 7.


Slide piece 7 into piece 5 as shown.

Secure with one screw.

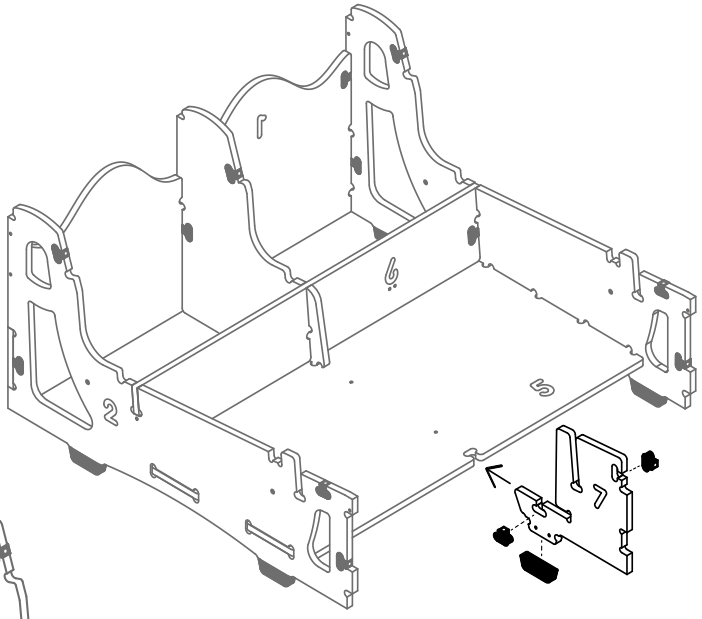

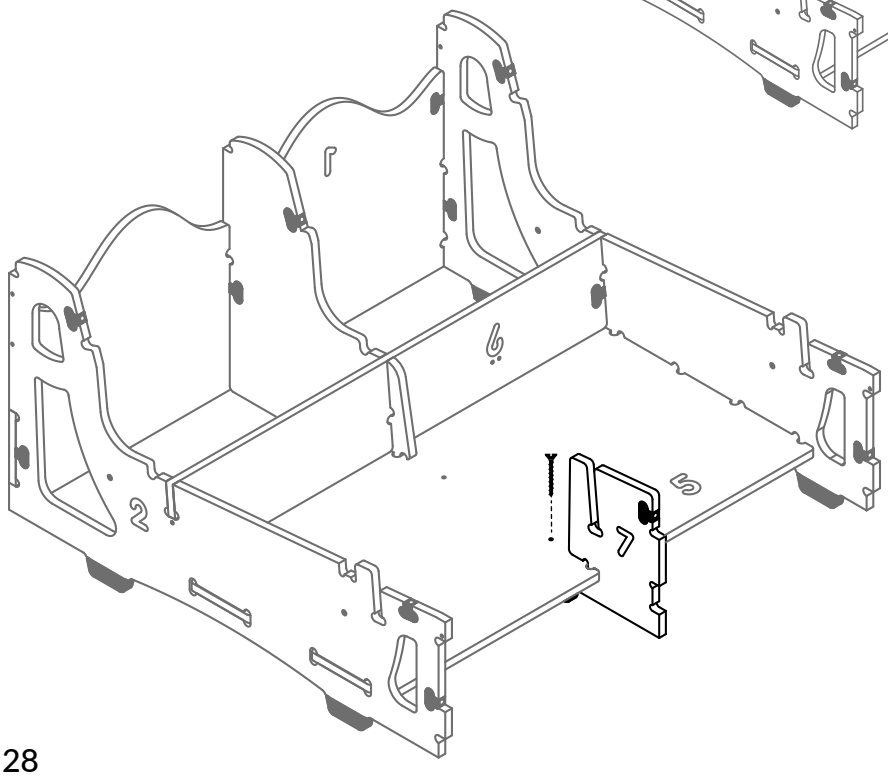

Pro tip:
Start to thread the screw by hand first to find the drill hole, then use your tool to tighten the screw completely.

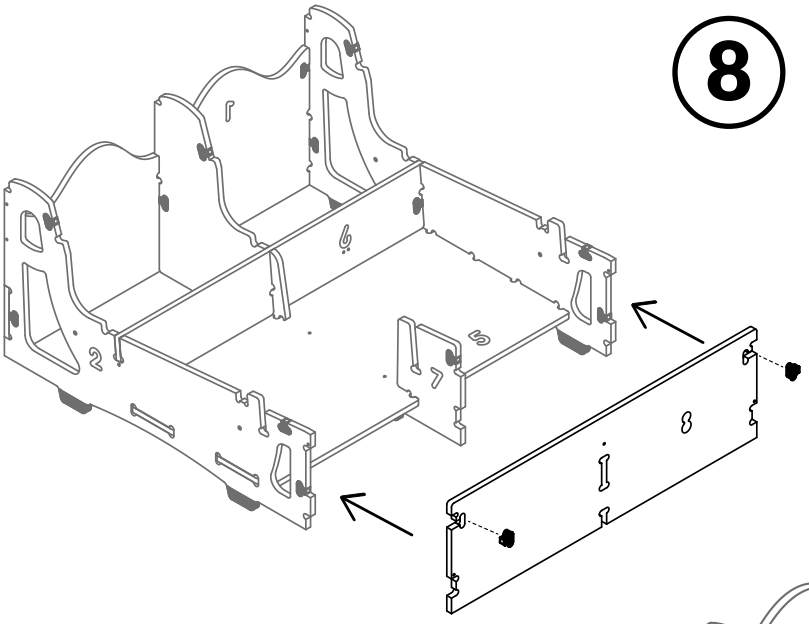

8


Insert two T-Connectors into piece 8.


Piece 8 will be the front panel of the unit. With the smooth side facing out, fit it into place between pieces 2 and 3. The tab on piece 7 will fit to into the middle vertical slot.

Secure with five screws.


9

Piece 9 will complete your storage area. With the smooth side facing the back of the frame, slot the tabs on piece 9 into pieces 2, 3 and 7.

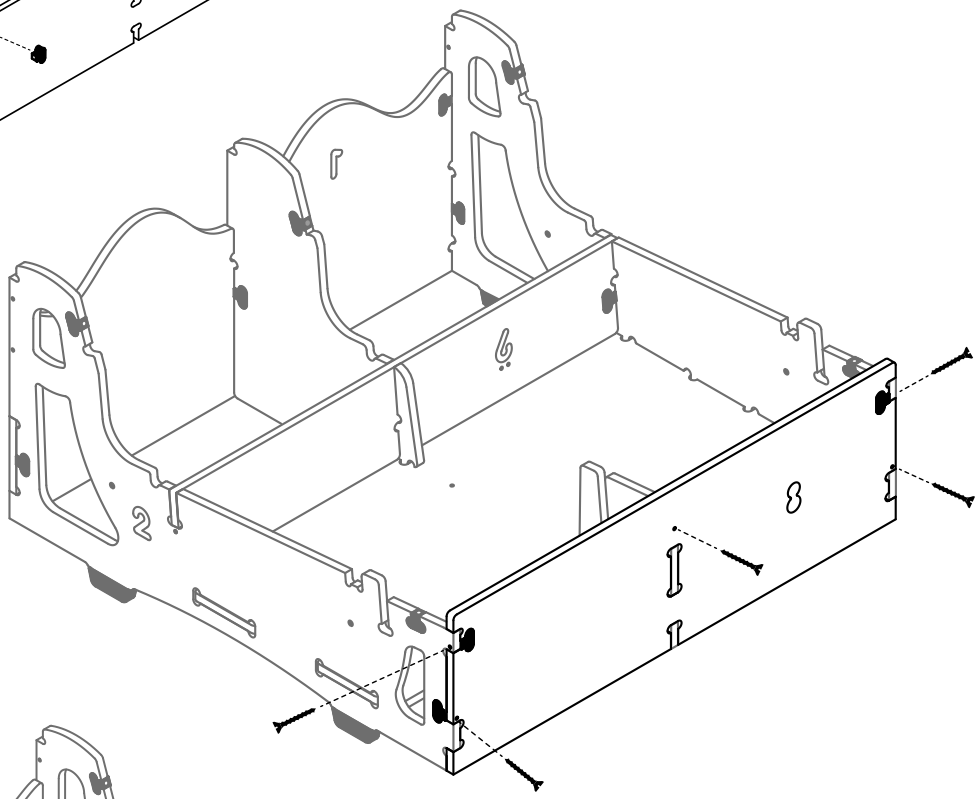

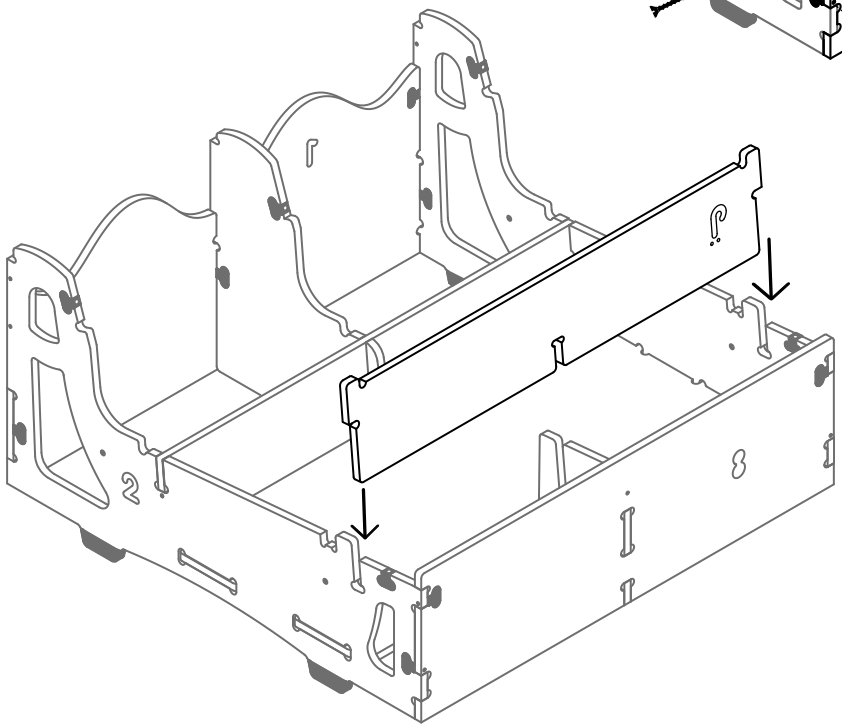

No screws are needed.

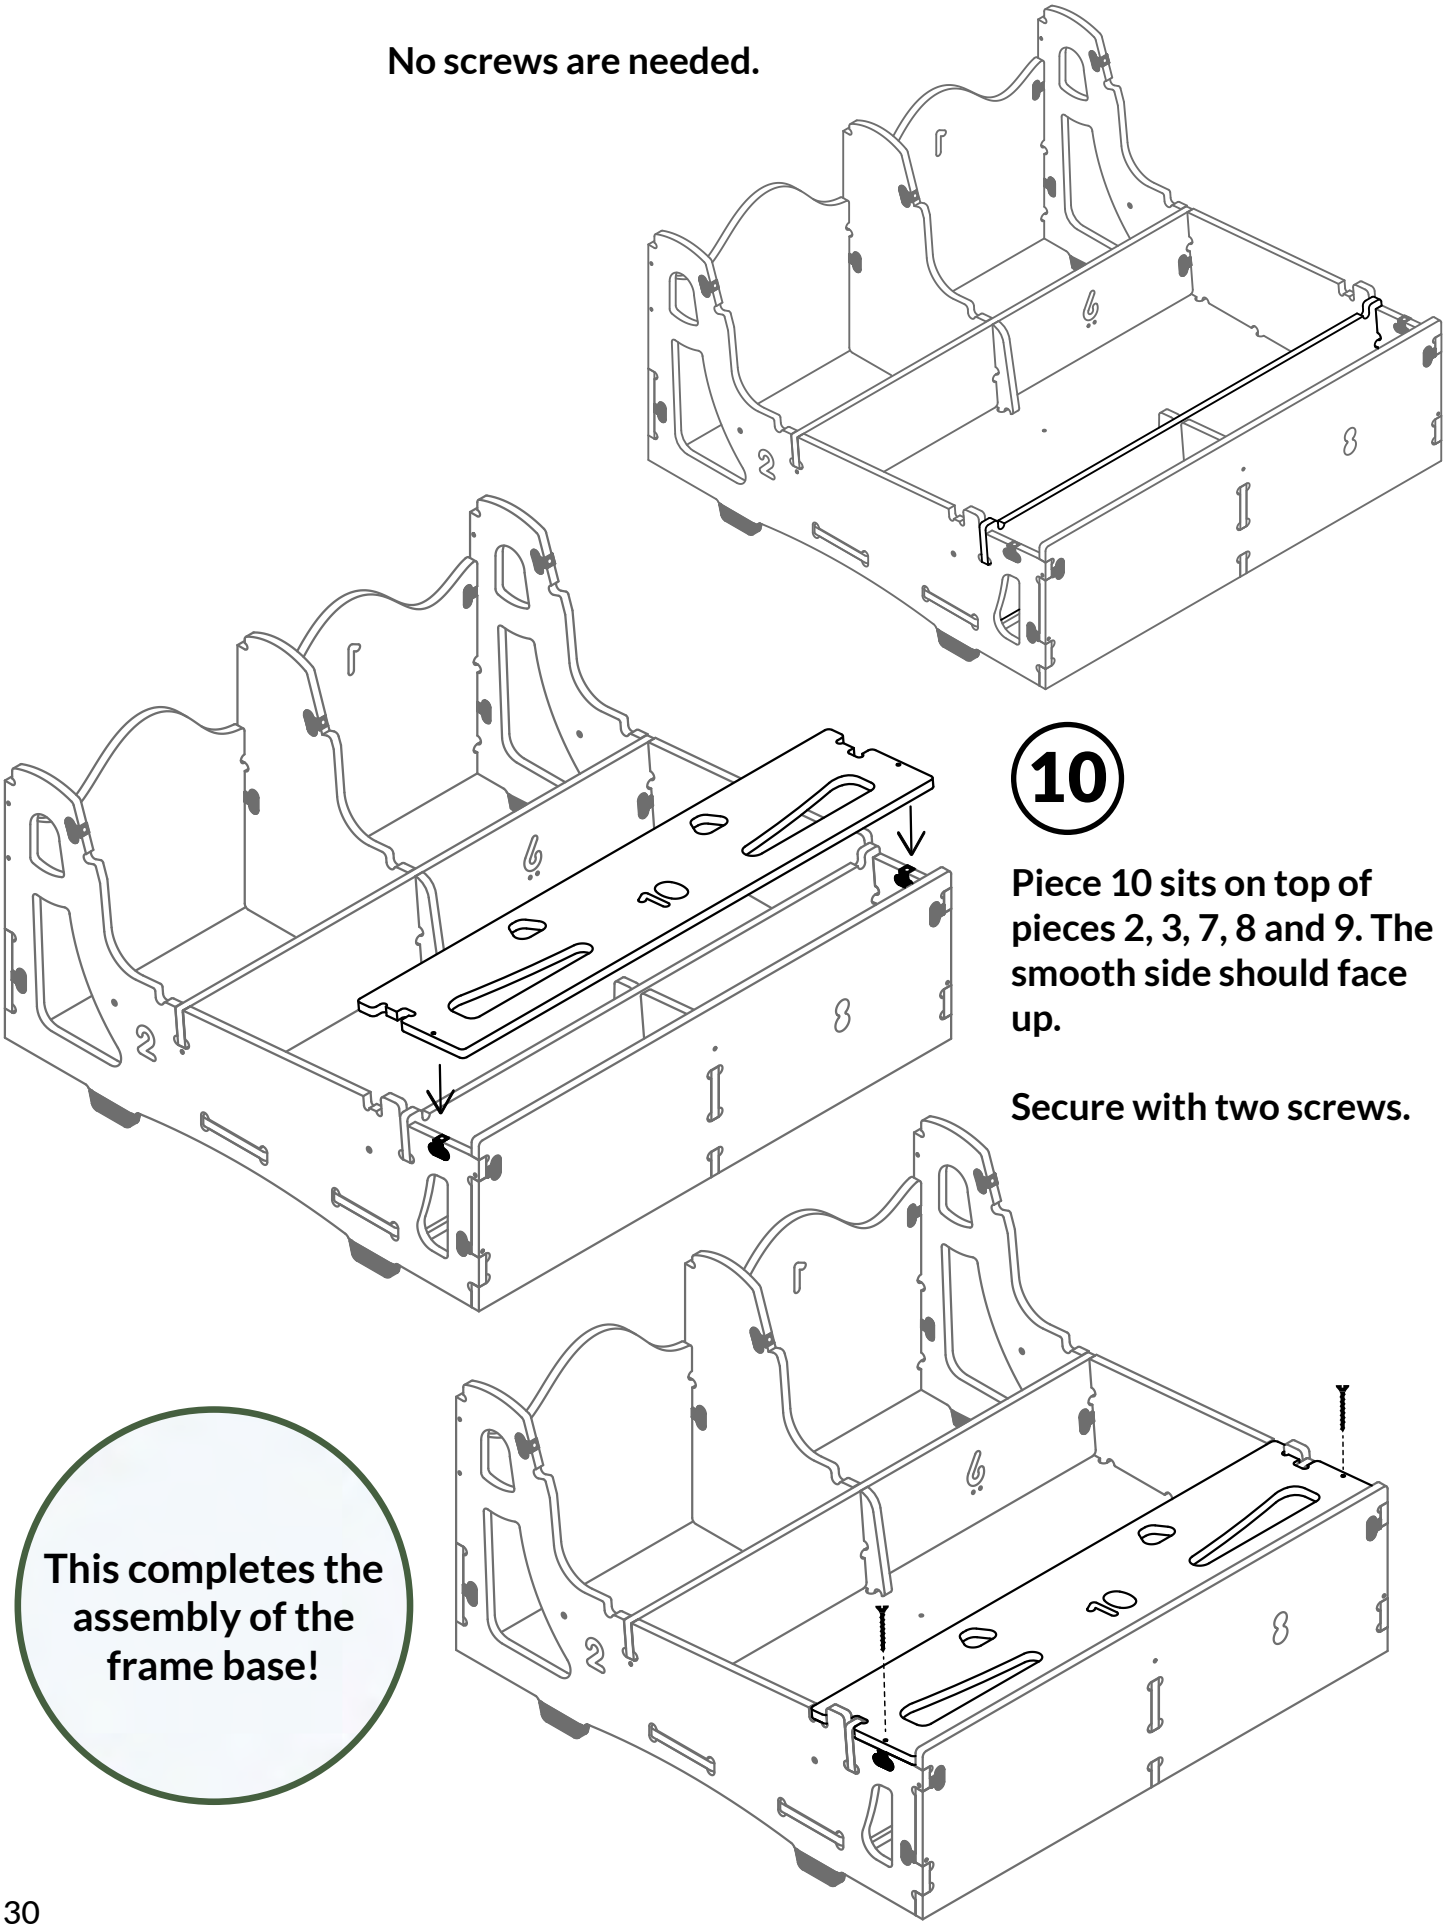


10

Piece 10 sits on top of pieces 2, 3, 7, 8 and 9. The smooth side should face up.

Secure with two screws.

This completes the assembly of the frame base!

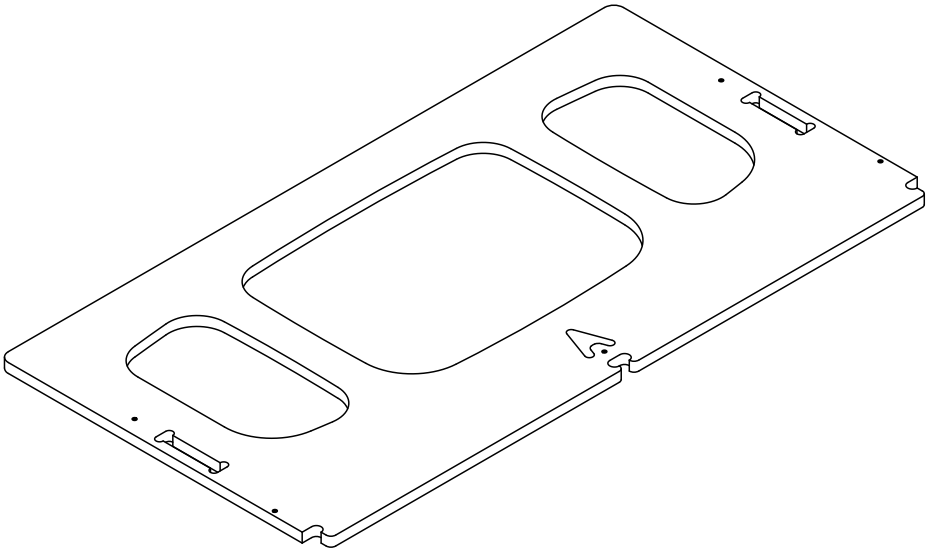

Now, let's start assembling the top of the frame.


These are the lettered pieces.


11


Find pieces A and B. Place piece A on the floor with the smooth side facing down.

Insert two T-Connectors into piece B.

With the smooth side facing out, slide the lower tab on piece B into the slot on the right side of piece A.

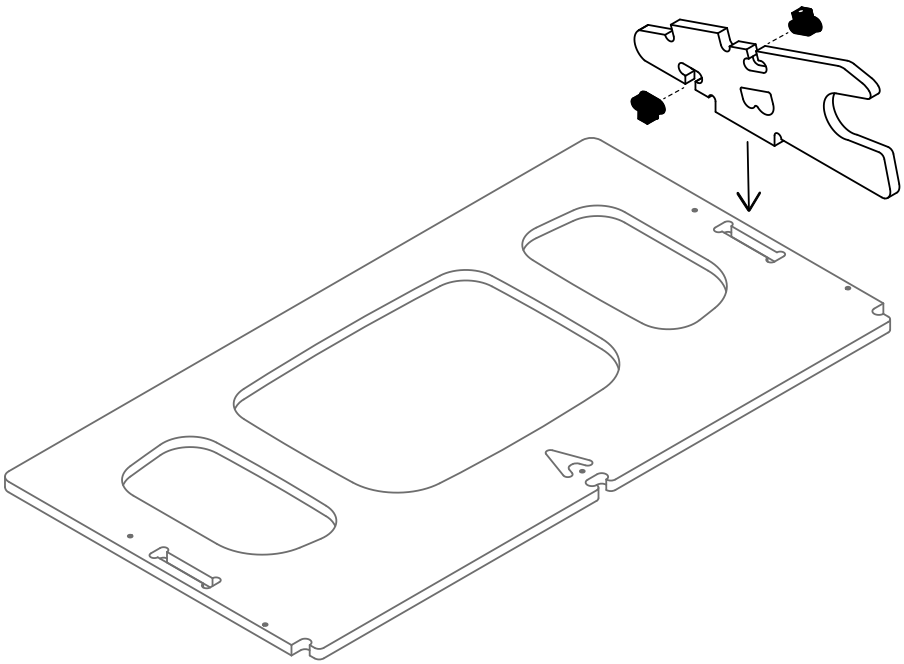


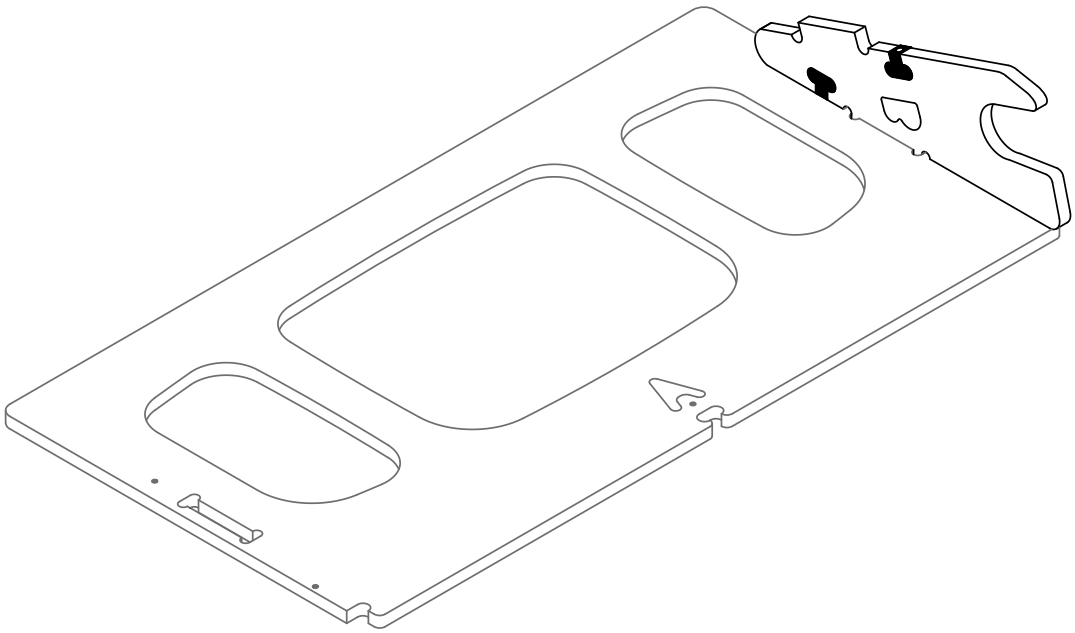


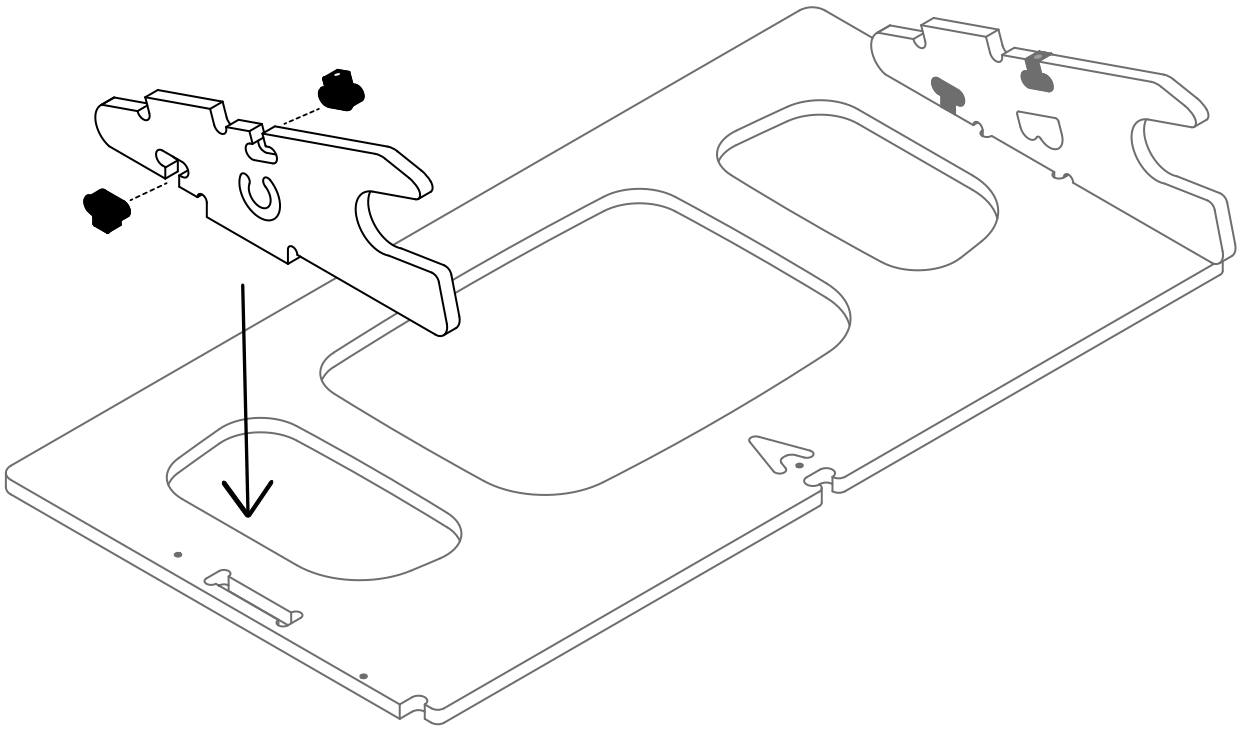

12 **Do the same for piece C. Insert two T-Connectors into piece C.**

With the smooth side facing out, slide the lower tab on piece C into the slot on the left side of piece A.

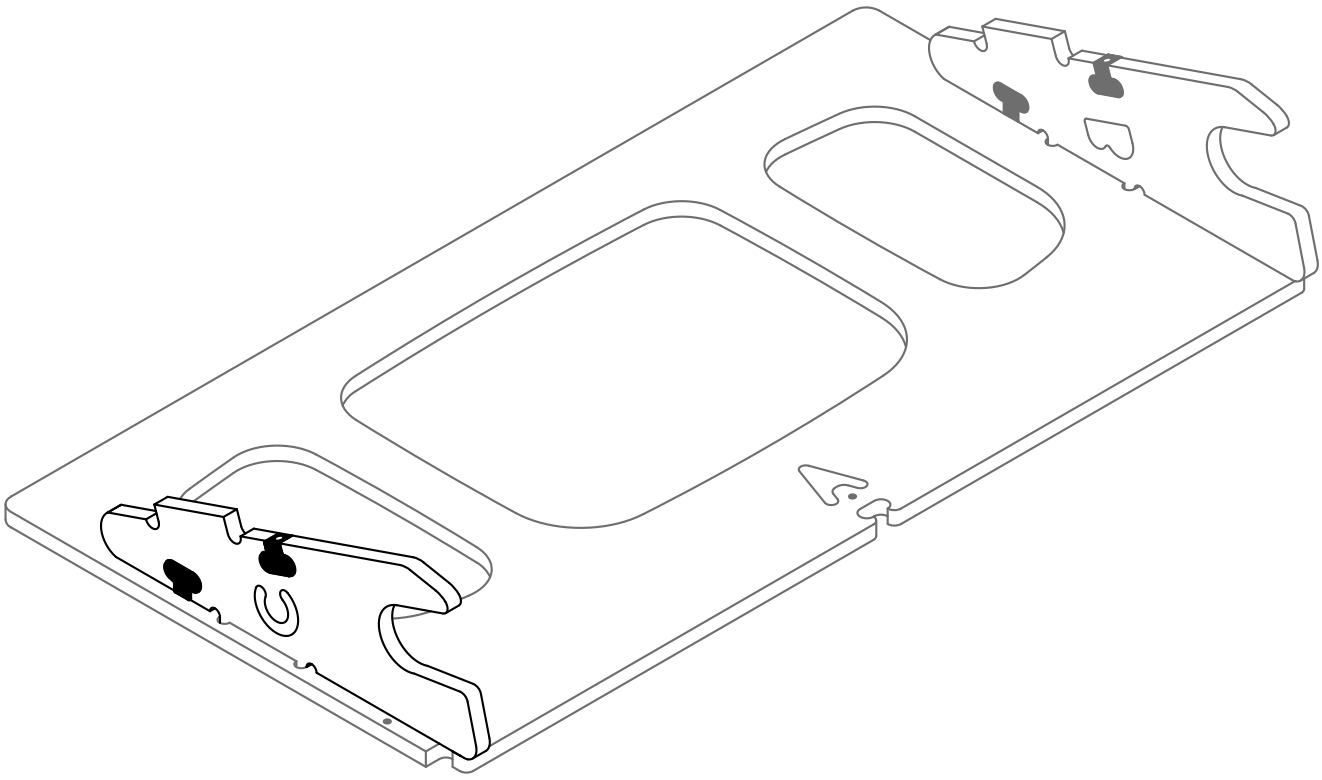

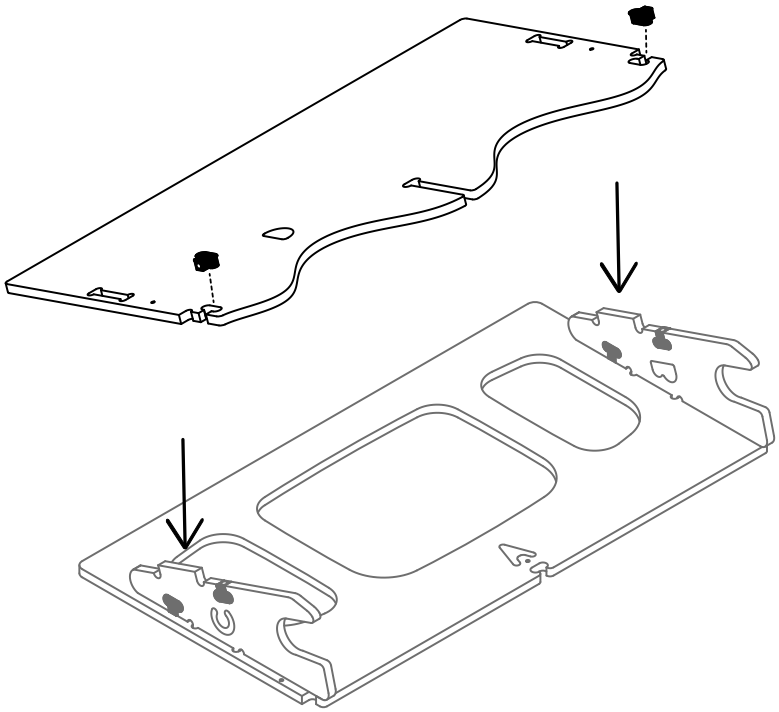


13

Insert two T-Connectors into piece D.


With the smooth side of piece D facing out and up, slide the tabs on pieces B and C into the slots on piece D.


Secure piece D with two screws.

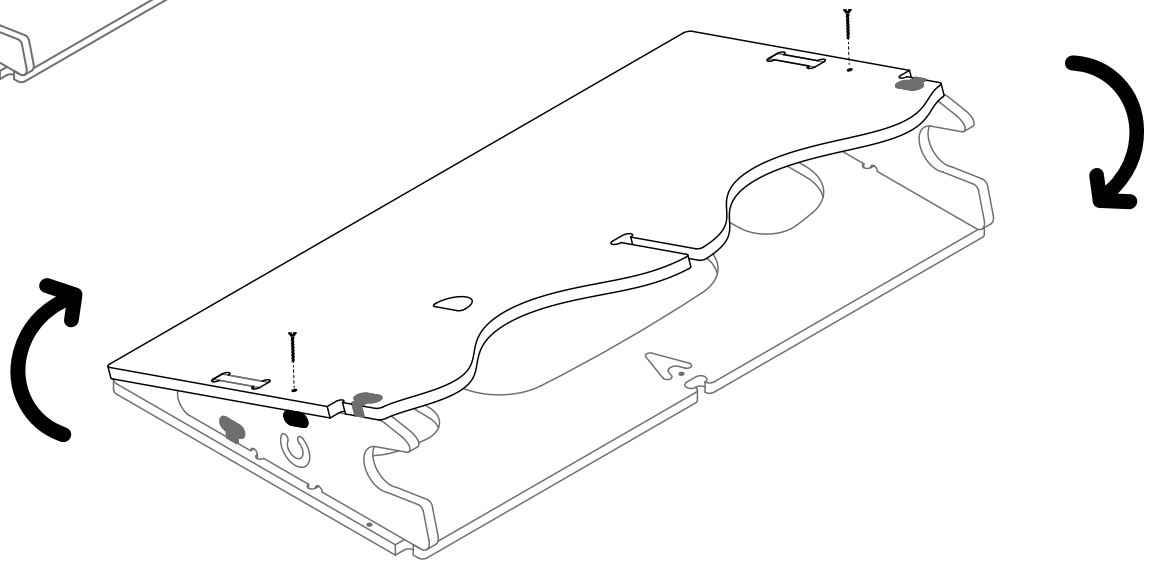

Flip entire unit over, and secure piece A with two screws.

Part A might disconnect from the other pieces. That's okay! Just re-slot it into position and screw it into place.

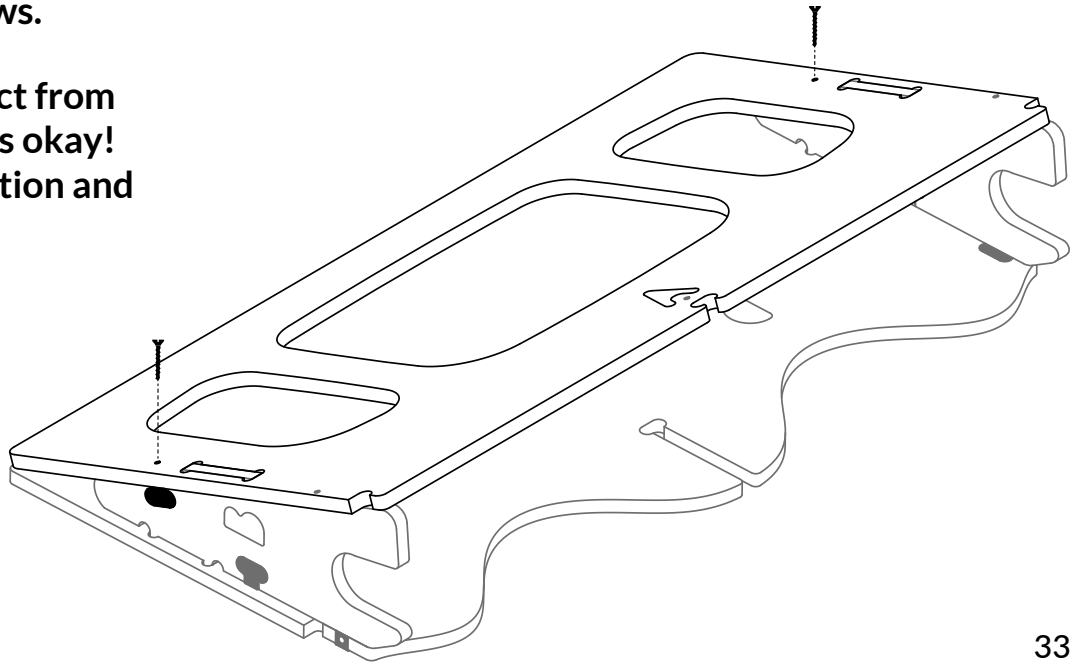

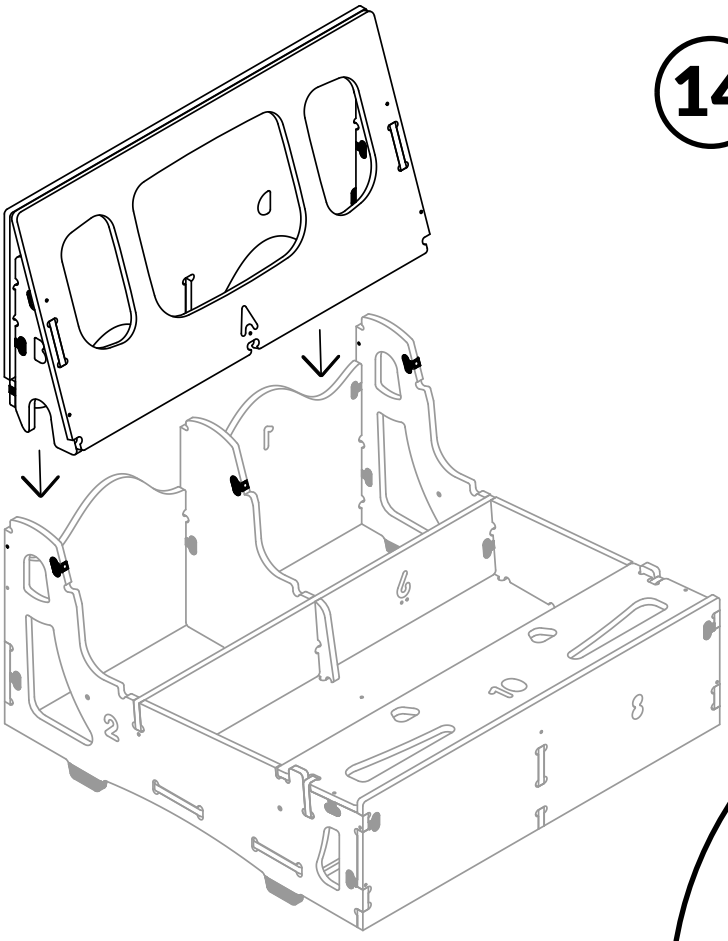


14


Slide the top of the frame onto the base of the frame. Pieces B and C should be on the inside of pieces 2 and 3.

Secure with five screws. Three on the front, and two on the sides.

If you haven't already, you can now remove the Assembly Aid.

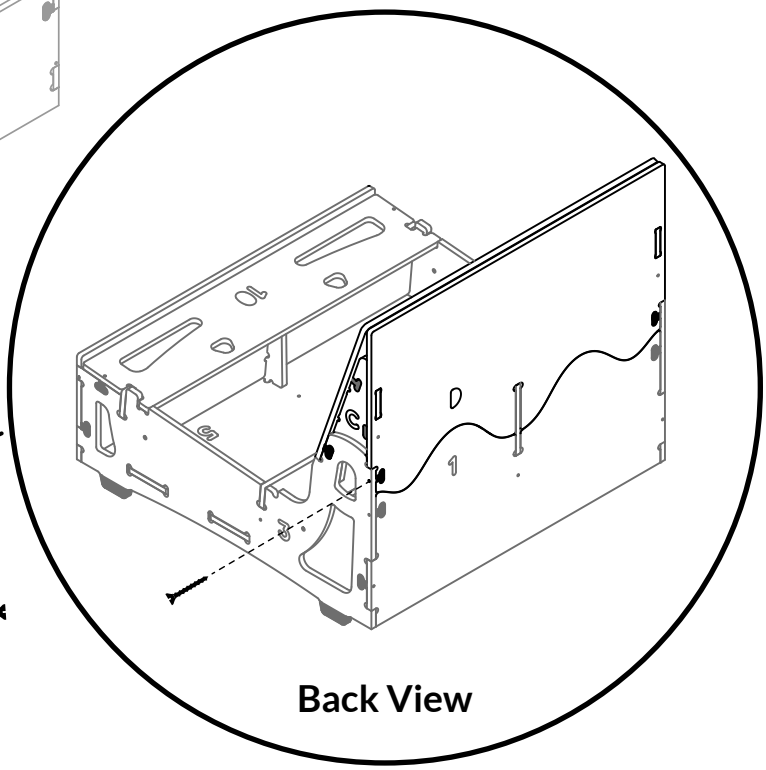

Back View

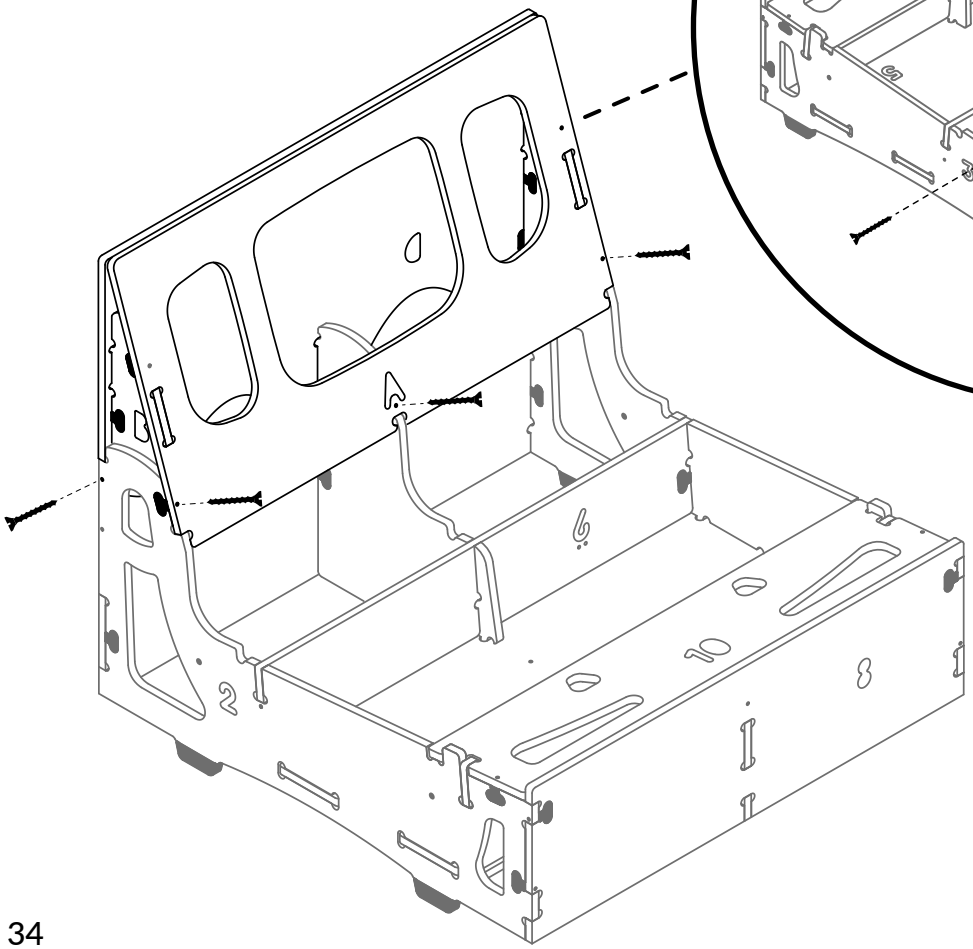

Yay! You're done with frame assembly.


FABRIC ASSEMBLY

We will now use the foam, fabric bag, piece 11, and the Seat Lid we set aside earlier. You will have two pieces of foam and four pieces of fabric, two with zippers and two without zippers. The fabric will come inside out. This is to protect it during shipping. Locate the zipper and pull gently to open the fabric.

We suggest cleaning your area before assembling fabric. This helps to keep the fabric fresh and looking great!



Seat Cushion Cover

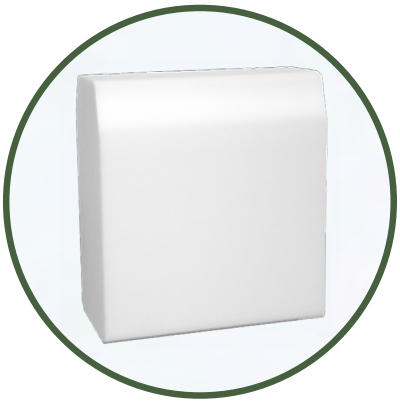

Seat Cushion




Back Pillow Cover




Back Pillow




Frame Front Cover

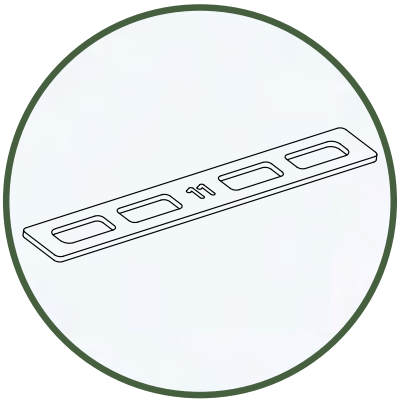

Piece 11

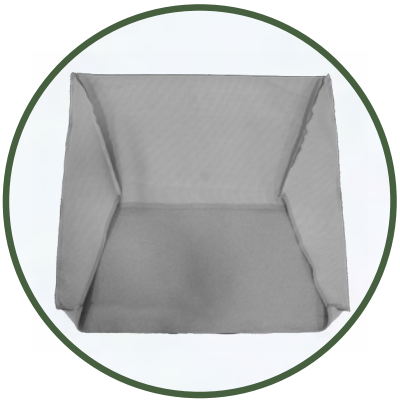


Frame Back Cover

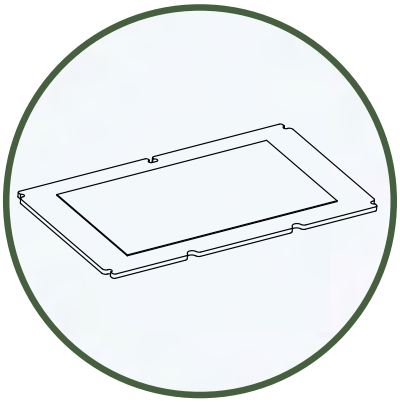

Seat Lid

1 **Grab the smallest piece of fabric without a zipper and piece 11 from earlier.**

Slide frame piece 11 into sleeve sewn into the Front Frame Cover as shown.

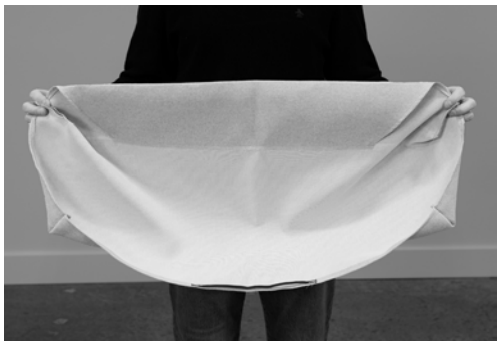




Place the wood frame piece 11 with the Front Frame Cover on top of part 10, behind the back edge of part 6 and in front of the notches on parts 2 and 3. This will be a snug fit in order to minimize wrinkles.





2 **Tip the entire wooden frame onto its back. Pull the cover tight over both corners in the front of the frame, as shown. This will secure the Front Frame Cover.**

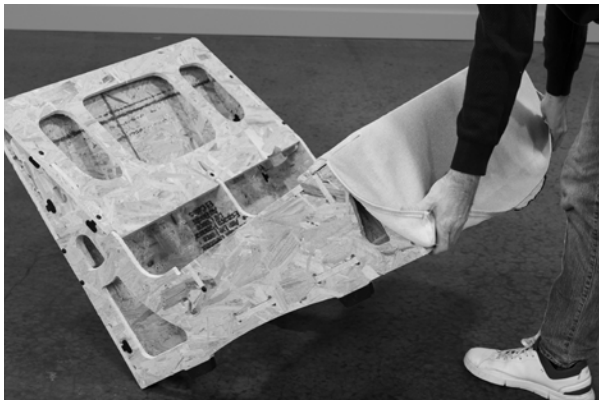



Once secured, reach underneath the middle of the fabric to find an elastic strap, pull this down and secure it around the middle Foot Glide as shown. Sit the frame upright.





3

Find the Back Frame Cover. This is the big piece of fabric without a zipper.

Stick your hands into the corners of the Back Fabric. Aligning the corners of the fabric with the corners of the frame, begin to wiggle the fabric down the frame. Once you've got a good grip, start to pull down from the outside.





Incrementally pull the fabric down the back of the chair aligning the corners or the fabric to the sides of the frame, moving a little bit at a time and going back and forth between both sides.







4 **Once the Back Frame Cover is pulled down as tightly as it can be, give it a good tug in the center to ensure it's all the way down.**

Tip up the frame so that its front panel is on the floor. Keep the frame in place by resting your foot on the bottom panel.







Just as you did with the front frame cover, pull the corners of the fabric over the frame. This will be tight to ensure a good fit to the frame. Pull on the sides to smooth out the fabric.





Once secured, reach underneath the fabric to find the elastic strap in the middle. Pull this down and over the middle Foot Glide.





Put the frame back down onto its feet. Find the seat lid that was set aside earlier and place it on top of the unit.







5

Find the Seat Cushion Cover. That's the fabric with a zipper that's shaped like a "U".

Locate the zipper and gently pull to open up the fabric. Stick your hands into the corners of the inside-out fabric.





Match the rounded edges of the seat cushion foam with the rounded edges of the Seat Cushion Cover. Don't be afraid to stick your hand in the cover to get it smooth. Once it's secured on the foam, start to pull the fabric down around the sides.







Locate the zipper, pull the fabric together or push down on the foam to help with the zipping process.

At this point, we suggest to set the cushion on the ground, removing your shoes and stepping on it. This presses the foam all the way to the corners and keeps it looking its best. This seat cushion can now be set on your unit.








6 **Locate the last piece of fabric, the Back Pillow Cover. Find the zipper, gently pull to open, and flip the fabric right-side out. The zipper opening should be parallel to the horizontal lines in the back pillow. Begin to stuff the pillow into the case. The pillow is oversized to ensure the best possible fit.**

Once roughly in, take your hand inside the fabric and adjust the corners of pillow to match the corners of the fabric.





Zip up the pillow, the zipper will be tight. You can pull the zipper together and push down the fill to help with this process.

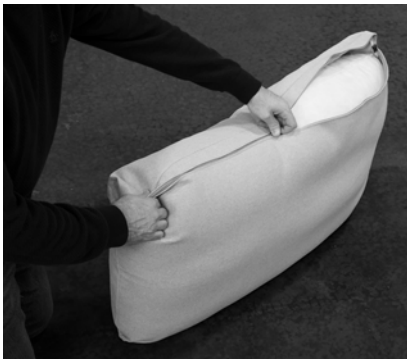




We recommend holding the pillow on the side with the most filling, and shaking it around to fluff. This helps the filling reach all corners of the fabric.

The back pillow can now be placed on the back of the unit.



Congratulations! This completes the assembly of the wide armless unit.

FRAME ASSEMBLY

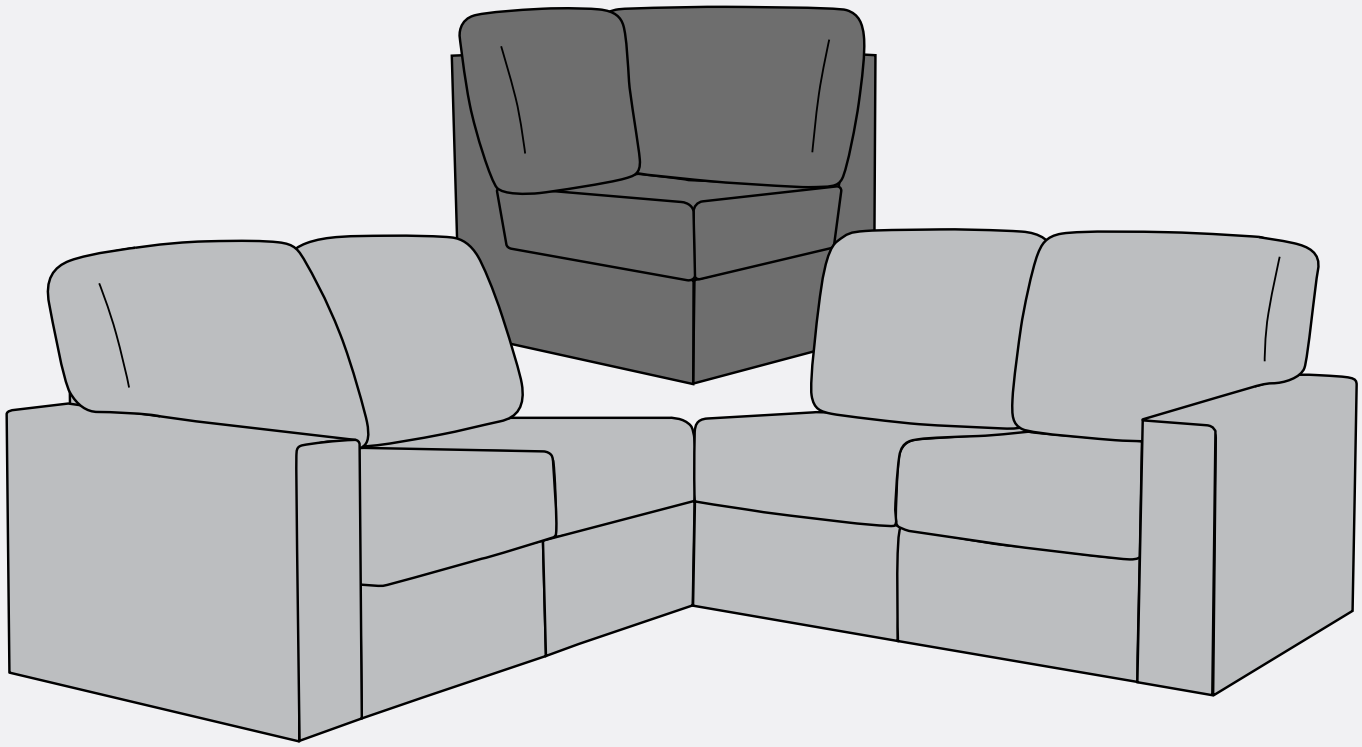


DEEP SEAT CORNER

Instructions for all pillow back styles: Ali, Ava, Brynn, Ezra, Laney, Millie, Tux

Before you begin


Open the first box. Remove the foam and fabric. You can set these aside. Piece 9 and the Seat Lid (pieces 10 & 11) will be in the second box and will be used later on in the fabric dressing process.

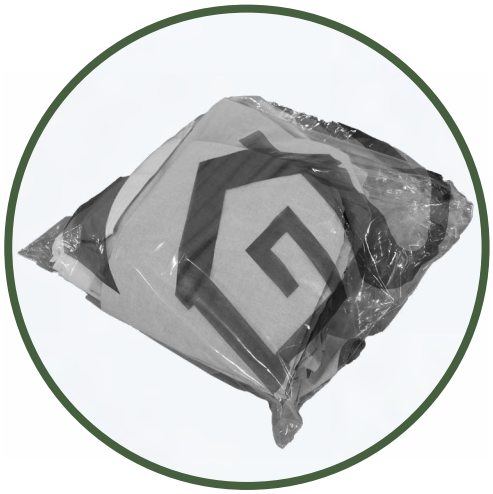


Fabric Bag



Foam Bag

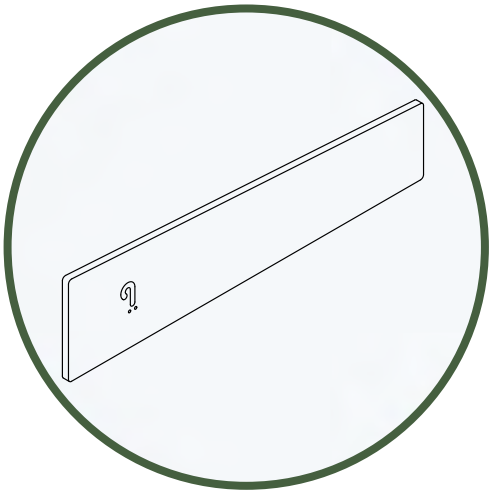


Piece 9

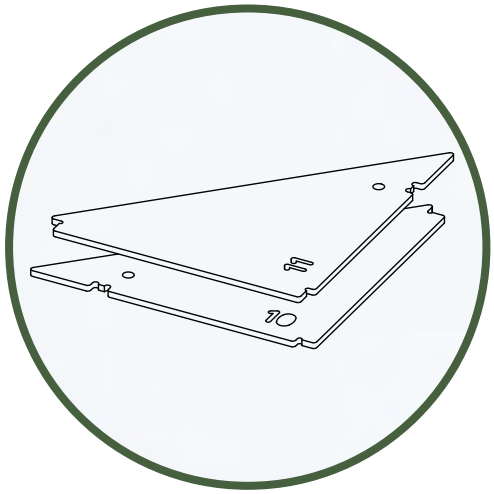


Seat Lid
(Pieces 10 & 11)

Corner units ship in two boxes. Once you have used all of the frame pieces in the first box, open the second for additional frame pieces.

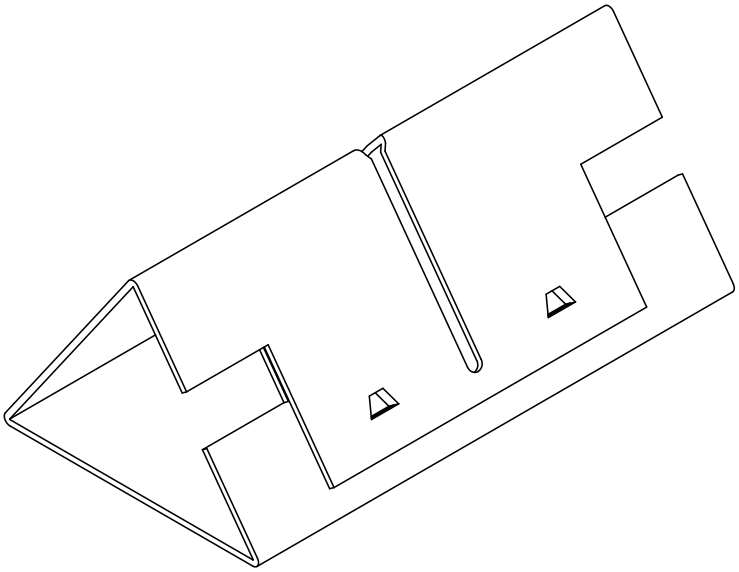


Follow the instructions on the Assembly Aid to fold it into a triangle.

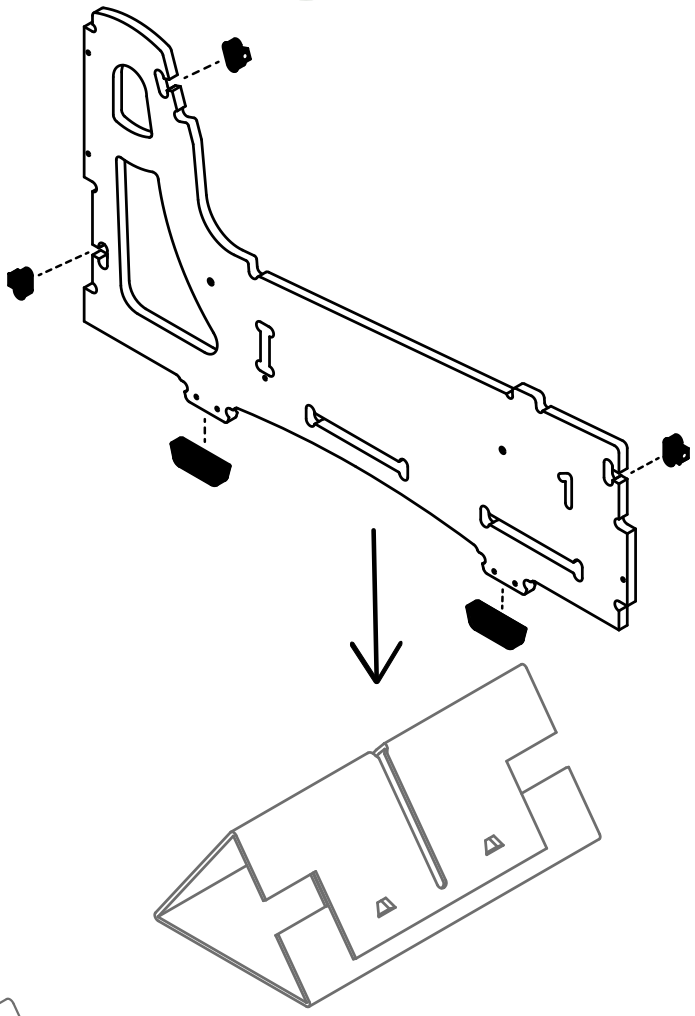


1

Find piece 1 and insert three T-Connectors into the slots shown. Hammer them in if needed. Fit will be snug.

Slide piece 1 down into the Assembly Aid to hold it upright.

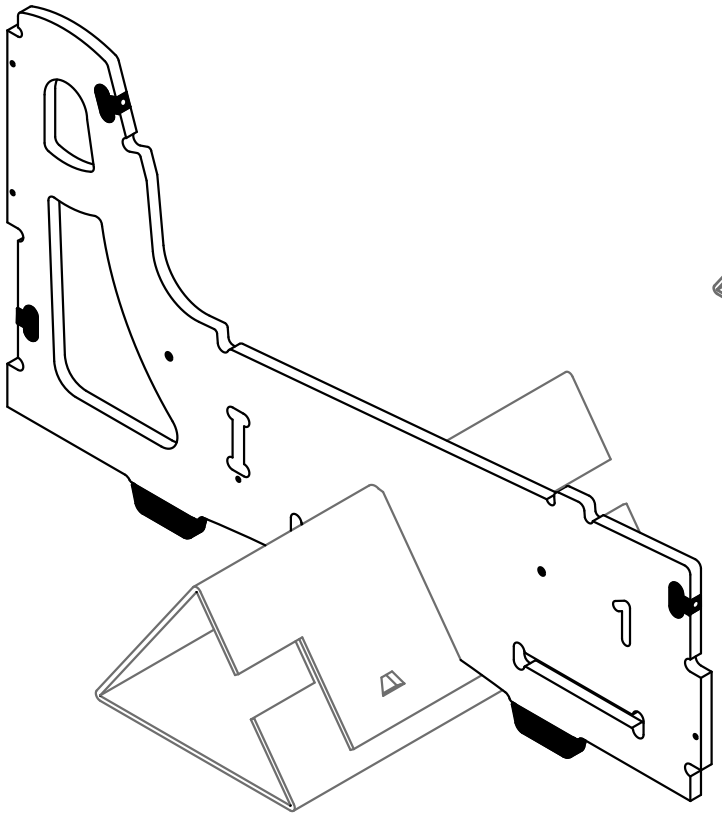


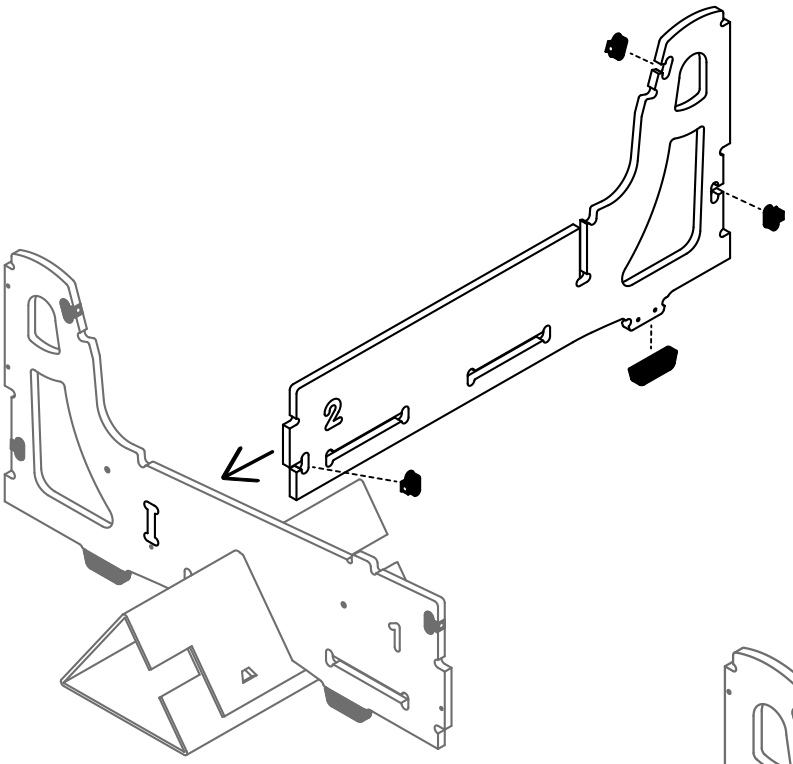

2


Take out piece 2. Insert three T-Connectors and a Foot Glide as shown

Fit piece 2 into piece 1 and secure with one screw.

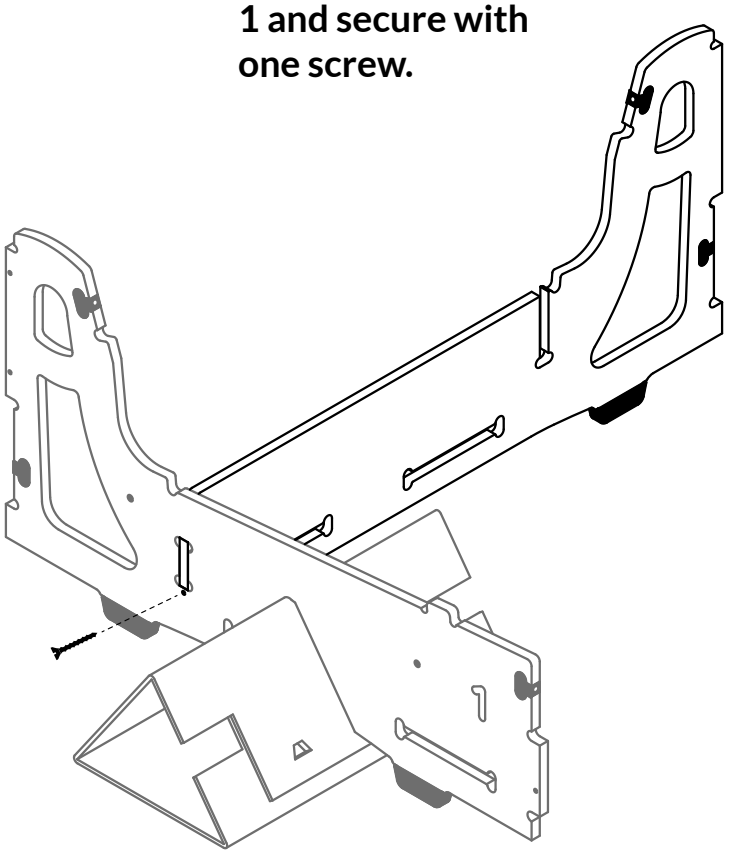



3

Remove piece 3. Similar to step 2, insert three T-Connectors and two Foot Glides.

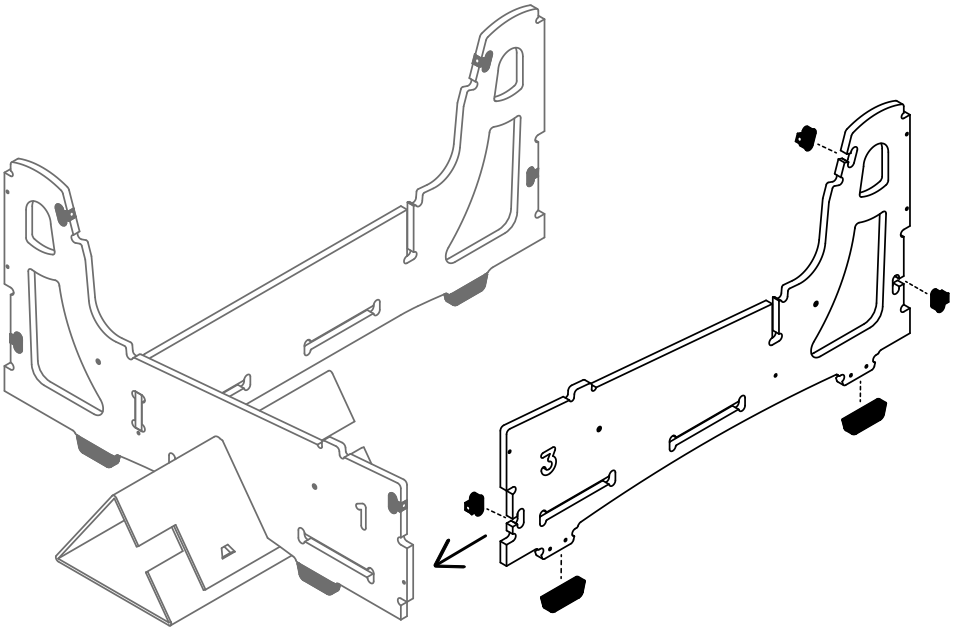

Attach to piece 1 and secure with two screws.
You can now remove the Assembly Aid.

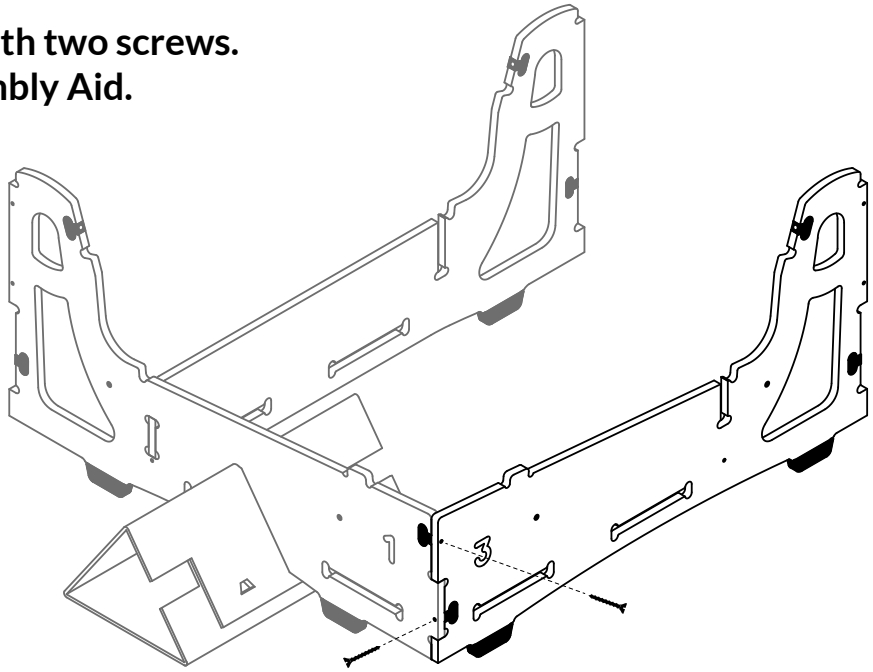


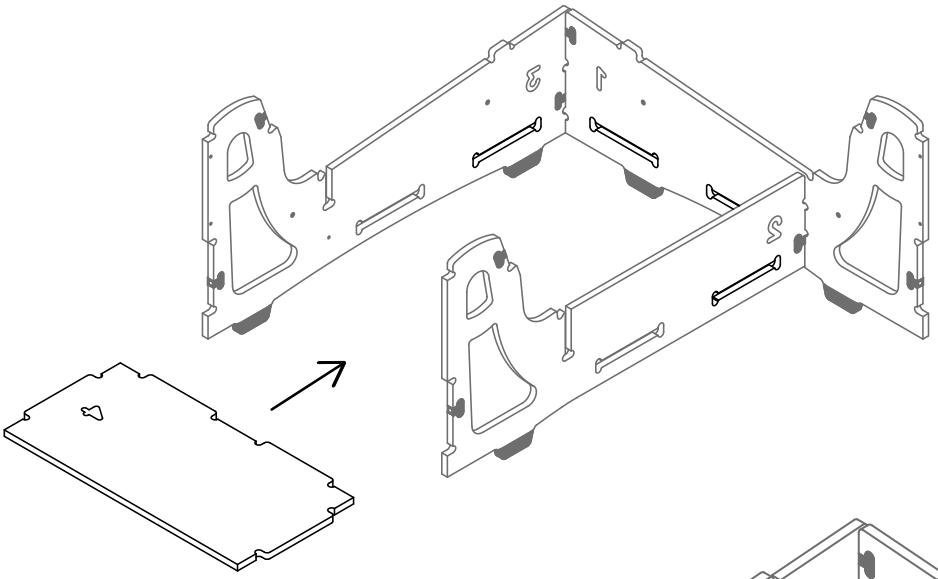


4

Piece 4 will slot into piece 1 between pieces 2 and 3. The frame will bend a bit. That's okay.

No screws needed.

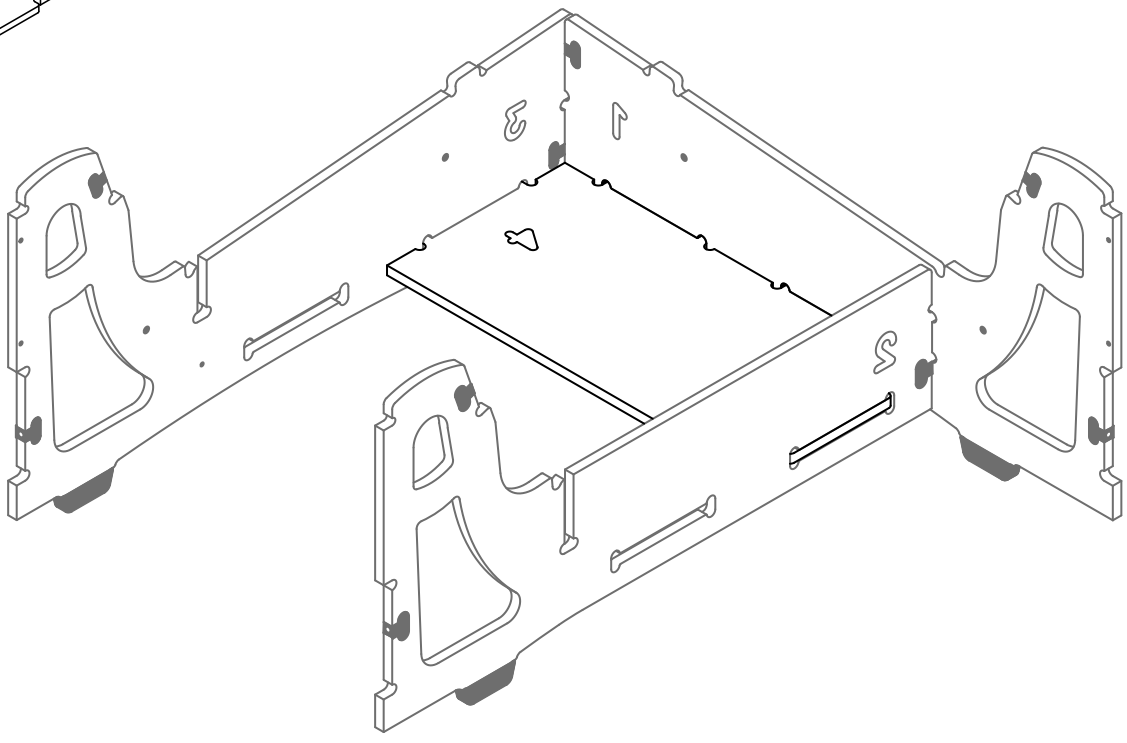


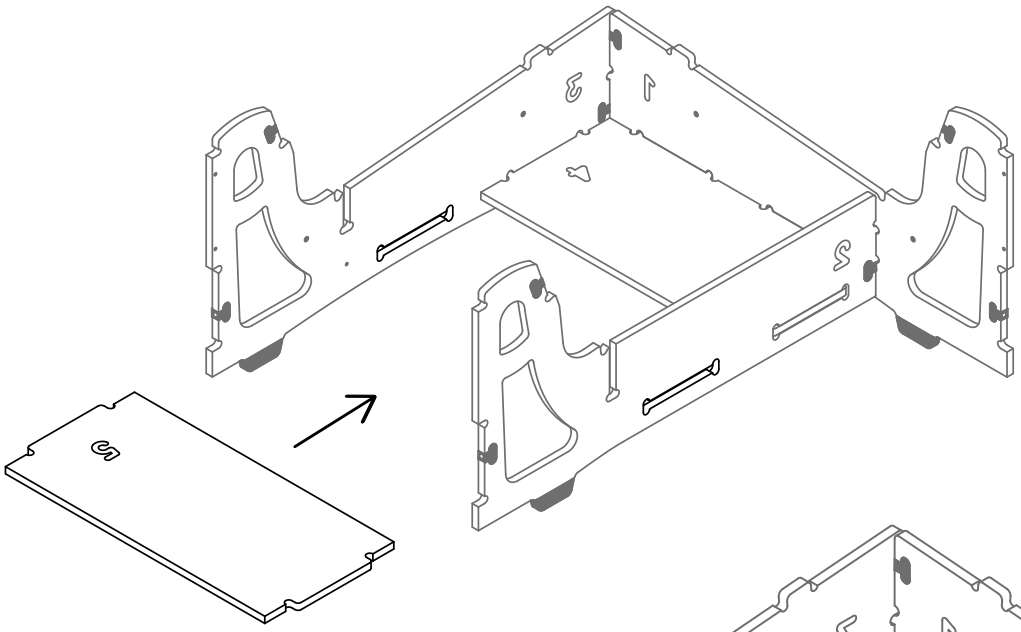


5

Right behind piece 4, piece 5 will slot into pieces 2 and 3. The frame will still bend a bit as you put it in, that's okay.

No screws needed.

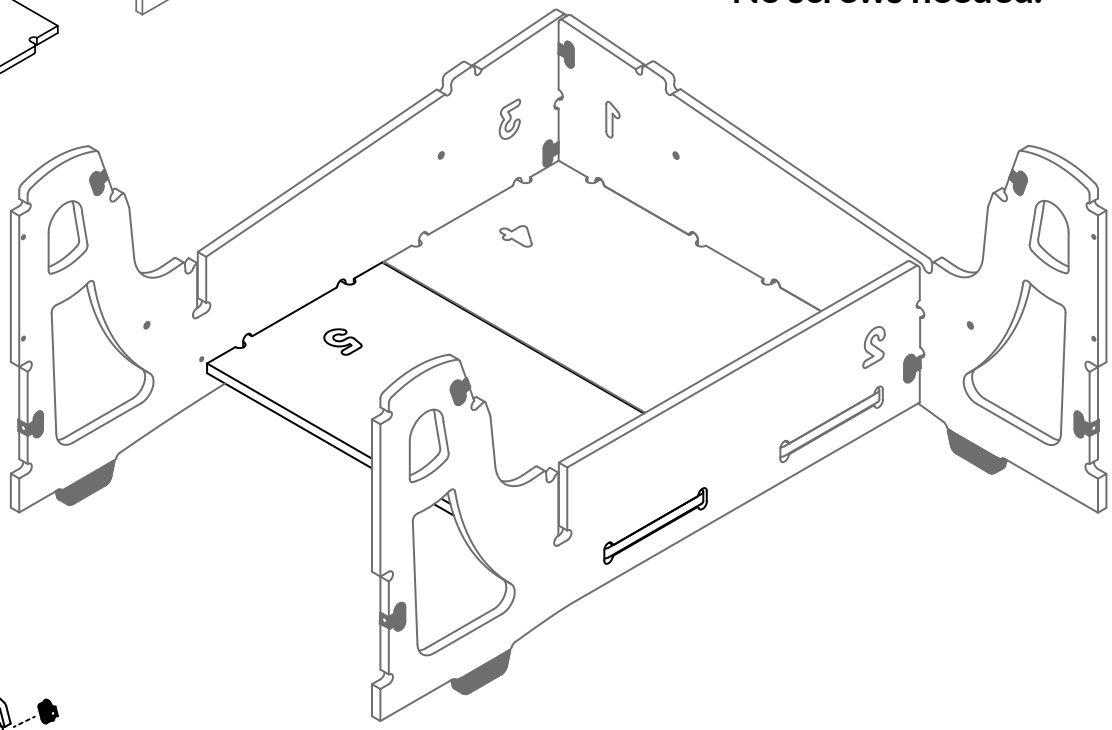


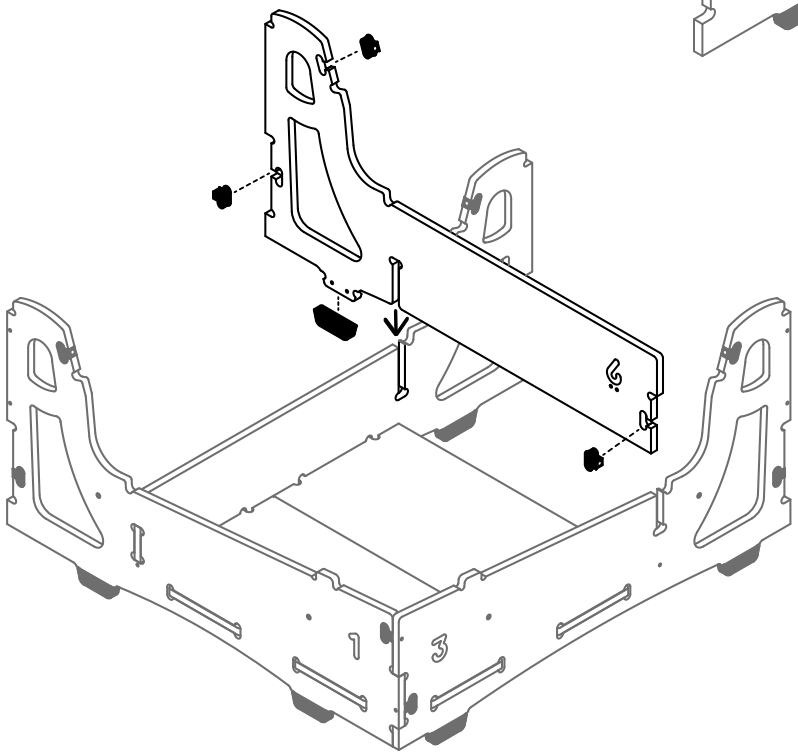


6

Insert three T-Connectors and one Foot Glide into piece 6. Piece 6 will slot into place between pieces 2 and 3.

Secure with one screw.

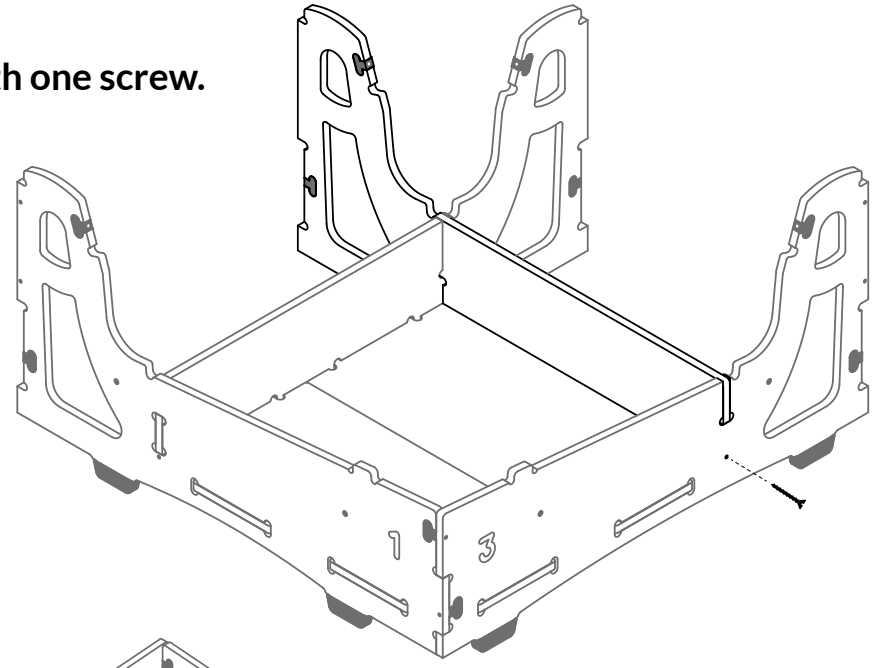


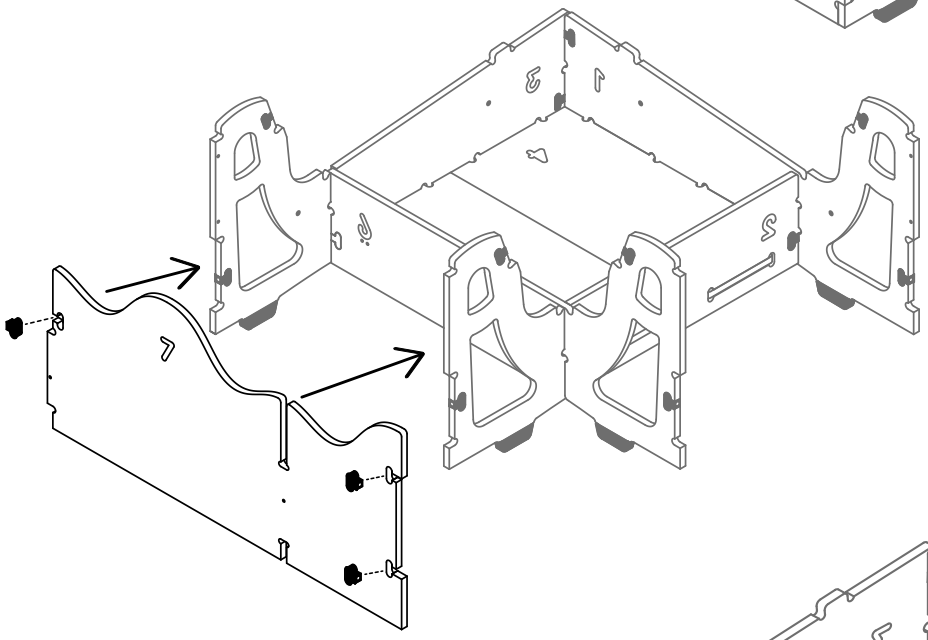


7

Insert three T-Connectors into piece 7. With the smooth side facing out, slot into piece 2 and 3 as shown.

Secure with 3 screws.

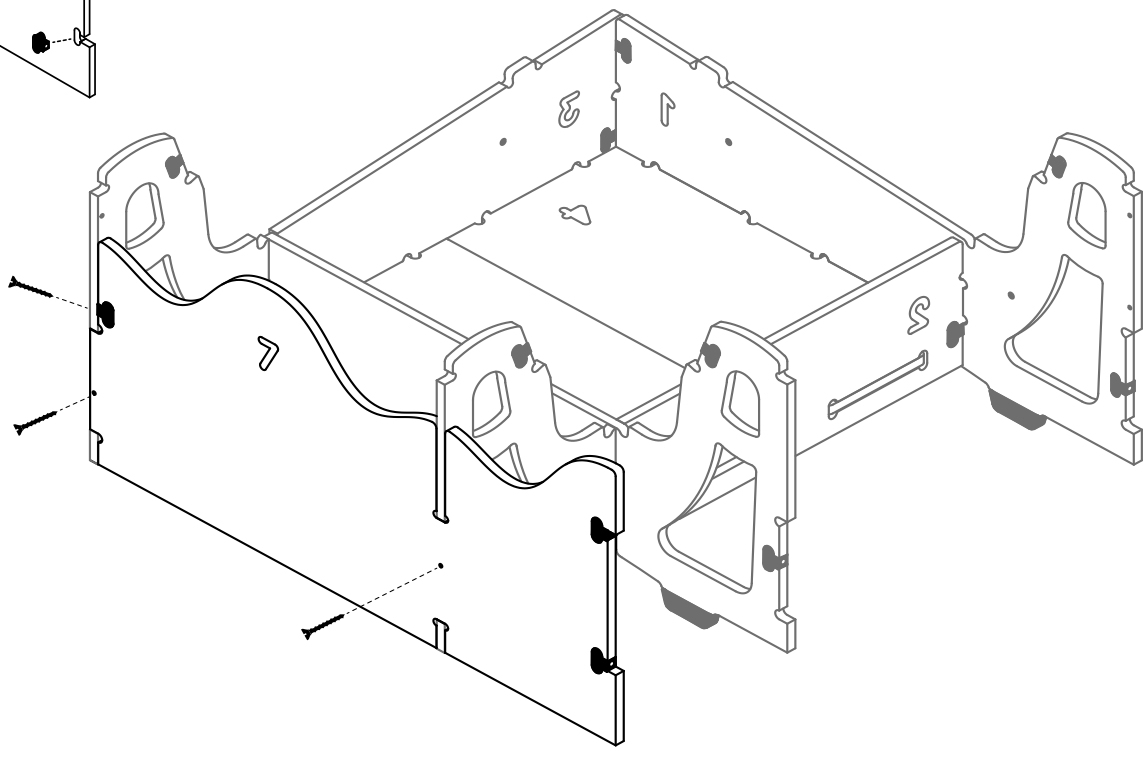

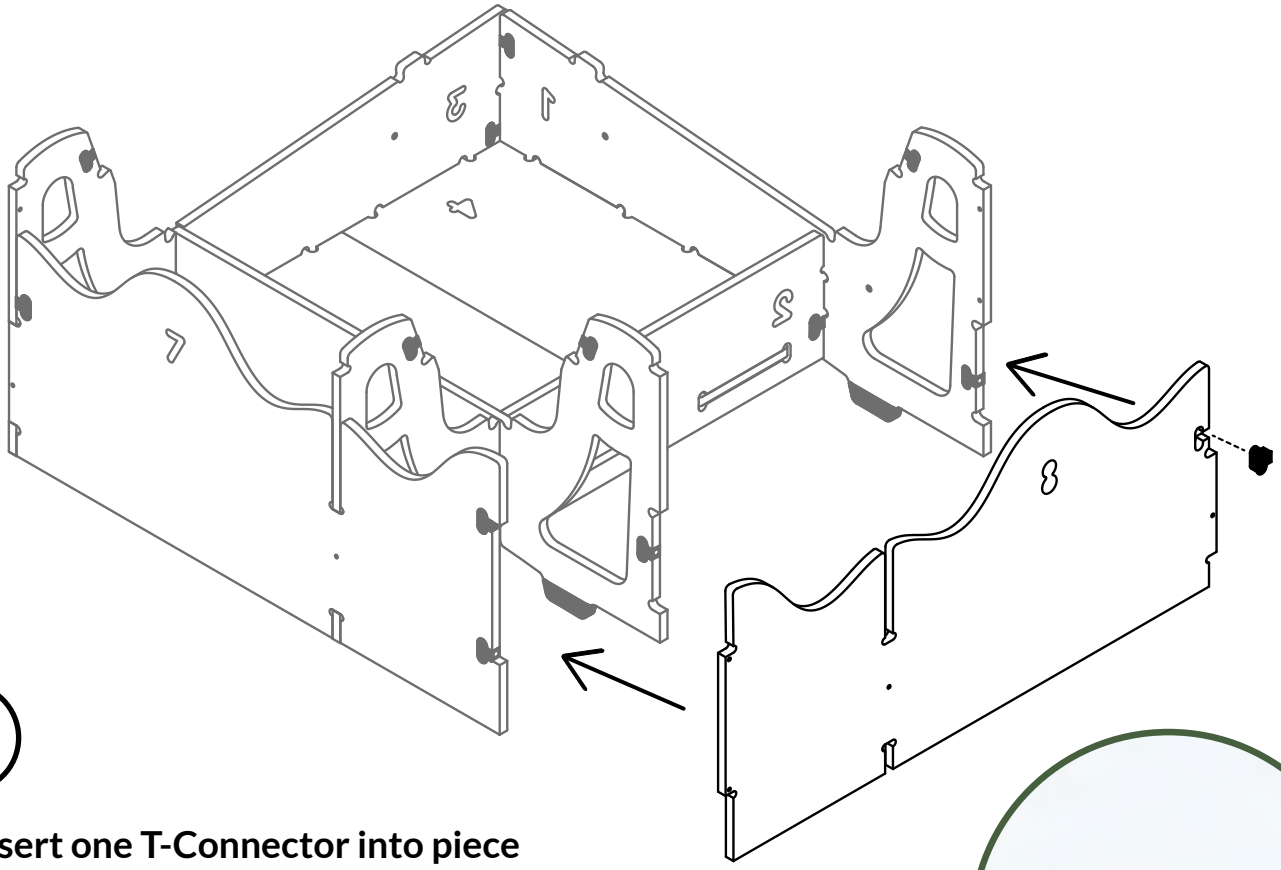



8

Insert one T-Connector into piece 8. With the smooth side facing out, slot into pieces 1, 6, and 7.

Secure with five screws.

This completes the assembly of the frame base!

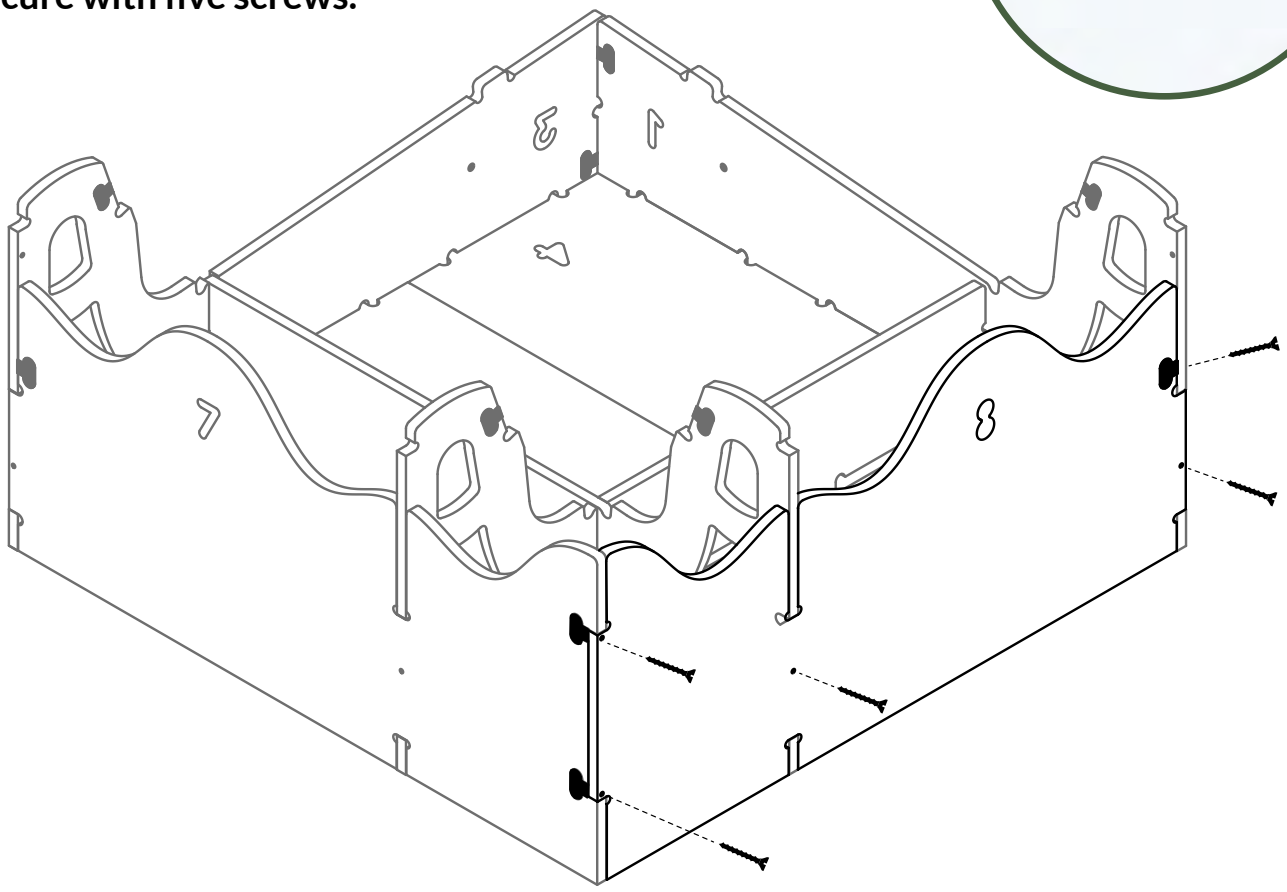

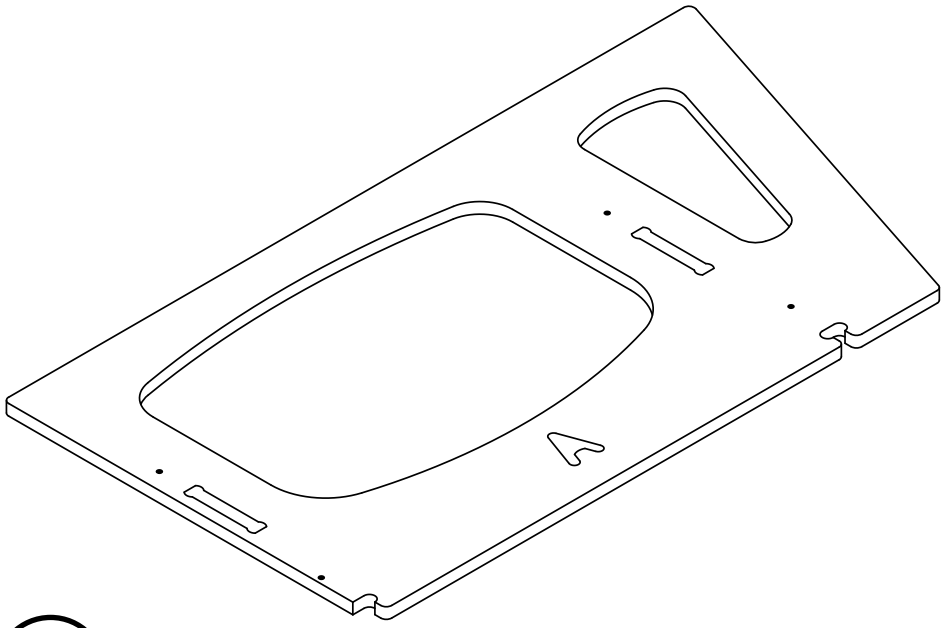

Now, let's start assembling the top of the frame.


These are the lettered pieces.


9


Find pieces A and B. Place piece A on the floor with the smooth side facing down.

Insert two T-Connectors into piece B.

With the smooth side facing out, slide the lower tab on piece B into the slot on the left side of piece A.

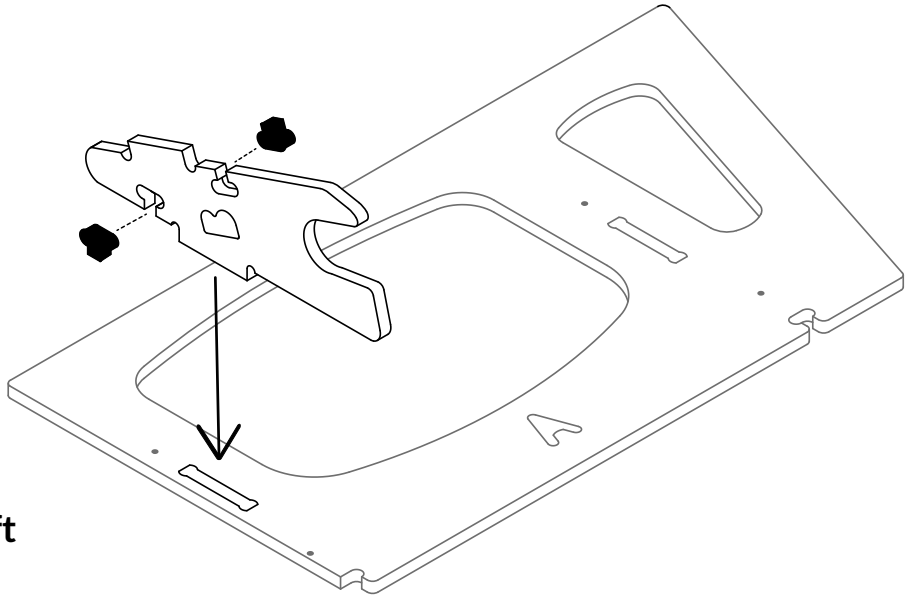

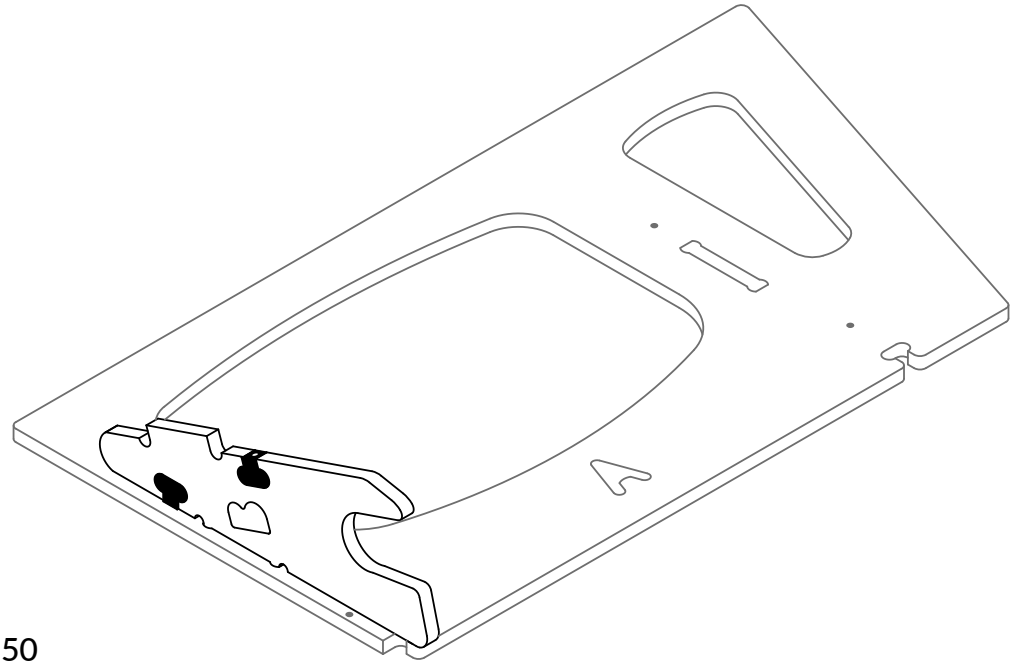

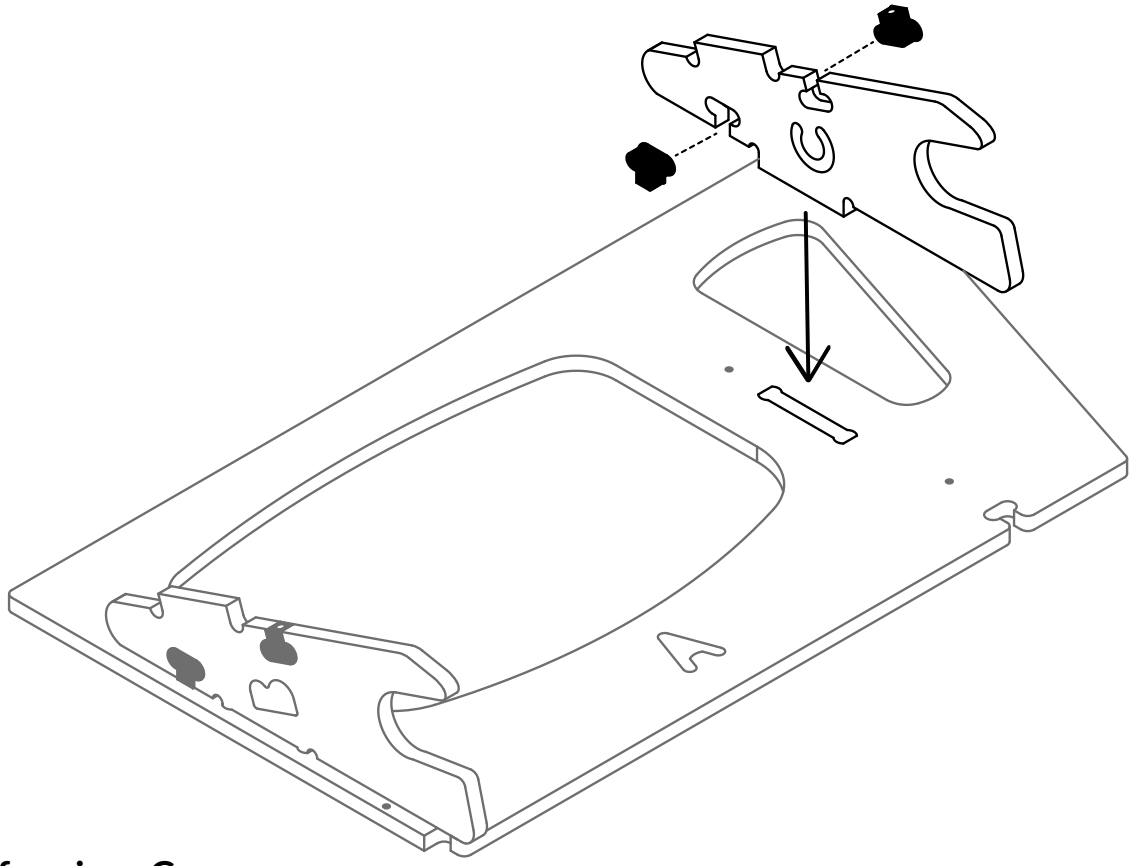



10

Do the same for piece C.

Insert two T-Connectors into piece C.

With the smooth side facing out, slide the lower tab on piece C into the slot on the right side of piece A.

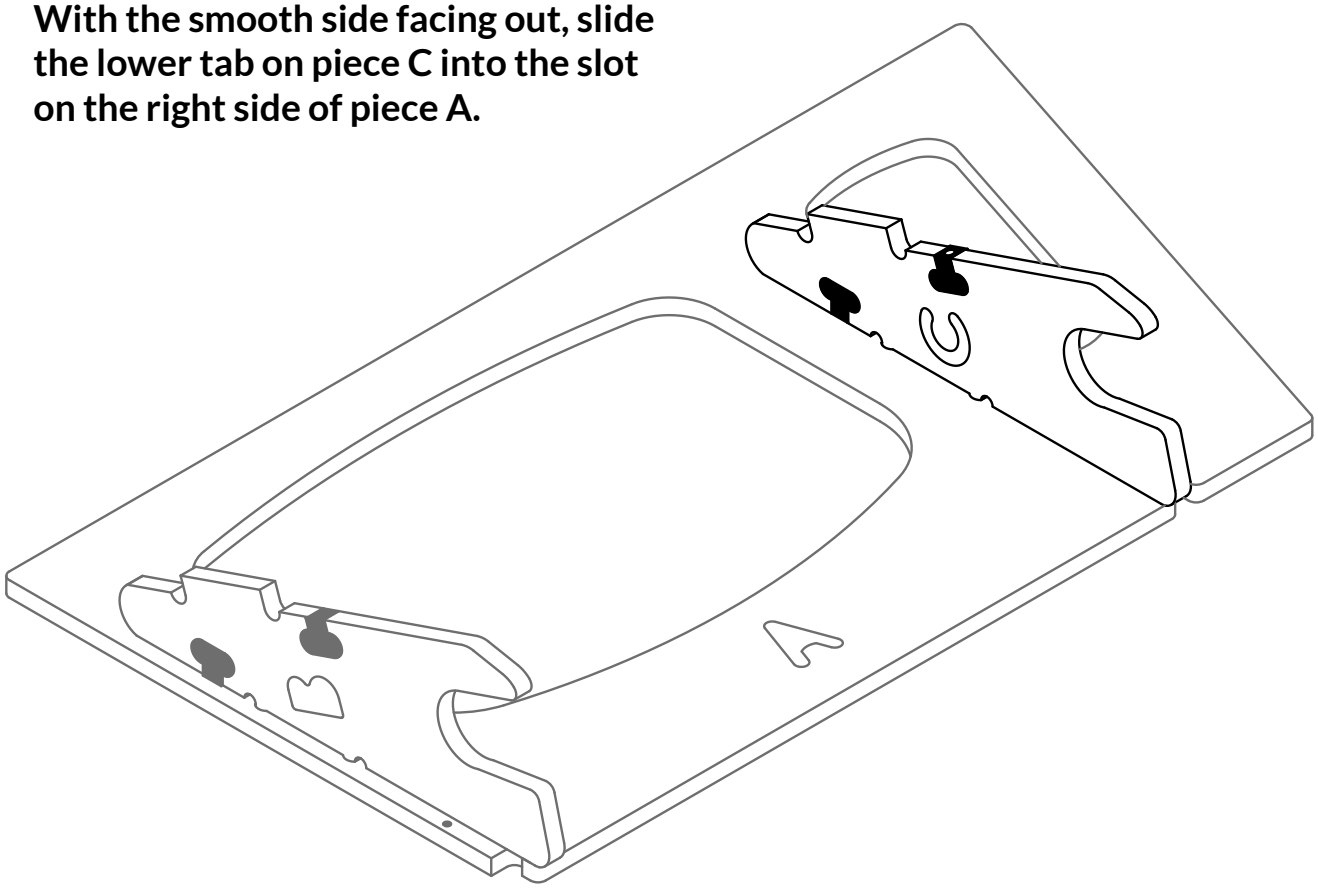

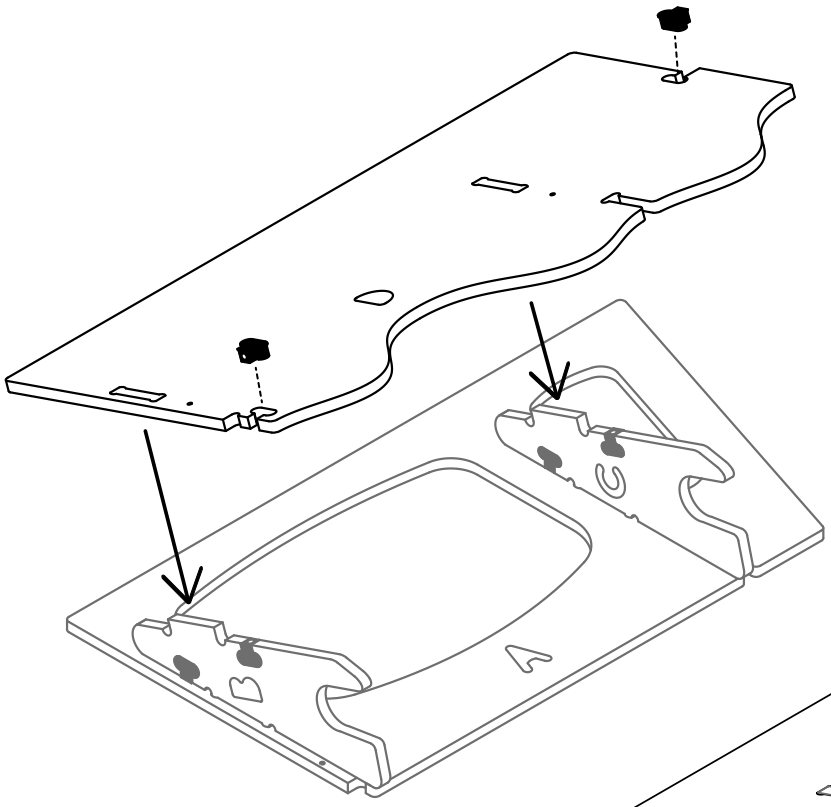


11

Insert two T-Connectors into piece D.


With the smooth side of piece D facing out and up, slide the upper tabs on pieces B and C into the slots on piece D.


Secure piece D with two screws.

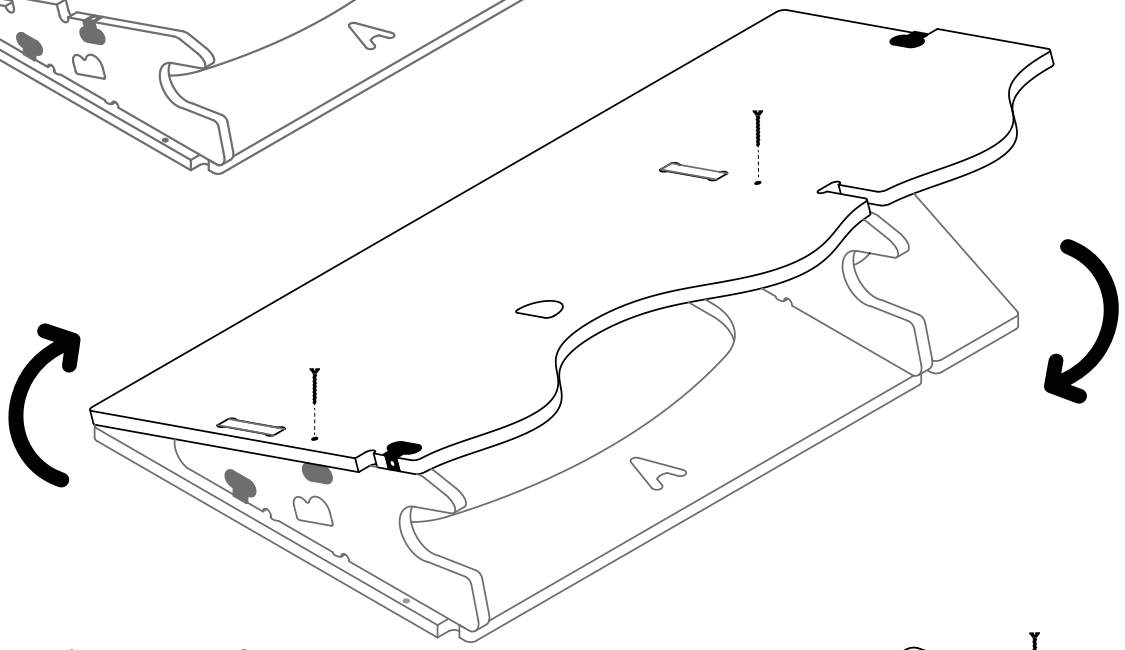

Flip entire unit over, and secure piece A with two screws.

Part A might disconnect from the other pieces. That's okay! Just re-slot it into position and screw it into place.

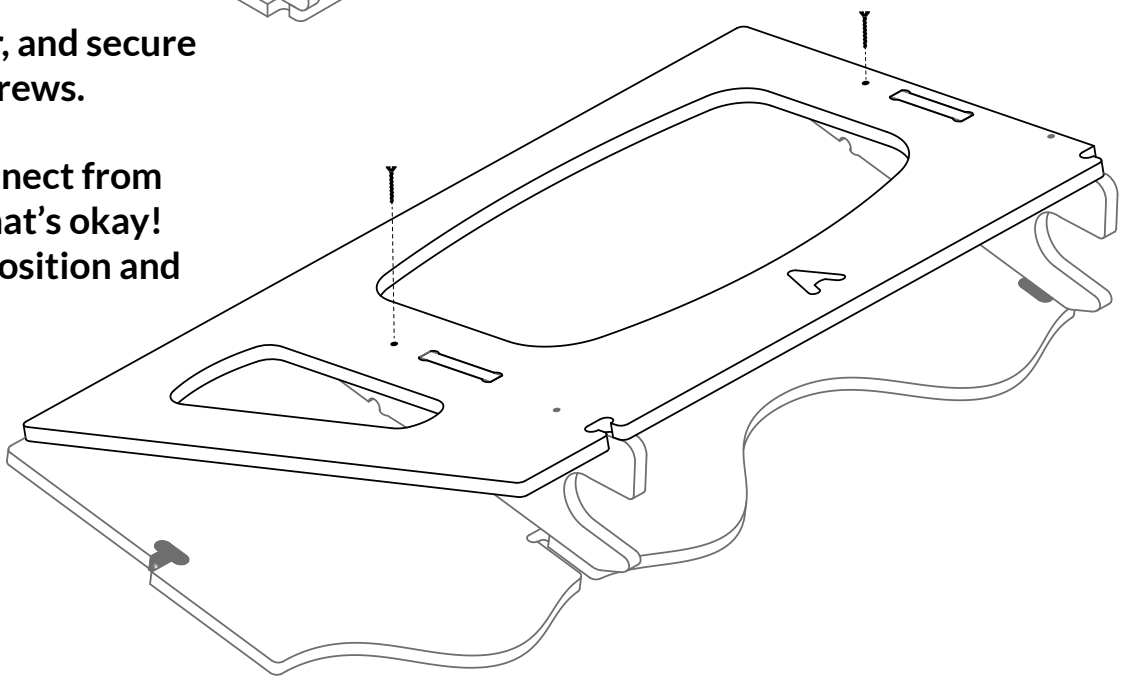

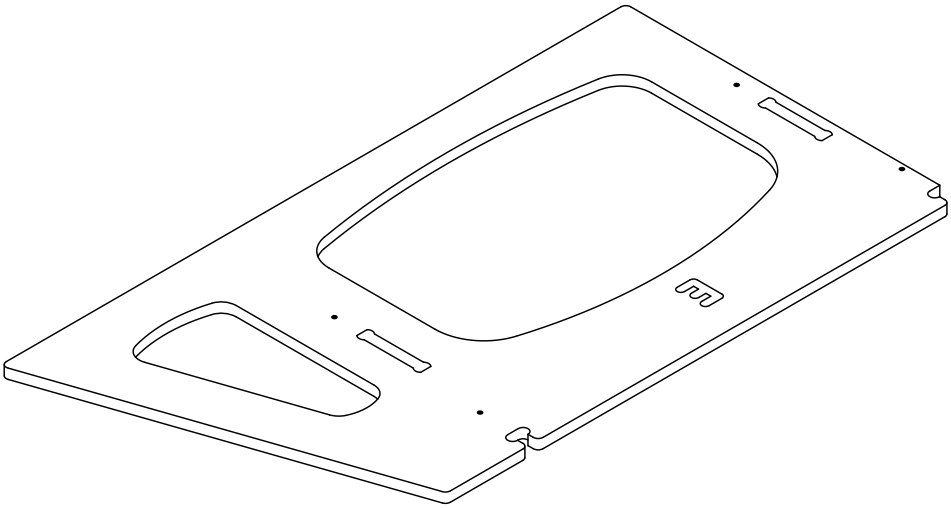



12


Find pieces E and F. Place piece E on the floor with the smooth side facing down.

Insert two T-Connectors into piece F.

With the smooth side facing out, slide the lower tab on piece F into the slot on the right side of piece E.

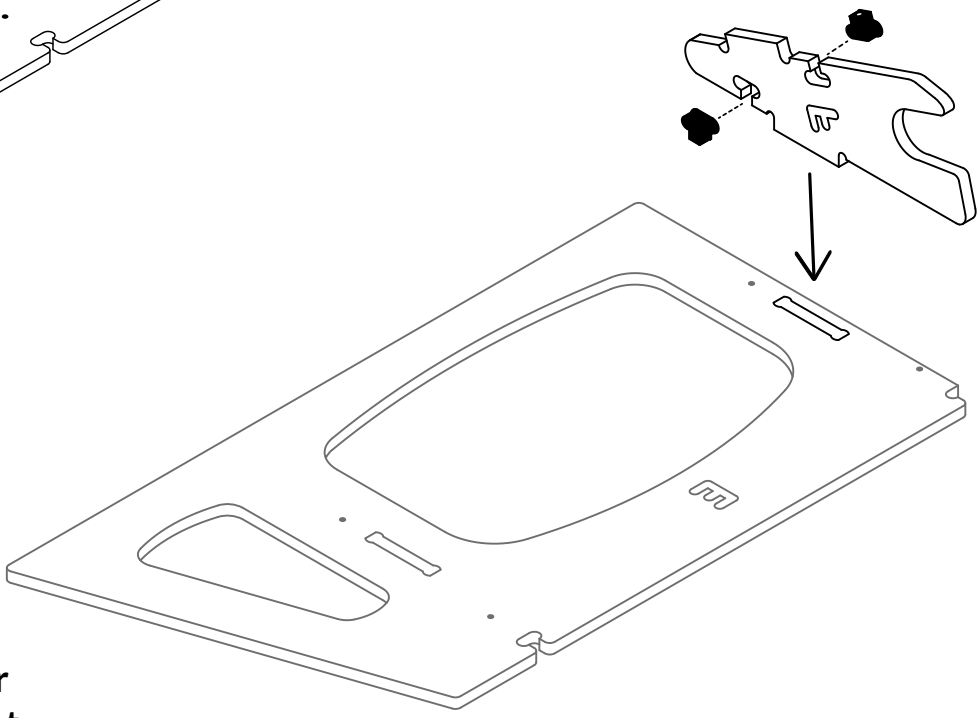

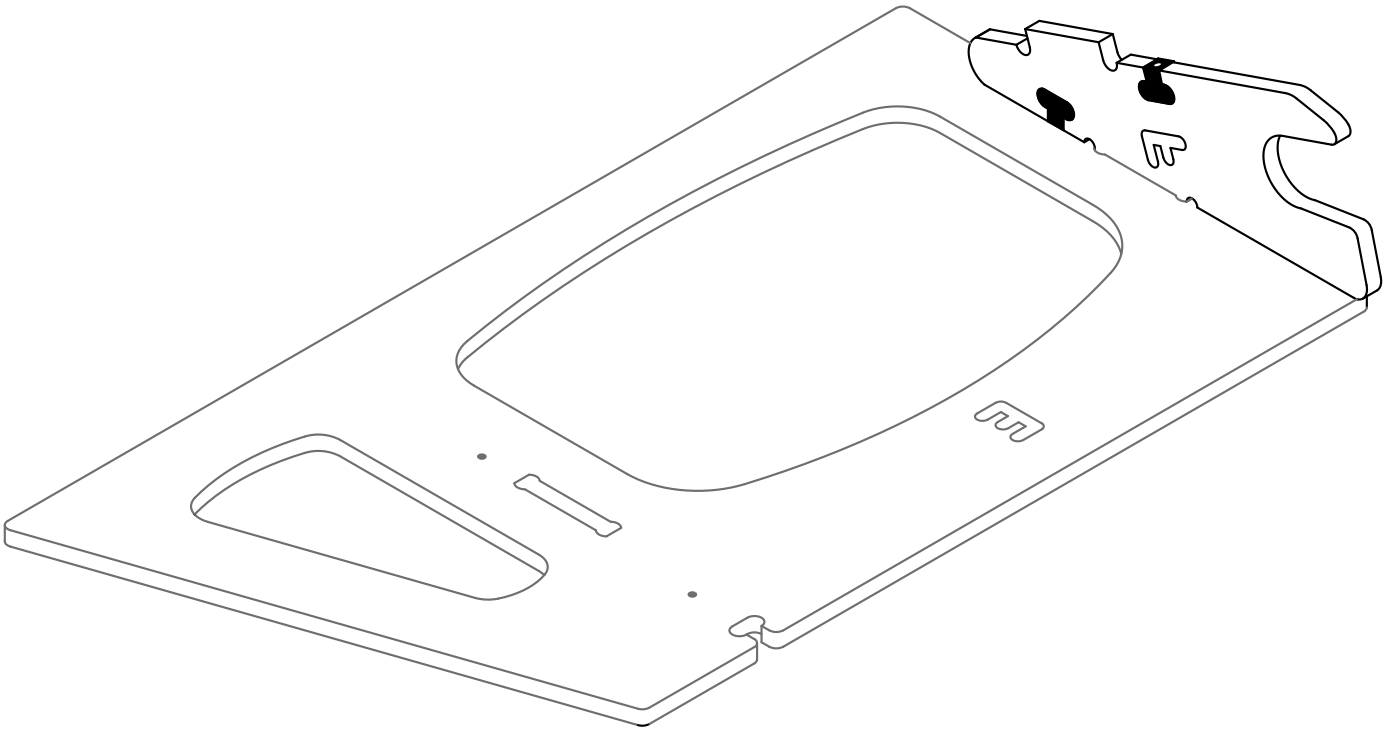


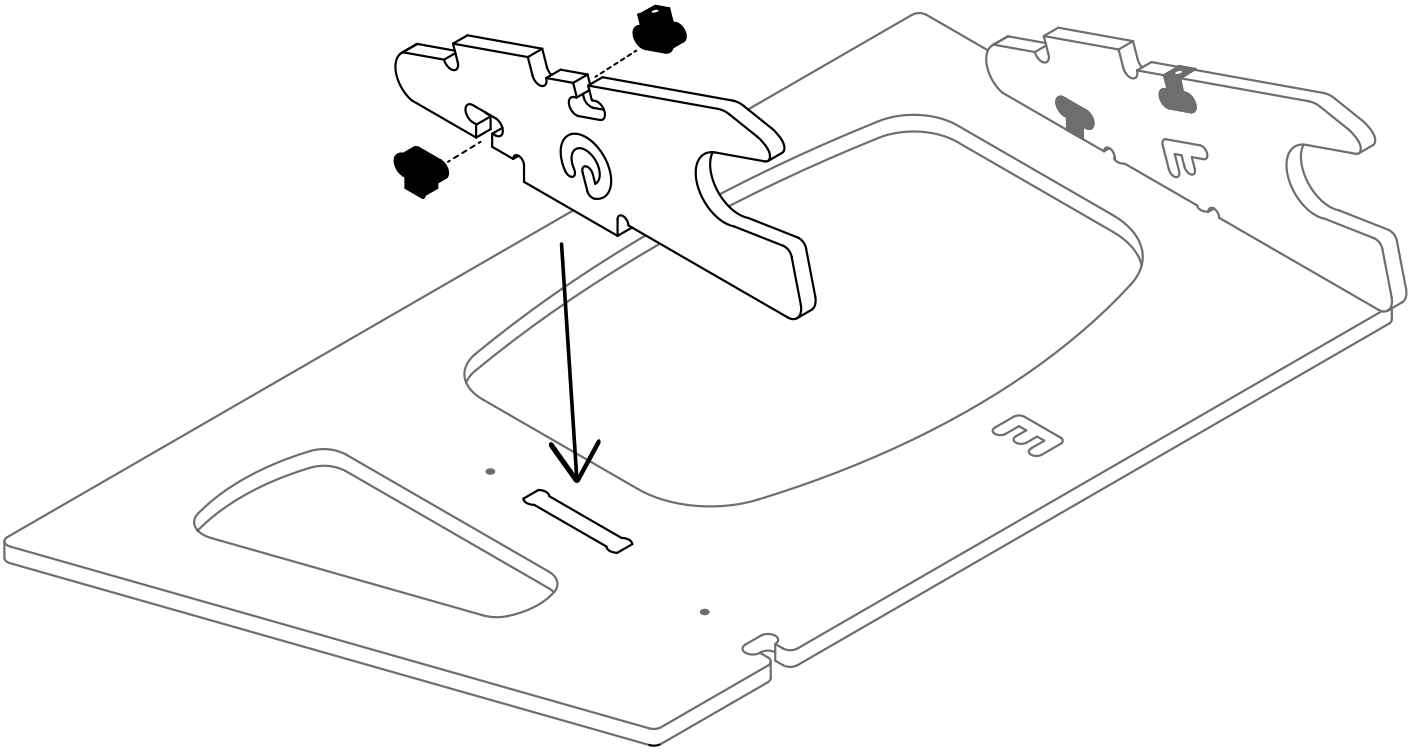


13 **Do the same for piece G.**

Insert two T-Connectors into piece G.

With the smooth side facing out, slide the lower tab on piece G into the slot on the left side of piece E.

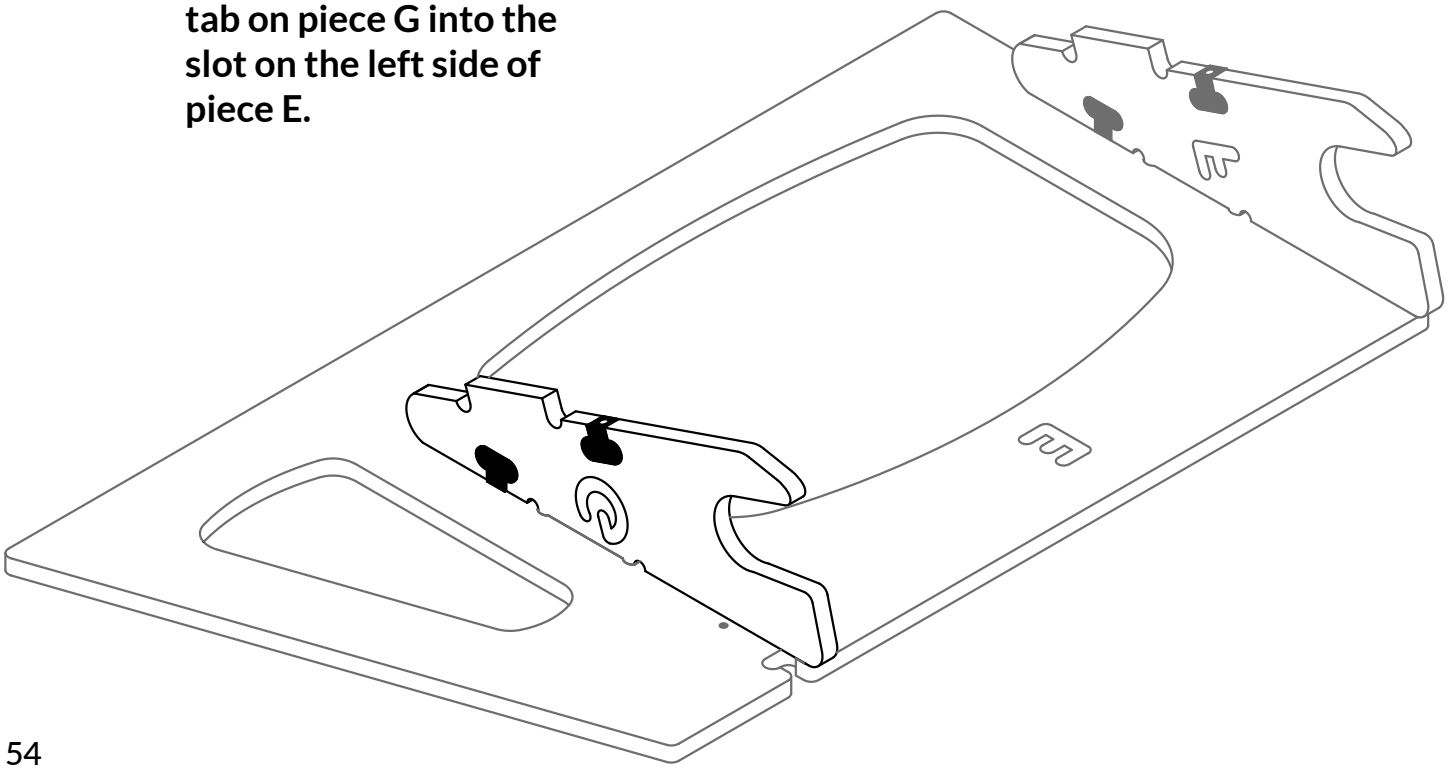

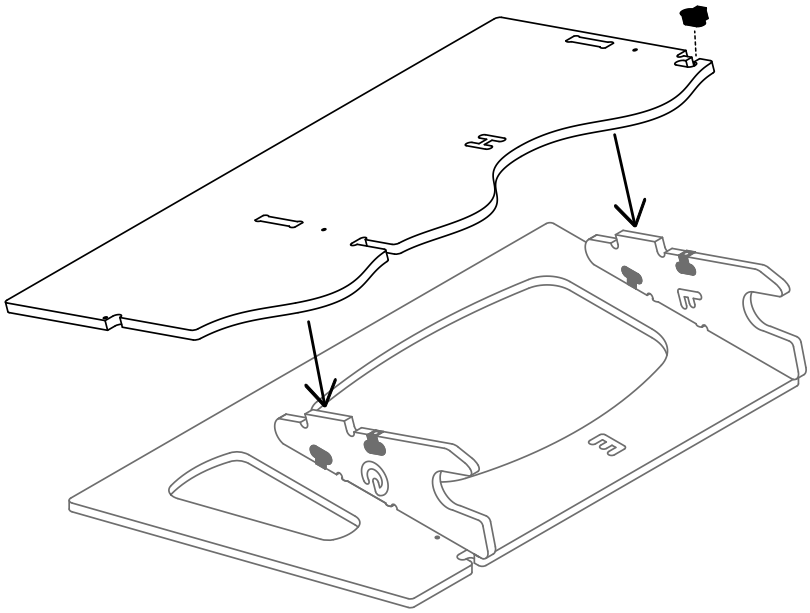


14

Insert two T-Connectors into piece H.


With the smooth side of piece H facing out and up, slide the upper tabs on pieces F and G into the slots on piece H.


Secure piece H with two screws.

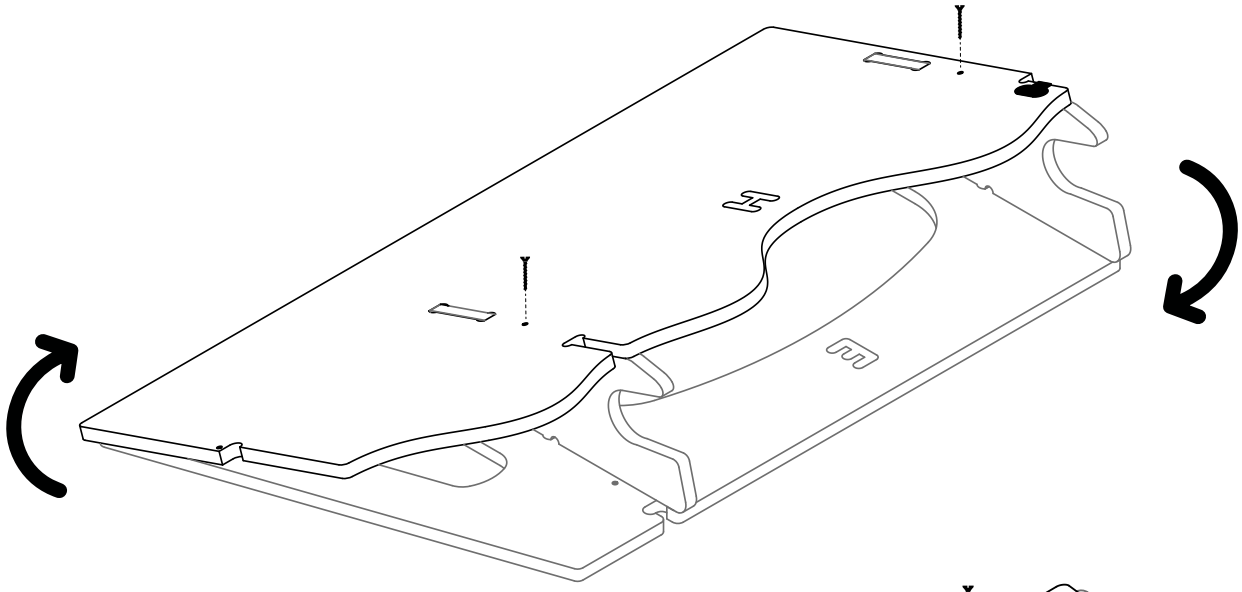

Flip entire unit over, and secure piece E with two screws.

Part E might disconnect from the other pieces. That's okay! Just re-slot it into position and screw it into place.

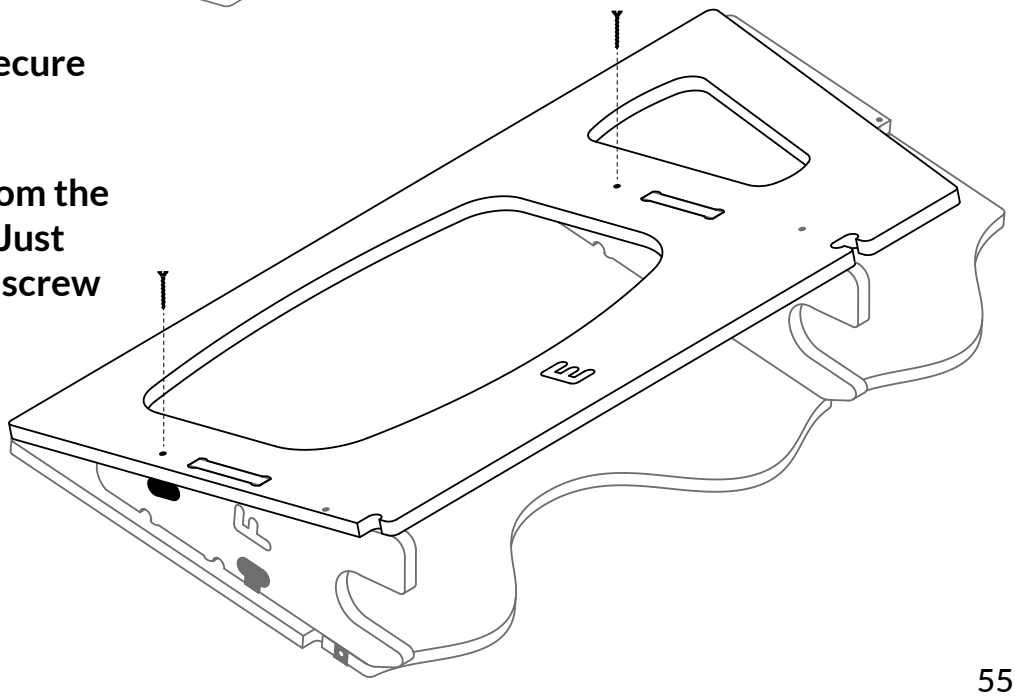


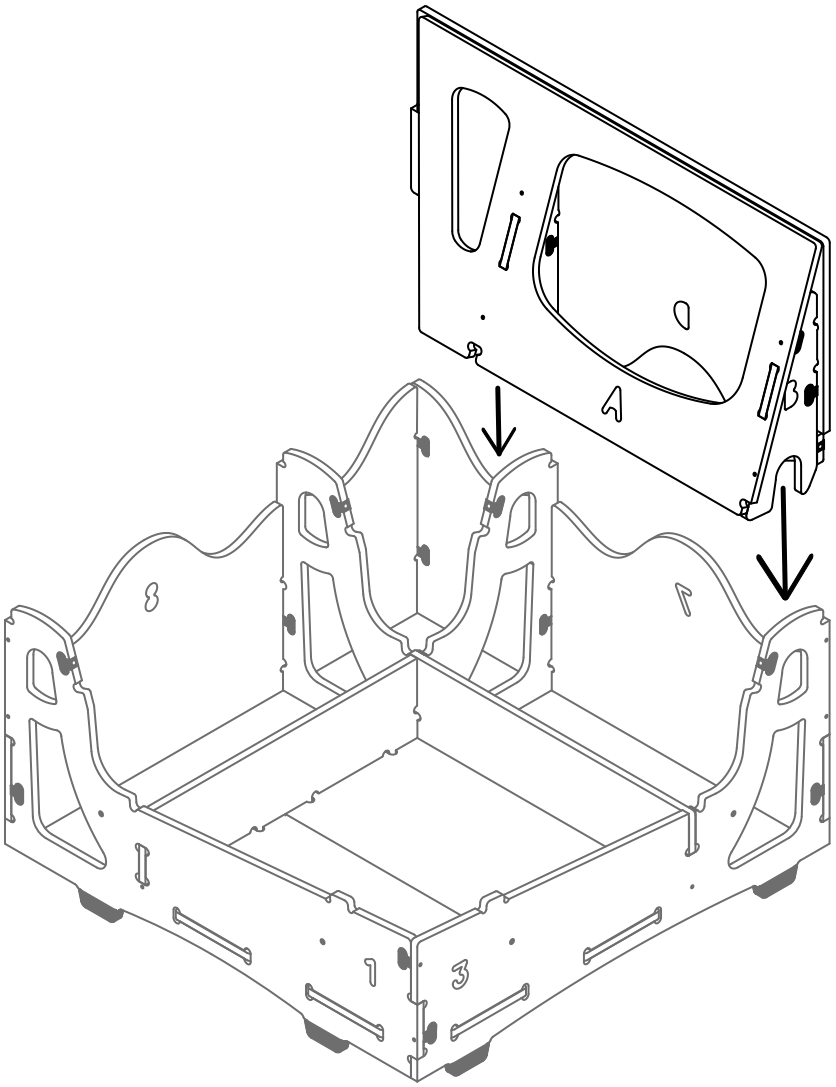


15

Slide the first top of the frame onto the base of the frame. Pieces B and C should be on the inside of pieces 2 and 3.

Secure with three screws.

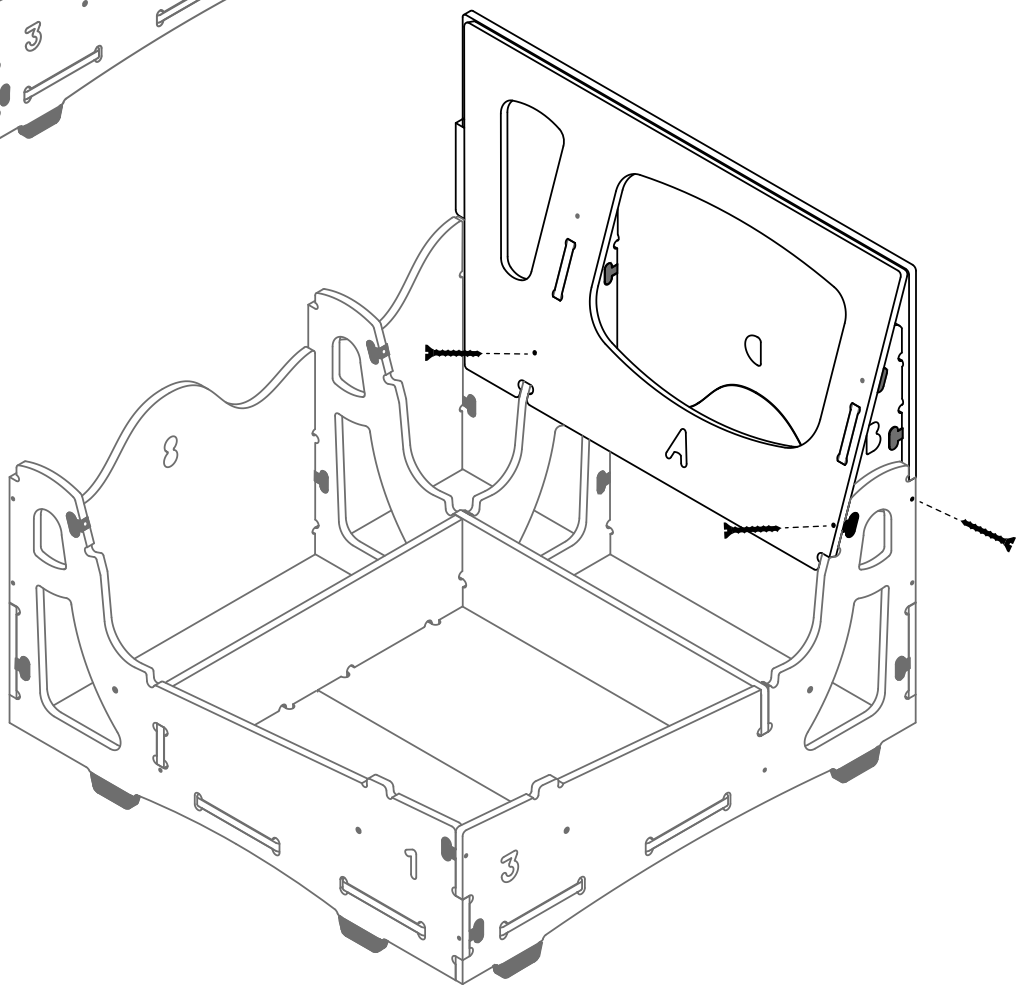


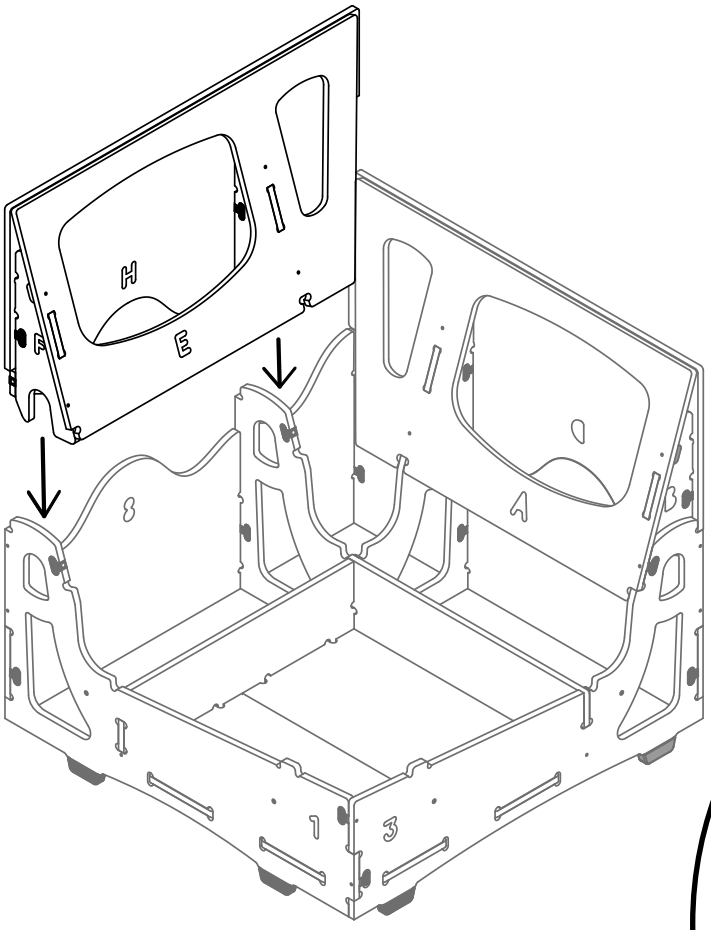


16

Slide the second top of the frame onto the base of the frame. Pieces F and G should be on the inside of pieces 1 and 6.

Secure with four screws. Two in the front, one on the side and one on the back.

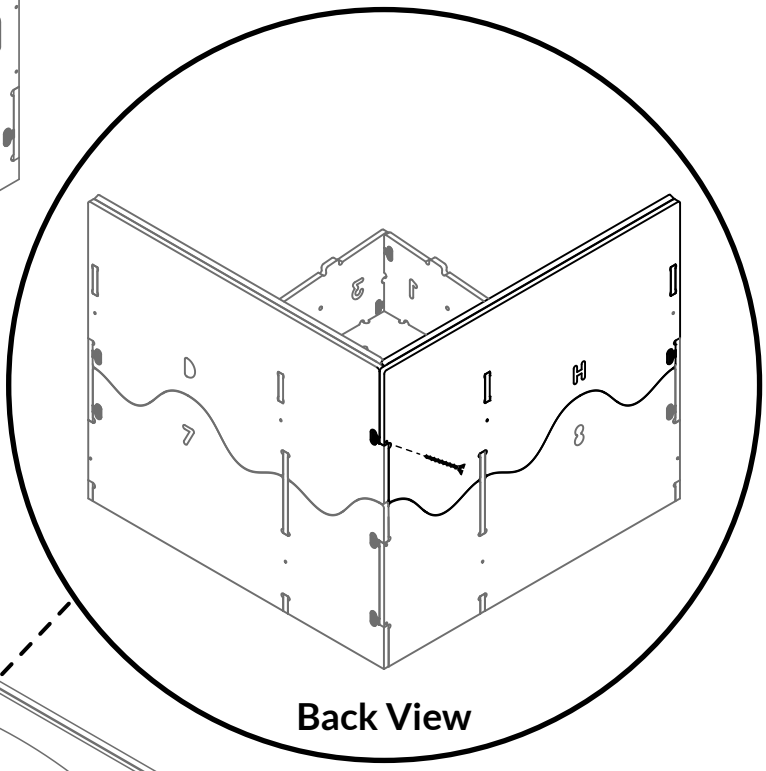

Back View

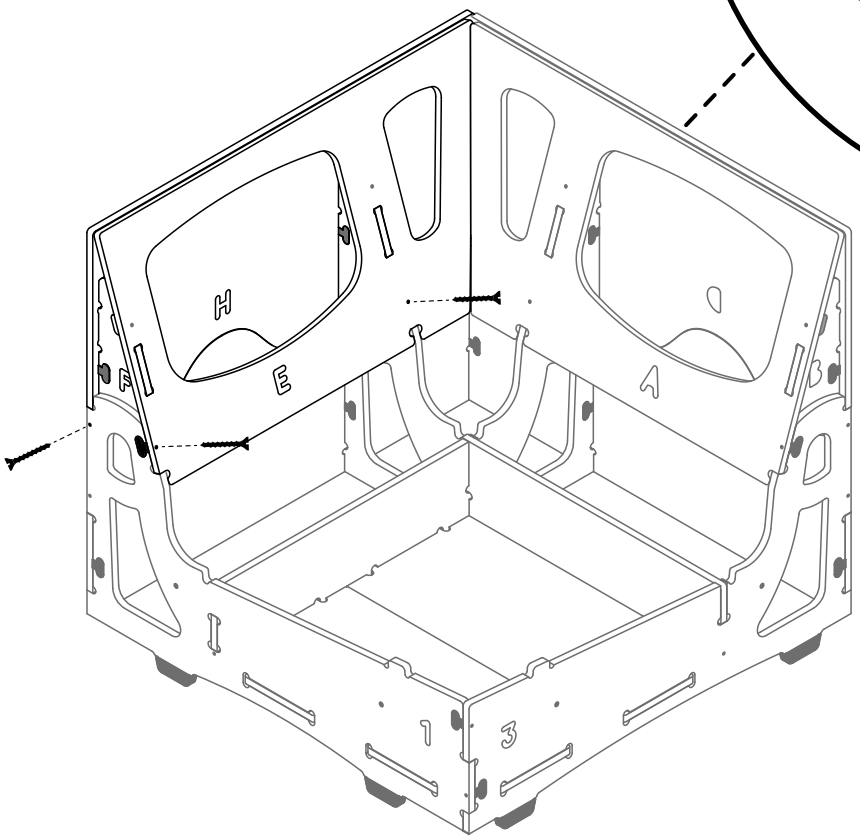


Yay! You're done with frame assembly.


FABRIC ASSEMBLY

We will now use the foam, fabric bag, piece 9, and the Seat Lid we set aside earlier. You will have two pieces of foam and four pieces of fabric, two with zippers and two without zippers. The fabric will come inside out. This is to protect it during shipping. Locate the zipper and pull gently to open the fabric.

We suggest cleaning your area before assembling fabric, this helps to keep the fabric fresh and looking great!

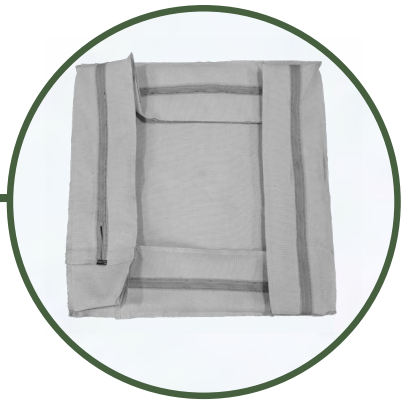

Seat Cushion Cover

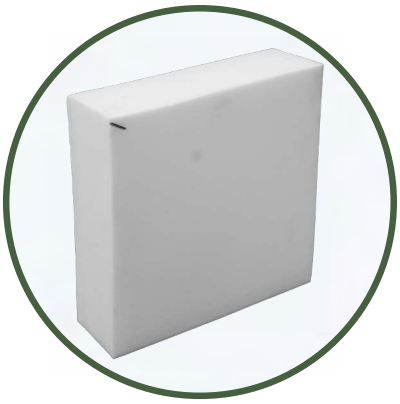

Seat Cushion



Small Back Pillow Cover



Small Back Pillow




Large Back Pillow Cover




Large Back Pillow



Frame Back Cover

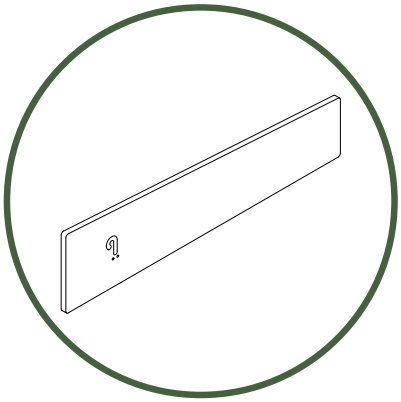


Piece 9

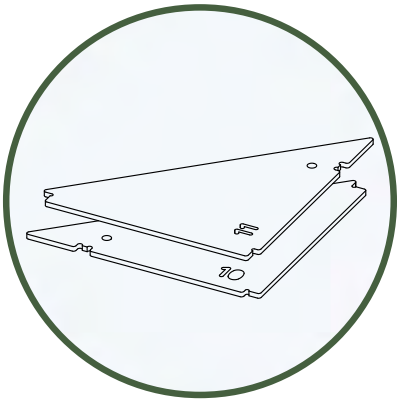

Seat Lid
(pieces 10 & 11)

1 **Find the Back Frame Cover. This is the big piece of fabric without a zipper.**

Stick your hands into the corners of the Back Fabric. Aligning the corner of the fabric to both ends of the frame. Flip the fabric onto the frame and begin to line up each corner of the fabric to each corner of the frame.

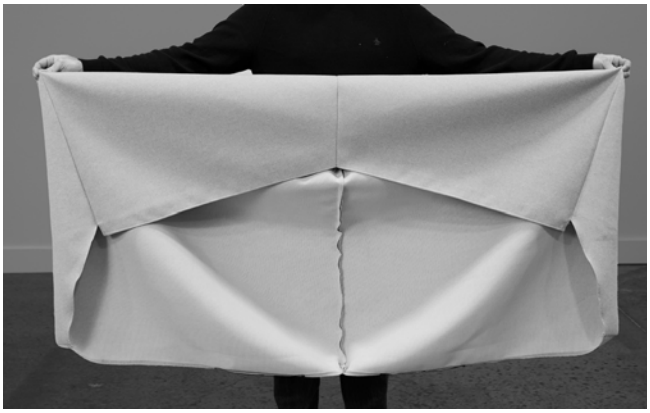





Move back and forth between the three fabric corners until it lines up with the three frame corners. Then pull down to ensure the fabric is snug on the frame.









2 **Once the fabric is on the top part of the frame, tip the unit up on one side. Pull the fabric over the center corner first, then pull the fabric over the outside corner.**







Reach under the fabric, directly above the Foot Glide, to find an elastic strap, pull this down and secure it to the Foot Glide.





Set the frame back on its feet and tip the unit up on the opposite side, the one without the attached corner. Pull the remaining outside corner over the frame.








Just like before, reach under the fabric, directly above the Foot Glide to locate the elastic strap. Pull it down and secure it to the Foot Glide.
At the end it should appear as shown below.



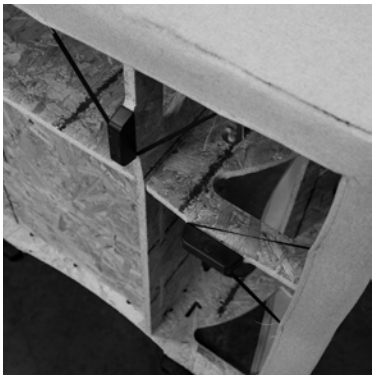


3

Sit the frame upright.

Grab piece 9 that was set aside earlier and insert it diagonally into the square storage space as shown below.

Get pieces 10 and 11 that were also set aside earlier and slot them into place over piece 9 and the storage space. These are the seat lids.



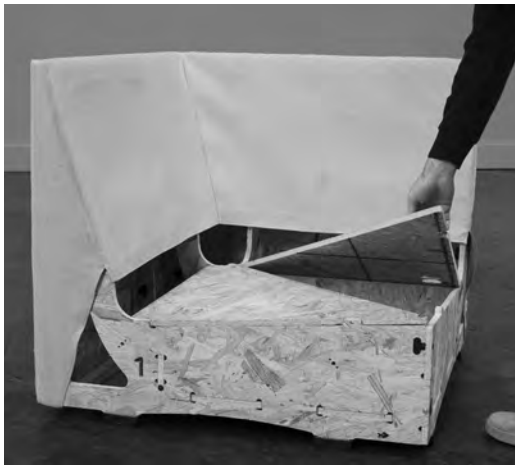

4

Grab the piece of fabric with the zipper that goes almost all the way around.

Locate the zipper and gently pull, opening up the fabric all the way. Stick both hands inside the fabric as shown below.

There is a black line indicating which corner of the cushion is the front, this is the corner you will attach the non-zipper corner of the fabric to.







Unzip the corner cushion cover completely. Align the corner of the cover without the zipper with the marked corner on your seat cushion. If no visible mark is present, select one of the corners with extra foam attached (added to accommodate the angles of the frame support beneath the cushion). Align the cushion's angle with the corresponding section of the cover.

Once it's secured on the foam, start to pull the fabric down around the sides. Locate the zipper, pull the fabric together or push down on the foam to help with the zipping process.







At this point, we suggest placing the cushion on the ground, removing your shoes, and then stepping on it.

This presses the foam all the way to the corners and keeps it looking its best.


This seat cushion can now be set on your unit.





5 **Locate the last two pieces of fabric, which will be used for the back pillows. Finding the zippers, gently pull to release them, flipping the fabrics the right side out.**


Note that the Corner Back Pillows are two different sizes. This is by design, make sure you are inserting the largest pillow into the largest fabric and likewise inserting the smallest pillow into the smallest fabric.

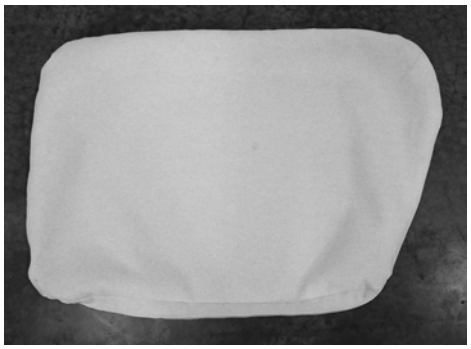




Largest Cover and Pillow

The Back Pillows are also angled slightly. Make sure when inserting into the fabric, that the pillow angle is going the same direction as the frabic angle. This ensures the best fit.

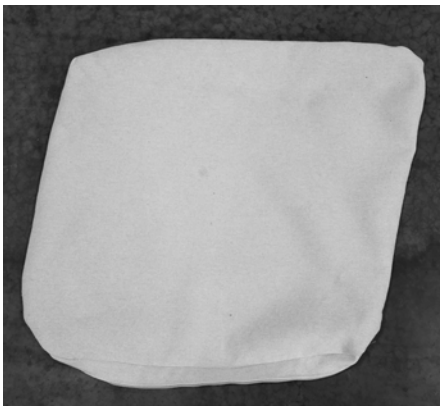

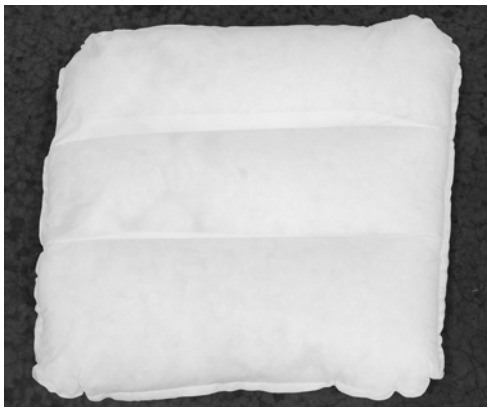

Smallest Cover and Pillow

Once roughly in, take your hand inside the fabric and adjust the corners of pillow to match the corners of the fabric.






The zipper will be tight, you can pull the zipper together and push down the foam to help with this process.

Just like the seat cushion, we recommend setting the pillow on the ground and stepping on it with your feet to push the foam to the corners of the fabric.






The large and small pillows can now be placed on the unit. They can be arranged in any way, this doesn't affect the design.

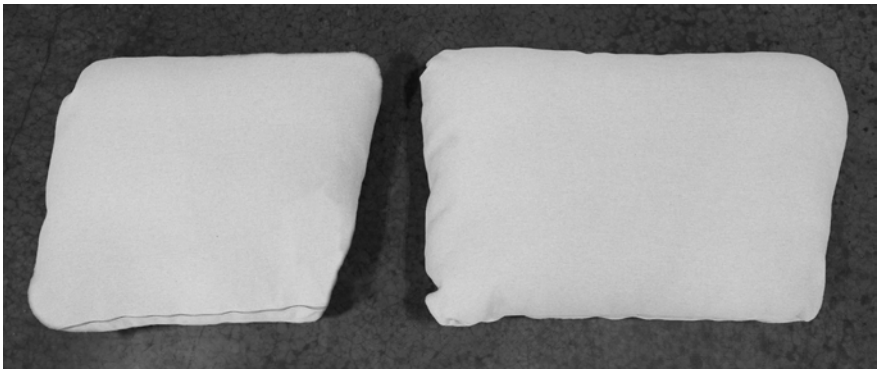



Congratulations! This completes the assembly of the corner unit.

FRAME ASSEMBLY

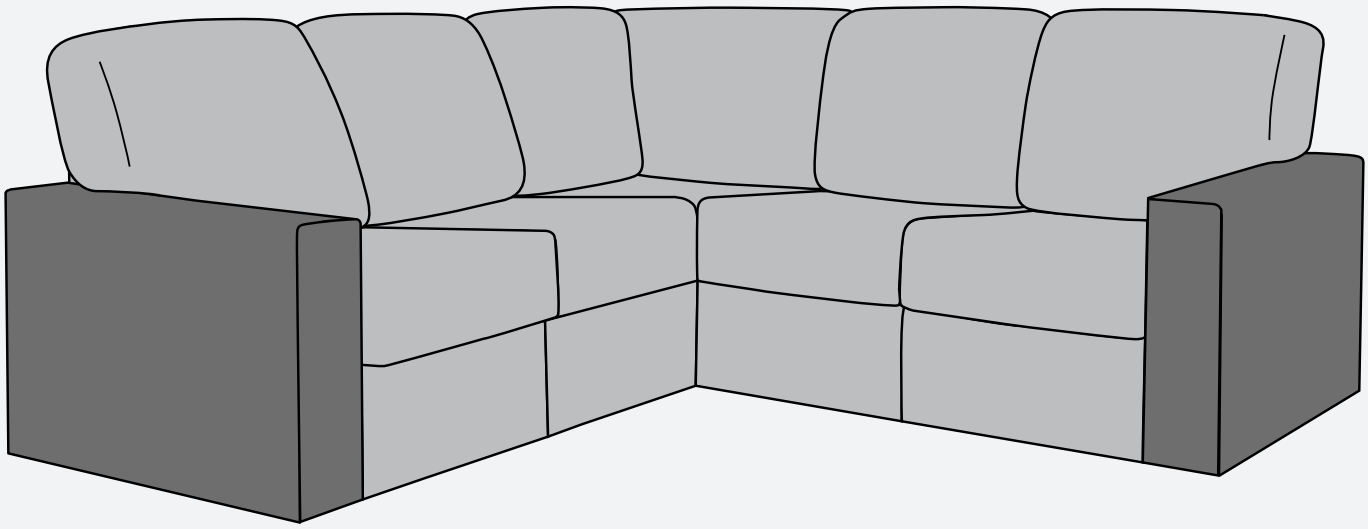


ARM

Instructions apply to all arm styles.


1 Take out pieces 2, 3, 4, and 5, placing them on the floor.

From your parts bag, find and insert the T-Connectors as shown. It's okay to use a hammer to tap the T-Connectors and wood parts into position.

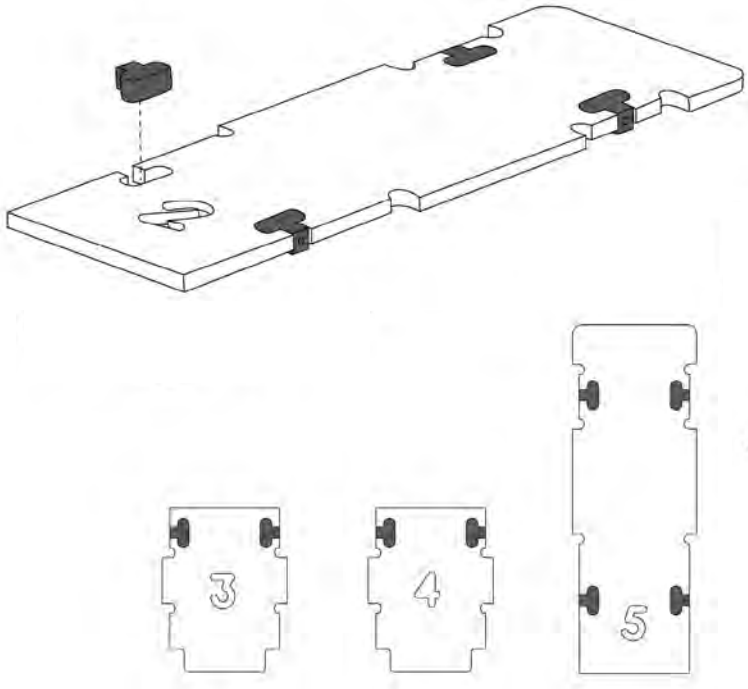


2 Locate piece 1 and connect it to piece 2 as shown.

Secure with two screws.

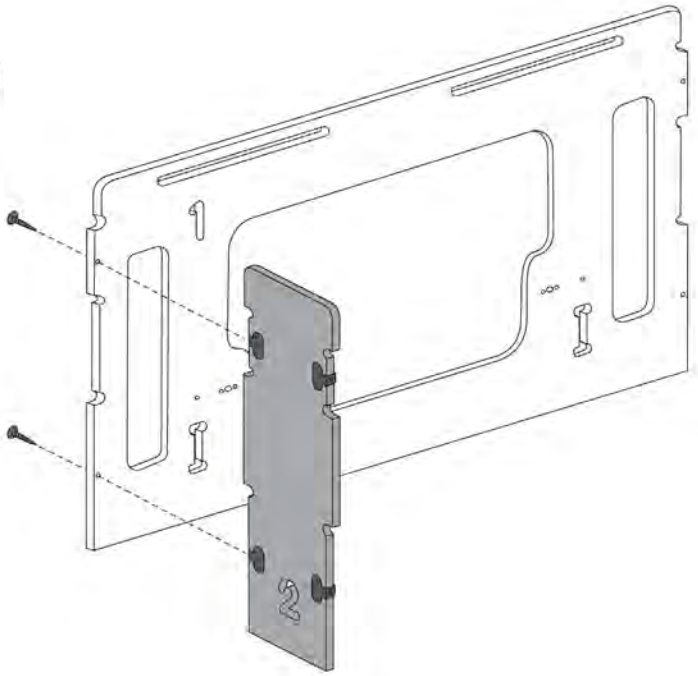


3 Insert piece 3 into the slot on part 1 as shown.

Secure with one screw.

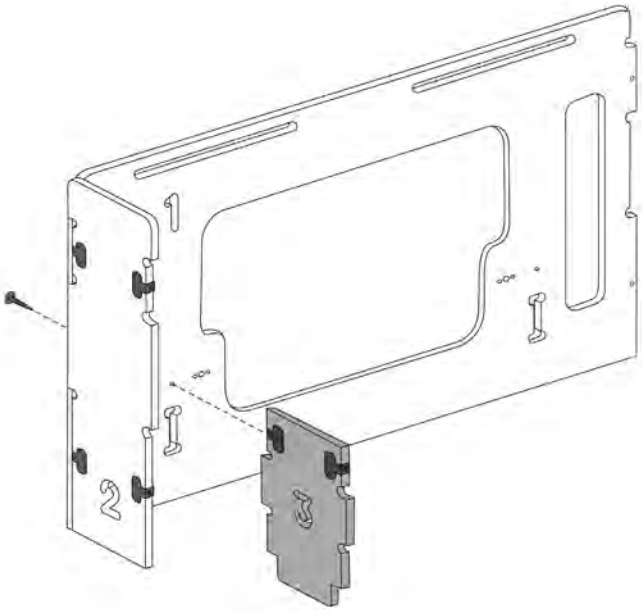

4 Insert piece 4 into the slot on part 1 as shown.


Secure with one screw.

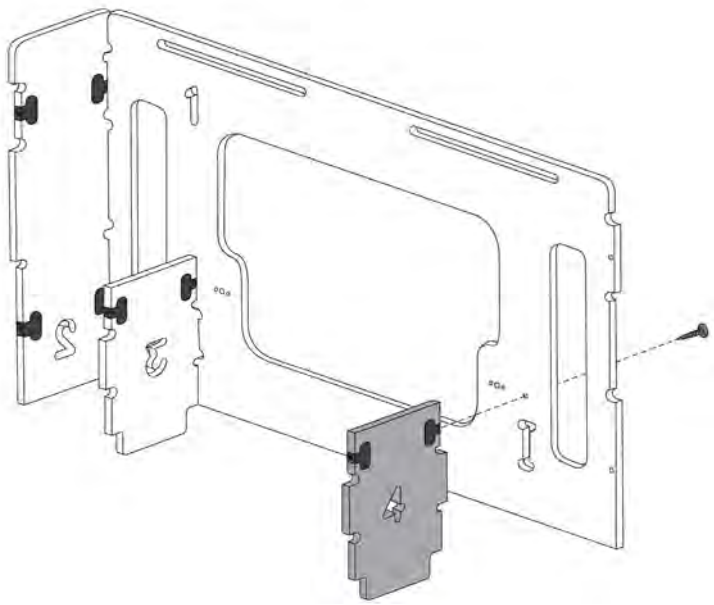

5


Piece 5 mirrors piece 2. Line up the edge of piece 5 with the outer face of part 1.

Secure with two screws.

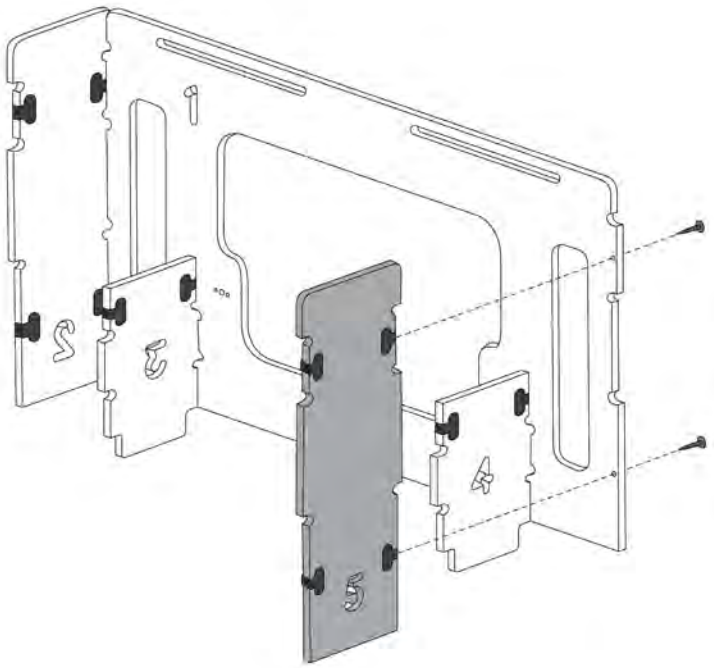

6


Place piece 6 into position as shown. Slide the tabs on piece 6 into the slots on the top of part 1.

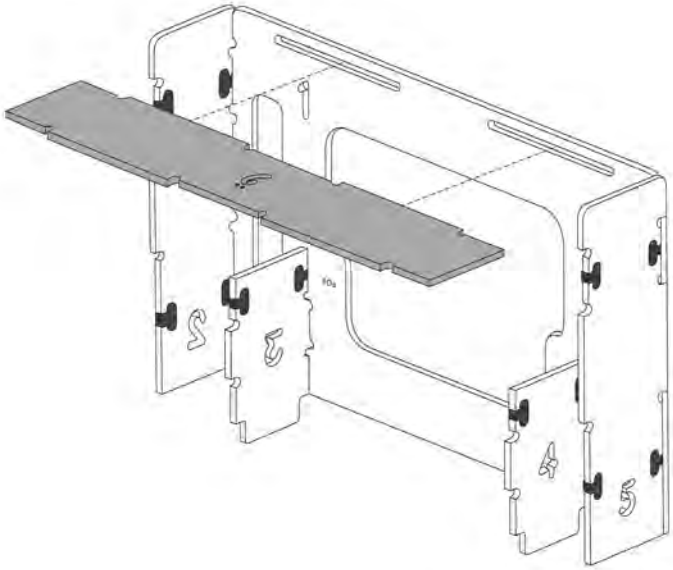

7

Flip the arm onto its side, with part 1 facing down. Slide the slots on part 7 onto the appropriate tabs on parts 2, 3, 4, 5, and 6.

Secure with six screws.

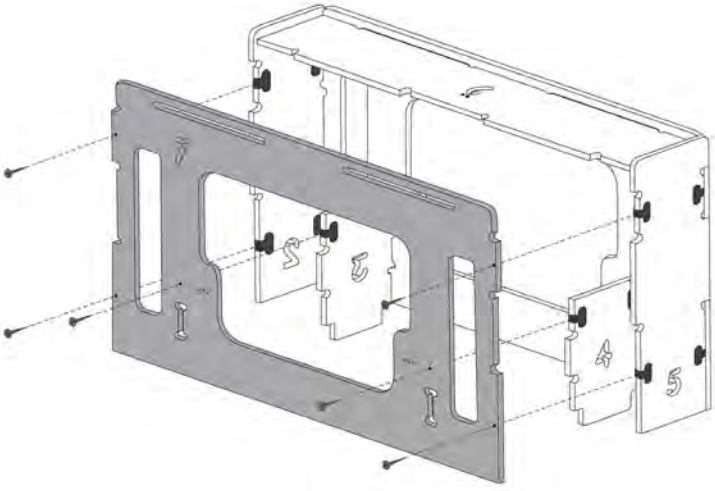


LOOK AT YOU GO!

FABRIC ASSEMBLY

Getting Started

Locate the fabric and foam that you set aside earlier. You should have one piece of cover fabric (which is inside out), a segment of elite fabric that makes it easier to slide the cover on, and the arm foam.

If you happen to notice any loose threads, there's no need to worry. Those are intentionally left longer during the automated trimming process. You can simply snip them off without compromising the seam strength.

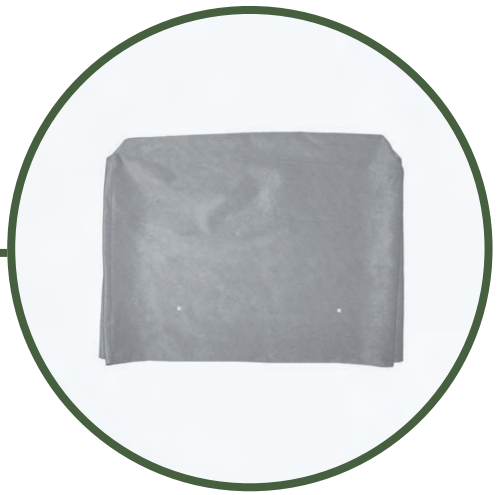

Arm Cover (1)



Elite Fabric (1)



Arm Foam (1)

1 **Position the arm foam onto the arm frame. The bottom of the foam is recessed in order to fit into the arm frame.**





Take the elite fabric and place it over the foam arm as shown. The elite fabric is a white silky material that helps you slide the cover over the foam.

Pictured to the side is the arm fabric, right side out, just to give you an idea of what it looks like. Go ahead and keep it inside out for the next step.



2

Stick your hands into the corners of the fabric. Align the seams with the edges of the frame. Start to wiggle the fabric onto the arm, getting a good grip.










Pull your hands out. Begin working the cover down an inch or two at a time, alternating between both ends to gradually guide the fabric onto the frame.

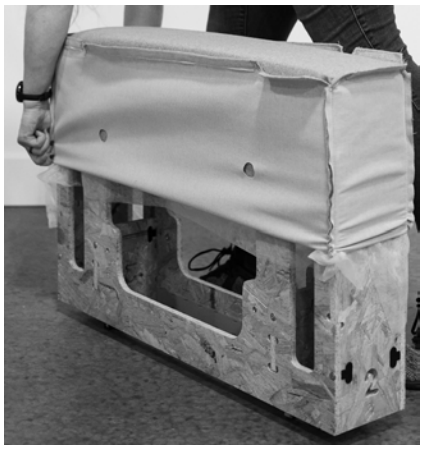



3 **Flip the arm over. Each edge of the fabric has a velcro strip that extends past the arm frame. Pull up on each fabric edge to make it tight, then wrap it around to meet the velcro strips on the inside of the arm frame. Start with the longer sides, and save the smaller ends for last.**






4 **Once the arm cover is in place, smooth the fabric. If necessary, reposition the velcro flaps on the bottom of the arm to remove any wrinkles. This completes the fabric assembly!**



Joining Your Sectional Group Together

Once you have all the individual pieces of your sectional group assembled, arrange them in the room according to your design plan. Then, starting at one end of the sectional arrangement, follow these instructions to secure all the units tightly together.

1 **The frames will be joined together with the connector bolts from the parts bags.**

Line up the front edges of one unit to the front edge of the other.







Front **Back**

Located the bolt holes in the front and back of the unit.






2

Thread the connecting bolt through the bolt hole in the back of the unit getting a good start on it. Switch back and forth between the back and the front to get an even amount of pressure throughout.








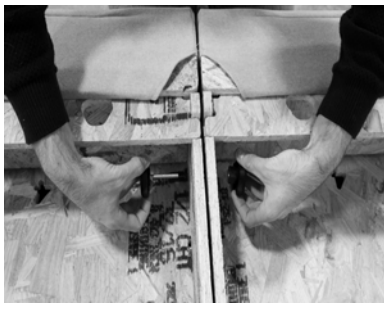



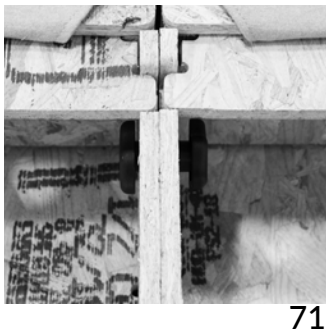

3 **Once connected, repeat the process with the remaining units. After, replace the seat lids and add on the cushions and pillows!**






Joining Unit to Arm

In the following steps, we'll be joining the arm to the frame using those trusty connector bolts from the parts bag. It's all coming together now!



1 **Take the seat lid off and set it to the side. Push the arm with fabric to the side of the frame, lining up the front and back edges.**



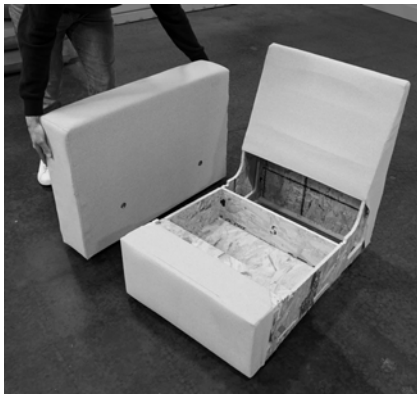



2

Locate the holes at the front and back of the arm and armless unit that correspond to the pictures shown.



Front



Back

3

Making sure the front holes in the armless unit and arm are aligned, begin to thread the connector bolt through. Tighten the connector by twisting clockwise (to the right). This will pull the arm to the frame.

Repeat the same process for the back of the unit.

Continue to tighten the bolts by switching back and forth from the front to the back of the unit until the frames are connected and completely secured.






This is what it will look like when complete.

4

Replace the seat lid and add on the cushions and pillows!

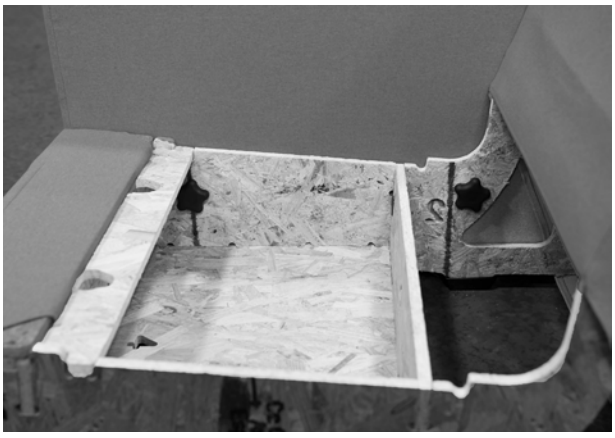






Assembly is now complete. You're a rockstar!

ASSEMBLY

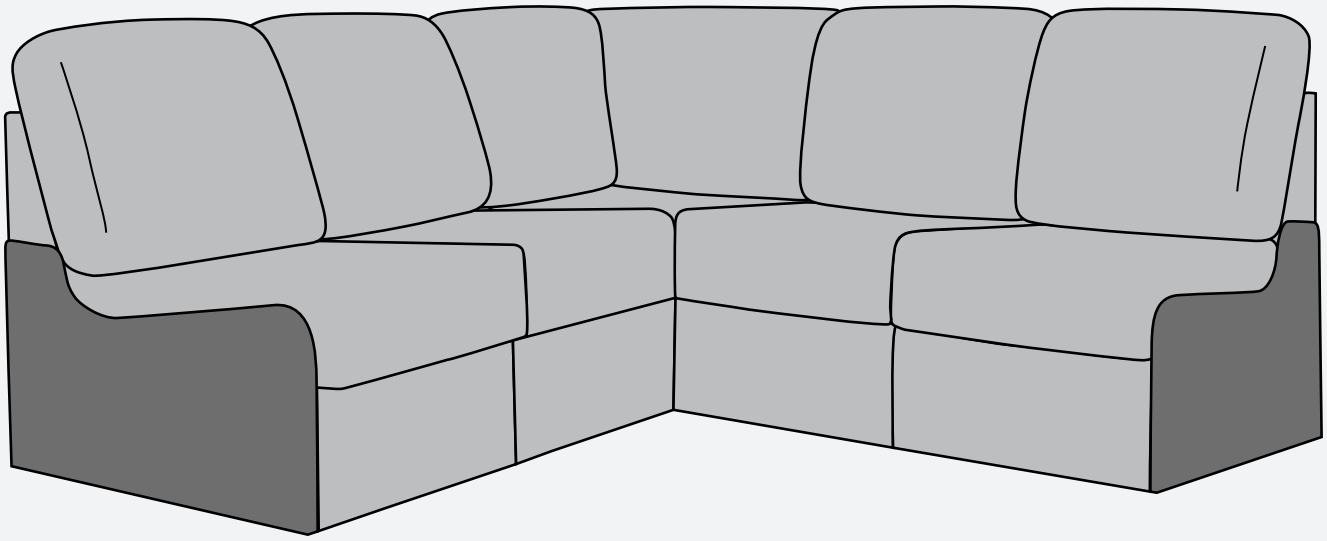


DEEP SEAT END PANEL

End panels are not interchangeable between left and right sides.

FABRIC ASSEMBLY

If you happen to notice any loose threads, there's no need to worry. Those are intentionally left longer during the automated trimming process. You can simply snip them off without compromising the seam strength.

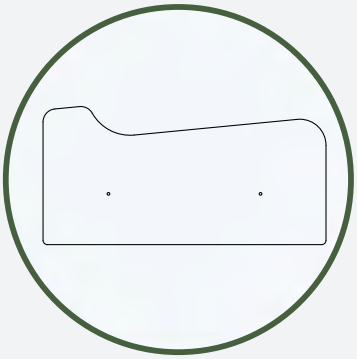


End Panel




End Panel Cover

Getting Started

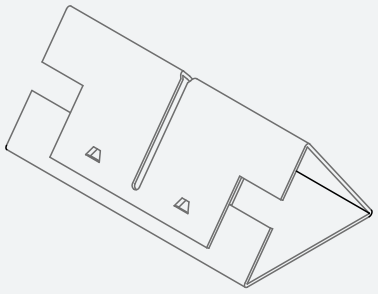

Follow the instructions on the Assembly Aid to fold it into a triangle.

1 **Grab the End Panel fabric cover and the Assembly Aid. Insert the wood End Panel piece into the Assembly Aid as shown below. This stabilizes the piece while you get the fabric started.**

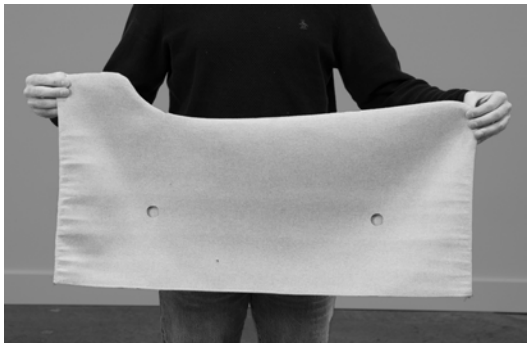




2 **Starting in small increments, pull the fabric onto the End Panel. Move back and forth to work the fabric down evenly.**





3 **Once the fabric is to the bottom of the panel, flip it over and pull the fabric up. The fabric seam should align to the End Panel edge like shown. Flip the End Panel back over and run your hands down the side to smooth out, if needed.**

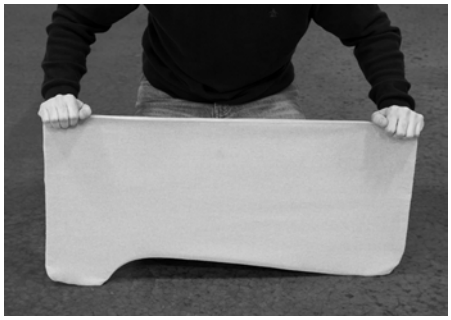


4 **Line the edge of the End Panel up with the edge of the unit as shown.**




5 **Grab the two connecting bolts in your parts bag and located the Front and Back bolt holes on the unit.**

Front **Back**






Thread the connecting bolt into the bolt hole on the unit directly through to the bolt hole on the End Panel. The bolt holes in the end panel are threaded so no wingnut is needed. We suggest rotating between the front and back bolt hole to evenly secure the End Panel to your unit.





This is what it will look like when complete.

6 **Replace the seat lid and add on the cushions and pillows!**

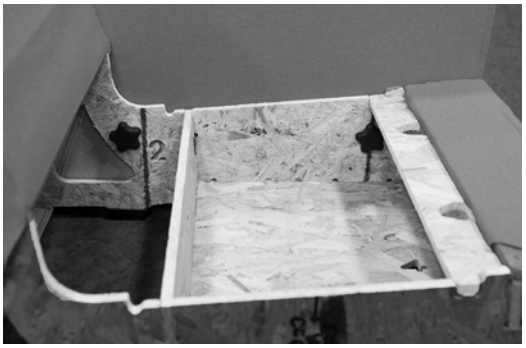



Assembly is now complete. You're a rockstar!

PLEASE READ

Warranty

Our frames are designed to last, and we're confident that they'll hold up to years of use. But we understand that accidents happen, which is why we offer our 10 Year Frame Warranty with a no-hassle replacement policy. If any piece of your frame breaks or becomes damaged, reach out to Customer Service and we'll send you a replacement part — no cost, no questions asked, and nothing to ship back. It's that simple!

Renewability

Individual foam and fabric parts are available. You no longer have to worry that something will happen and you'll just have to live with it. From pet attacks to paint spills, it's easy to recover from a furniture accident. Or, to change your fabric color or sectional style.

Sustainability

When it comes to our frame materials, we believe in using sustainable options that are both strong and beautiful. Our frames are made from sustainably farmed young, quick-growing trees — not old-growth forests — and our production process incorporates all usable wood to minimize waste. While our OSB may not be as smooth as plywood, it's up to 2-times stronger in shear strength, making it a smart choice for your home.

Scan Me!

Enjoy our YouTube playlist of beauty tips and tricks.

Keep Your Furniture Looking New!

We want your furniture to look its best – today and for years to come. In addition to these printed instructions, you'll find a treasure trove of helpful tips and tricks on our customer service page. Be sure to check out our beauty tips videos, where we demonstrate how to apply our fabric covers and make them smooth and wrinkle-free.

Home Reserve products are
made in the USA under patents:

#6,267,446
#6,568,058
#6,981,747
#7,044,557
#7,523,989

Follow us:

@HomeReserve

Get Support
1-800-482-2712
support@homereserve.com

Copyright ® Home Reserve, L.L.C.
All Rights Reserved Worldwide.
06/2023