


How to Measure

Simple Fit™ Installation is available with Inside Mount only. Outside Mount is available upon request.

Please follow our recommendations below and don't be afraid to call us (855-529-7107) should you have questions or need assistance.

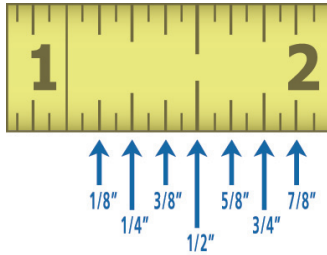

Using a metal measuring tape, measure each window individually (It's common for window frame measurements to have slight differences, even in the same room).

Inside Mount Installation

Width:


Measure the inside window frame at the top of the window.

Height:

Measure the inside window frame at the middle of the window.

Record these measurements rounding down to the nearest $\frac{1}{8}$ ".
Ex: $36 \frac{3}{16}$ " will round down to an exact measurement of $36 \frac{1}{8}$ ".

Note: Do not factor in any clearance deductions; the factory will make the necessary deduction for your shade to fit properly.

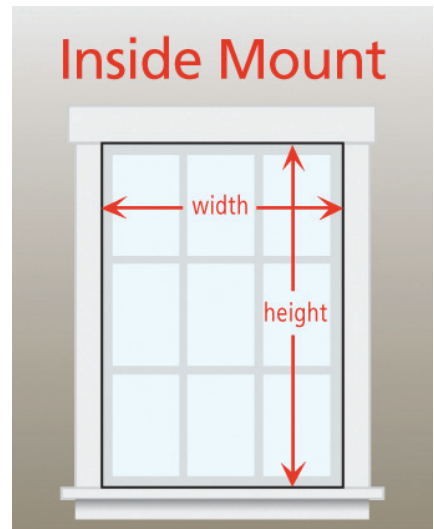

Inside Mount Window Depth

Minimum mounting depth: $1 \frac{1}{2}$ "
Head rail protrudes $\frac{1}{4}$ "

Flush mount depth: 2"

Head Rail Dimensions

Rail Dimensions	Height	Depth
Head Rail	$1 \frac{1}{2}$ "	$1 \frac{3}{4}$ "
Bottom Rail	$1 \frac{1}{2}$ "	$1 \frac{5}{8}$ "

Outside Mount Installation

Width:

Measure the outside of the window frame.

Height:

Measure the outside of the window frame.

We recommend adding 3" to these measurements ($1 \frac{1}{2}$ " each side), so the shade overlaps the window frame for full light control.

Note: Your recorded measurement will be used – no deductions or additions will be made for Outside Mount.

