

# Measuring Guide for Palladian Shelf

## Tools and Tips

- Steel tape measure — do not use cloth tape
- Pencil
- Round measurements to the nearest 1/8"

1/8"  
1/4"  
3/8"  
1/2"  
5/8"  
3/4"  
7/8"



1

2

## Mount Type: Inside Mount

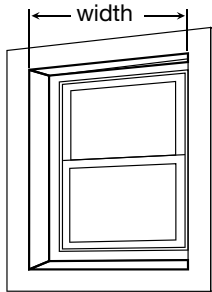


Figure 1

### Inside Mount


- 1 Measure the exact width of the window opening at the location you will be mounting the shelf. (figure 1).

\*Shelf will be made 1/16" narrower than ordered size to allow it to fit within the opening.


## Fabric-wrapped Cornice

- Determine inside or outside mount


**Note:** Face width will be approximately 2½" wider than the ordered width

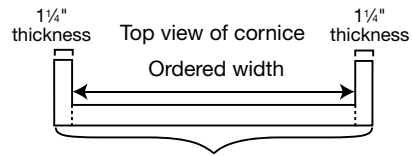

Face width will approximately be 2½" wider

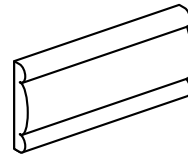


Inside Mount (side view)

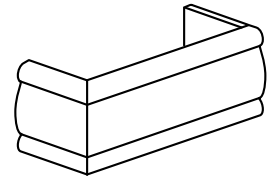


Outside Mount (side view)

### Bracket Distance:

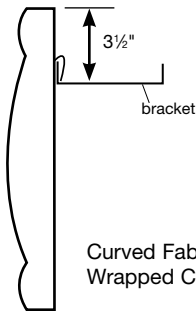

Curved Fabric  
Wrapped Cornice

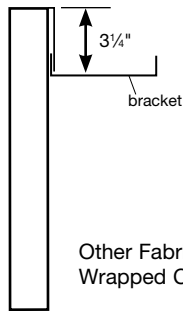

Other Fabric  
Wrapped Cornice

## Installation Brackets

	Fabric Wrapped Cornice	Premium Fabric Wrapped Cornice
Finished Width	Number of brackets	Number of brackets
20" - 40"	2	3
40 ⅛" - 76"	3	4
76 ⅛" - 112"	4	5
112 ⅛" - 148"	5	6
148 - 168"	6	7