


## Corded Honeycomb Shades

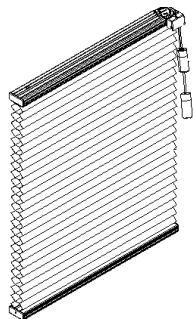


2" Screw for Installation Bracket with spacer	4	6	8
1 1/4" Screw for Installation Bracket (For Ceiling Mount)	2	3	4
1 1/4" Screw for Installation Bracket (For Wall Mount)	4	6	8
3/4" Screw for Hold Down Bracket	(Hold Down Bracket + Cord Cleat)*2		

### Step 1: Bracket Installation

#### Bracket Placement:


- Measure 2" in from both ends of the head rail and mark the bracket location on the mounting surface

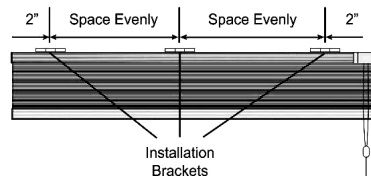

- Proper alignment of brackets will make installation easier.

#### Inside Mount Application:


- To ensure proper operation of the shade, please allocate a minimum distance of 2 5/8" (for 1/2" and 3/4" cell) and 2 1/8" for (for 3/8" cell) with no obstruction from the edge of the wall and a minimum distance of 1 1/8" from the edge of the wall to the center of screw.

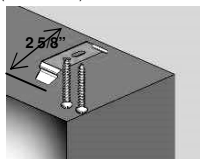

- Each bracket used for the same shade should be aligned to have the same installation depth. (Example for 1/2" and 3/4" cell)
- Secure each bracket to the top of the window frame with mounting screws

#### Outside Mount Application:

- Use level to align the brackets. Allocate a minimum distance of 1 1/8" from the wall to the center of screw.

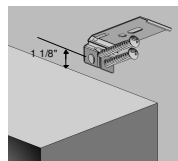

- Use mounting screws to attach each bracket.


### Step 2: Shade Installation

- Position head rail at an angle so that it is hooked to the front of the bracket. Then push it upward to snap into the bracket.


⚠ For proper installation, start with attaching the

front rail to the bracket.

#### Inside Mount

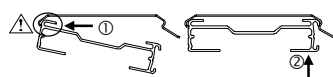


#### Outside Mount

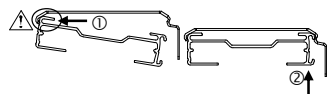


### Step 3: Shade Operation

- To raise shade, pull cord downward. Cord will lock at any position.
- To lower the shade, release cord lock by moving the cord towards the center of the shade. Gradually release cord and lower shade to desired position. Then, return the cord to the original position to secure the cord lock.

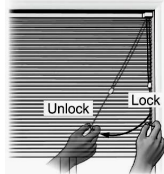


### How to install Hold Down Brackets (Optional):

- Use 3/4" screw to mount each bracket.

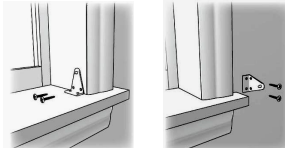

#### Install the Cord Cleat:

- Use two 3/4" screws to attach the cord cleat at a height inaccessible to children (take into consideration that a child may stand on furniture when attempting to reach the cords).
- Wrap excess cord around the cleat every time the shade is raised / lowered.

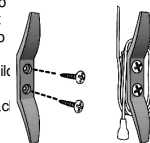


### Remove the Shade

- Fully raise the shade.


#### Inside Mount

- Push the tongue of bracket upward with screwdriver, then release the shade from bracket.

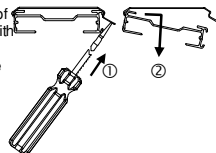

### Outside mount bracket for inside mount installation.

- Use a small screw driver to insert the long hole of bracket; then push downward to pry the bracket and take the shade out.

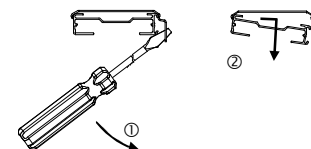

#### Outside Mount

- Rotate the head rail with your hands, front upward and backside downward, the head rail will release from brackets.



### Adjust the Shade

#### Check the Shade Length:

Raise and lower the shade several times to "loosen" the shade. If the shade length needs to be adjusted, or the bottom rail is not level, adjust the length.

#### Adjust the Shade Length:

- Remove the bottom rail end caps.
- Slide the bottom rail right or left to expose the left and right cord washers, respectively.
- Slide the washer along the cord to adjust the length of the shade and to level the bottom rail.
- Tie a new knot, slide the bottom rail back in place, and replace the end caps.

#### Shorten the Tassel Cord:

Slide tassel up the cord to the desired position and retie knot in the cord. Trim excess cord.


### Safety Warning

Young children can become entangled and strangle in cord or loops. Keep all cords out of reach from children. Move cribs and other furniture away from window coverings with cords.

The following safety devices are recommended:

- Cord cleat (included)
- Clip/Clamp
- Tie the cord to itself

- Use any tie-down device

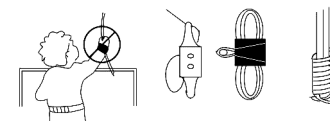


### Cleaning the Shade

Routine cleaning help maintain the beauty of your shades. To care for your shades use any of the following options:

- **Dusting**  
Regularly dust the shade with a duster. In most situations this is the only cleaning method needed.
- **Vacuuming**  
Use a hand-held vacuum on low suction setting to remove dust.
- **Spot-Cleaning**  
Dampen a clean cloth with warm water and mild detergent solution and then dab the spot until stain is gone. Do not rub! Allow the fabric to dry in a fully lowered shade position.

### Troubleshooting


Problem	Solution
The shade will not snap into the mounting brackets	Check that the mounting brackets are aligned. Refer to Step 1
The shade does not raise and lower evenly	Check that the cords are not stuck or tangled.
The shade will not raise	If hold down brackets are being used, check that they have been released.

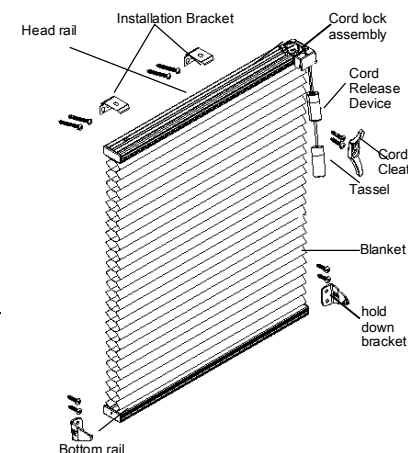

65101-10101

# Installation & Maintenance Instructions

## Honeycomb Shades Continuous Cordloop

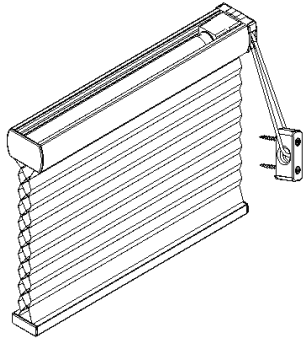

### Getting Started

Remove shade from package. Save packaging until shade is installed and working to your satisfaction.

#### Tools:

- Power drill
- Tape measure
- Screwdriver
- Level
- Pencil



### Installation Screws

Surface	Fastener
Wood	#8 1 1/4" Screws (Provided) M3.8x51mm screws #6 3/4" screws
Drywall/Plaster	Wall Anchors, Expansion Bolts (Not Provide)
Metal	Sheet Metal Screws (Not Provide)


### Hardware

Order Width (X)	X ≤ 39"	39" < X ≤ 66"	66" < X ≤ 93"	93" < X ≤ 120"
-----------------	---------	---------------	---------------	----------------

Installation Bracket	2	3	4	5
Hold Down Bracket (Optional)	2	2	2	2
Spacer (Optional)	2	3	4	5
2" Screw for Installation Bracket with spacer	4	6	8	10
M3.8x51mm screw for Tensioner	2	2	2	2
1 1/4" Screw for Installation Bracket	4	6	8	10
3/4" Screw for Hold Down Bracket	4	4	4	4


### Step 1: Bracket Installation

Measure 3" from both ends of the head rail. Mark bracket location on the mounting surface.

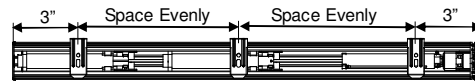


#### Inside Mount

- Align the front of brackets flush with the wall.
- Use two #8 1 1/4" mounting screws to secure brackets. **Use wall anchors for drywall or plaster wall.**

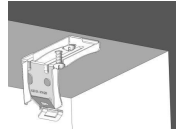

#### Outside Mount


- Align the end of brackets with the top window frame.
- Use two #8 1 1/4" mounting screws to attach each bracket. **Use wall anchors for drywall or plaster wall.**

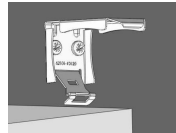

### Step 2: Shade Installation

- Position head rail at an angle so that it is hooked to the front of the bracket. Then push it upward to snap into the bracket.


**⚠ For proper installation, start with attaching the front rail to the bracket.**

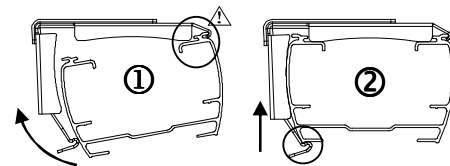


### Step 3: Cord Tensioner Installation

- Make sure the cord is tightened / taut without stretching, twisting or crossing, and the tensioner and control cord does not interfere with raising or lowering the shade before cord tensioner is mounted.
- Use 2 M3.8x51mm screws to mount the cord tensioner to the wall or window frame firmly for both inside & outside mount. Please refer to the following steps:


#### Step 1

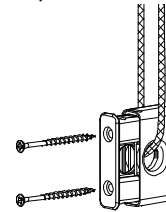

#### Step 2

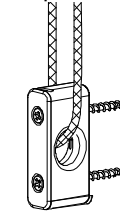


#### Step 3

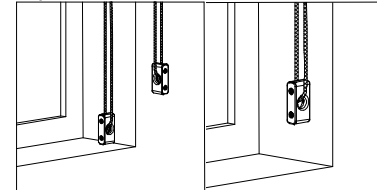


### Step 4: How to Install Hold Down Brackets (optional)

- Use #6 3/4" screw to secure each bracket.

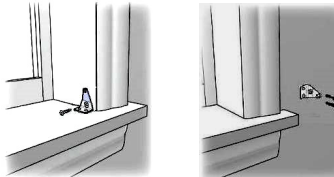


### Step 5: Shade Operation

- Pull cord to operate shade. **Cord Tensioner must be fully tightened prior to operating the shade.**

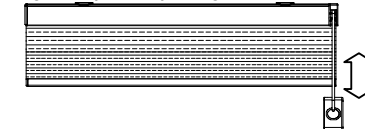

### Remove the Shade

- Fully raise the shade.
- Gently pry the bracket off the head rail with a flat screwdriver.
- Remove the shade.

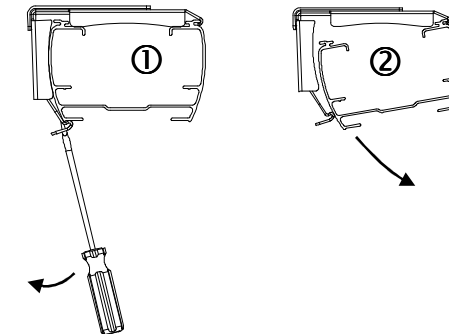


### Note


- Keep away from heat, sparks and open flame.
- Larger windows may require two people to install.
- Proper In the process of installation, must support the shade firmly to avoid it fall down too quick to damage the people or itself.
- Operate shade only by pulling the cord.
- To ensure child safety, install cord cleat and tighten up any loose cords after the shade is installed

### Cleaning

Routine cleaning will help maintain the beauty of your shade. The shade can be cleaned by using a soft brush, vacuumed with a low suction hand-held vacuum, cleaned ultrasonically (specify that a mild solution must be used and that the head rail should never be immersed in liquid), or dampen a clean cloth with a warm water and mild detergent solution to dab the spot until it's gone (do not rub!).

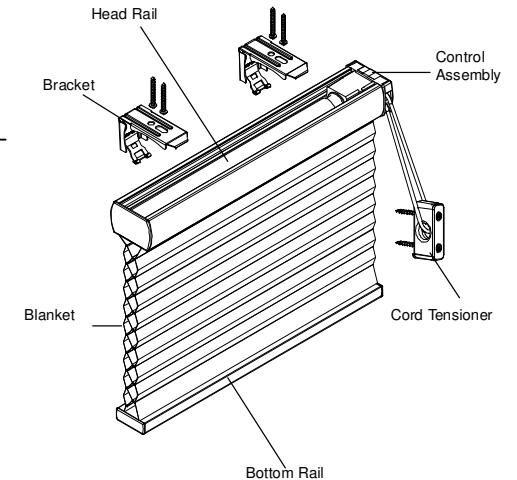

## Honeycomb Shades SmartRise™ System

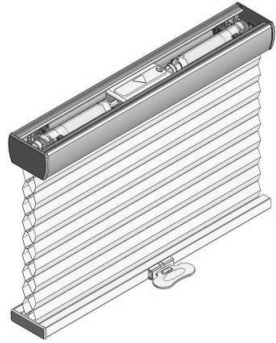

### Getting Started

Remove shade from package. Save packaging until shade is installed and working to your satisfaction.

#### Tools:

- Level
- Measuring Tape
- Pencil
- Power drill  
(1/4" hex driver and drill bit)
- Screwdriver



Fasteners for different mounting surface:

Surface	Fastener
Wood	#8 1 1/4" Screws (Provided)
	#6 3/4" screw
Drywall/Plaster	Wall Anchors, Expansion Bolts (Not Provided)
Metal	Sheet Metal Screws (Not Provided)


### Hardware

Order Width (X)	W ≤ 39"	39" < W ≤ 66"	66" < W ≤ 93"	93" < X ≤ 120"
Installation Bracket	2	3	4	5
Shade Handle	1 for X ≤ 50", 2 for X > 50"			
Hold Down Bracket (optional)	2	2	2	2
Spacer (optional)	2	3	4	5
1 1/4" Screw for Installation Bracket	4	6	8	10

2" Screw for Installation Bracket with spacer	4	6	8	10
3/4" Screw for Hold Down Bracket	4	4	4	4


### Step 1: Bracket Installation

- Measure 3" from both ends of the head rail. Mark the bracket location on the mounting surface

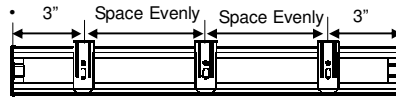


#### Inside Mount

- Align the front of bracket flush with the wall.
- Use two #8 1 1/4" mounting screws to secure brackets. Use wall anchors for drywall or plaster wall.

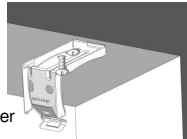

#### Outside Mount


- Align the end of bracket with the top of window frame
- Use two #8 1 1/4" mounting screws to secure each bracket. Use wall anchors for drywall or plaster wall.

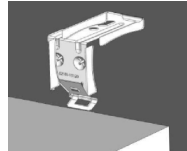

### Step 2: Shade Installation


- Position head rail at an angle so that it is hooked to the front of the bracket. Then push it upward to snap into the bracket.

For proper installation, start with attaching the front rail to the bracket.

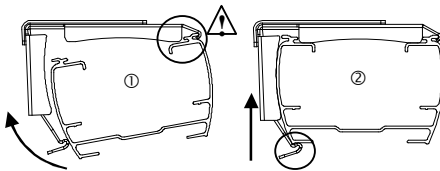


### Step 3: How to Install Shade Handle

Slide the handle onto the plastic piece pre-attached to the rails.

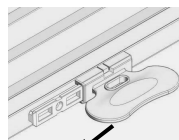


Step1

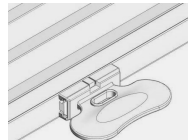


Step2

### Step 4: Shade Operation

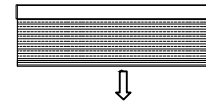


To lower the shade, gently pull the bottom rail down and stop at the desired height.

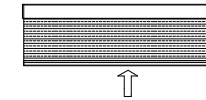

To raise the shade, gently raise the shade to desired height.


### How to Install Hold-Down Brackets (optional)

- Use #6 3/4" screw to secure each bracket.

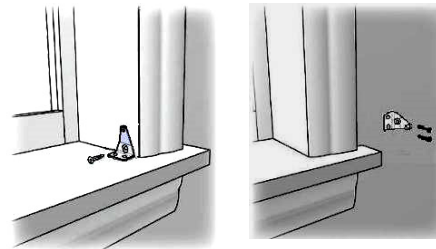

### Remove the Shade

- Fully raise the shade.
- Gently pry the bracket off the head rail with a flat screwdriver.
- Remove the shade.

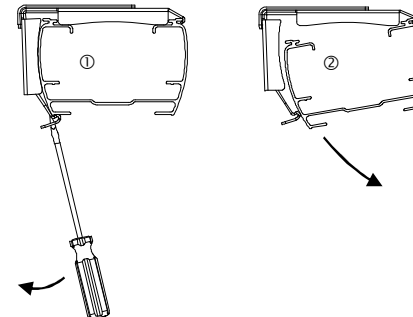


### Cleaning the Shade


Routine cleaning will help maintain the beauty of your shades. To care for your shades use any of the following options:

- **Dusting**  
Regularly dust the shade with a duster. In most situations this is the only cleaning method needed.
- **Vacuuming**  
Use a hand-held vacuum on low suction setting to remove dust.
- **Spot-Cleaning**  
Dampen a clean cloth with warm water and mild detergent solution and then dab the spot until stain is gone. Do not rub! Allow the fabric to dry in a fully lowered shade position.

### Troubleshooting

Problem	Solution
The shade will not snap into the mounting brackets	Check if mounting brackets are aligned. Refer to Step 1.
The shade will not lift	Gently pull down on the bottom rail to reactivate the cordless mechanism. Repeat if necessary.

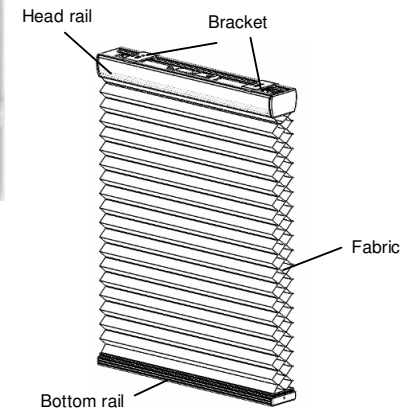

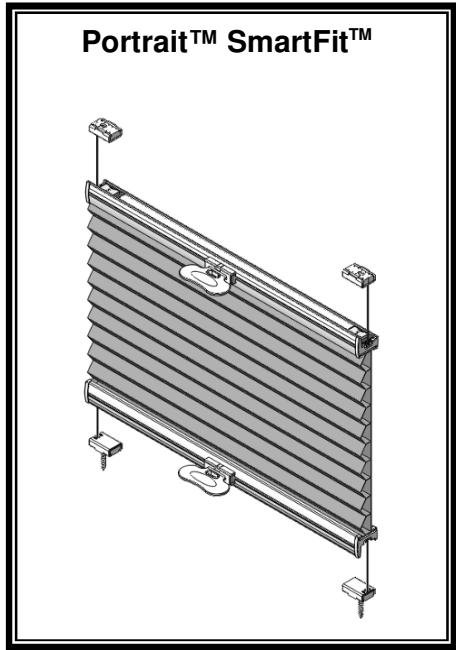

## Getting Started




Remove the shade from the package. Save the packaging until the shade is installed and working to your satisfaction.

### Tools Needed:

- Power drill and drill bit
- Measuring tape
- Screwdriver
- Level
- Pencil




You will need to use the following fasteners for your particular mounting surface.

Surface	Fastener
Wood	M3.5x25mm Screws (Provided) 
Drywall/Plaster	Wall Anchors, Expansion Bolts (Not Provided) 
Metal	Sheet Metal Screws (Not Provided) 

## Bracket Installation

### Inside Mount



For flush mount, the minimum distance from the top/bottom wall to the center of the screw hole needs to be 1/2" and 3/8" from the side wall to the center of the screw hole. Align the cover with the notch of the base and push the cover in toward the wall.

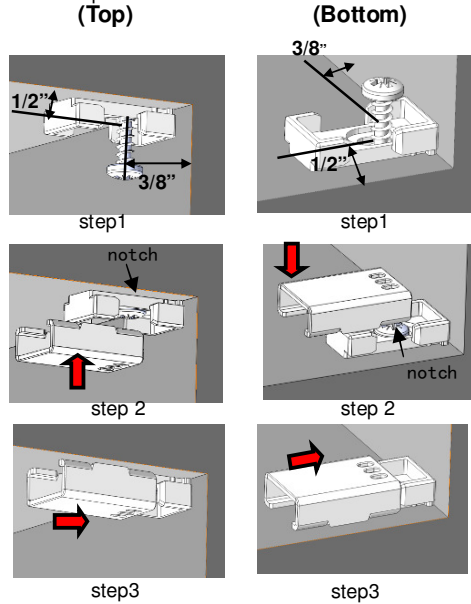


### Outside Mount

First, Keep L bracket flush with the side wall and a minimum distance of 1 1/8" from the center of the screw hole to the top/bottom widow opening. Then, Use 2 M3.5x25mm screws to fasten the L bracket.

Once the L bracket is installed, attach the cover onto it to hide the screws. Finally, use 1 M3 x 3mm screw to attach mounting bracket. Align the cover with the notch of the base and push the cover in toward the wall.

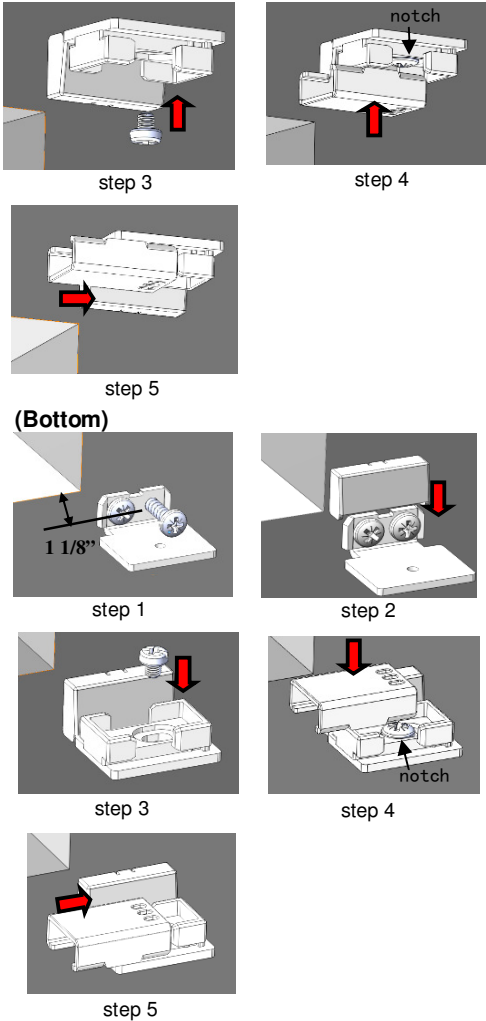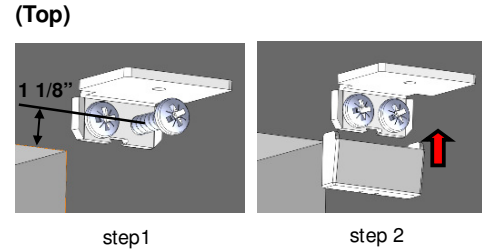


Note: See below. Align L bracket 1/4" away from the edge to outside screw hole of the L bracket.

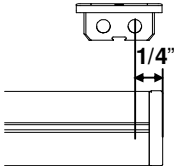


## Handle Installation

- Slide the handle onto the plastic piece pre-attached to the rails.

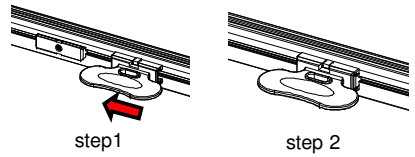


## Notes

- For child safety, please check and ensure that there are no loose cords after the shade is completely installed.
- Please also make sure that cords are nice and tight and not tangled.

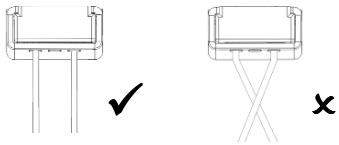


## Cleaning

Routine cleaning will help maintain the beauty of your shade. The shade can be cleaned by using a soft brush, vacuumed with a low suction hand-held vacuum, cleaned ultrasonically (specify that a mild solution must be used and that the head rail should never be immersed in liquid), or dampen a clean cloth with a warm water and mild detergent solution to dab the spot until it's gone (do not rub!).

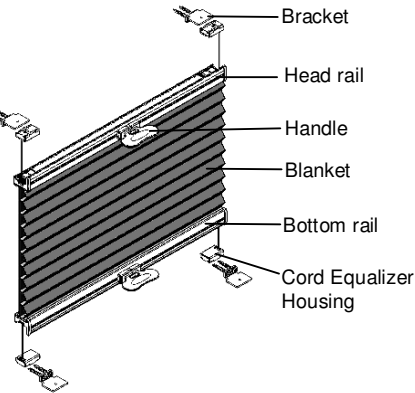

# Arch Shade Installation Instructions

Perfect Arch

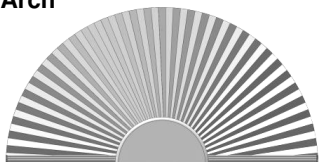


## Step 1: Getting Started





Remove the shade from the package. Save the packaging until the shade is installed and working to your satisfaction.

### Tools Needed:

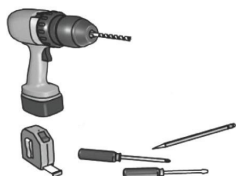
- Power drill and drill bit
- Measuring tape
- Screwdriver
- Level
- Pencil

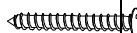

You will need to use the following fasteners for your particular mounting surface.

Surface	Fastener
Wood	#8x1 1/4" Screws (Provide) 
	#6x3/4" Screws (Provide) 
Drywall/Plaster	Wall Anchors, Expansion Bolts (Not Provide) 
Metal	Sheet Metal Screws (Not Provide) 

### Check Component/Hardware:

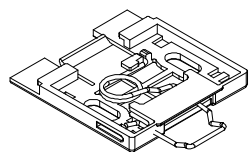


Installation Bracket



Bracket Clip




180° Center Template

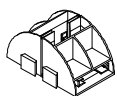

180° Center Support


## Step 2: Assemble the Shade

Open the shade and place the rail into the bottom of 180° center support tightly, and then install the front and back 180° center templates:

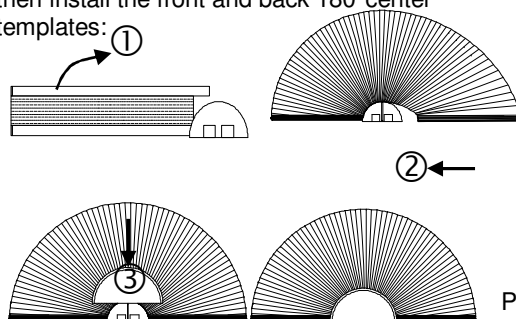


## Step 3: Install the Bracket


Align the Installation Brackets and install them evenly. **Install the brackets close to the ends when the shade width is less than 23".**

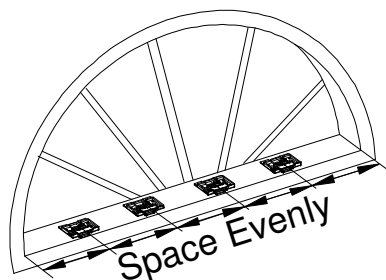


Use two #8x1 1/4" screws to attach the installation brackets on the window frame. The minimum distance is 11/16" from the front bracket to the edge of window frame.

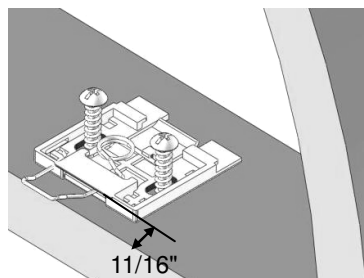


## Step 4: Install the Shade

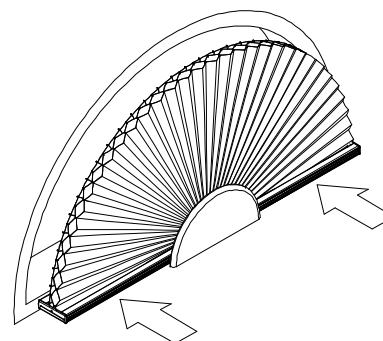

Place the front groove of the rail into the front iron wire of the bracket and then push forward to make the back groove of the rail snap into the back groove of the bracket.

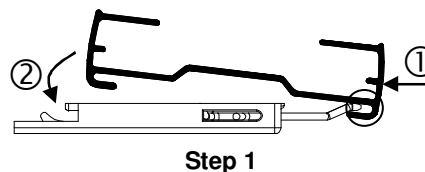


Insert the Bracket Clip into fabric and then close the Bracket Clip to keep it clamped on the fabric.

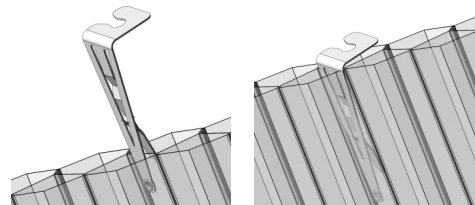


Step 1

Step 2

### Bracket Clip open and close:

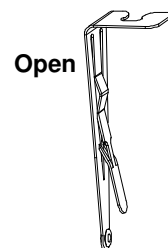


Open

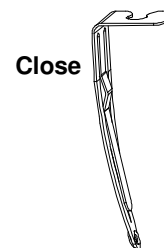


Close

Install a #6x3/4" screw into the corresponding location, approximately 1 1/8" from the front. Do not drive the screw completely in and leave around 2mm gap to insert Bracket Clip)

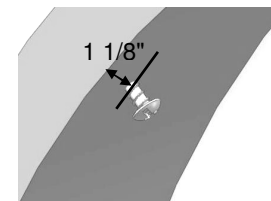

Insert the Bracket Clip into the screw from the notch.

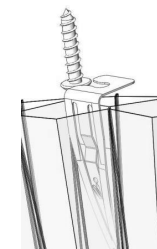


Step 1



Step 2

## Remove the Shade

1. Remove the Bracket Clip from the screw.
2. Disengage the rail from the front and then lift the rail up from the back.

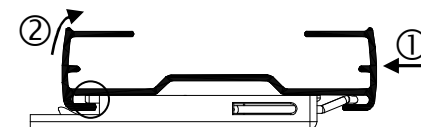

## Cleaning

Routine cleaning will help maintain the beauty of your shade. The shade can be cleaned by using a soft brush, vacuumed with a low suction hand-held vacuum, cleaned ultrasonically (specify that a mild solution must be used and that the head rail should never be immersed in liquid), or dampen a clean cloth with a warm water and mild detergent solution to dab the spot until it's gone (do not rub!).