


Thank you for your purchase!

We're excited you've received your new Artisan Cellular Shade!

What's Included with your shade:

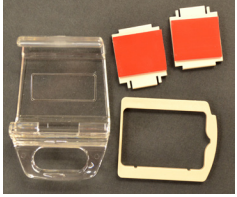


- Bottom rail handle to assist with shade operation
- Two replacement mounting plates with pre-applied adhesive pads
- Simple Fit™ Spacer

Before Installation:

a) If you ordered several shades, ensure you have the correct shade for each window. Check proper fit by holding shade in the intended window.

b) Ensure the surface you are working with is clean and dry. For cleaning information, visit redishade.com/faq

c) Check that the adjustable Trigger End mount (right side) is fully depressed inside the Simple Fit™ mounting system. This should already be done when your shade arrives; if not, press firmly on the mounting plate. The Trigger End is fully in place when you hear a 'click' sound. See visual example to the right.

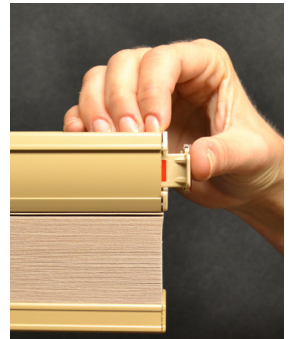


Press inward on the Trigger End

Installation:

For how-to video, head to this link: <http://bit.ly/shadeinstall>

1.

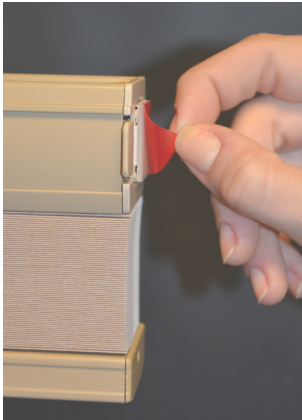

2a.



2b.




1) Remove tape liner from each Fixed End and Trigger End mounting plates.

2a) Place Fixed End (left side) of shade into desired position in window frame. Next, raise and position Trigger End (right side) into position.

2b) Lock shade in place by pressing Trigger inward.

Visual Check:

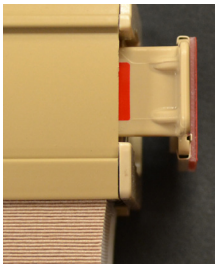

Check to ensure a red warning line is not visible on Trigger End side of shade. If warning line is visible, remove and reinstall with Spacer (see *Removal and Troubleshooting* for help with this step). After reinstallation, if the warning line continues to be visible, please call us at 855-529-7107.

Removal and Troubleshooting

Removal:

1a.



1b.




1a) To remove shade, grasp shade with both hands and pull firmly toward you to release from mounting plates. Mounting plates will remain affixed to the wall.


1b) Slide a putty knife blade under each mounting plate to gently remove.

Reinstallation:

2a.

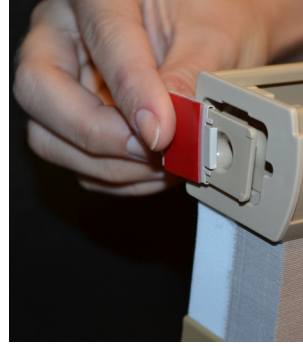

2b.

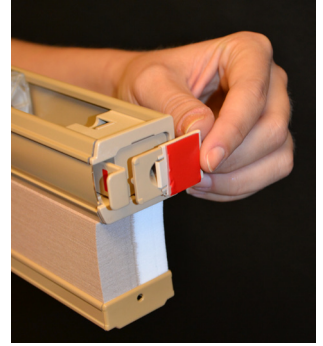

Remove the two mounting plates from Parts bag (see *What's Included*).


2a) Slide mounting plates onto both the Fixed End and Trigger End mounts as shown.

2b) Repeat installation.


Simple Fit™ Spacer (if applicable):

If the red warning line is visible after installation, use the included Spacer to ensure shade is properly installed.


a.

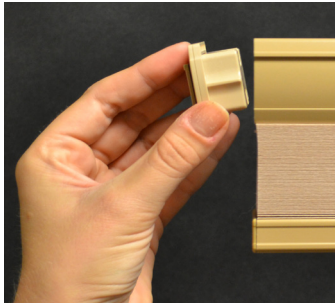

b.

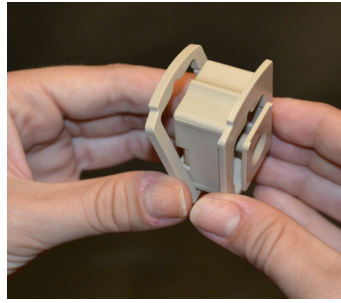

c.

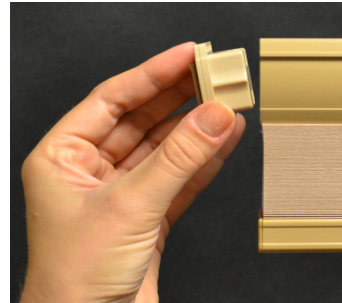

Before installing Simple Fit™ Spacer, please check:

- Shade is being installed in the correct window
- Shade width matches size ordered
- Window measurement is correct

a) Remove Fixed End mount from left side of head rail.

b) Place Spacer over Fixed End mount.

c) Reattach Fixed End mount with Spacer by inserting into head rail. Press firmly to secure.

d) Repeat Installation steps.

Outside Mount Installation Instructions

What's Included with Your Shade:

- Bottom rail handle to assist with shade operation
- Outside mount brackets
- Screws


Parts Table:

Shade Width	Brackets	Screws	Handle	Handle for TDBU
19" - 47.9"	2	4	1	2
48" - 72"	3	6	2	4

Tools Required (not provided):


- Pencil
- Tape Measure
- Level
- Drill with 3/32" drill bit
- #2 Phillips Screwdriver
- Wall Anchors (may be needed depending on your wall structure)

Before Installation:

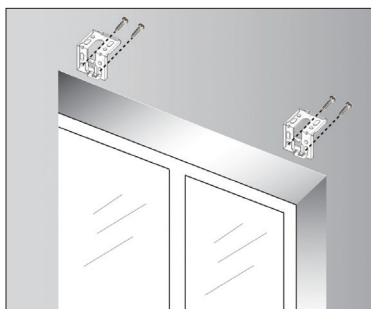

- If you ordered several shades, ensure you have the correct shade for each window. Center shade with window and mark wall or wood trim on both sides of the shade.
- See Parts Table for bracket quantity needed for installation.
- Position shade on mounting surface and mark hole locations on the surface.
- Use a level to ensure marks are aligned in order for shade to properly snap into brackets.
- For wall mount, affix brackets into wood studs using provided screws. If not possible, use appropriate wall anchors (not provided).

Installation:

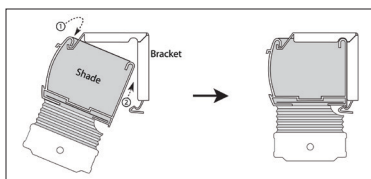

- Using both hands, tilt top of shade slightly toward window and hook front edge into brackets.
- Rotate back of head rail up and press bottom of head rail until it clicks into place.
- Check to ensure there are no fabric cells caught in the brackets.

Shade Removal:

- Each bracket has a release tab located at bottom center. With shade fully raised, push inward to release back of shade from bracket. Do the same for each bracket, releasing them.
- Once shade is released from all brackets, lift shade off.