


## 5807 Duct Kit


## **Installation Instructions**

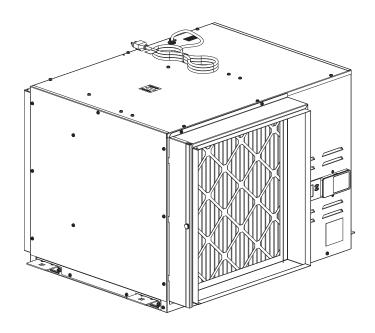


## **WARNING**

Sharp edges may cause serious injury from cuts. Use care when cutting plenum openings and handling duct work.

- When installing duct work, keep duct runs short with a minimum number of bends.
- Increasing the external static pressure will increase the power consumption and decrease the airflow, capacity and efficiency of the dehumidifier. Do not exceed 0.6"w.c.
- Equivalent round duct is 22".
   To reduce overall external static pressure, avoid using metal flex duct.

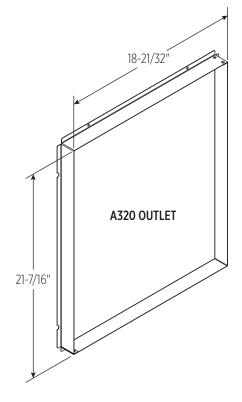

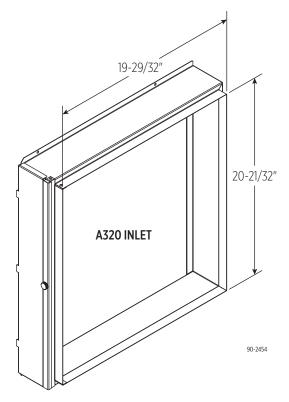

## anden.com

P.O. Box 1467
Madison, WI 53701-1467
800.972.3710 F: 608.257.4357
Printed in USA
©2019 Anden – A Quality brand from Research Products Corporation
10013701 B2208386A 4.19

