
MOLDED SPORT DOOR PANELS INSTALLATION GUIDE
1968-69 CHEVY CAMARO

***NOTE*: Fits STANDARD interior doors ONLY. Must install door handles to work with DELUXE interiors.**

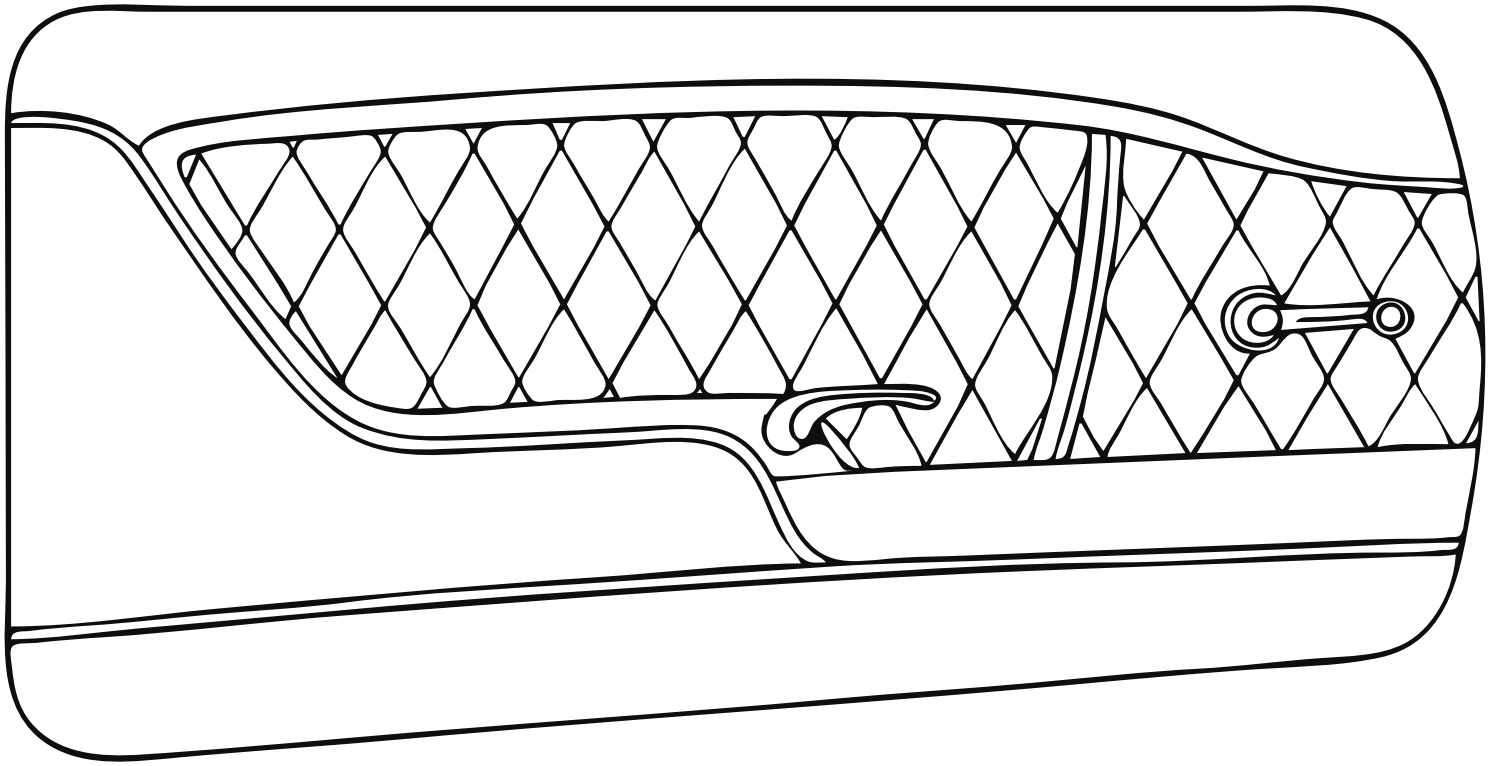


1493 E. Bentley Drive, Corona, CA 92879
tmiproducts.com | tmiinfo@tmiproducts.com | 951.272.1996


Part#99-8300-000
RD-WI-038 Rev. 12-26-24

NOTE: Fits STANDARD interior doors ONLY. Must install door handles to work with DELUXE interiors.*


TOOLS NEEDED FOR INSTALL

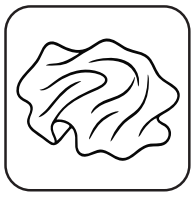


SHOP RAG

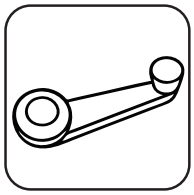


LOKAR DOOR HANDLE & WINDOW CRANK

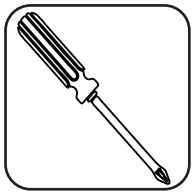


SCREWDRIVER

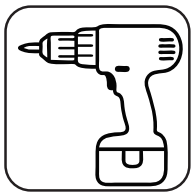

DRILL

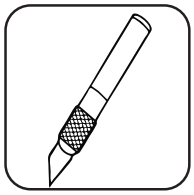

UTILITY KNIFE

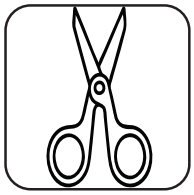

SCISSORS


1493 E. Bentley Drive, Corona, CA 92879
tmiproducts.com | tmiinfo@tmiproducts.com | 951.272.1996

Part#99-8300-000
RD-WI-038 Rev. 12-26-24

MOLDED SPORT DOOR PANELS INSTALLATION GUIDE
1968-69 CHEVY CAMARO


***NOTE*: Fits STANDARD interior doors ONLY. Must install door handles to work with DELUXE interiors.**

STEP 1

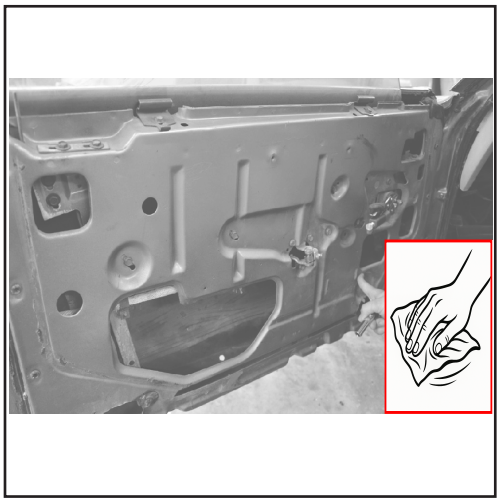


STEP 1
Remove the factory door panel and clean the mounting surface with rubbing alcohol.

STEP 2

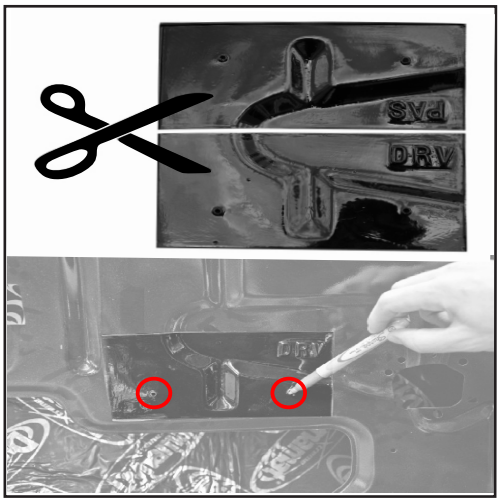


STEP 2
Cut the drill template into driver and passenger sides. Align it flush with the inner door structure and mark hole locations for the handle.

STEP 3

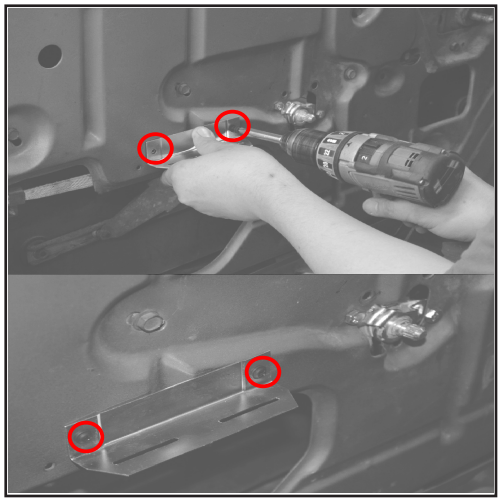


STEP 3
Drill 1/8" pilot holes at the marked locations. Attach the bracket using the provided self-tapping screws.

STEP 4

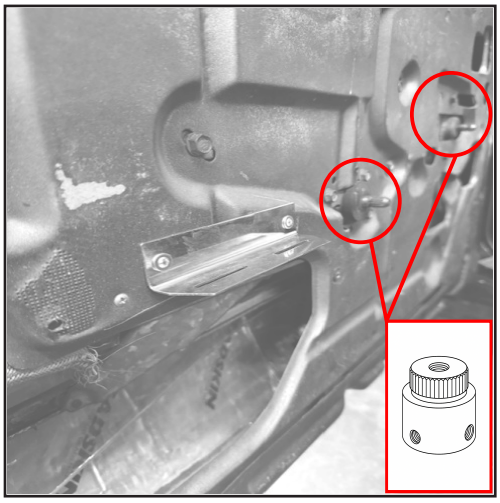


STEP 4
Install the longer Lokar shaft insert into the handle/crank shaft and secure with the set screws.

STEP 5

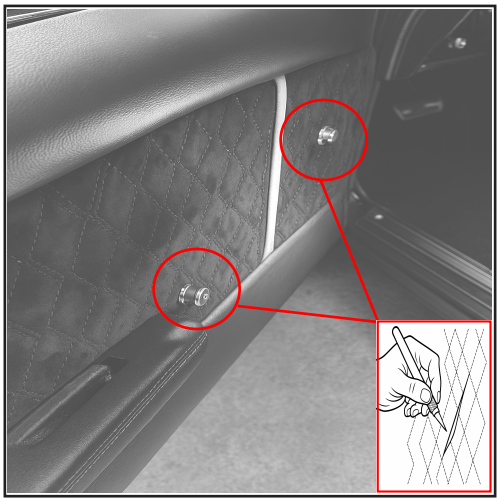

STEP 5
Install the door panel. Locate the shaft insert postitions and make a small incision to allow the shafts to pass through.

STEP 6

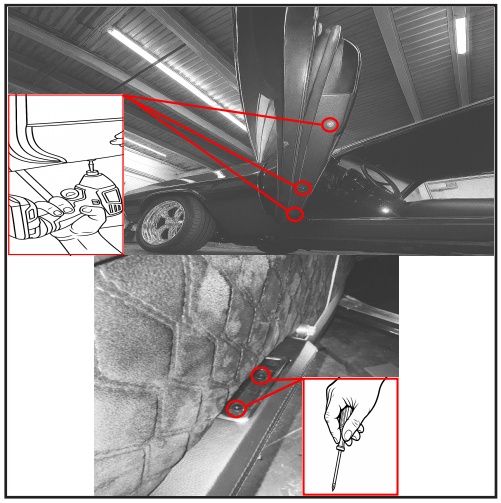

STEP 6
Drill 1/8" pilot holes for the three screws underneath the door panel, spacing them evenely. Install the door panel cup and secure it to the bracket.

1493 E. Bentley Drive, Corona, CA 92879
tmiproducts.com | tmiinfo@tmiproducts.com | 951.272.1996

Part#99-8300-000
RD-WI-038 Rev. 12-26-24