
SCHONBEK®


PETIT CRYSTAL DELUXE 5890- ___ M

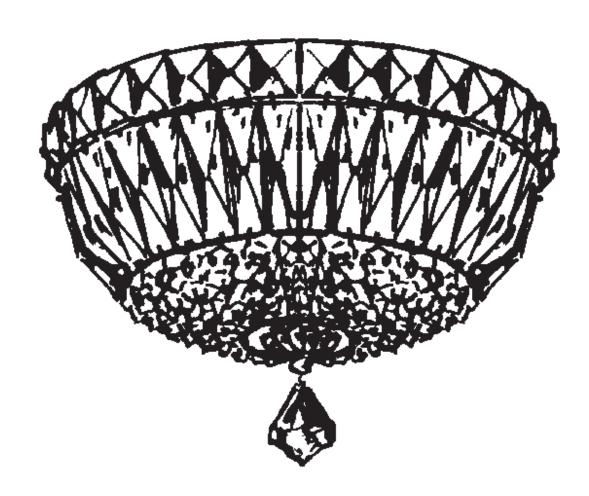


THIS DESIGN IS THE PROPRIETARY TRADEDRESS/TRADEMARKOF SWAROVSKILIGHTING, LTD.


3 Lights Diameter: 8" Body Length: 6" Hanging Weight: 3 lbs.



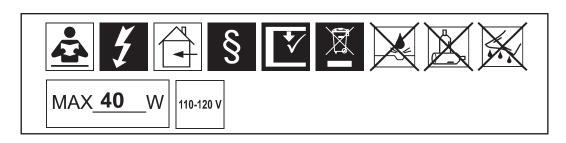


All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

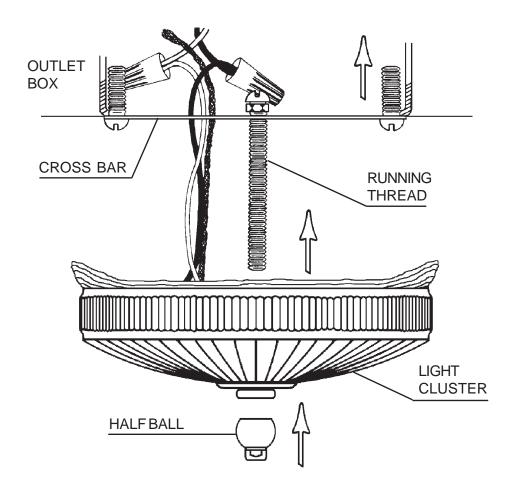





2 Feed stem wires through crossbar and attach to power wires in outlet box.

3 Place light cluster over thread attached to crossbar and secure with half ball.

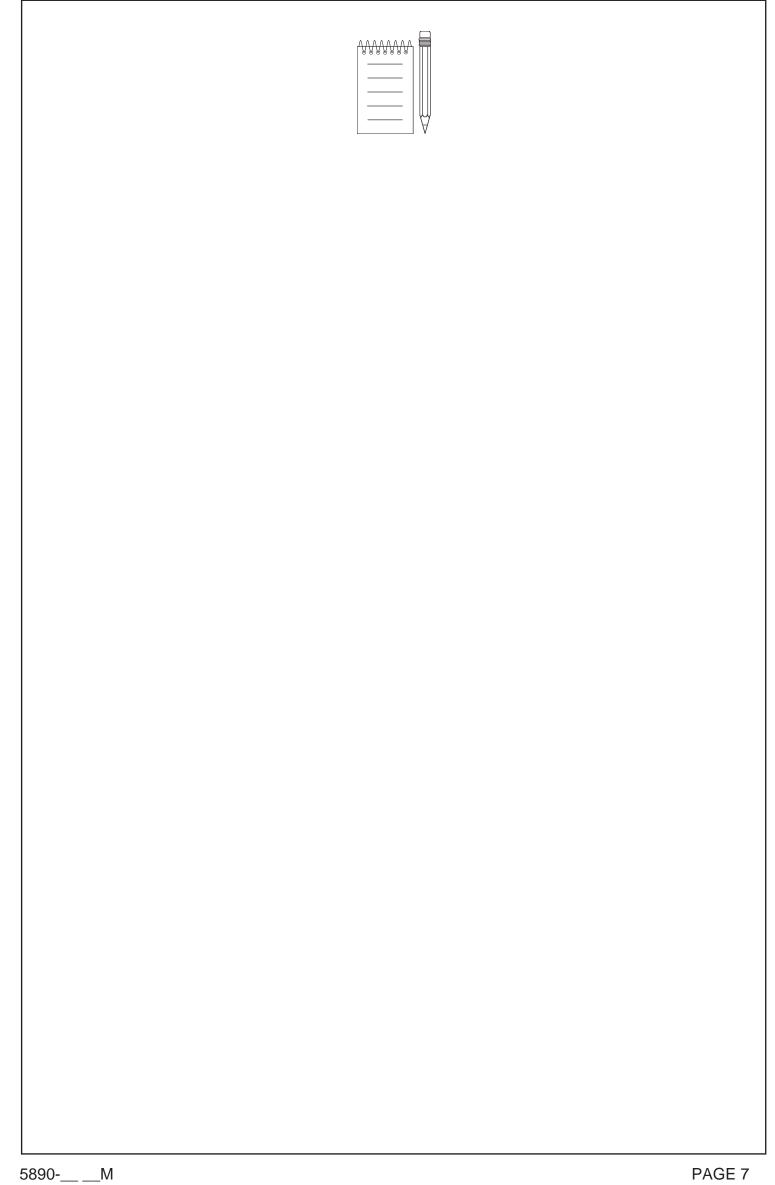

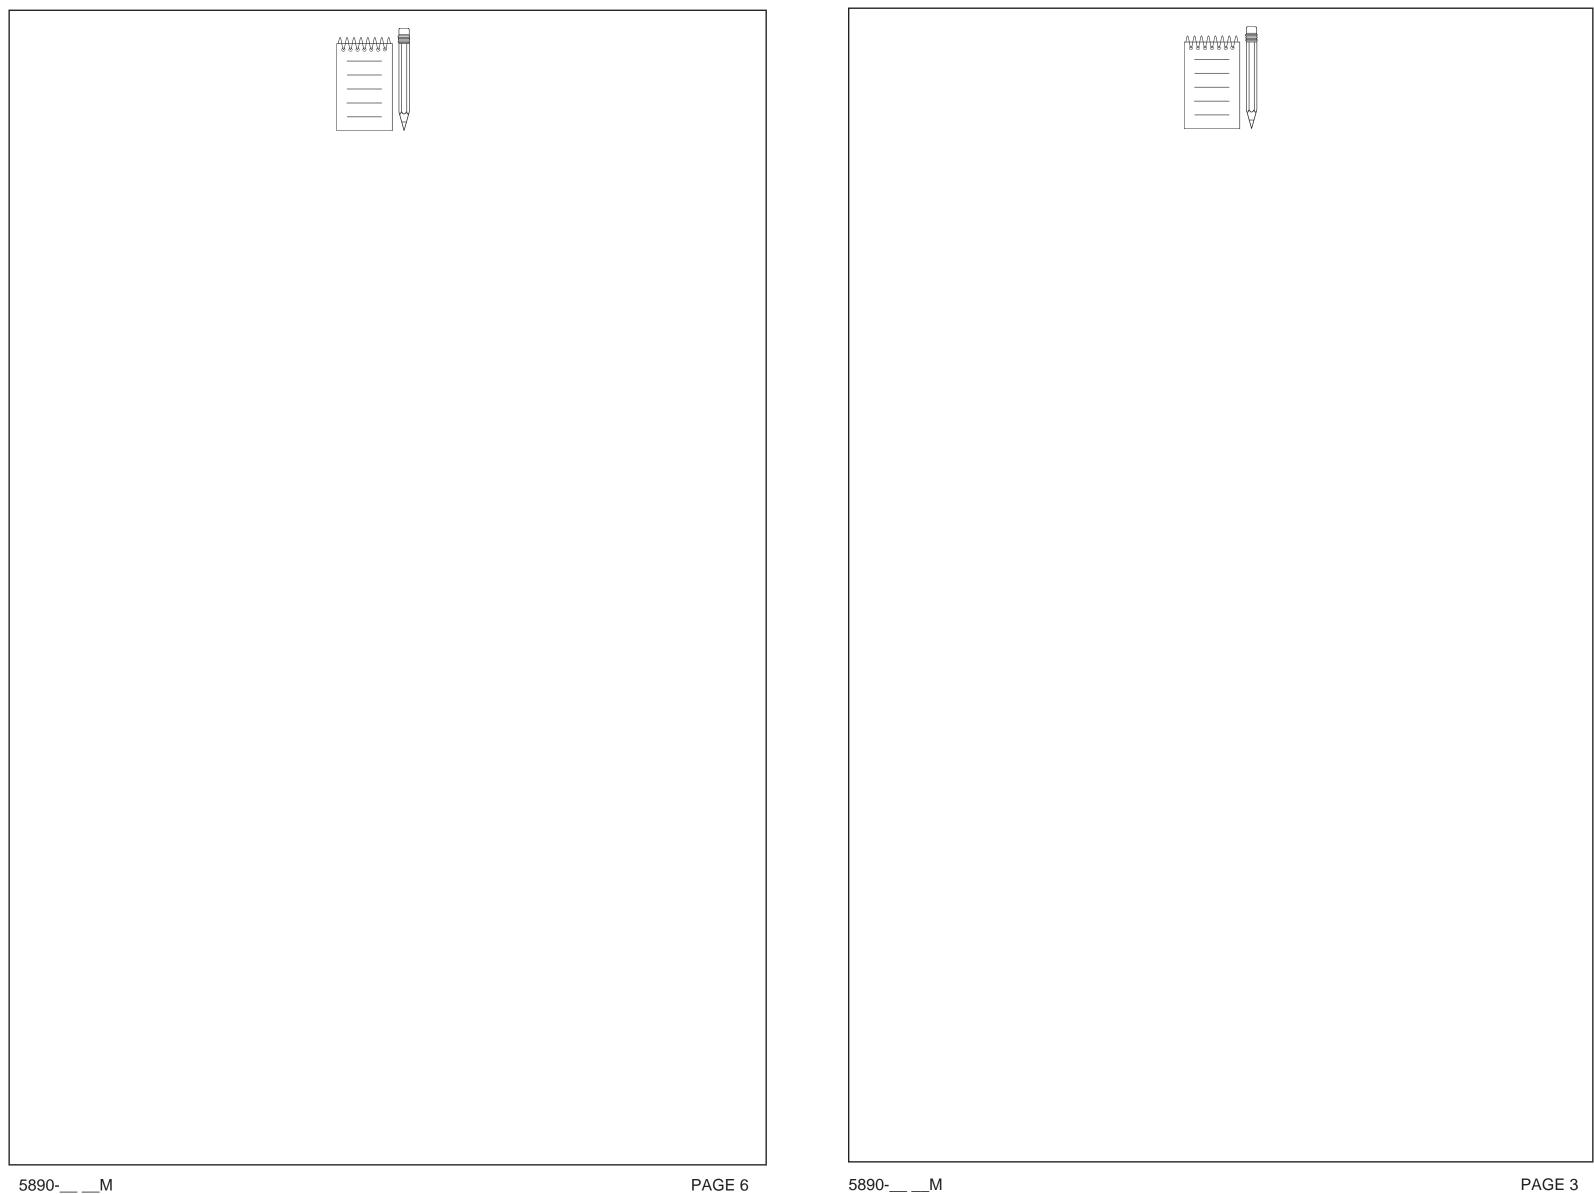


5890-__ _M PAGE 6 5890-___ __M

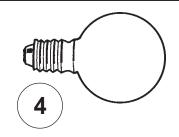

You will need 3 - G16-1/2 25 Watts Recommended 40 Watts Max MIN 90°C SUPPLY CONDUCTORS

Install bulbs and be sure to test fixture BEFORE trimming.



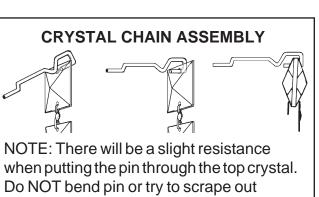

when putting the pin through the top crystal. Do NOT bend pin or try to scrape out crystal hole. The resistance holds the crystal chain on the pin.

5 Assemble all crystal chains and pins provided. See "Crystal Chain Assembly" above. Set mirror plate on cardboard stand. Hook all Crystal Chains "E" into slots in the mirror plate so the metal accessories face outwards and the square jewel is on the upper end. See illustrations #1 - #3. NOTE: Allow ends with small jewels to hang loose.

6 Align holes in mirror plate with the balls on the frame, raise mirror plate over balls, then turn mirror clockwise until holes are halfway between balls. See illustration#4.

