

ASSEMBLY INSTRUCTIONS FOR ELEGANTE CART



PARTS:

- 1- CART TOP W/ DRAWER AND (2) LEAVES
- 2- STAINLESS SHELVES
- 4- LEGS

HARDWARE:

- 24- 1/4 WASHERS
- 24- 1/4 NUTS
- 8- 1/4X1-1/4 CARRIAGE HEAD BOLT
- 16- 1/4X1/2 PHILLIPS HEAD BOLT
- 4- LEAF SUPPORTS
- 28- #10X3/4 SCREWS
- 4- CASTERS

SNAP RING

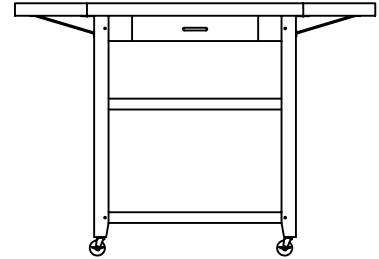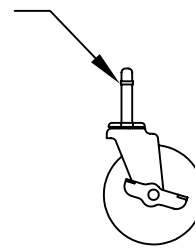

TOOLS REQUIRED:

- 1- 7/16 WRENCH OR SOCKET/RATCHET
- 1- PHILLIPS HEAD SCREWDRIVER

NOTE: IF CASTERS ARE HARD TO INSERT INTO LEG, CRIMP SNAP RING ON CASTER STEM WITH NEEDLE NOSE PLIERS AND TRY TO RE-INSERT CASTER.

CAUTION: MAKE CERTAIN ASSISTANCE IS AVAILABLE WHEN SETTING BLOCK UPRIGHT TO AVOID INJURY TO YOURSELF OR THE BLOCK.

SUGGESTION: APPLYING BAR SOAP, PASTE WAX, OR VASELINE TO THE WOOD SCREW THREAD WILL MAKE THEM MUCH EASIER TO INSERT.

INSTRUCTIONS:

- 1) REMOVE ALL CONTENTS OF BOX MAKING SURE ASSEMBLY AREA IS FLAT AND CLEAN.
- 2) SEPARATE ALL HARDWARE BY SIZE.
- 3) PLACE CART TOP FACE DOWN ON A RUG, CARTON OR OTHER PROTECTIVE SURFACE. BE CAREFUL NOT TO ALLOW DRAWER UNIT TO FALL OUT.
- 4) ATTACH CORRESPONDING LEAVES TO CART USING #10X3/4 SCREWS.(HOLES ARE PRE-DRILLED)
- 5) ATTACH LEAF SUPPORT BY FASTENING THE SUPPORT TO THE LEAF AND THE CART, MAKING SURE THE LARGER END OF THE SUPPORT IS ATTACHED TO THE LEAF AND THE SMALLER END TO THE APRON. USE THE REMAINING #10X3/4 SCREWS. (HOLES ARE PRE-DRILLED)
- 6) ATTACH EACH OF THE FOUR LEGS TO THE OUTSIDE OF THE APRON CORNERS USING TWO 1/4X1-1/4 HEAD BOLTS W/ NUTS & WASHERS. DO NOT FULLY TIGHTEN AT THIS TIME.
- 7) ATTACH EACH SHELF TO THE LEGS USING TWO 1/4X1/2 PHILLIPS HEAD BOLTS W/ NUTS & WASHERS AT EACH SHELF CORNER PER LEG. DO NOT FULLY TIGHTEN BOLTS AT THIS TIME.
- 8) GO BACK AND FULLY TIGHTEN BOLTS IN STEP 6 AND 7.
- 9) SECURE CASTERS INTO BOTTOM OF LEGS BY PUSHING IN UNTIL THEY SNAP INTO PLACE.
- 10) SECURE LEAVES AND DRAWER, THEN TURN CART UPRIGHT WITH ASSISTANCE.

BE SURE TO FOLLOW MAINTENANCE AND CARE GUIDELINES.

ELEGANTE CART

