


PRODUCT ASSEMBLY INSTRUCTIONS • ITEM# D006-B/D022-B ROUND CAN DOG WASTE STATION

D006-B/D022-B DOG WASTE STATION

PARTS LIST:

- Can (1)
- Post (1)
- Dispenser (1)
- Sign (1)
- Hardware Pack (1)
- Dispenser Keys (2)
- 400 Dog Waste Bags
- 50 Can Liners



*INSIDE Dispenser



CAN (1)



DISPENSER (1)

(ON!Epu!®, Roll Bag, Tie-Handle or MittN Bag™ Dispenser)



HARDWARE (1)




SIGN (1)



400 DOG WASTE BAGS



50 CAN LINERS

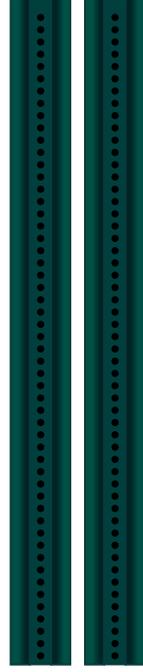

POST* (1)

*2 Post Sections 47 1/2" Each


NUTS & BOLTS LIST:

- 3" Bolt (6)
- 1 1/2" Bolt (2)
- Flat Washer (8)
- Split-Lock Washer (8)
- Hex Nuts (8)




ITEM# D006-B/D022-B DOG WASTE STATION ASSEMBLY INSTRUCTIONS


1. **ASSEMBLE POST:** Overlap post one 4" onto post two. Thread 2 bolts (B) with 2 flat washers (C) to connect. Tighten with nuts and lock washers (D, E).
 2. **MARK ASSEMBLED POST** 14" from post end: bury the post in concrete level to 14" mark.
 3. **ATTACH CAN:** Install 5" above ground; thread the 2 bolts (A) with 2 flat washers (C) through the can from the inside. Line up the bolts with holes in the post and tighten with nuts and lock washers (D, E).
 4. **ATTACH DISPENSER:** Line up dispenser 12" ABOVE the top of the can. Thread bolts from the inside of the dispenser. Be sure to put **FLAT WASHERS** on each bolt before threading bolts through the dispenser. Secure to post with nuts and washers.
 5. **ATTACH SIGN** to top of post with 2 bolts, nuts and washers (use 2 A, C, D, E).
 6. **FILL DISPENSER** with bags – Install Can Liner.
- PLEASE BE SURE TO TIGHTEN ALL NUTS AND BOLTS SECURELY

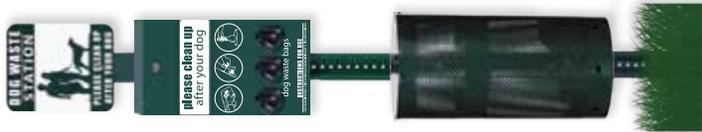


D006-B/D022-B_2016

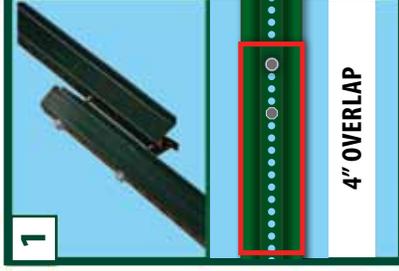


4" OVERLAP

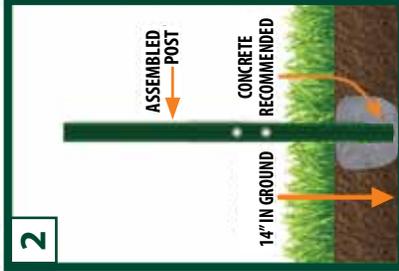

ASSEMBLED POST
14" IN GROUND
CONCRETE RECOMMENDED

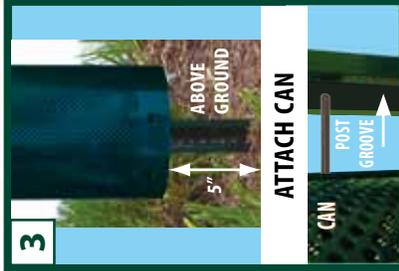


ATTACH CAN

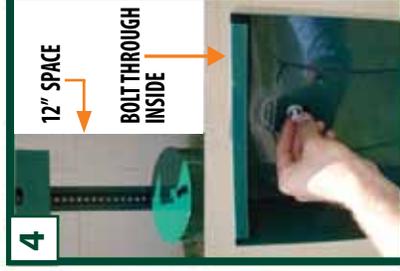

12" SPACE
BOLT THROUGH INSIDE



ADD BAGS/LINER

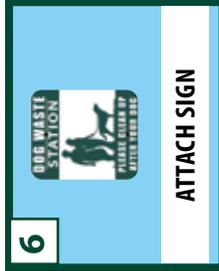

ATTACH SIGN



PRODUCT ASSEMBLY INSTRUCTIONS • ITEM# D007/D023 MINI DOG WASTE STATION

D007/D023 DOG WASTE STATION

PARTS LIST:

- Post (1)
- Dispenser (1)
- Sign (1)
- Hardware Pack (1)
- Dispenser Keys (2)
- 400 Dog Waste Bags

*INSIDE Dispenser



DISPENSER (1)


(ONEpul®, Roll Bag, Tie-Handle or MittN Bag™ Dispenser)



HARDWARE (1)



SIGN (1)

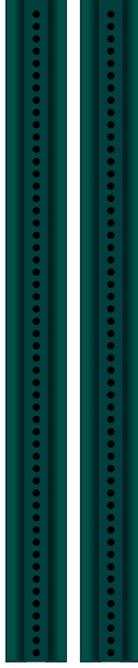

POST* (1)

*2 Post Sections 47 1/2" Each



400 DOG WASTE BAGS

NUTS & BOLTS LIST:

- 3" Bolt (4)

A



- 1" Bolt (2)

B



- Flat Washers (6)

C




- Split-Lock Washer (6)

D



- Hex Nuts (6)

E

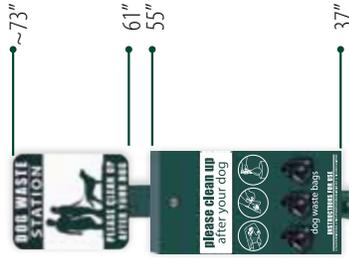

GROUND LEVEL

ITEM# D007/D023 DOG WASTE STATION ASSEMBLY INSTRUCTIONS

1. **ASSEMBLE POST:** Overlap post one 4" onto the flat end of post two. Thread 2 bolts (C) with 2 flat washers (D) to connect. Tighten with nuts and lock washers (E, F).
2. **MARK ASSEMBLED POST** 14" from end: Bury the post in concrete level to 14" mark.*
3. **ATTACH SIGN:** Bolt sign to the top of the POST and secure with washers, lock washers and nuts.
4. **ATTACH DISPENSER:** Use **TWO (2) bolts and washers** from inside the dispenser to secure the dispenser to the post.
5. **FILL DISPENSER** with bags.

*NOTE: IF A SHORTER OVERALL HEIGHT IS DESIRED, OVERLAP POSTS GREATER AMOUNT OR BURY POST DEEPER IN GROUND.

