




est. 1931

# OVERHEAD STRUCTURE ASSEMBLY

## INSTALLING LIGHT SUPPORT TO ANGLED OCS

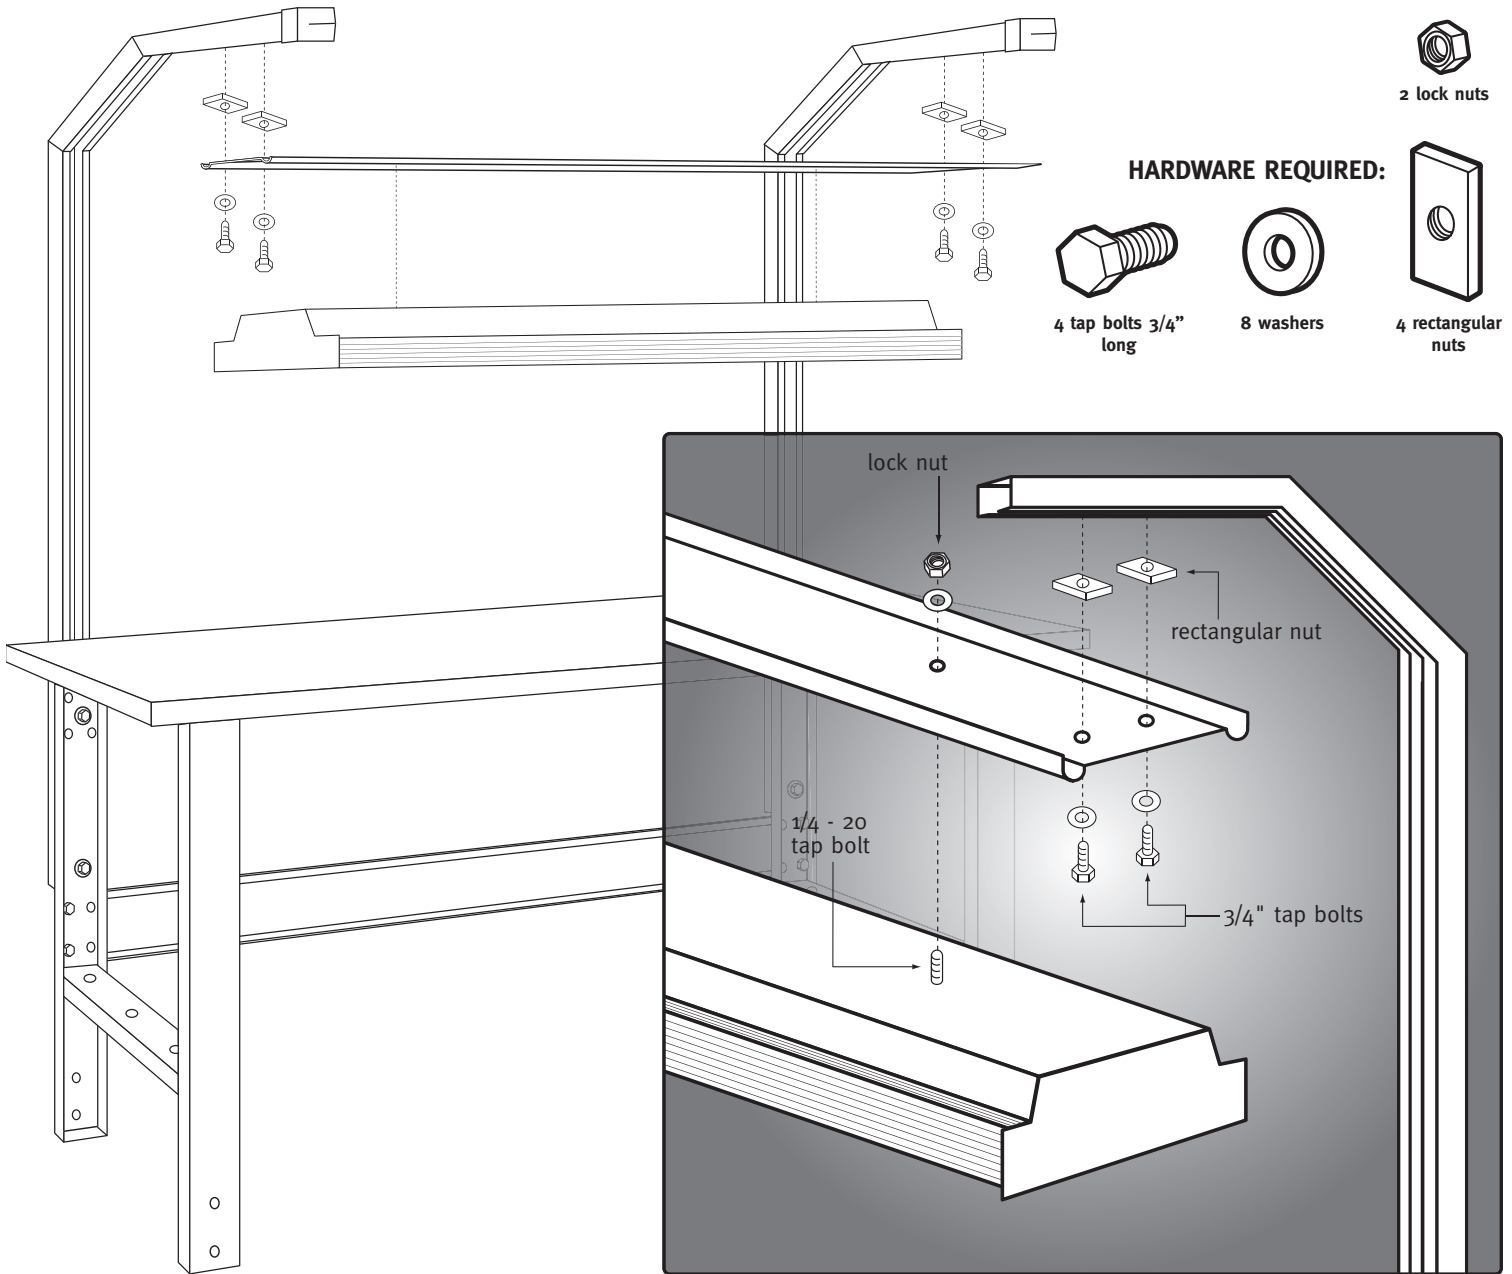

### MOUNTING LIGHT SUPPORT TO ANGLED OVERHEAD STRUCTURE.

Hardware required: 4 rectangular nuts, 4 - 3/8" tap bolts, and 4 washers. Light supports look very similar to stringers, but have two holes 1/4" diameter to accept light fixtures. Loosely assemble hardware to support. Slide rectangular nuts into the channel on the overhead uprights. Tighten bolts securely being sure that rectangular nuts are turned counter clockwise as far as possible.