


est. 1931



OVERHEAD STRUCTURE ASSEMBLY

MOUNTING PEGBOARD SYSTEM TO OVERHEAD

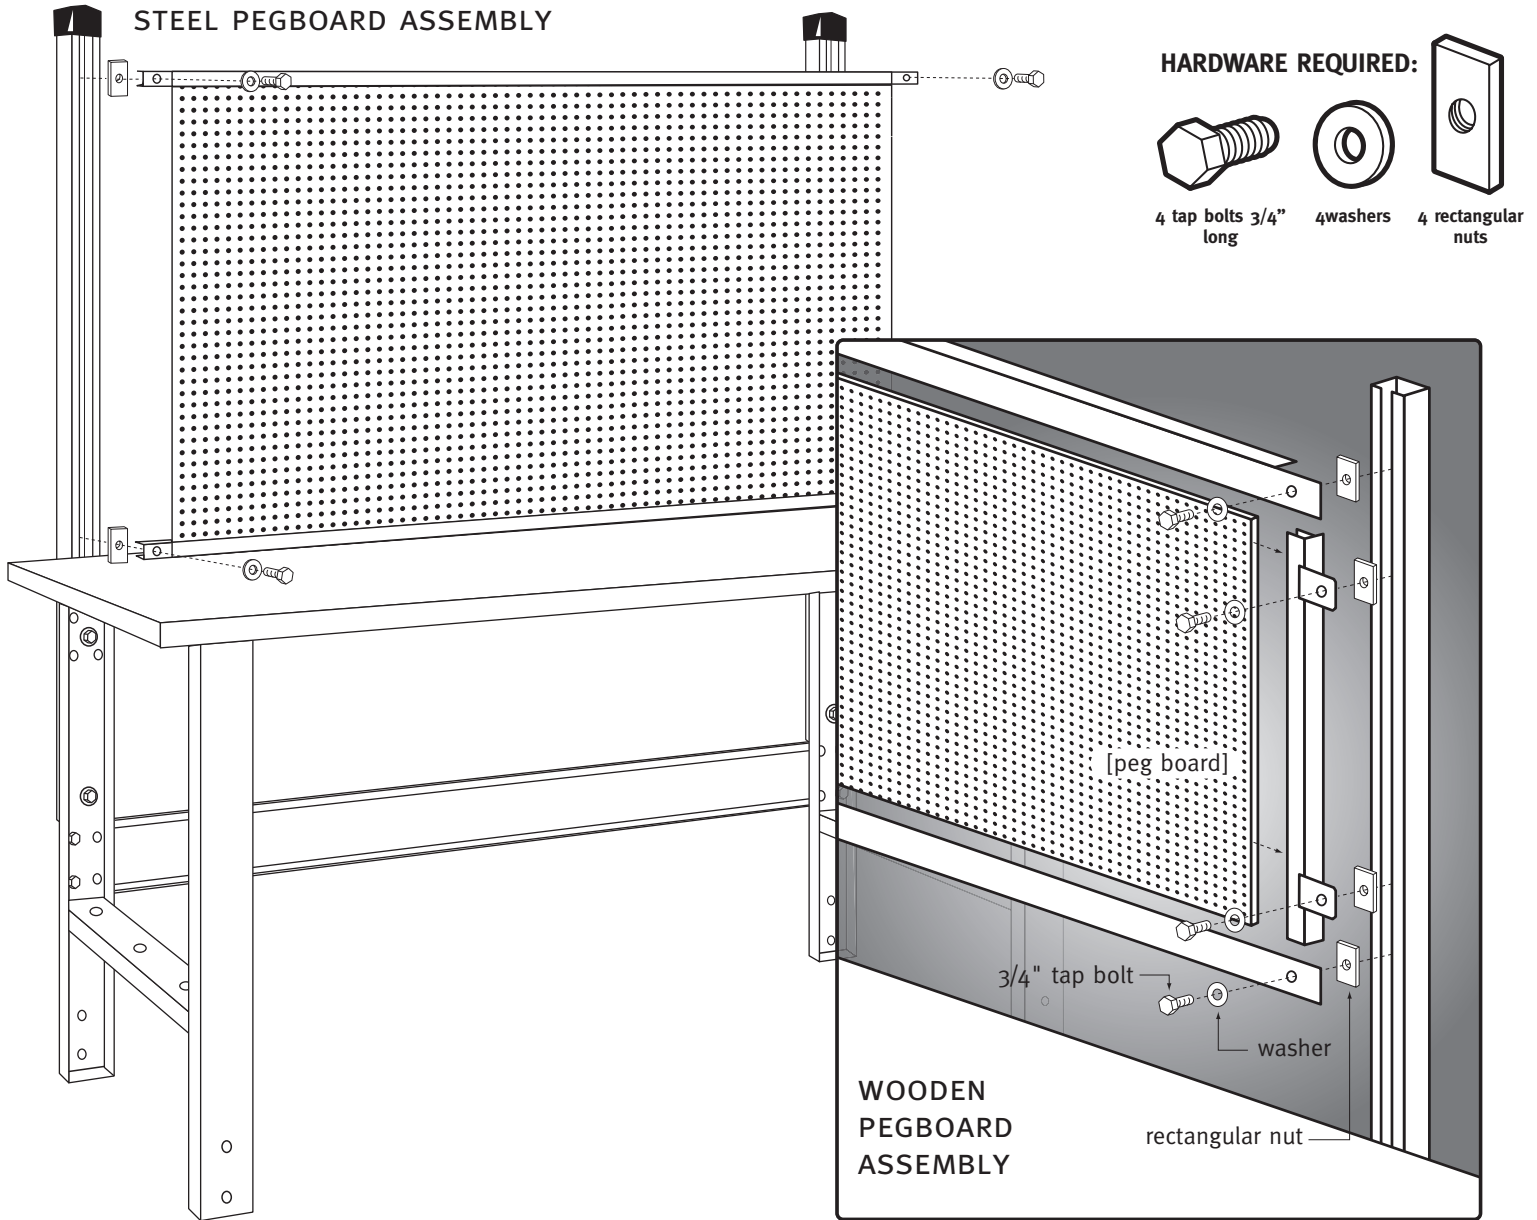

ASSEMBLY OF A PEGBOARD TO AN OVERHEAD STRUCTURE.

Begin with overhead structure already assembled and attached to the back of the bench. Attach the bottom rail of the pegboard system to the overhead structure flush against the top of the bench with the bend facing back. Do this by loosely threading 2 rectangular nuts to 2-3/8" hex bolts and washers. Slide the rectangular nuts into the channel of the overhead upright and tighten securely making sure that the rectangular nuts are turned clockwise as far as they can inside the upright. Next step is to attach the side channels for the pegboard to the uprights. The sides should be facing in and back as shown in the diagram to the left and attached in the same manner as the bottom rail using 2 rectangular nuts, 2-3/8" hex bolts and 2 washers. Take your pegboard with the white side facing forward and slide it into the side channels all the way to the bottom rail. The pegboard should slide behind the front bend of the bottom rail. The final step is to attach the top rail this is done in the same fashion as the bottom rail. Make sure all bolts are securely tightened.