


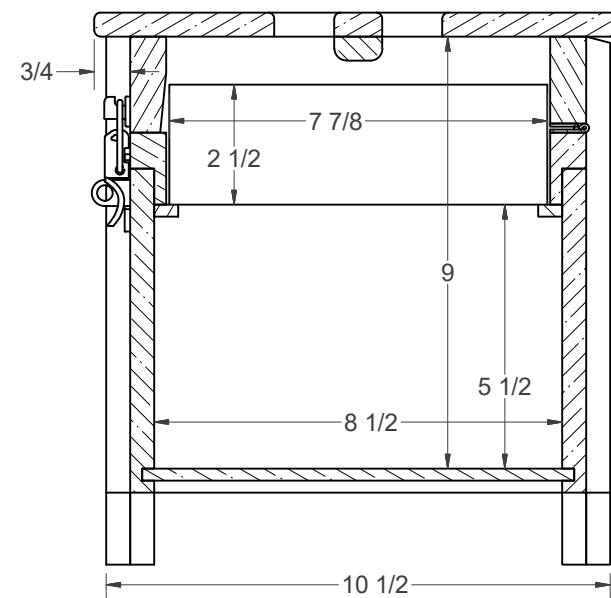


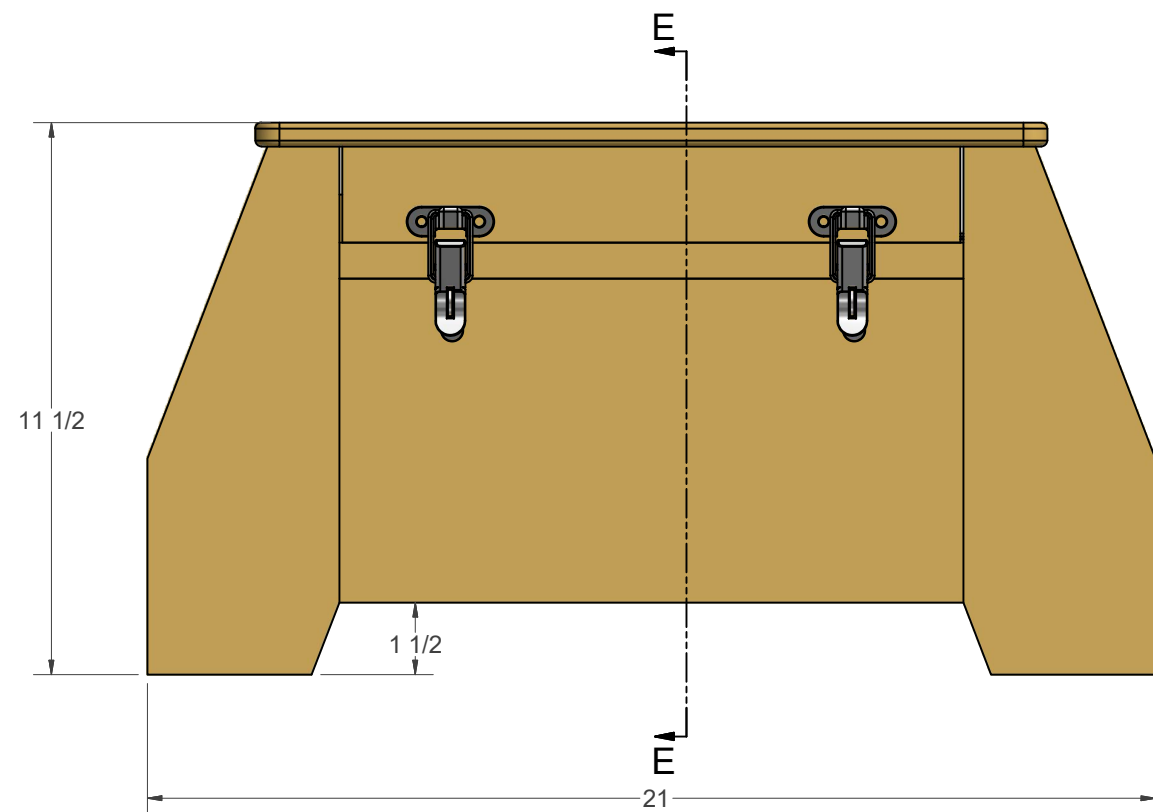


Shop Drawings

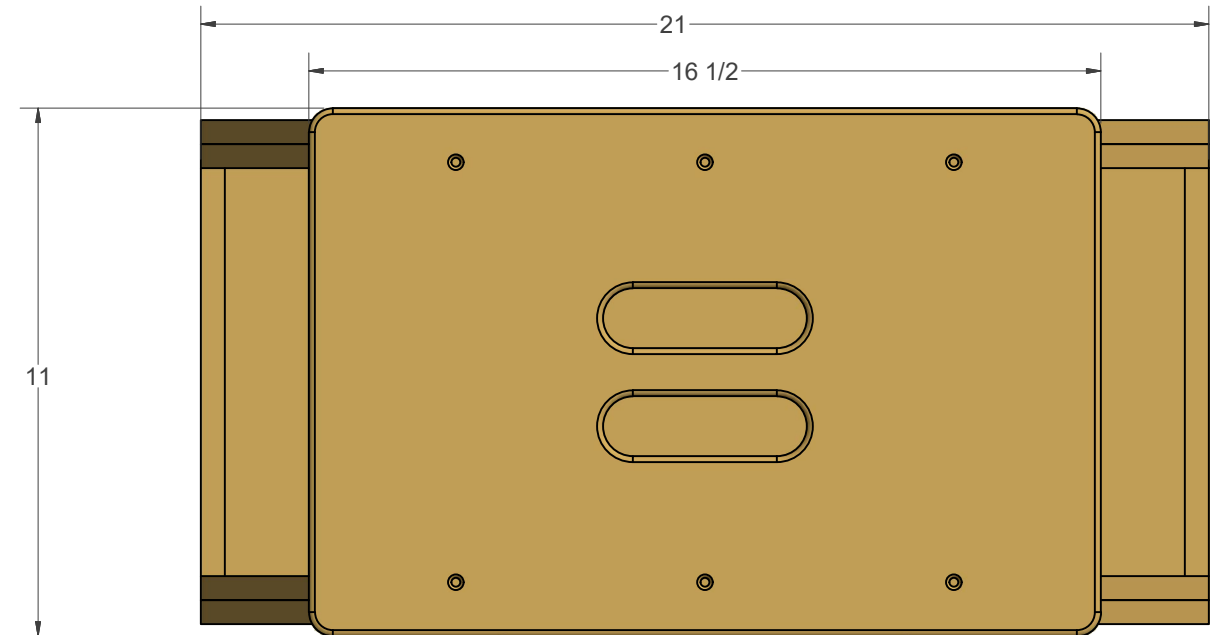


Utility Tool Tote



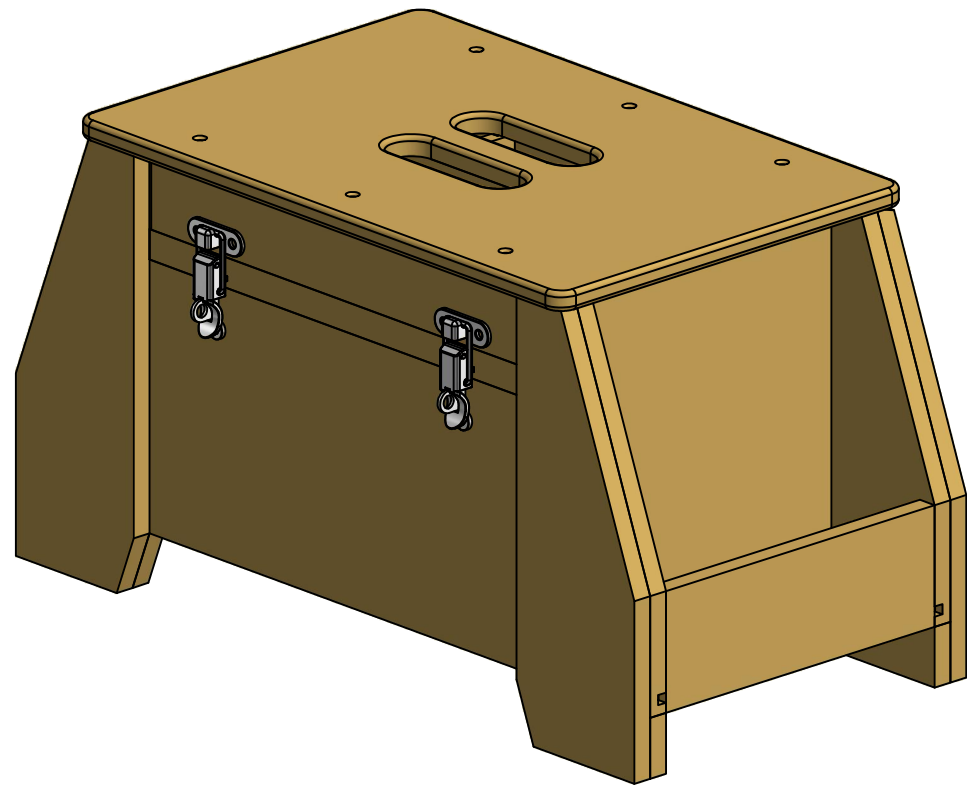


SECTION E-E
SCALE 1 / 2



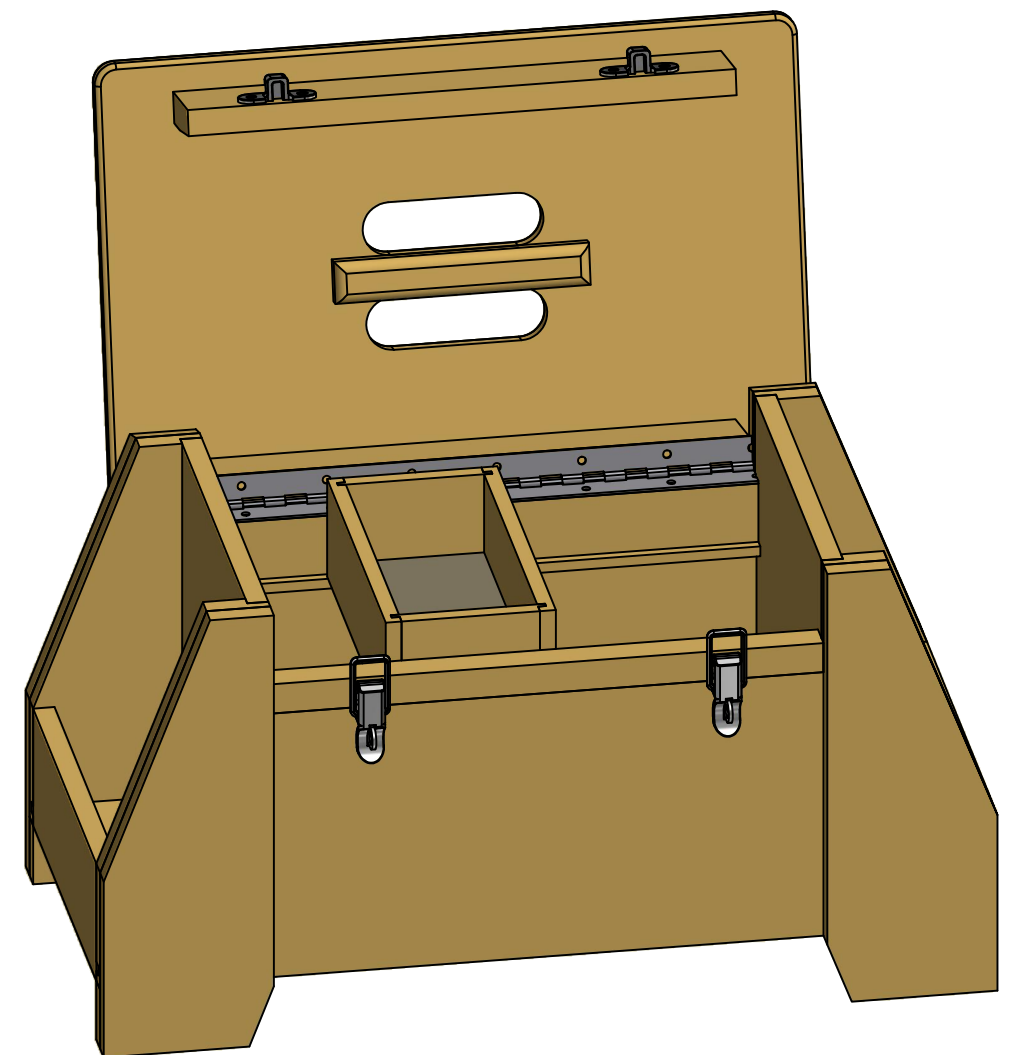


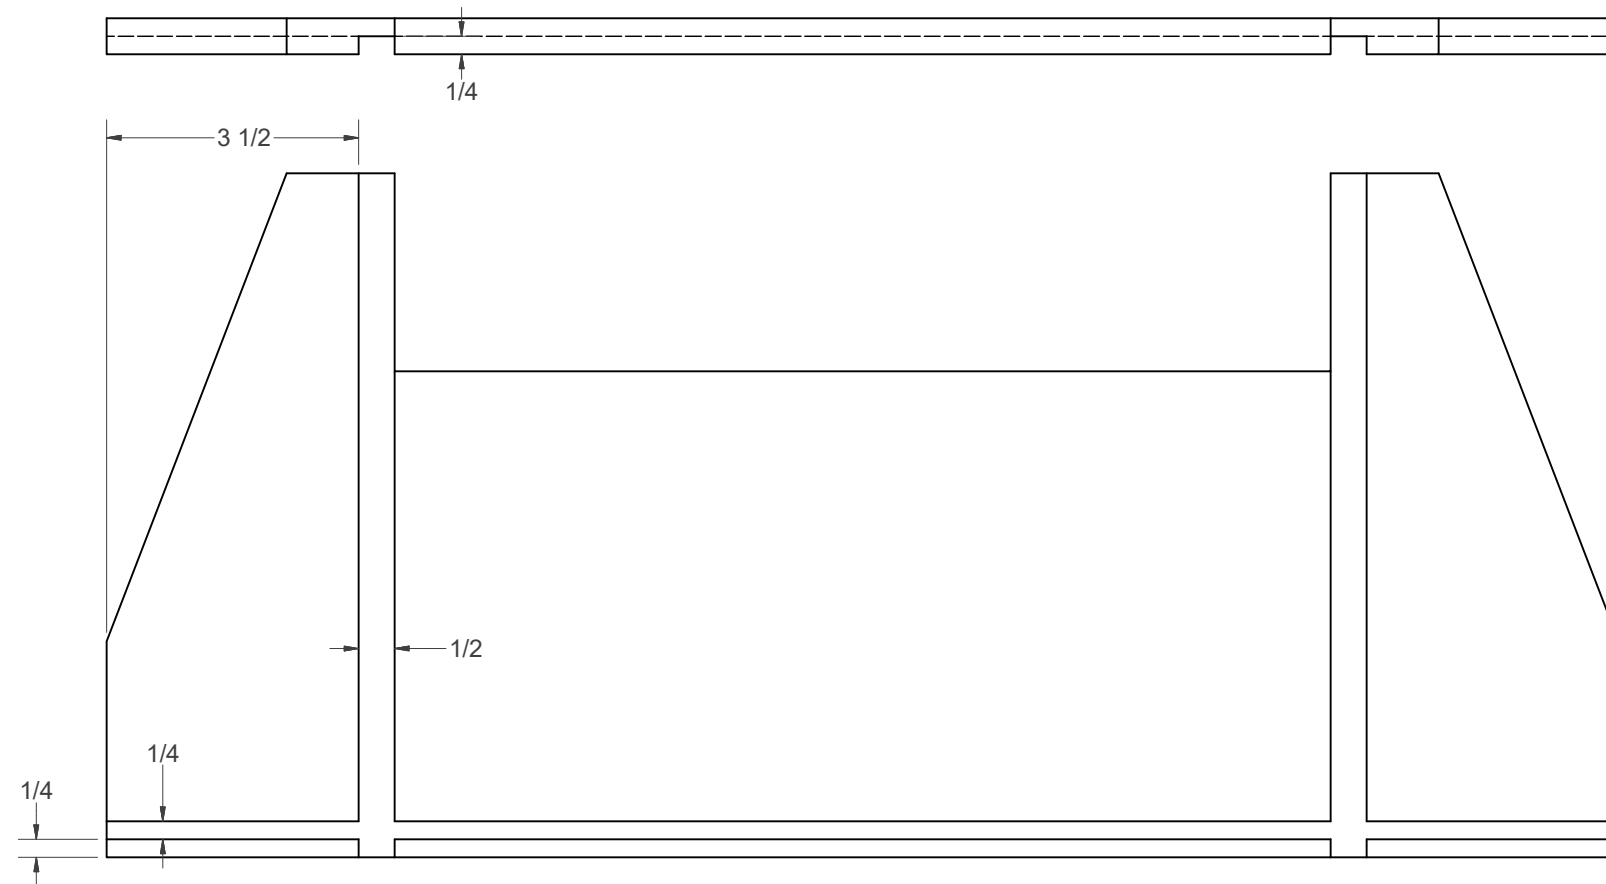




(A) - FRONT/BACK
(NEED 2)

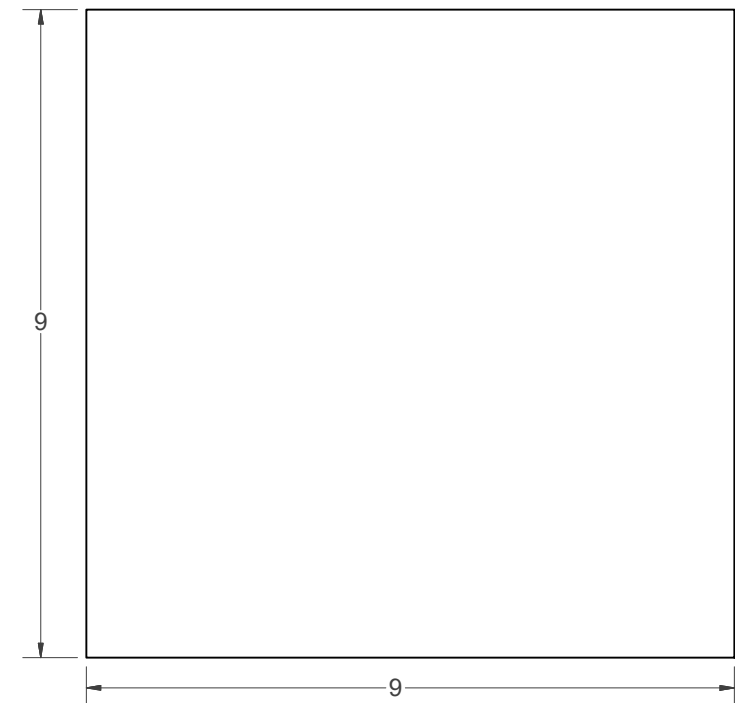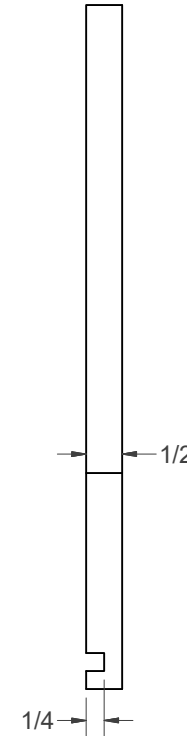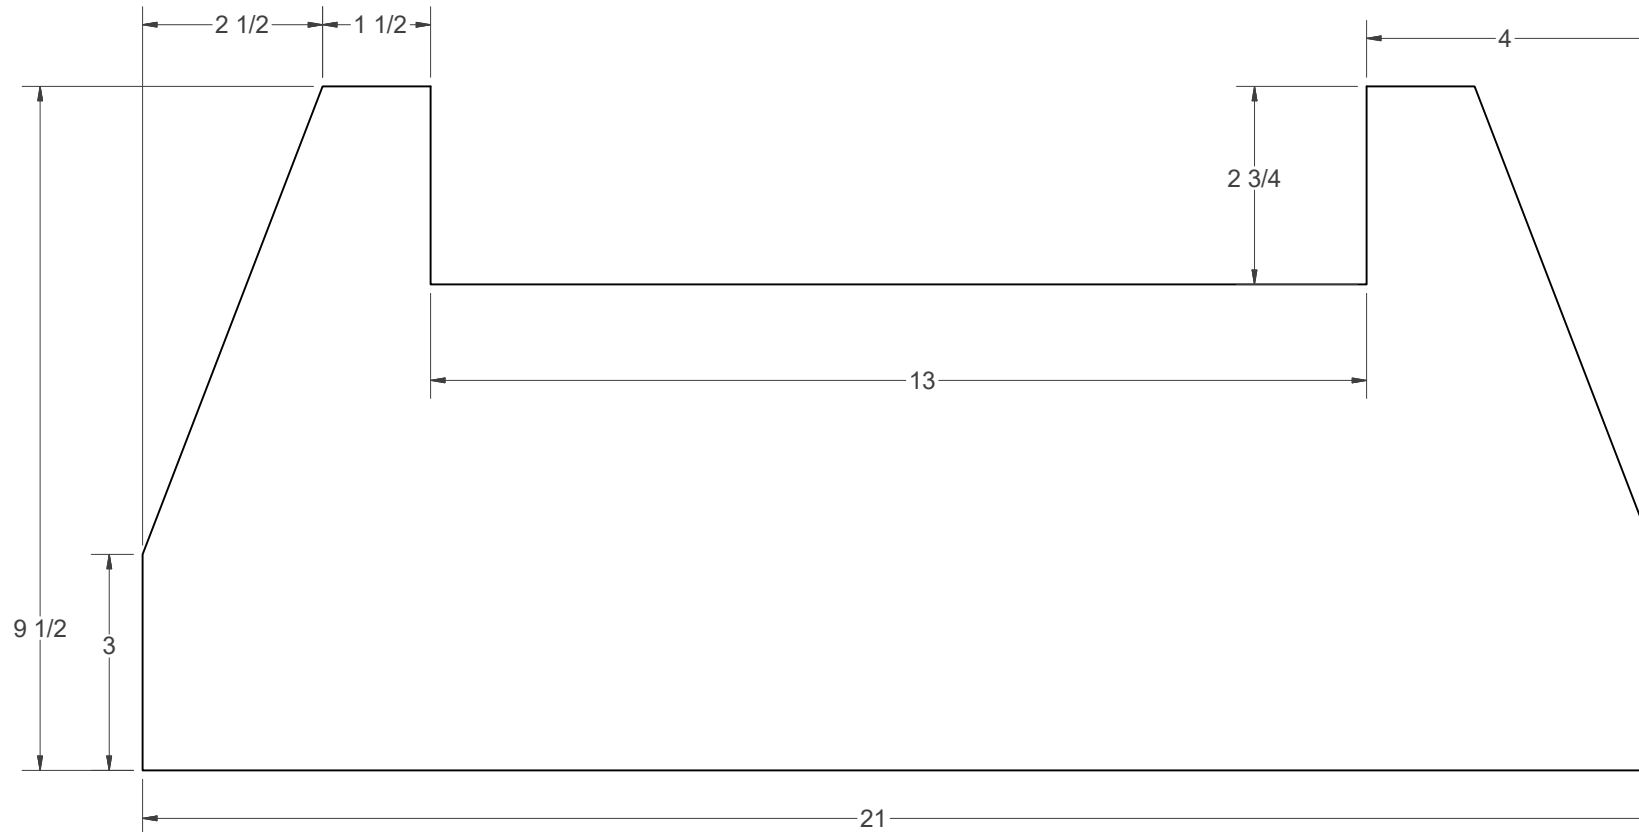


(D) - DIVIDER
(NEED 2)

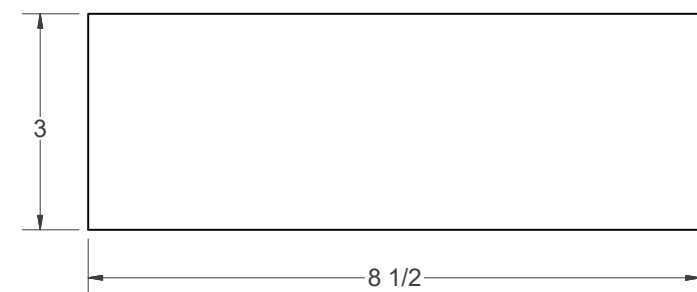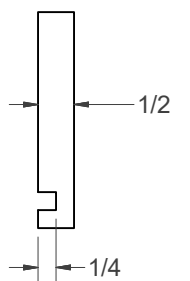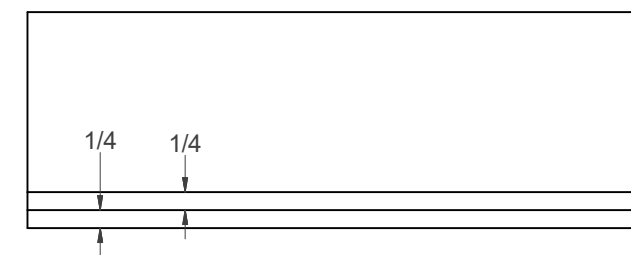


(E) - CUBBY END
(NEED 2)

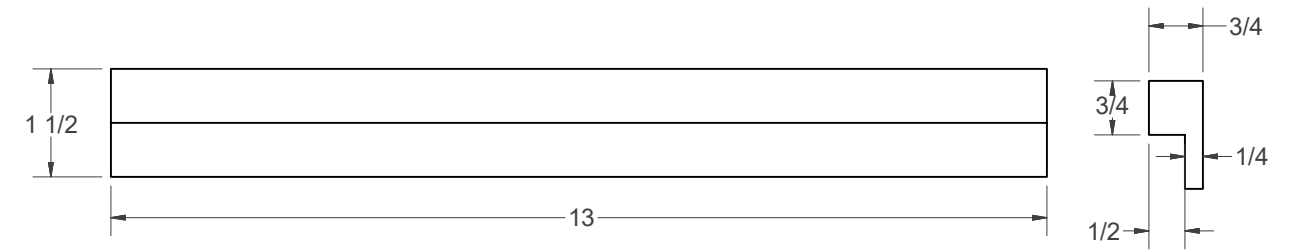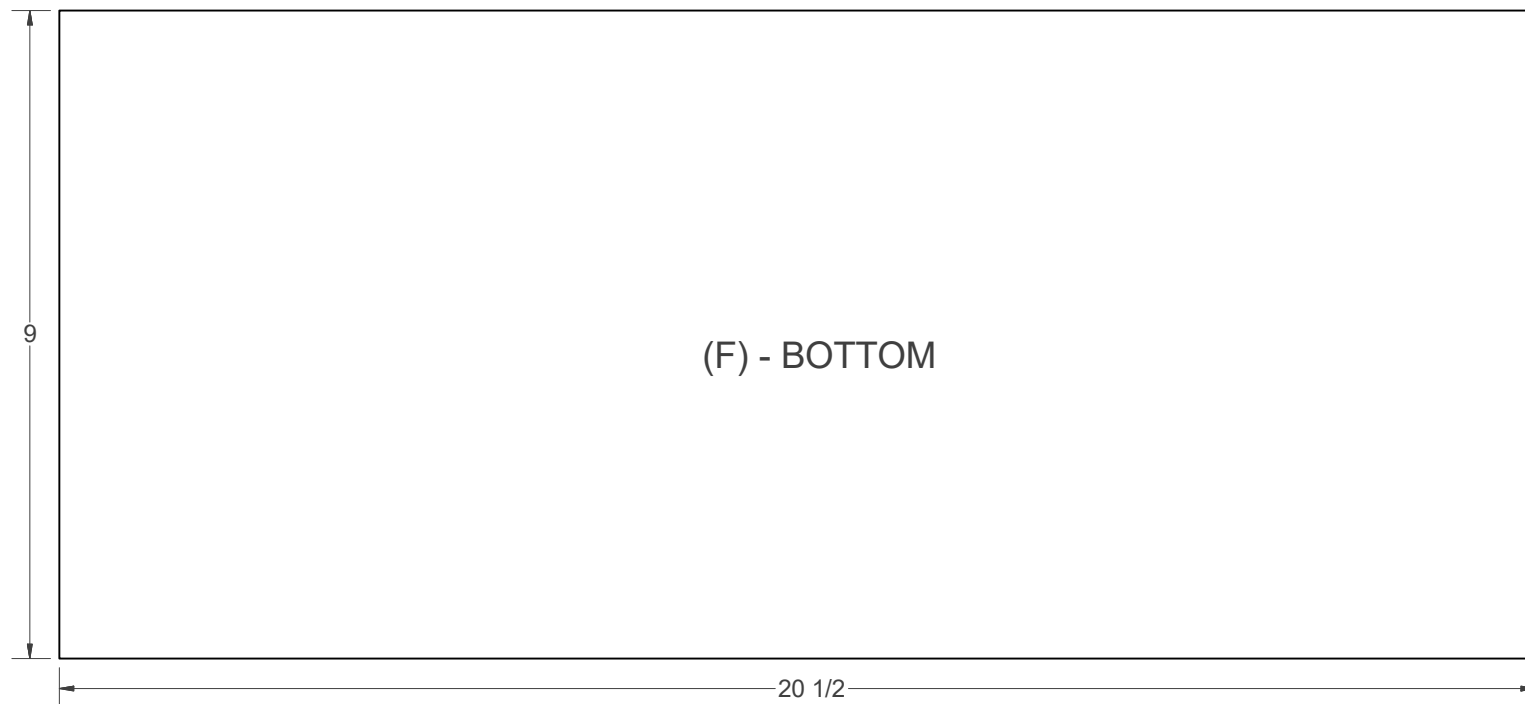


(G) - CAP (HARDWOOD)

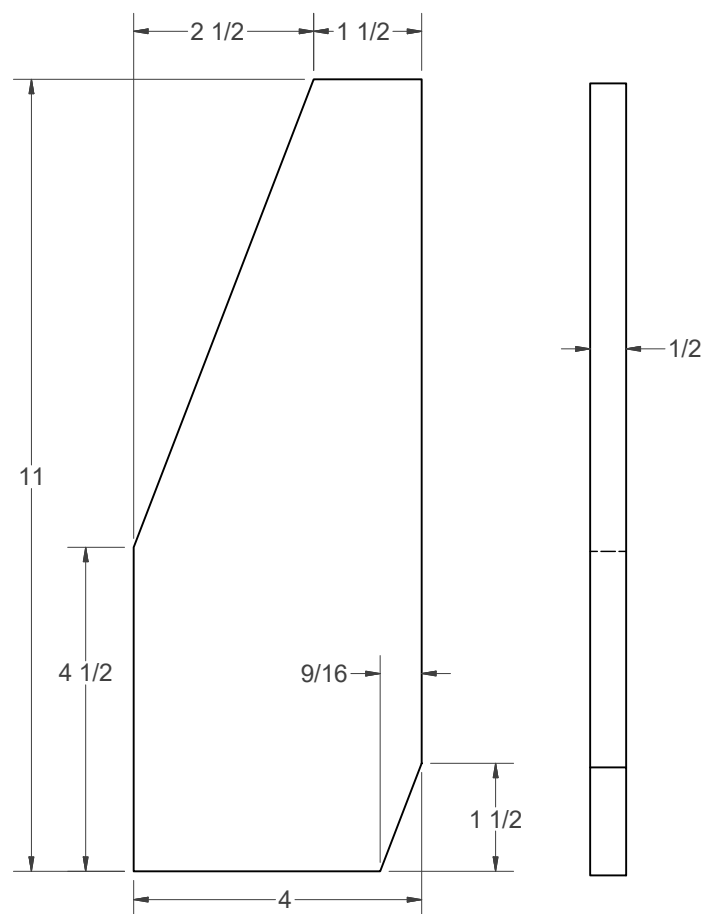


(B) - FRONT LEG
(NEED 2)
RIGHT/LEFT SAME

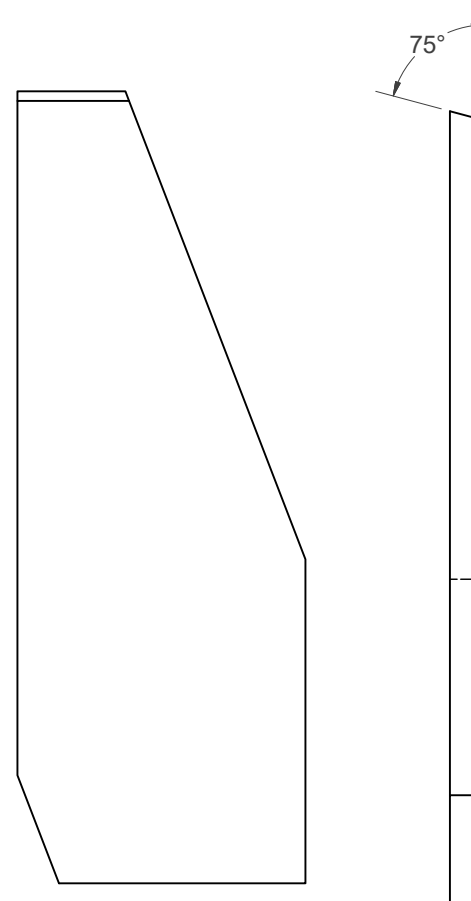

(B) - BACK LEG
(NEED 2)
RIGHT/LEFT MIRRORED

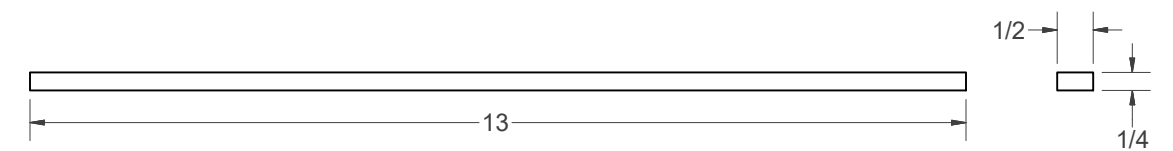


(H) - RUNNER (HARDWOOD)
(NEED 2)





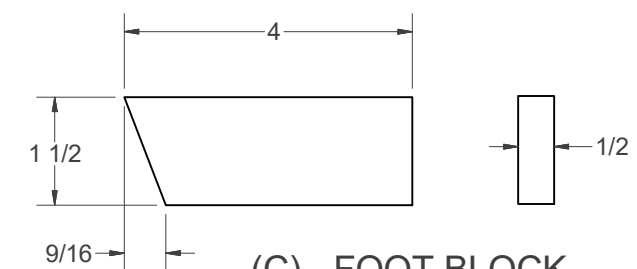


(C) - FOOT BLOCK
(NEED 4)


BASIC BOX ASSMEBLY

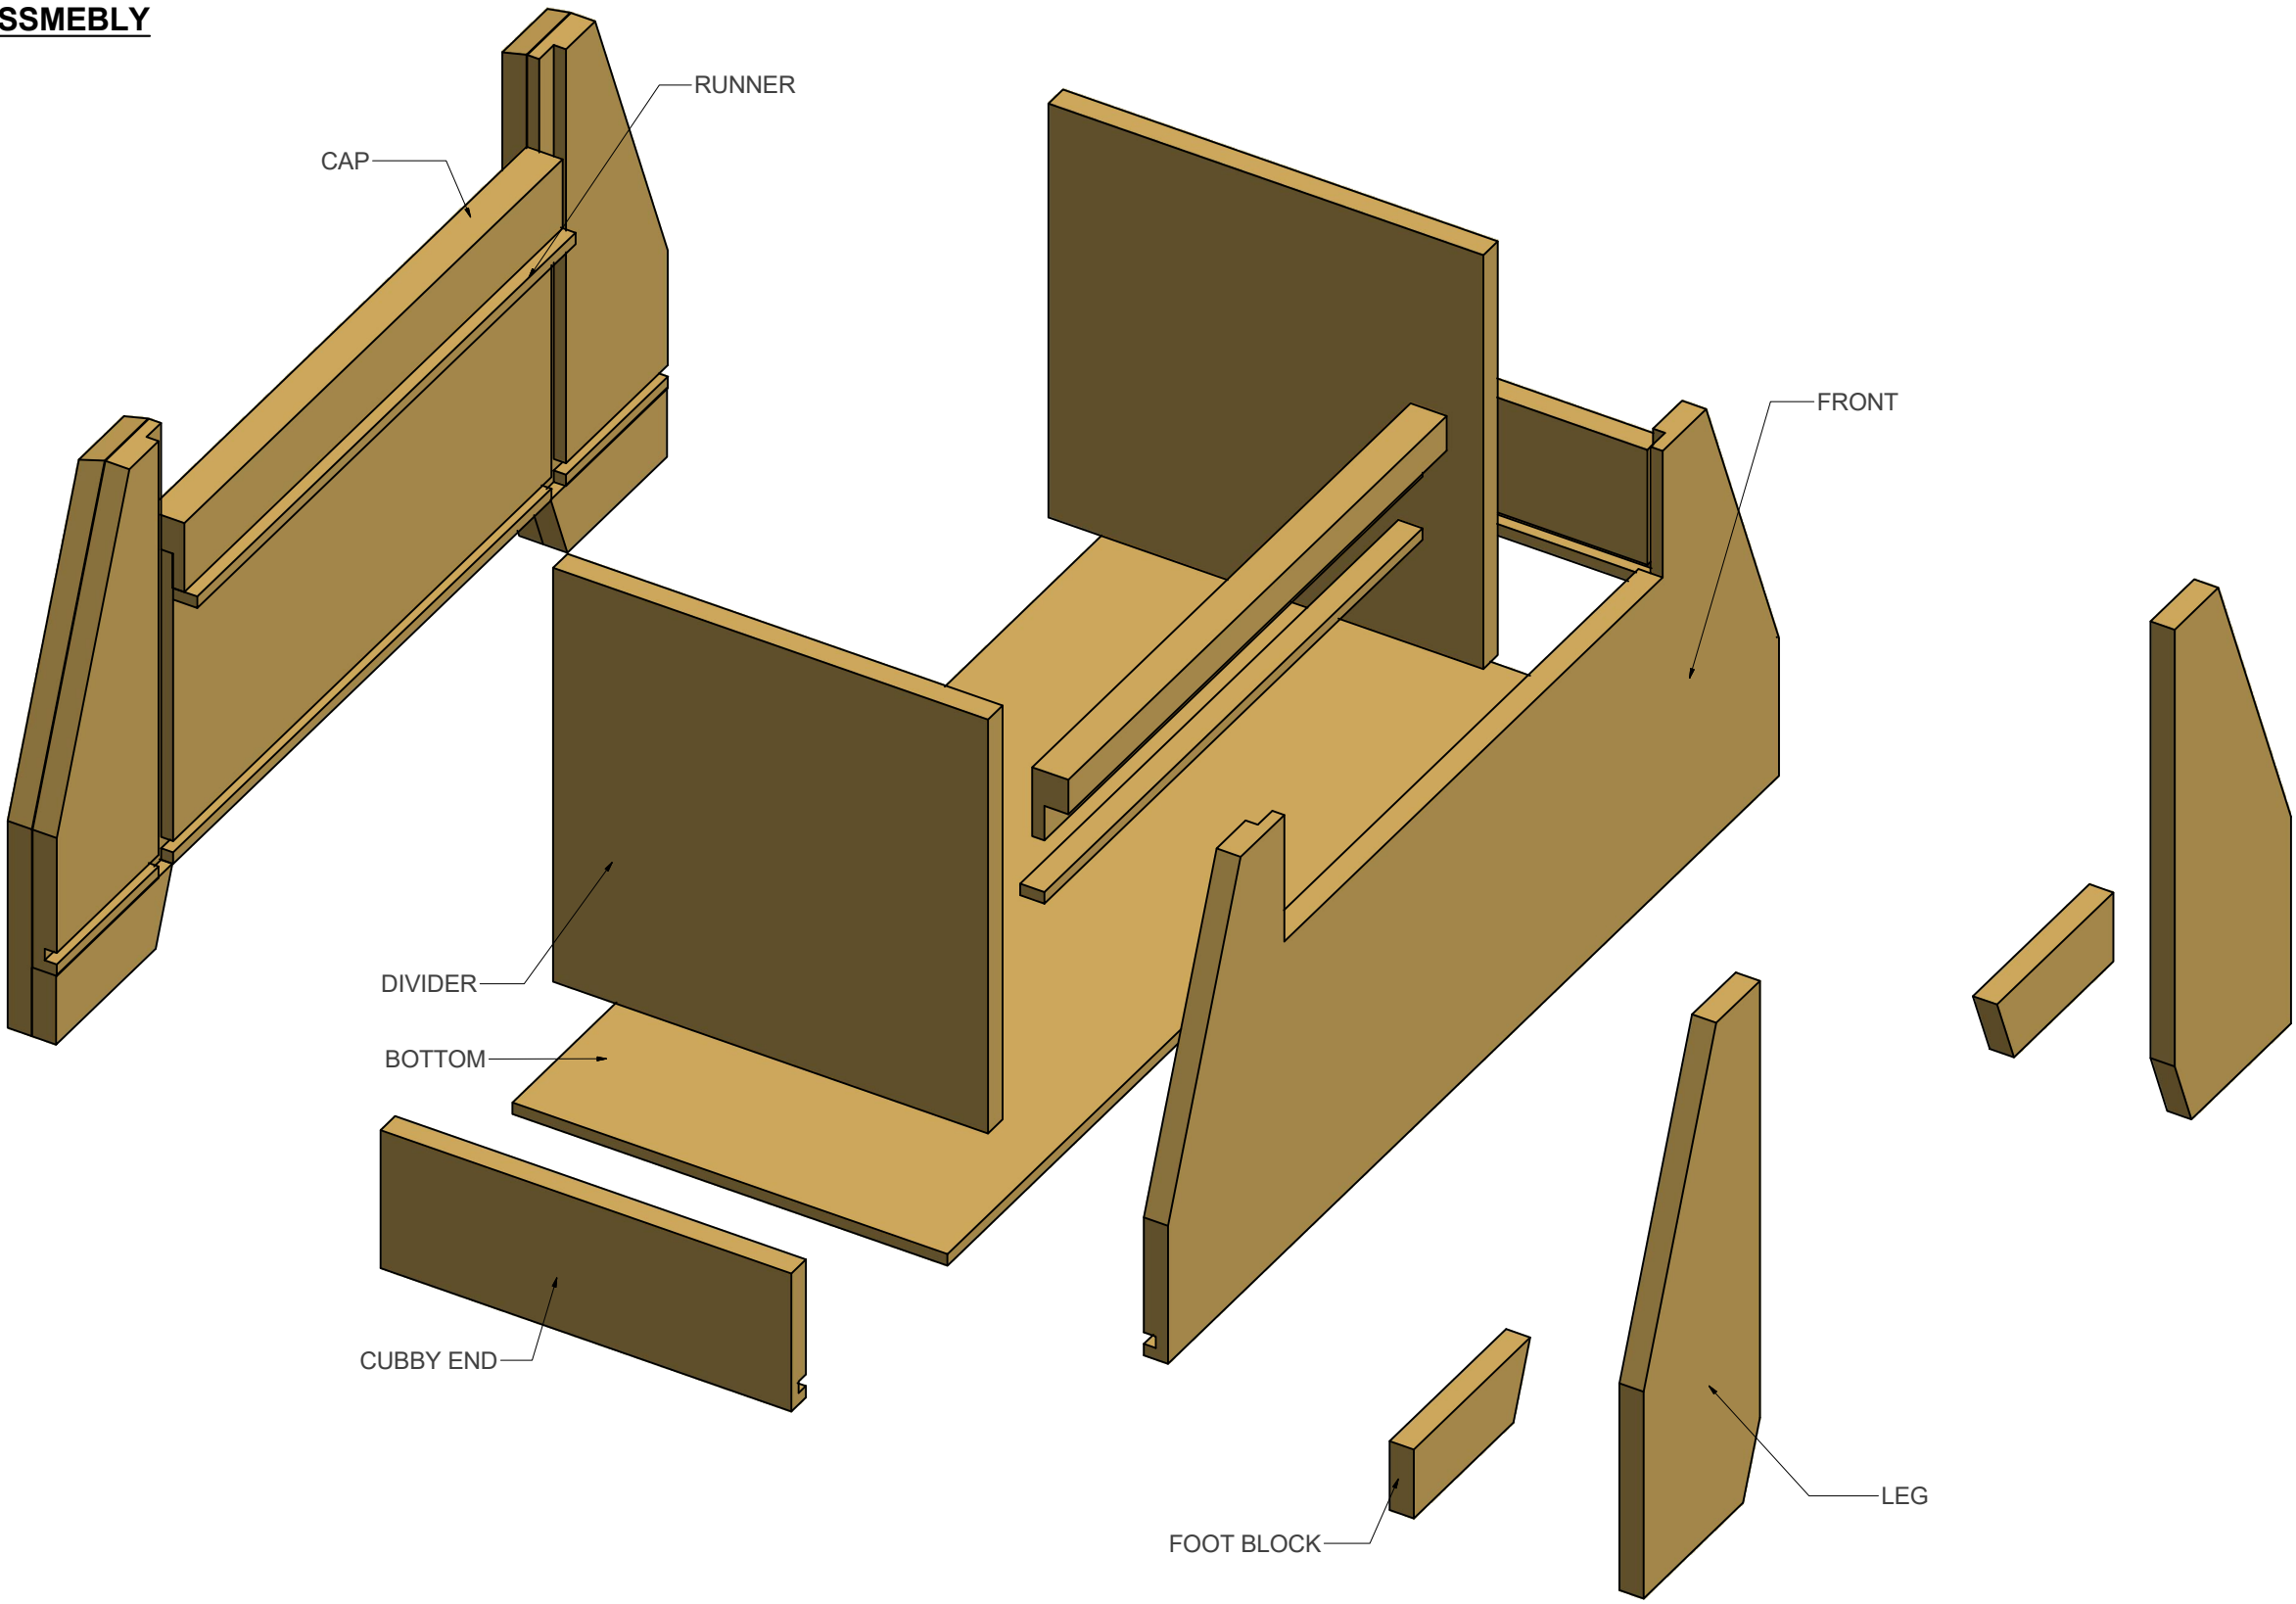


TRAY

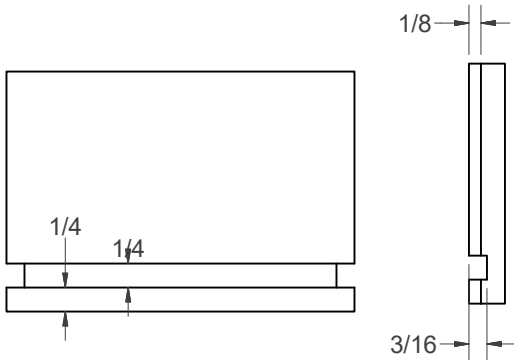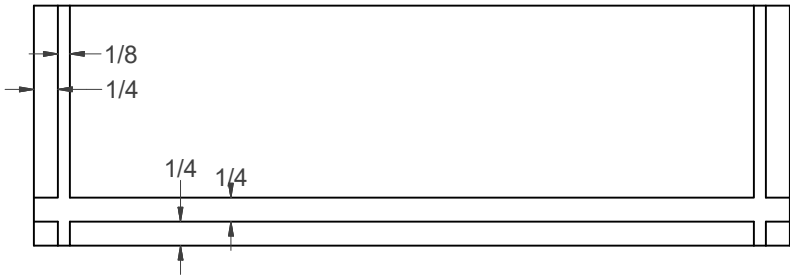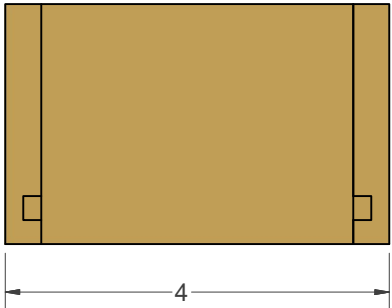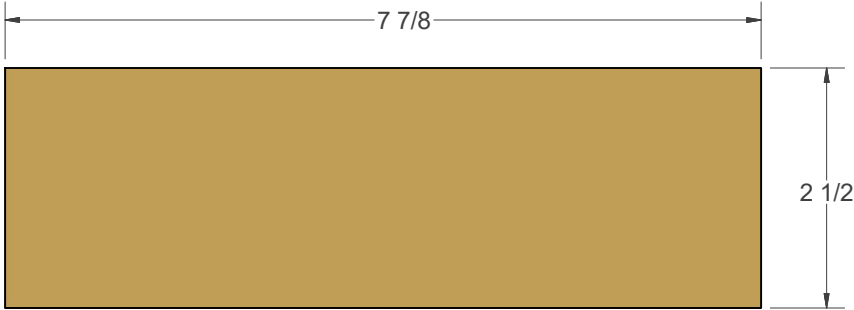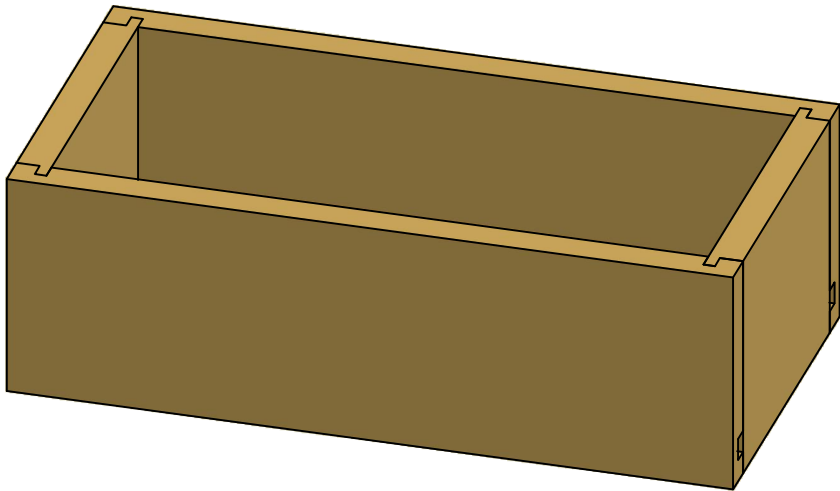


(I) - TRAY SIDE (HARDWOOD)
(NEED 2)



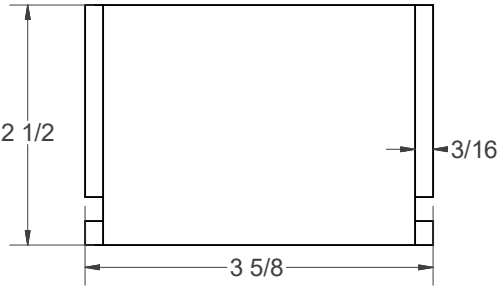


(J) - TRAY END (HARDWOOD)
(NEED 2)

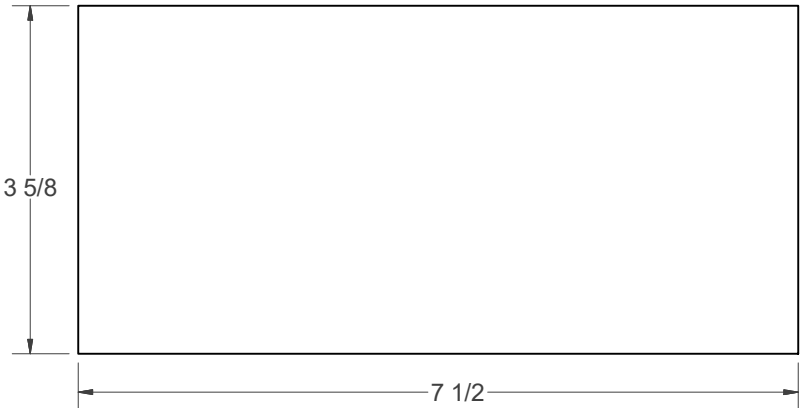


(K) - TRAY BOTTOM
(1/4" PLYWOOD)

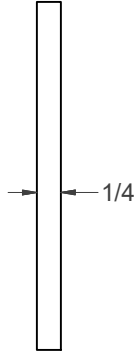


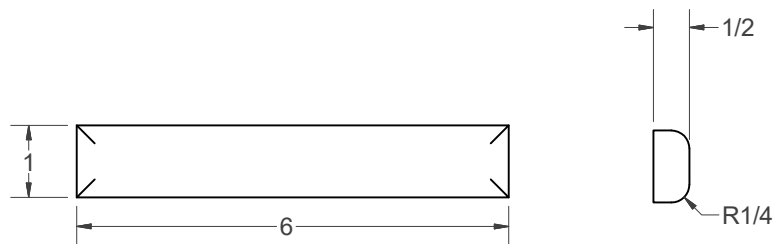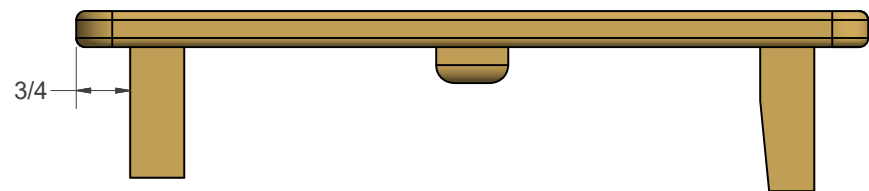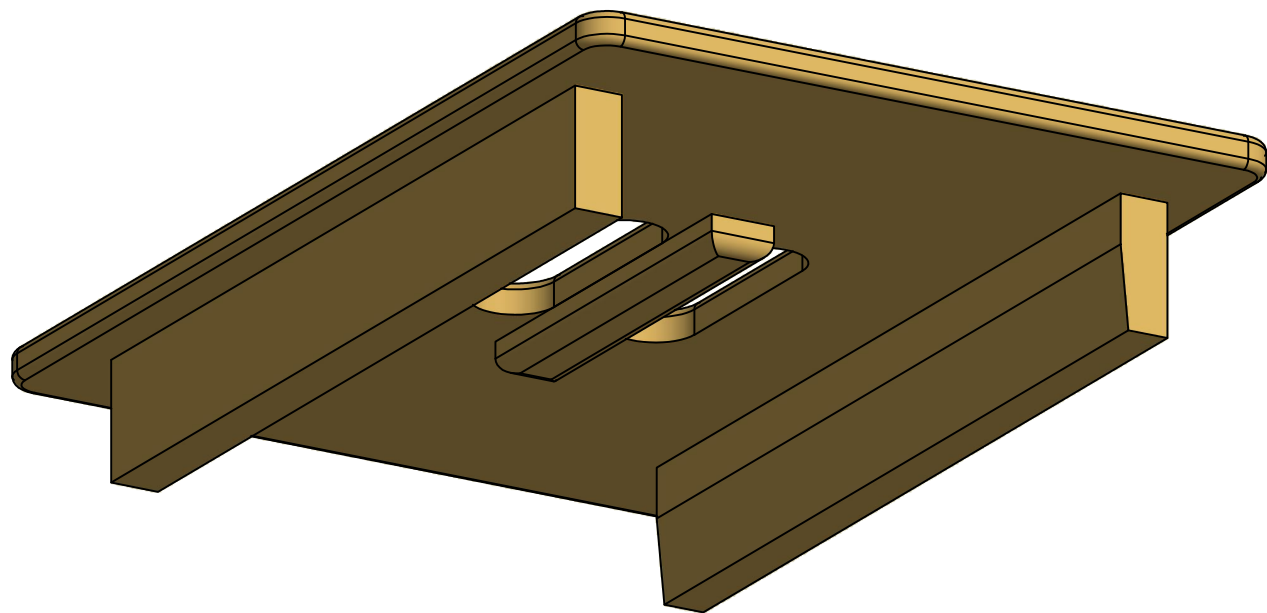


(M) - HANDLE SUPPORT (HARDWOOD)

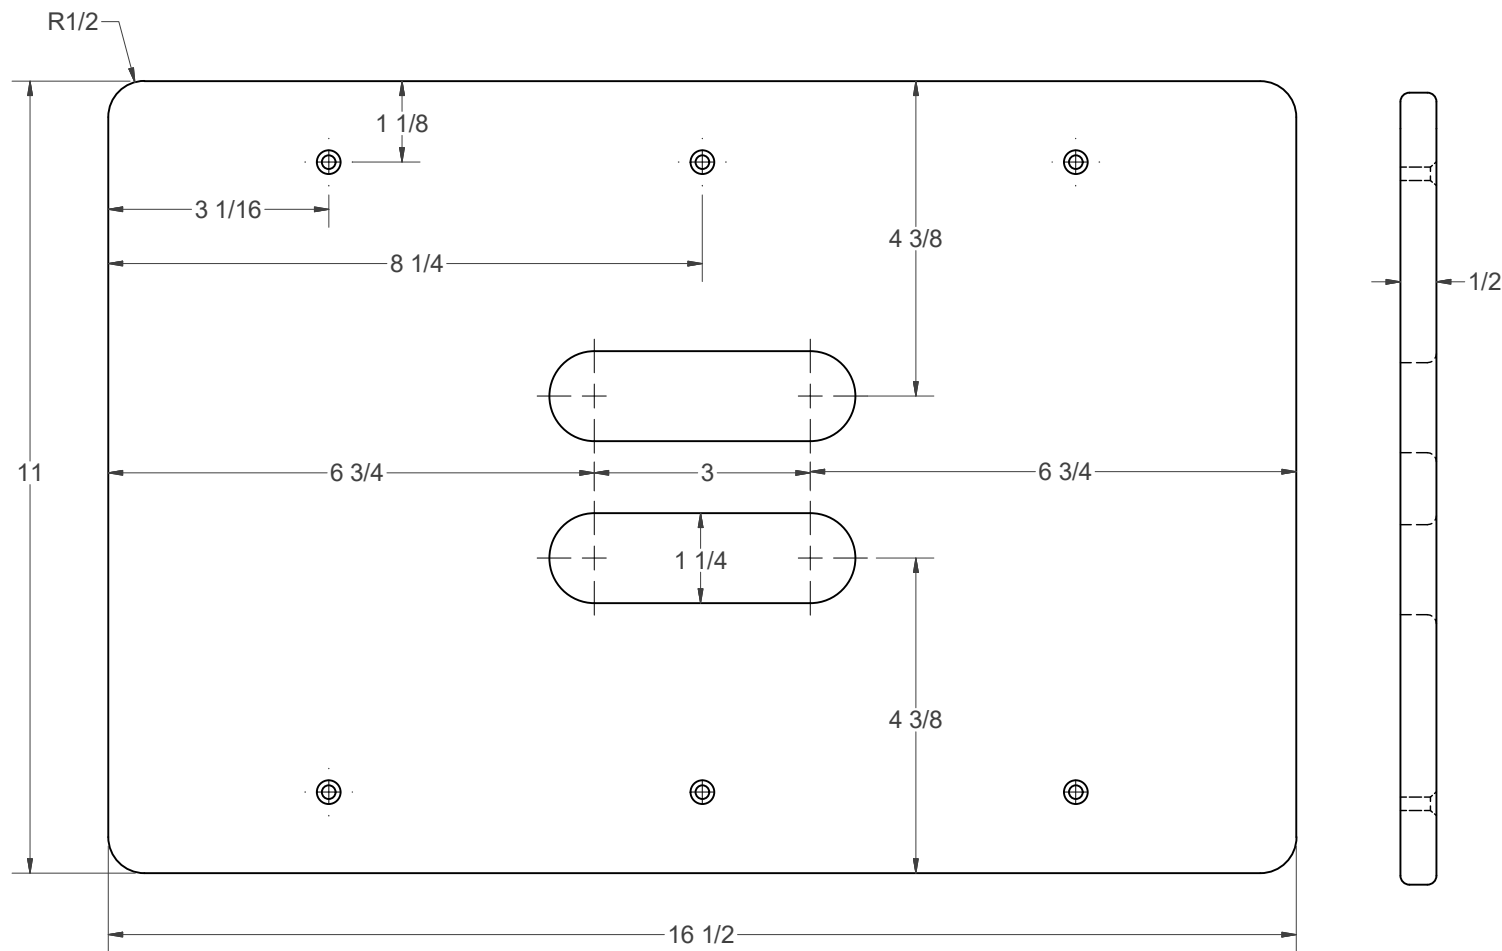

(L) - TOP

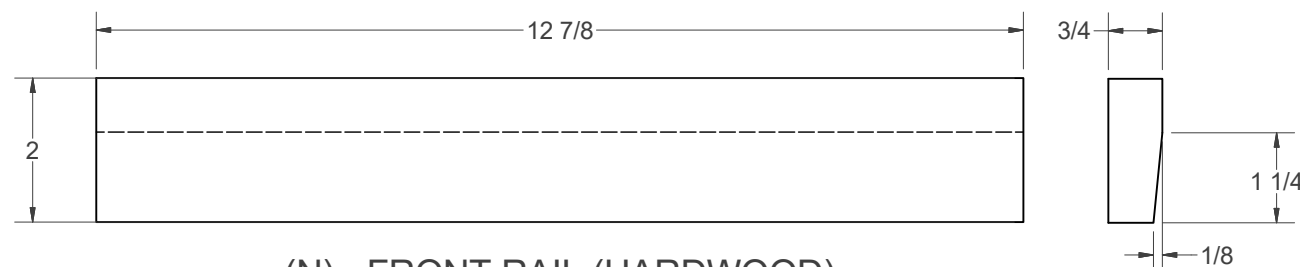

(N) - FRONT RAIL (HARDWOOD)

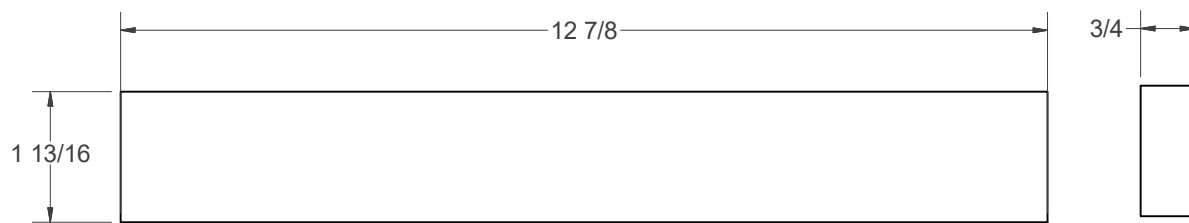

(O) - BACK RAIL (HARDWOOD)