

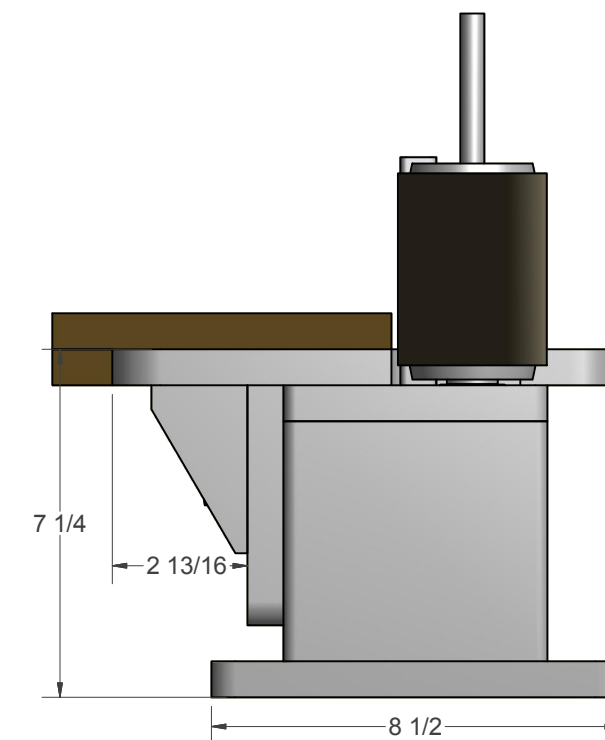
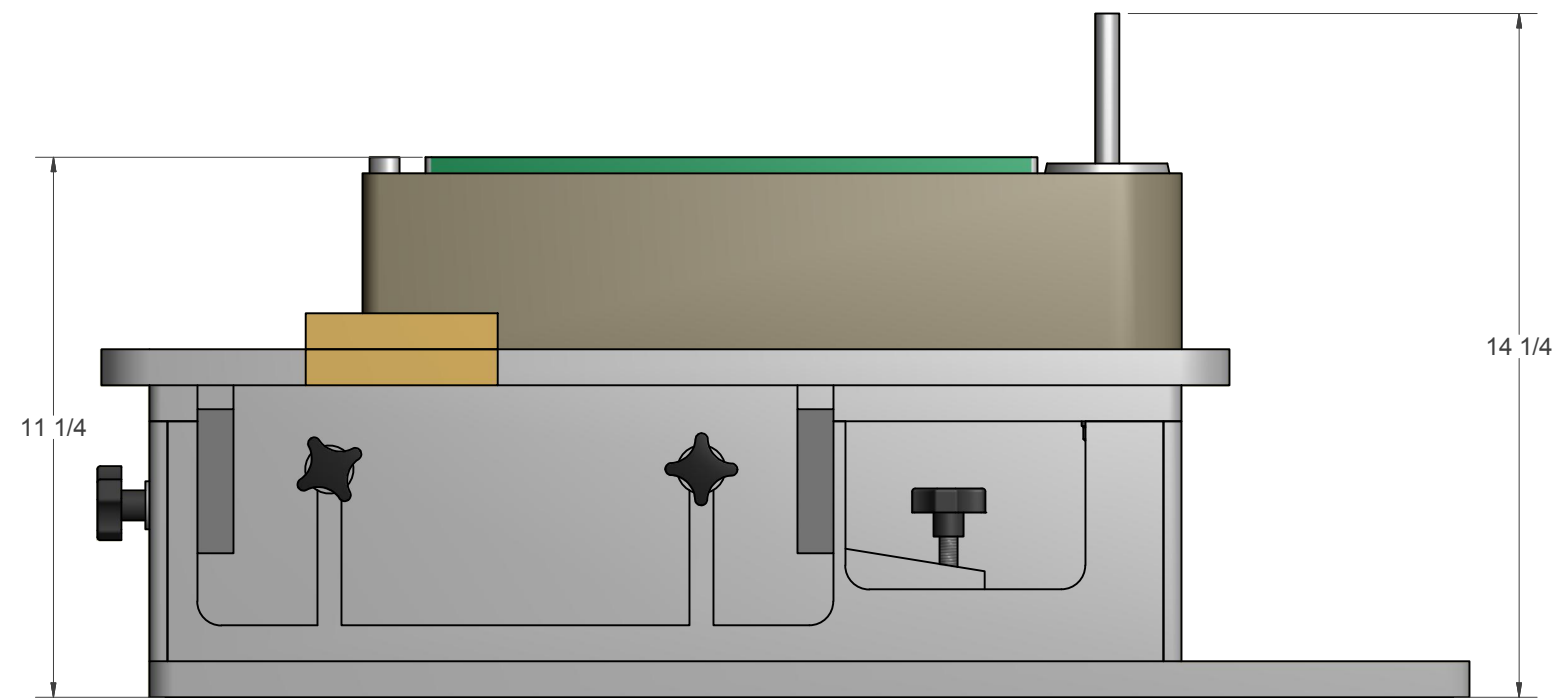



Woodsmith® PLANS

Shop Drawings

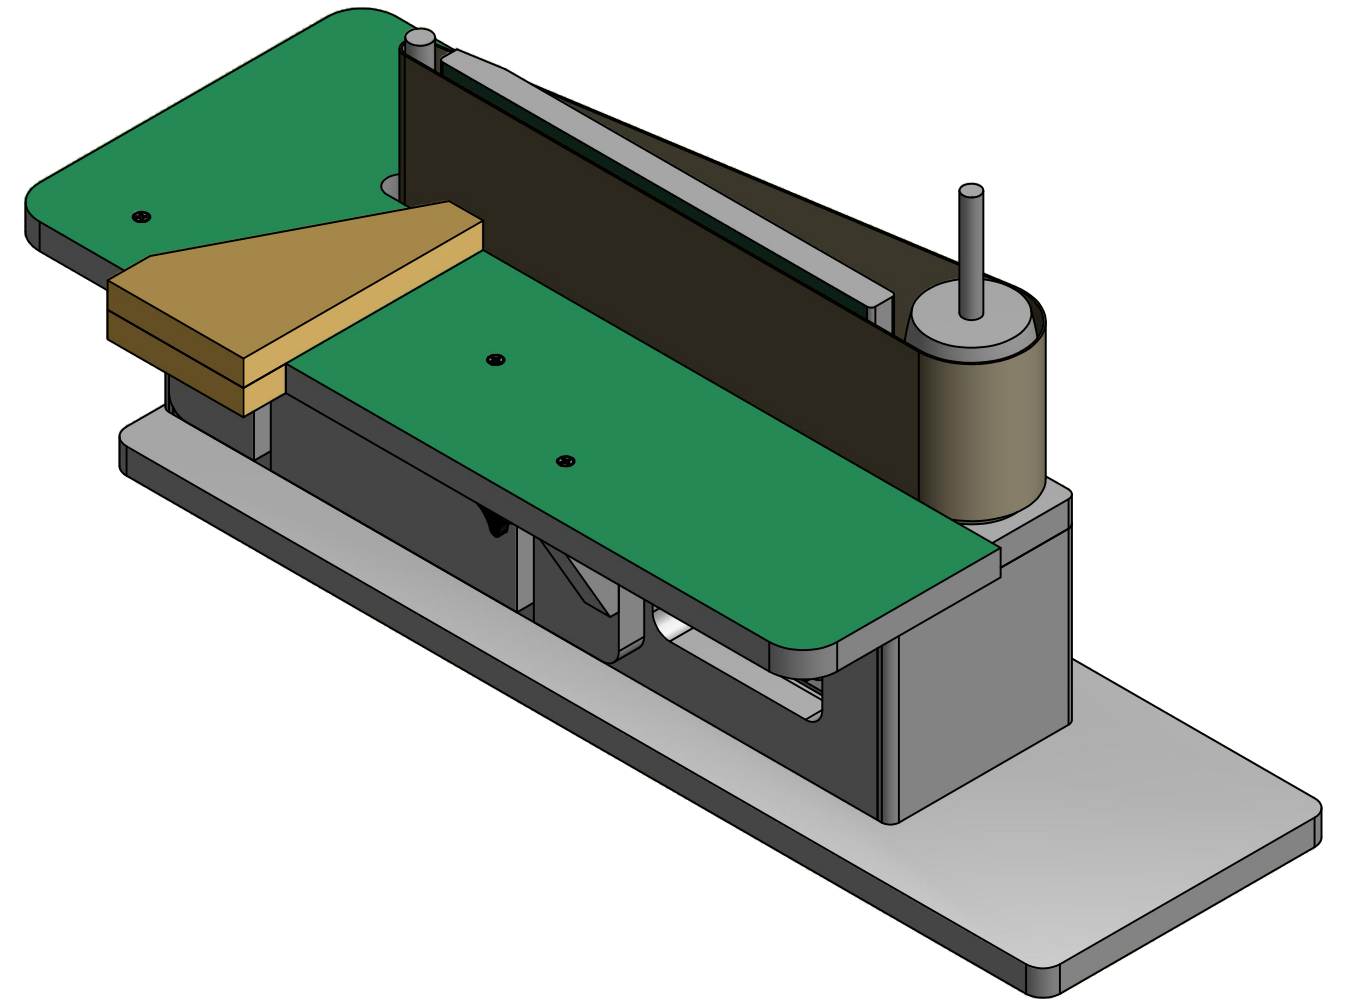


Drill Press Edge Sander

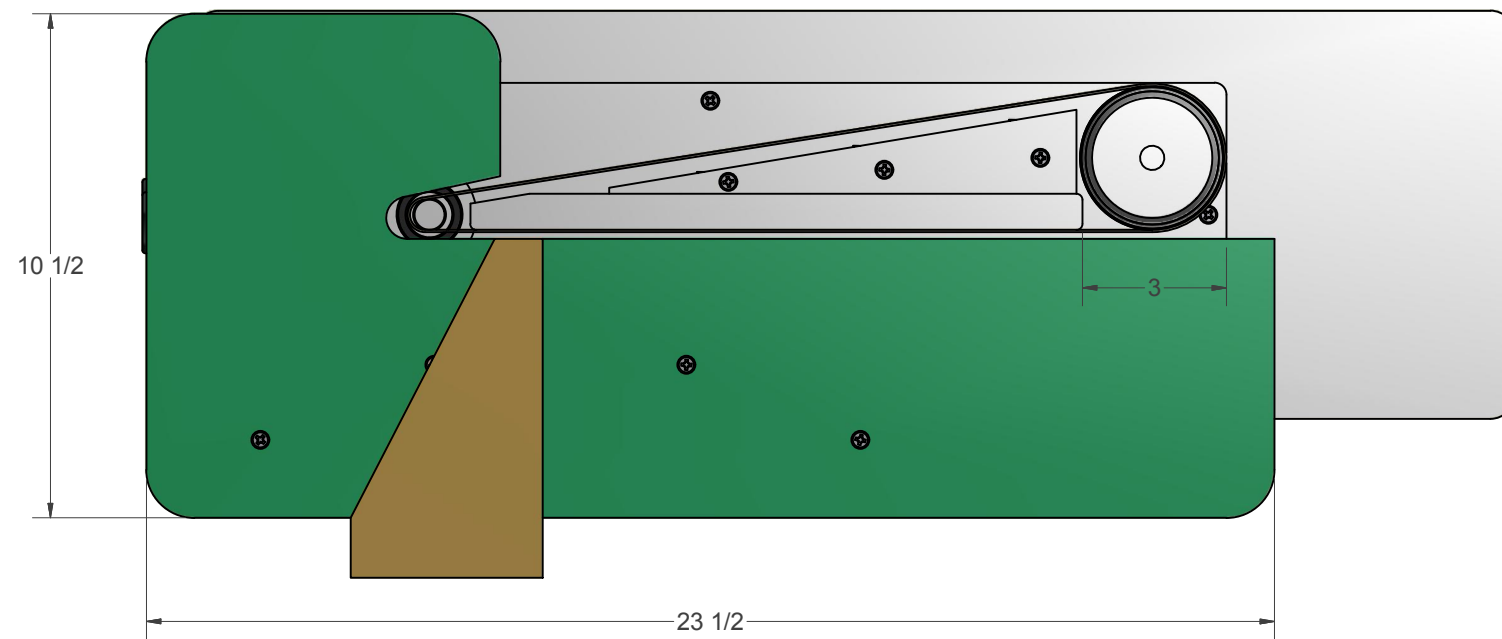


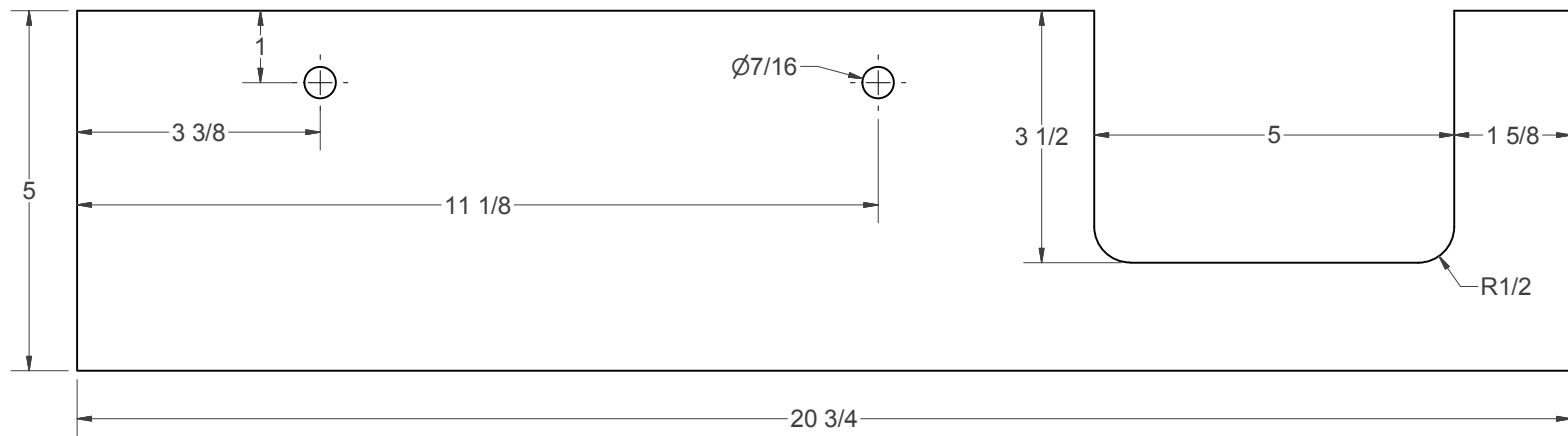


(C) - FRONT
(OUTSIDE VIEW)

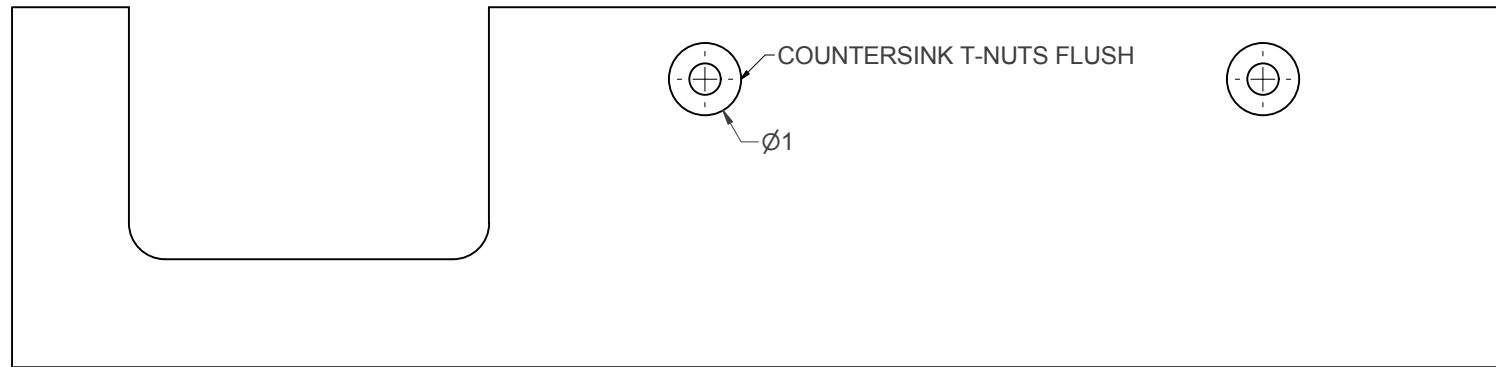


(C) - FRONT
(INSIDE VIEW)

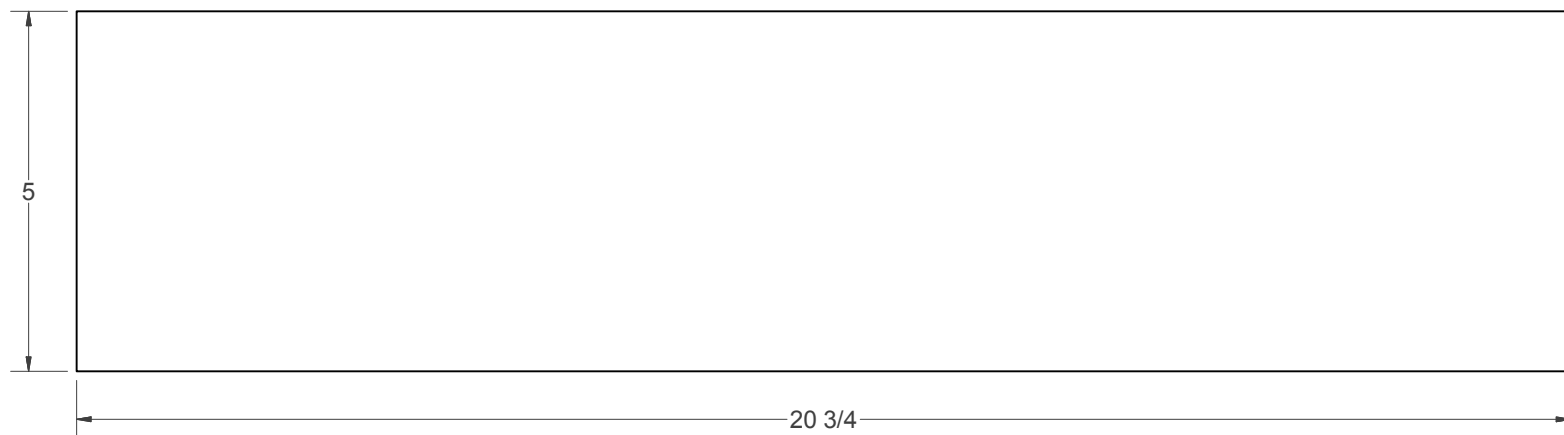


(C) - BACK

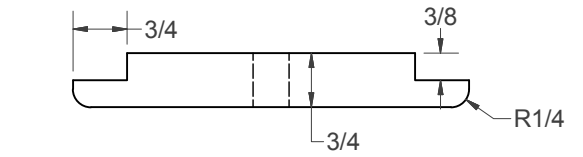



(B) - LEFT SIDE

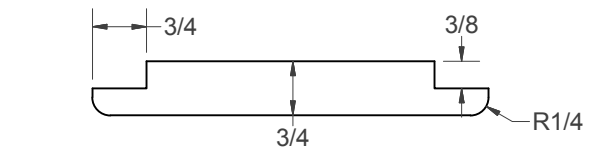


(B) - RIGHT SIDE

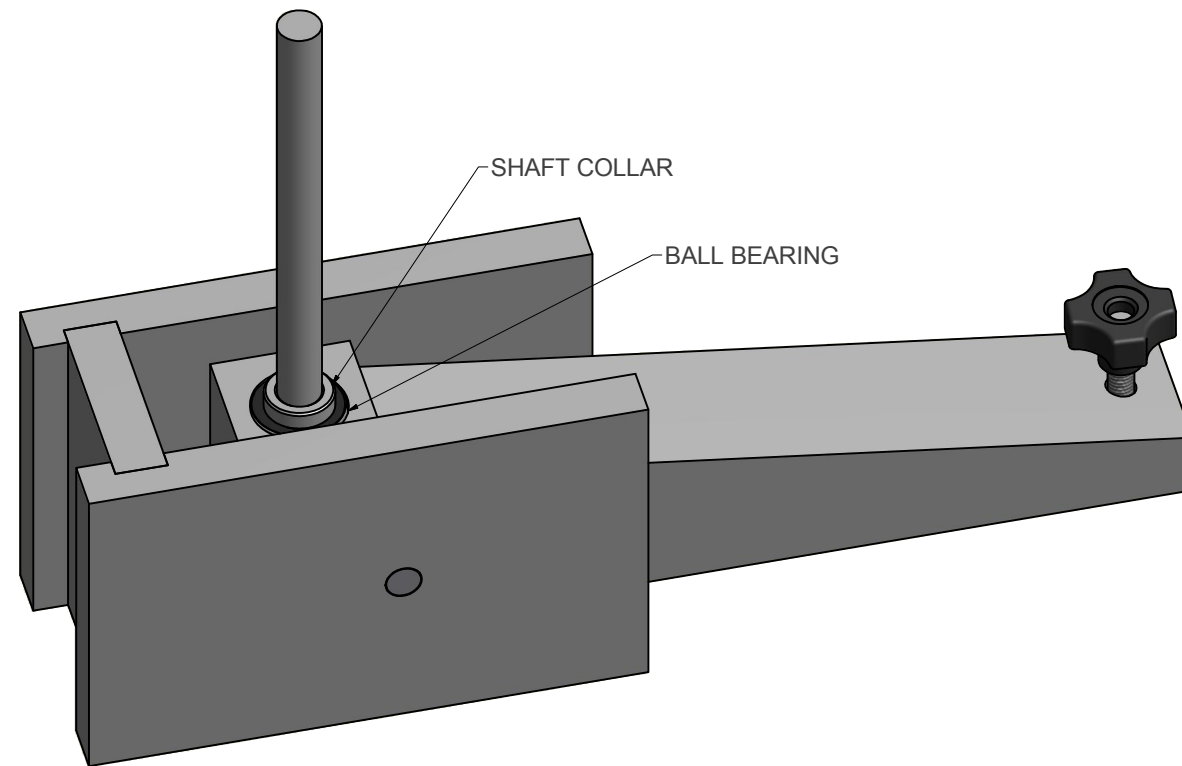


TRACKING AND TENSION ASSEMBLY

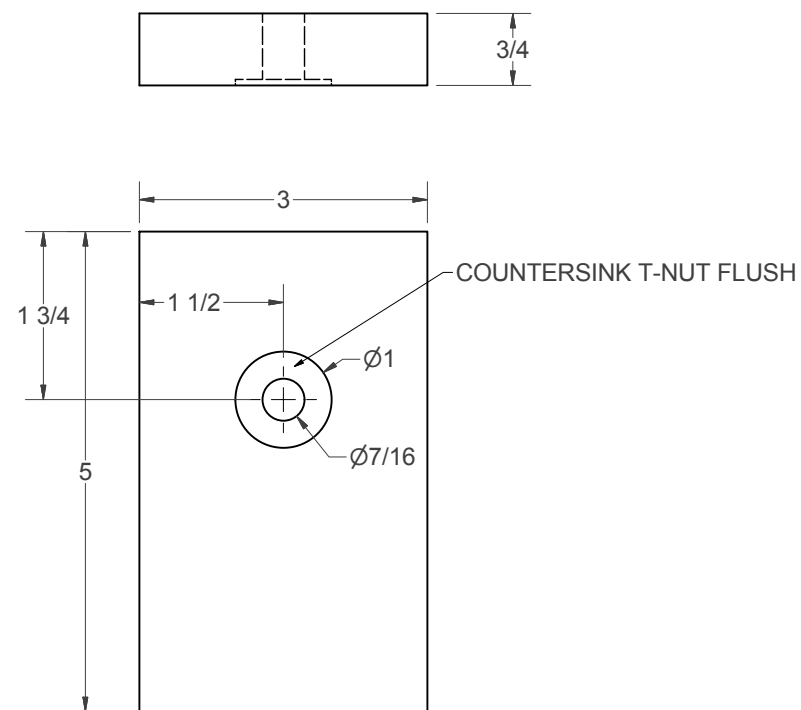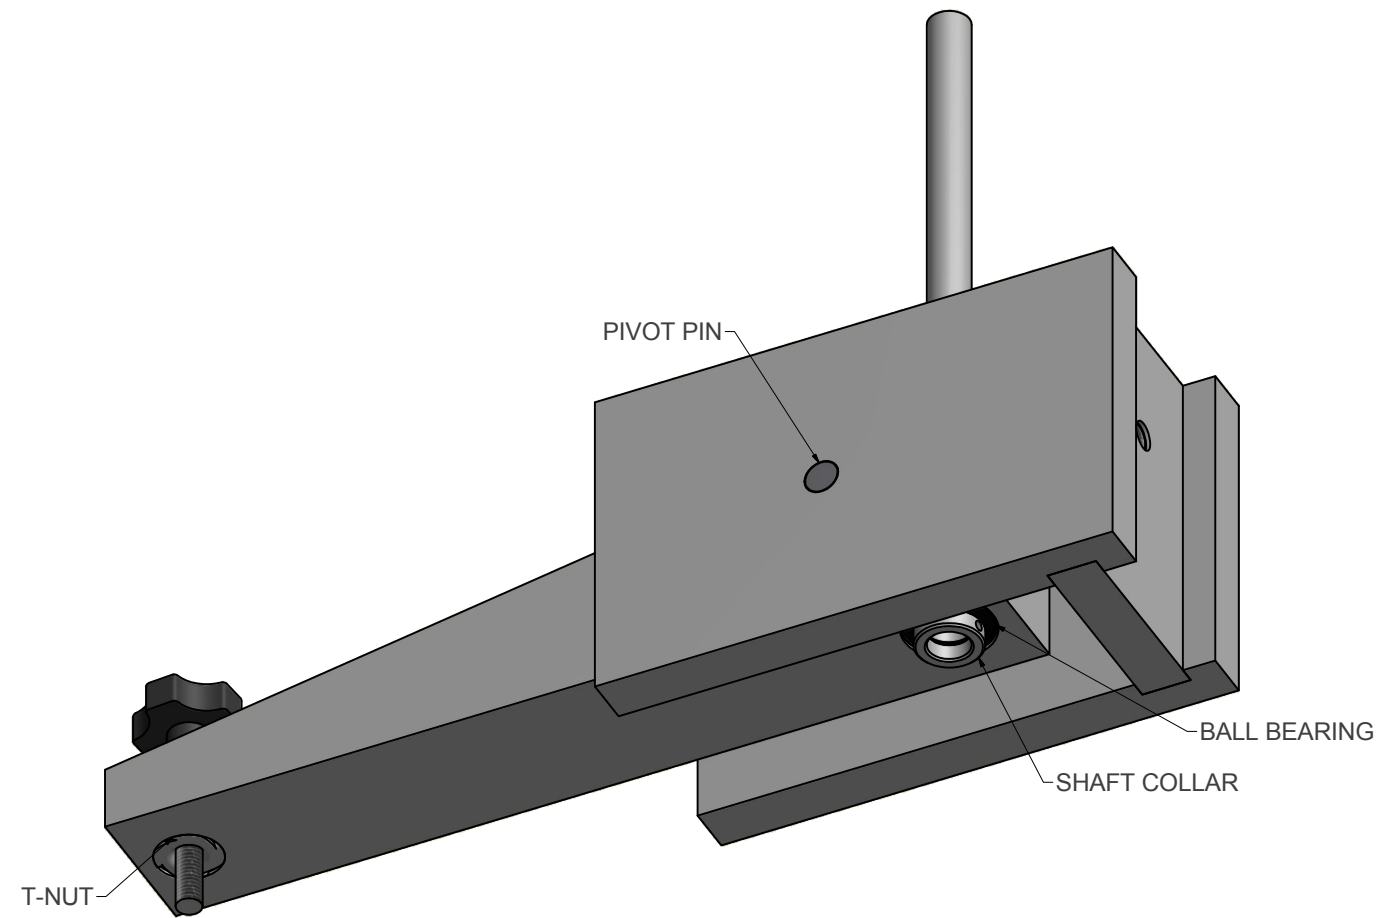


(G) - BRACKET END

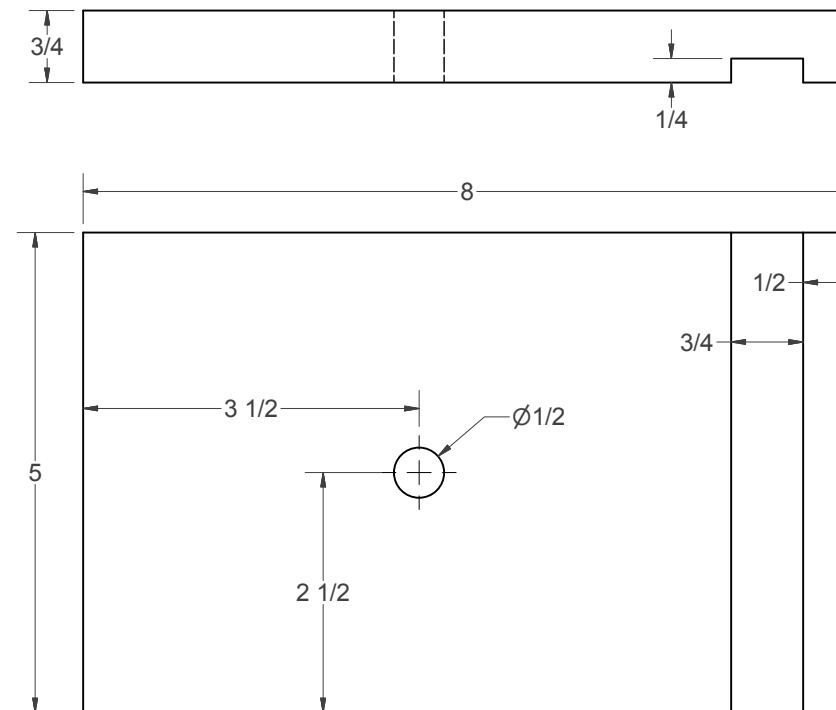

(F) - LEFT BRACKET SIDE



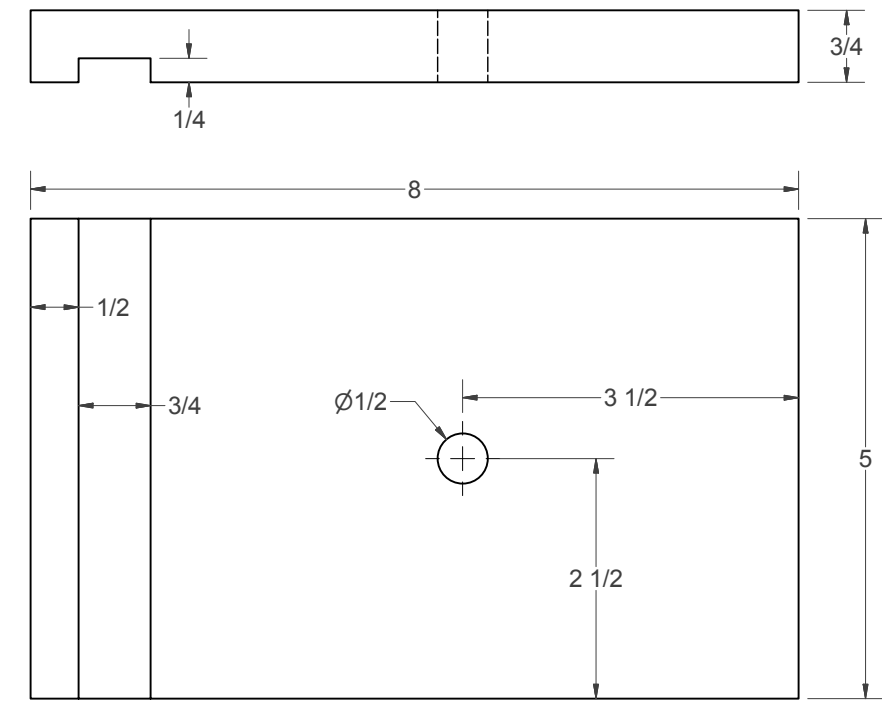


(F) - RIGHT BRACKET SIDE

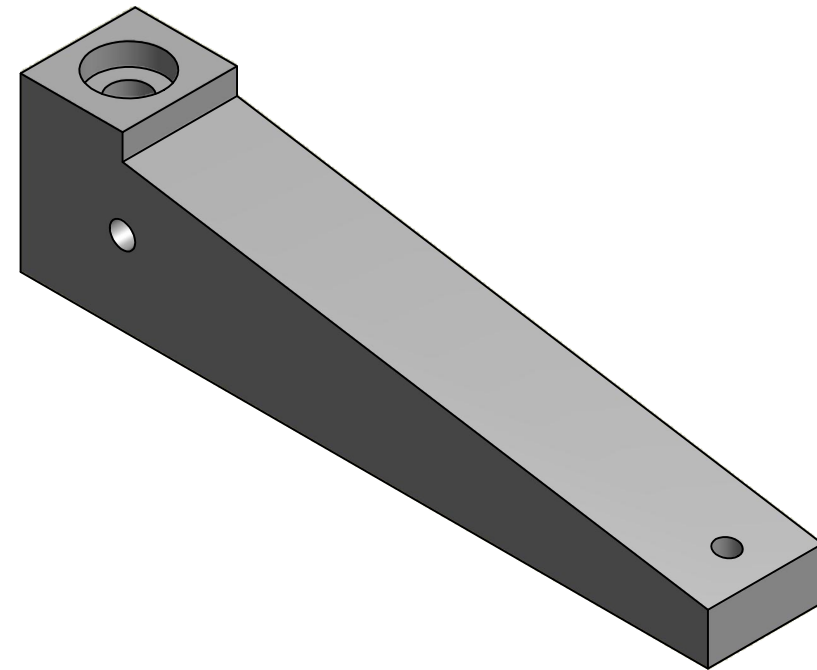


(3) 3/4" PLYWOOD LAMINATION


(E) - PIVOT ARM

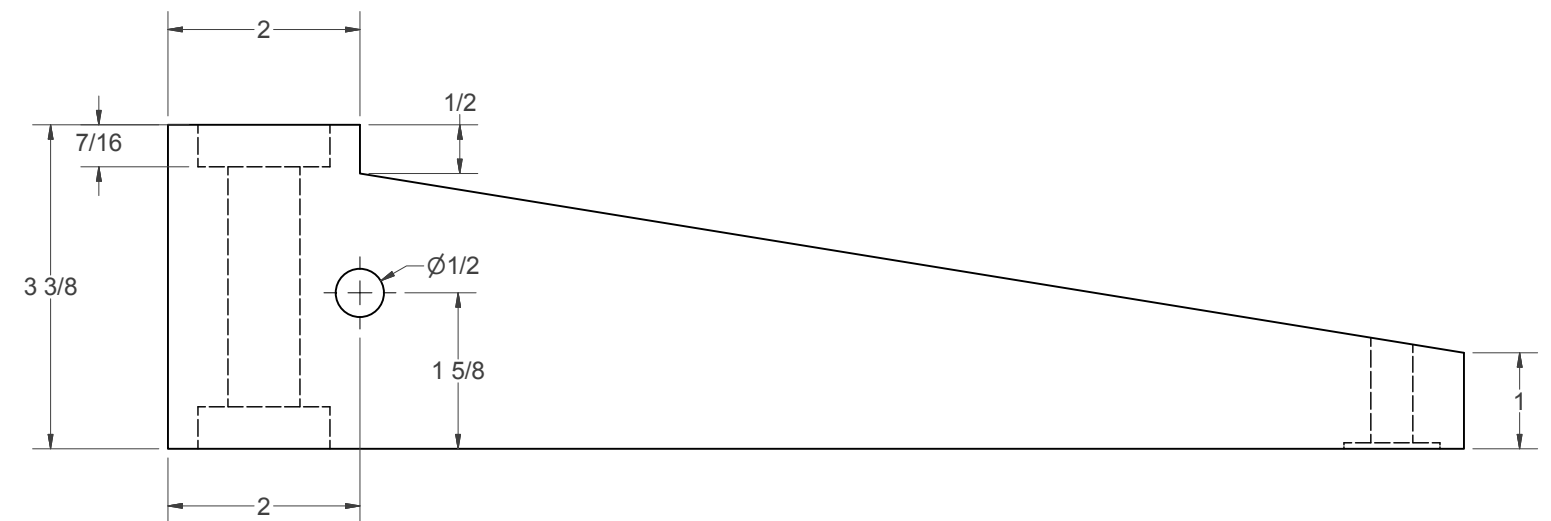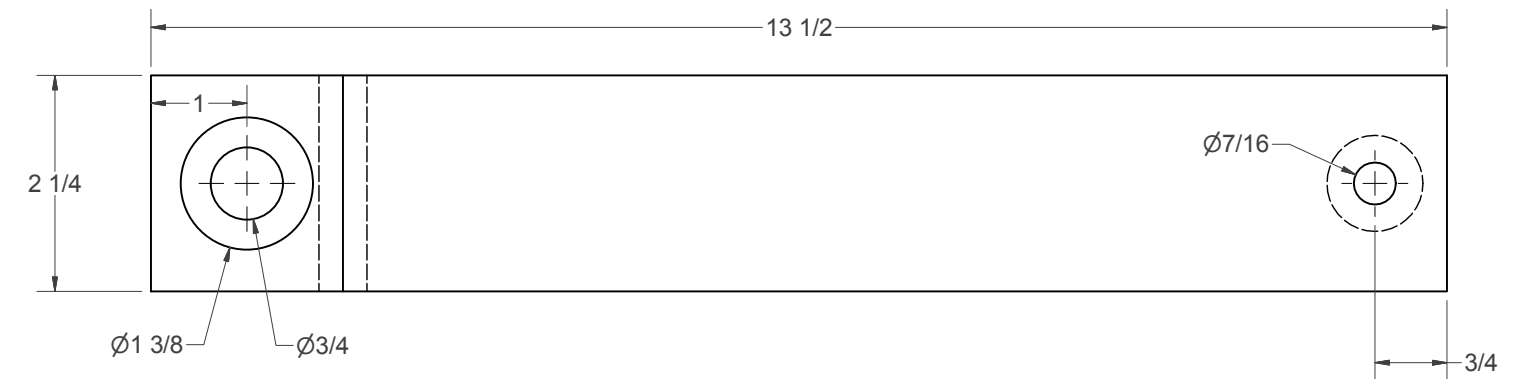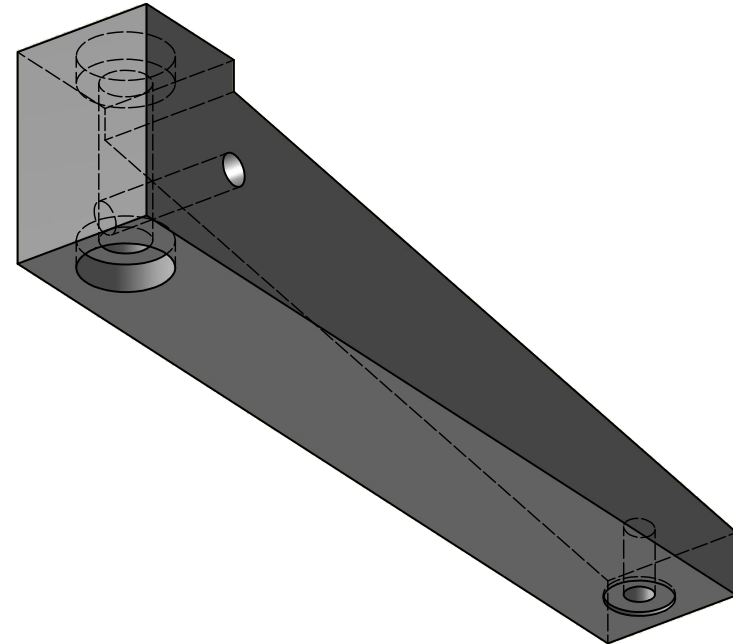


COUNTERSINK T-NUT FLUSH

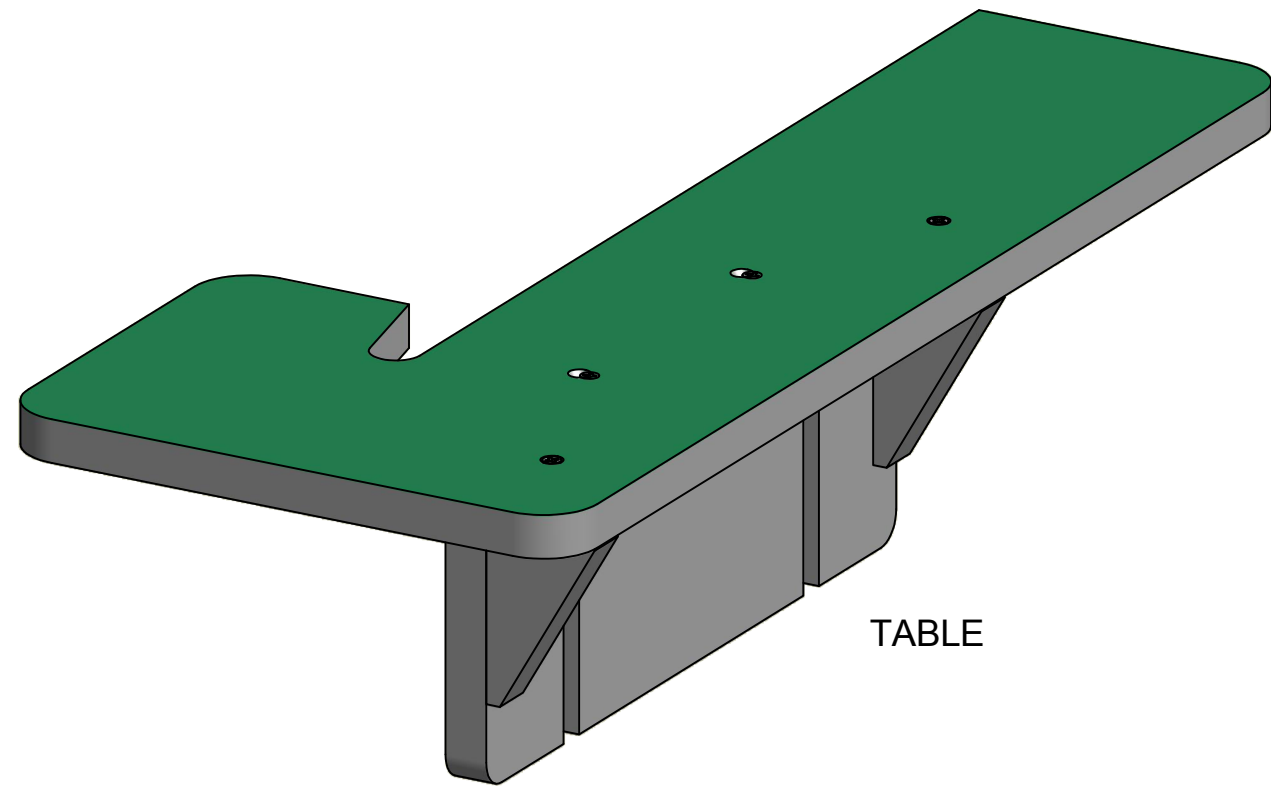



TABLE

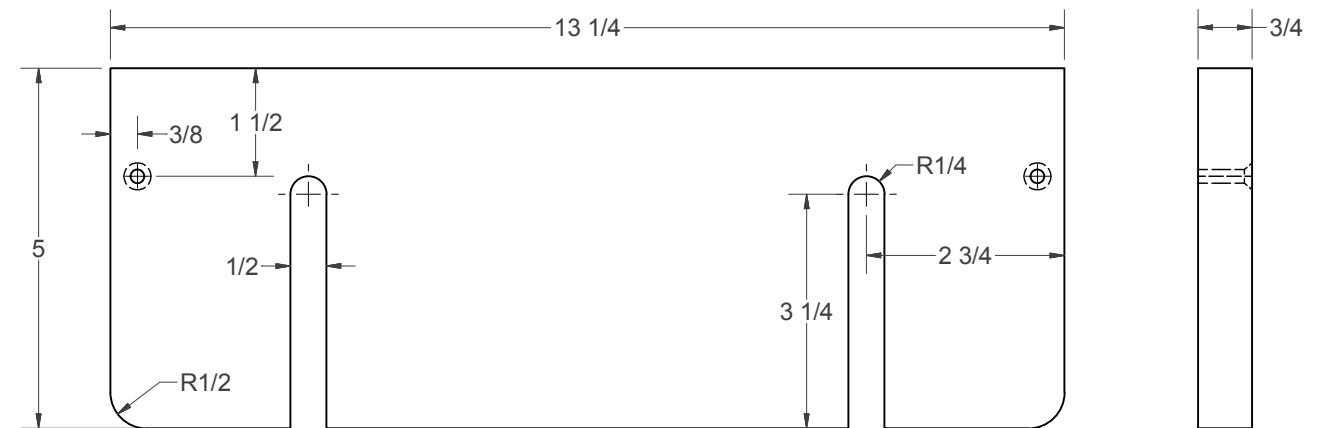


(J) - SUPPORT

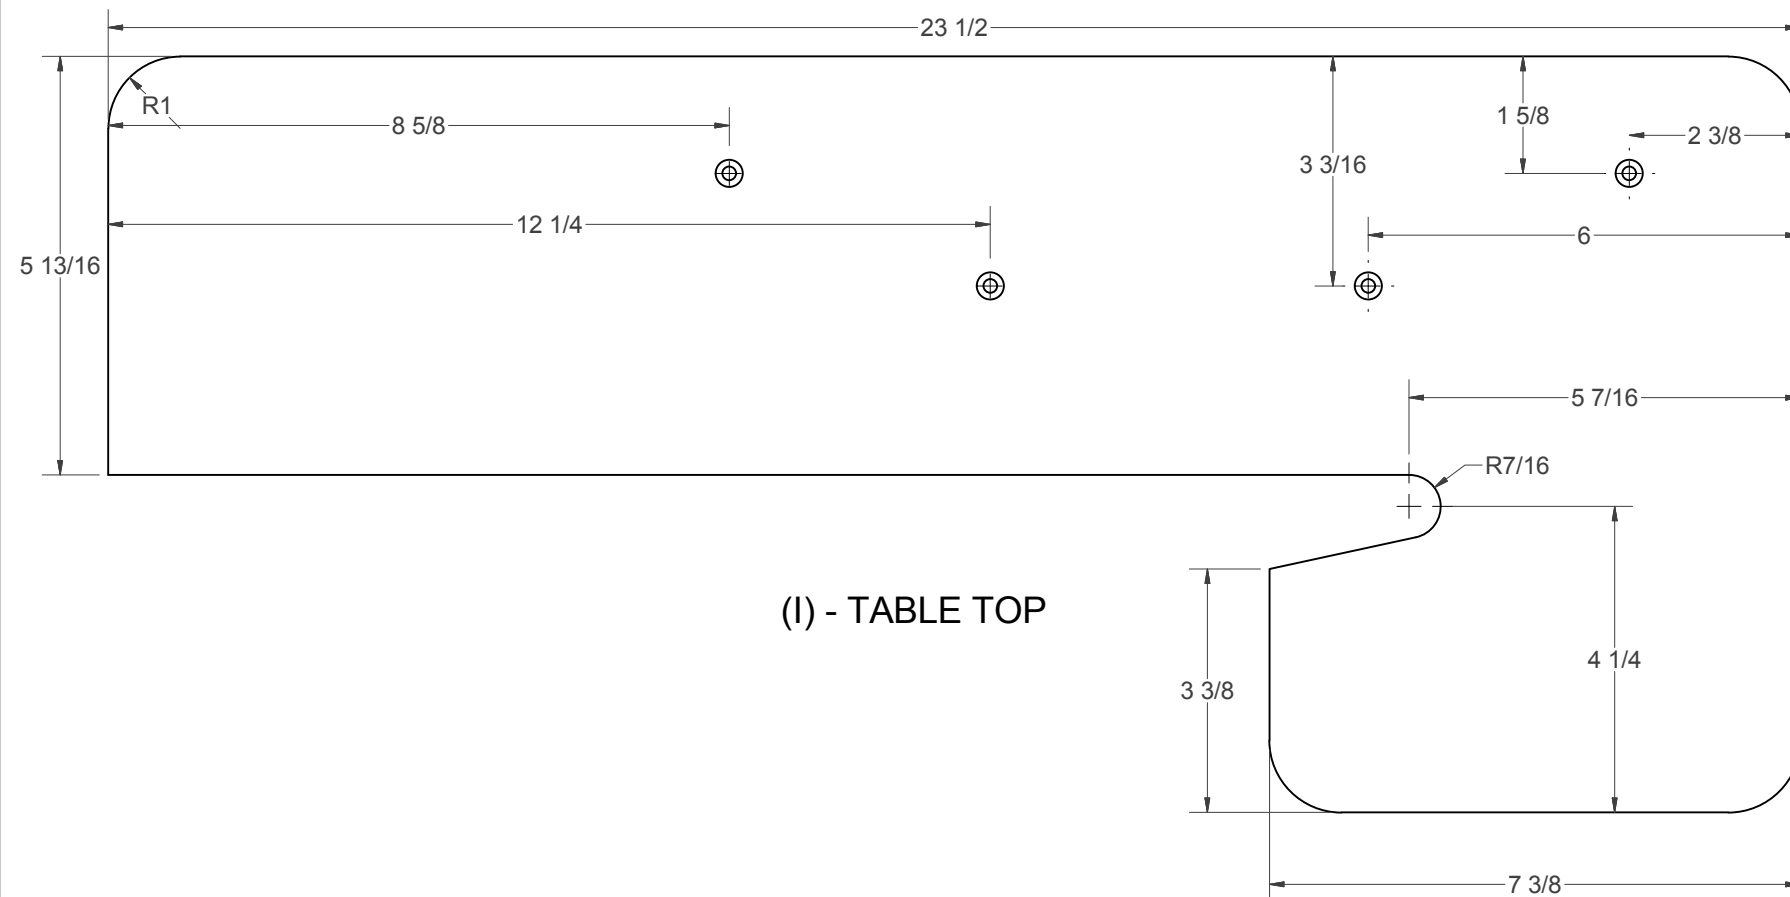


(I) - TABLE TOP

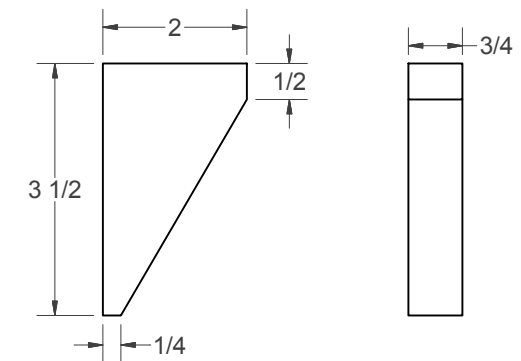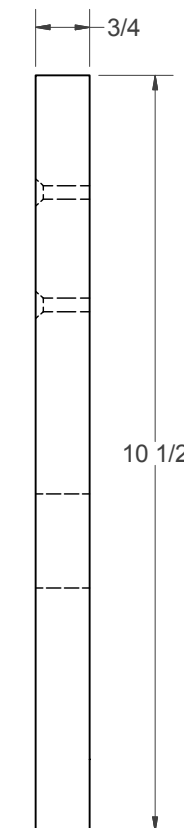


(K) - BRACKET
(NEED 2)

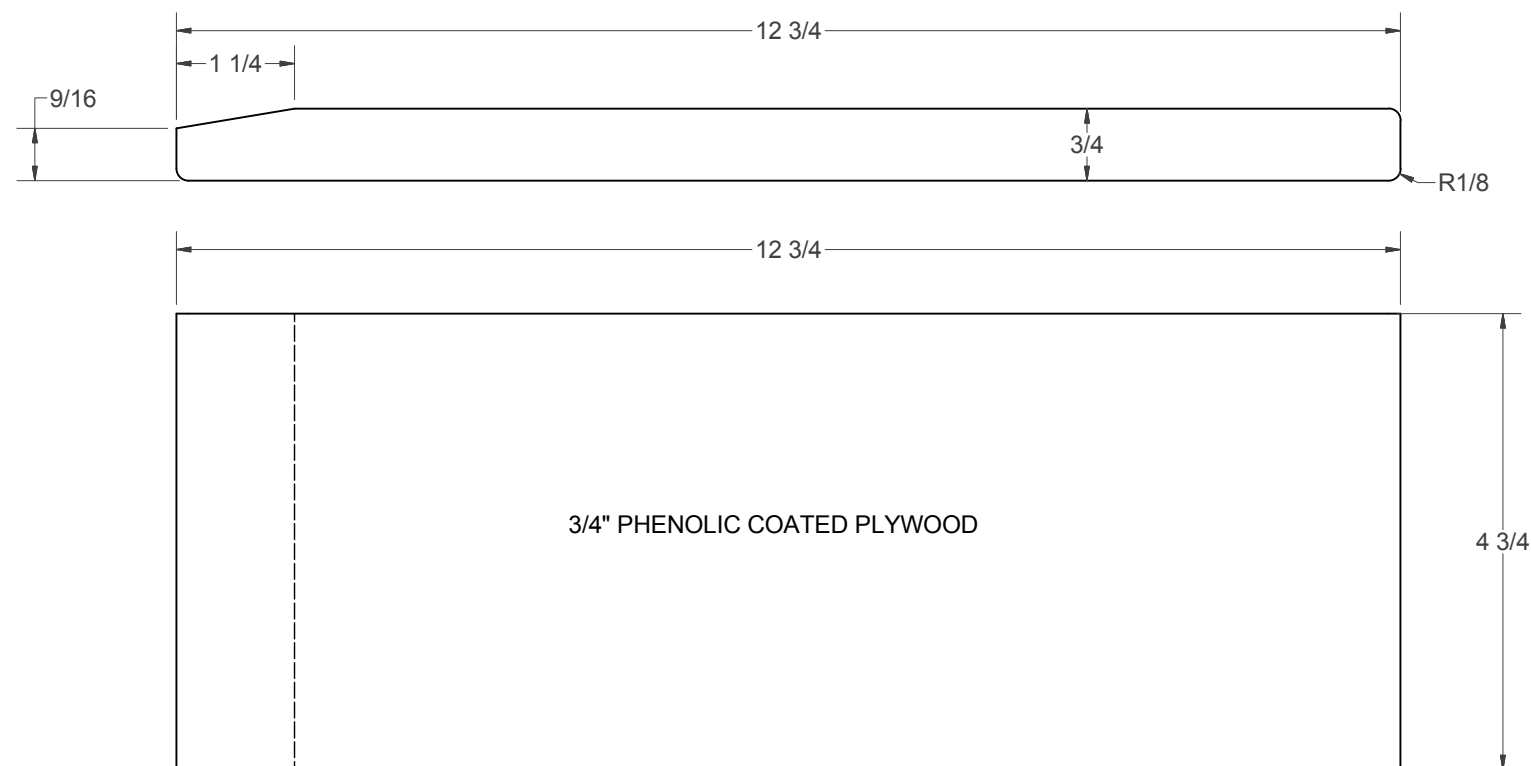





(L) - PLATTEN

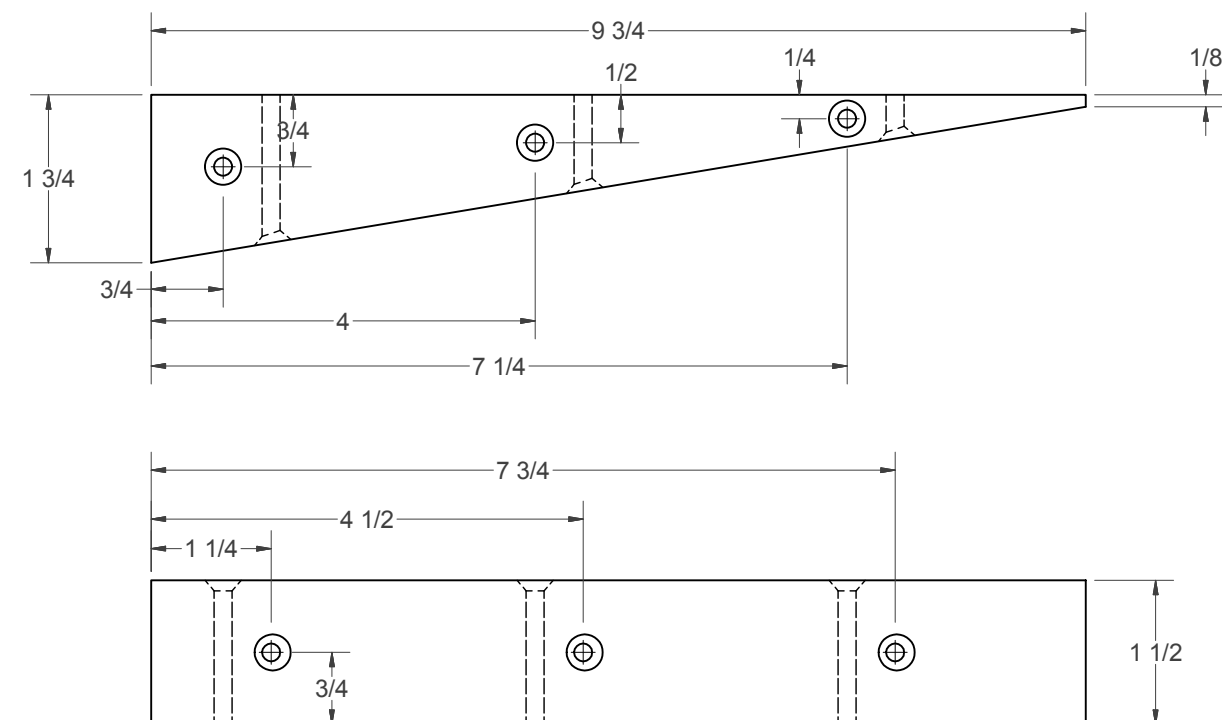


(M) - PLATTEN BRACE

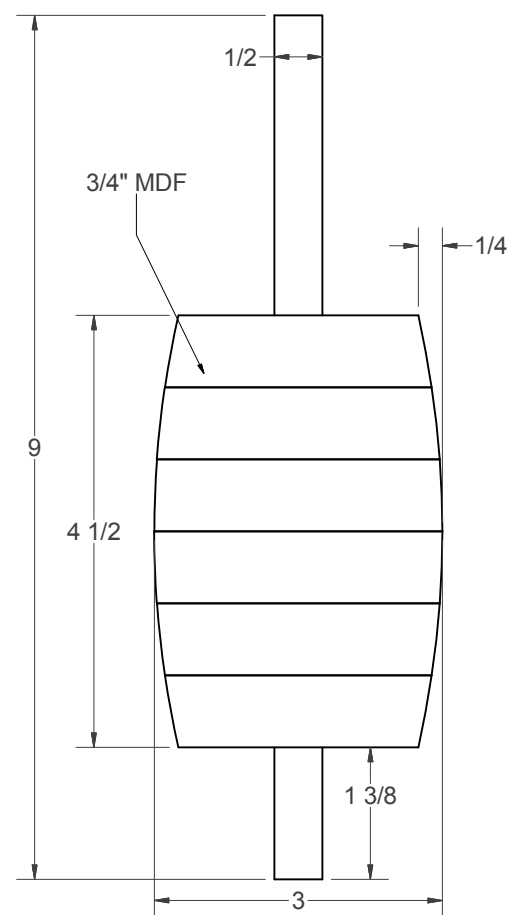

(H) - DRIVE ROLLER

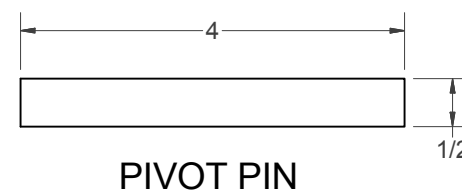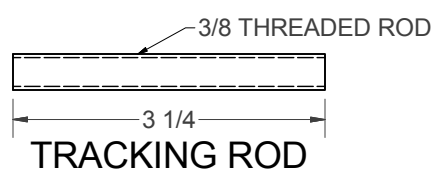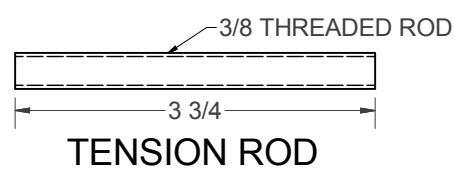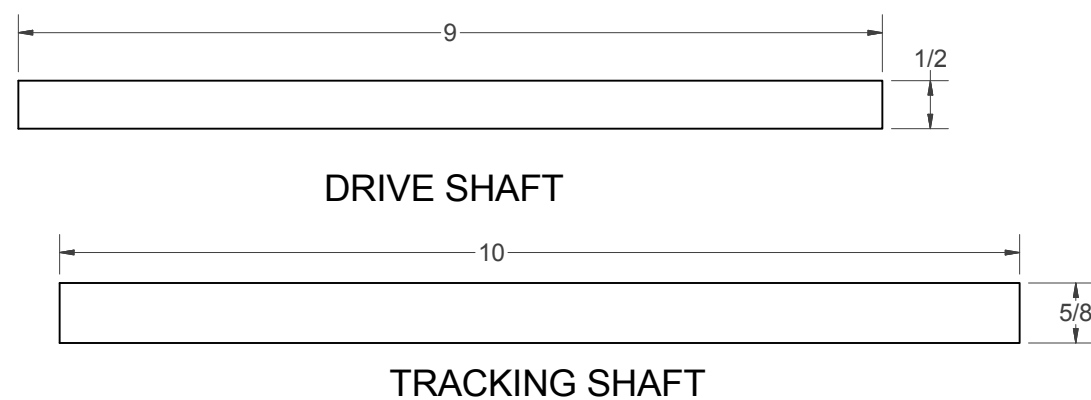

PIVOT PIN

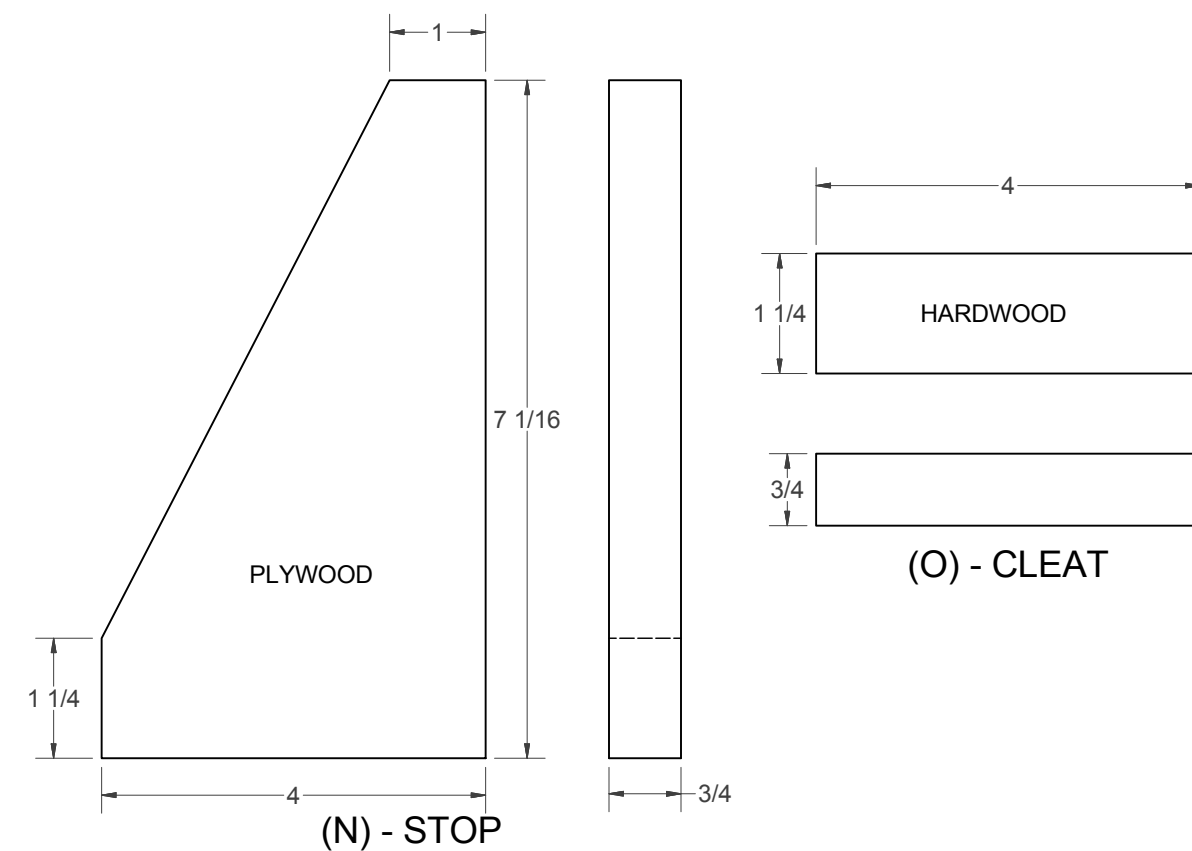

(N) - STOP

(O) - CLEAT