

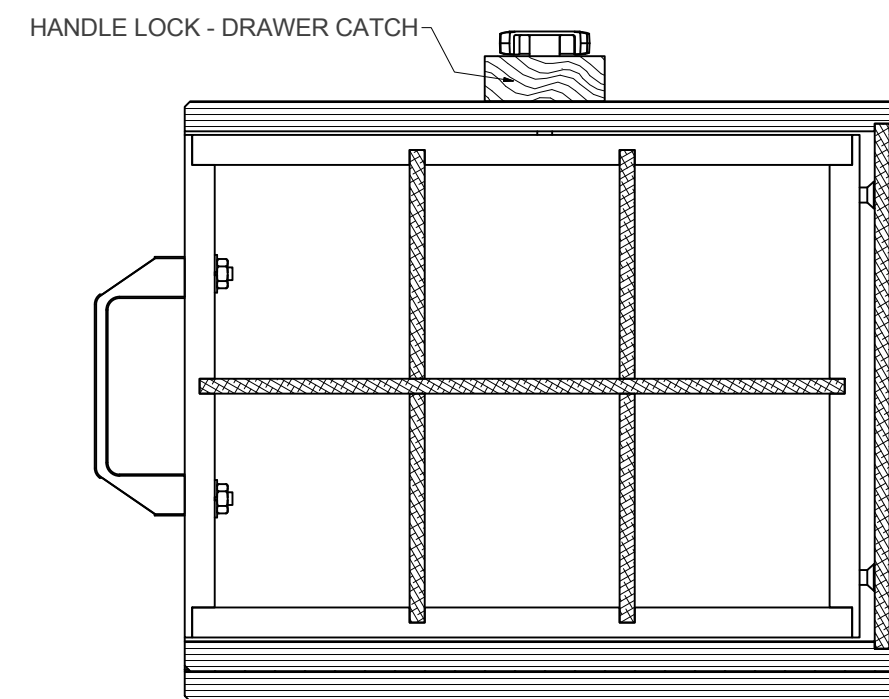
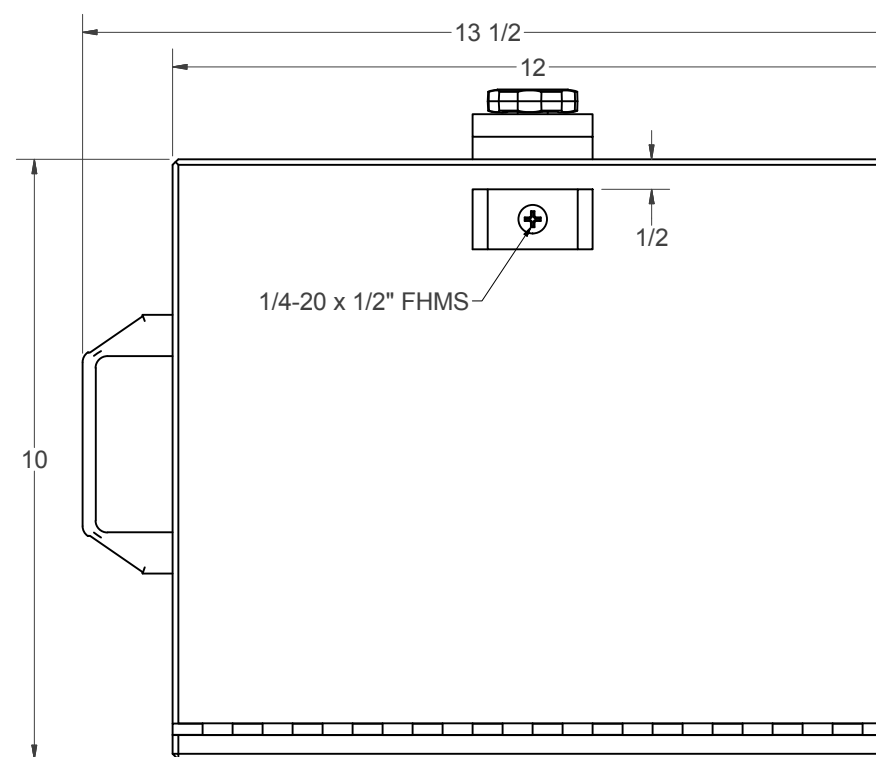
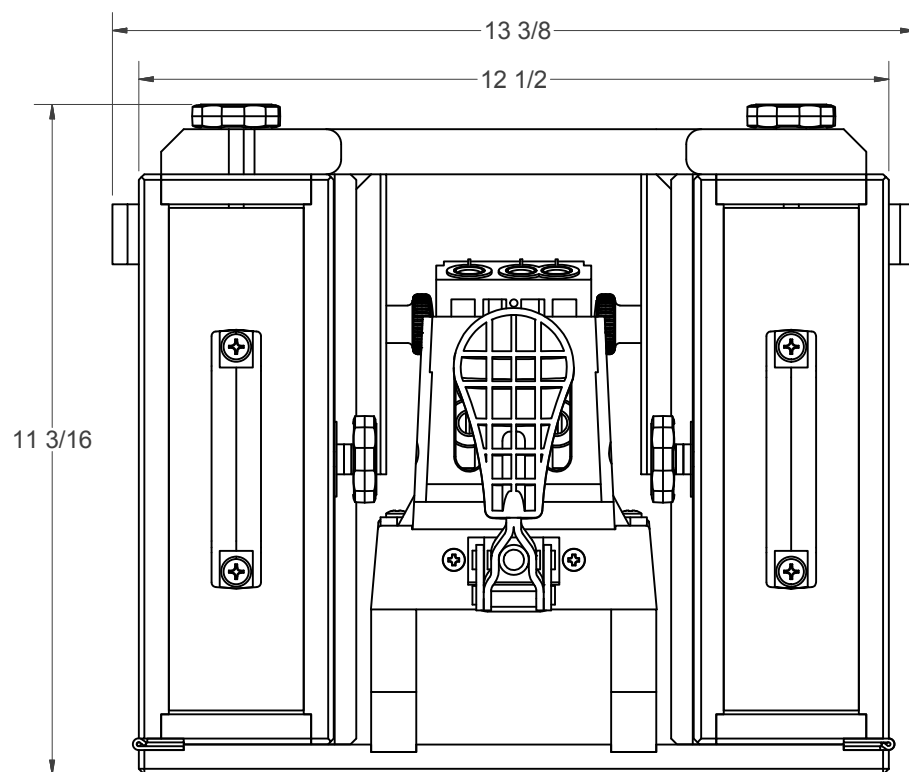






Woodsmith® PLANS




Shop Drawings

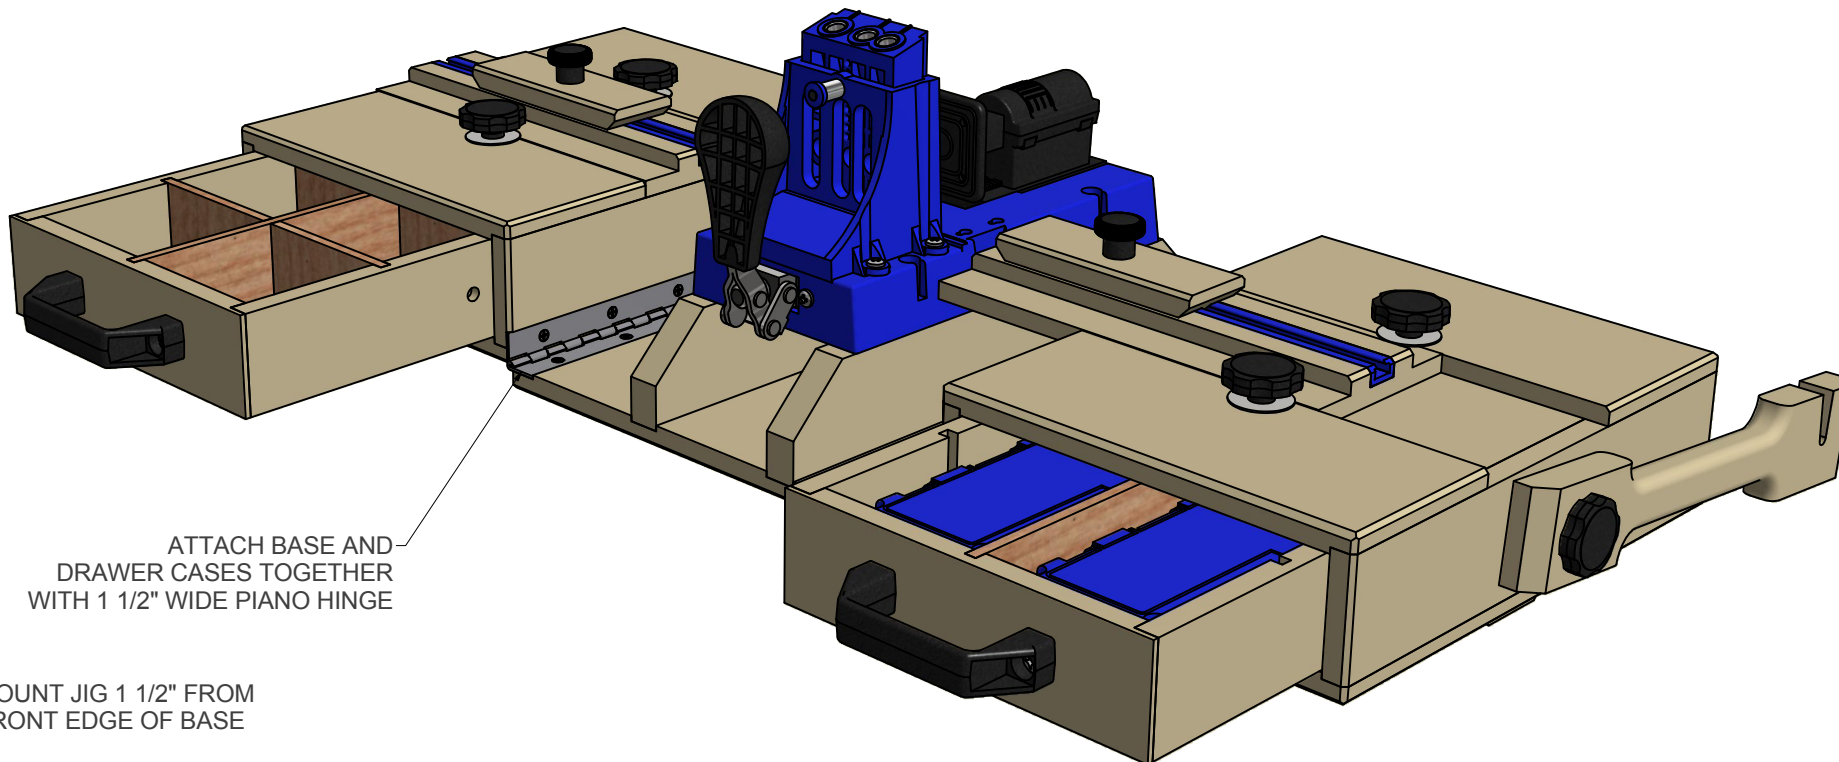

Pocket-Hole Jig Workstation

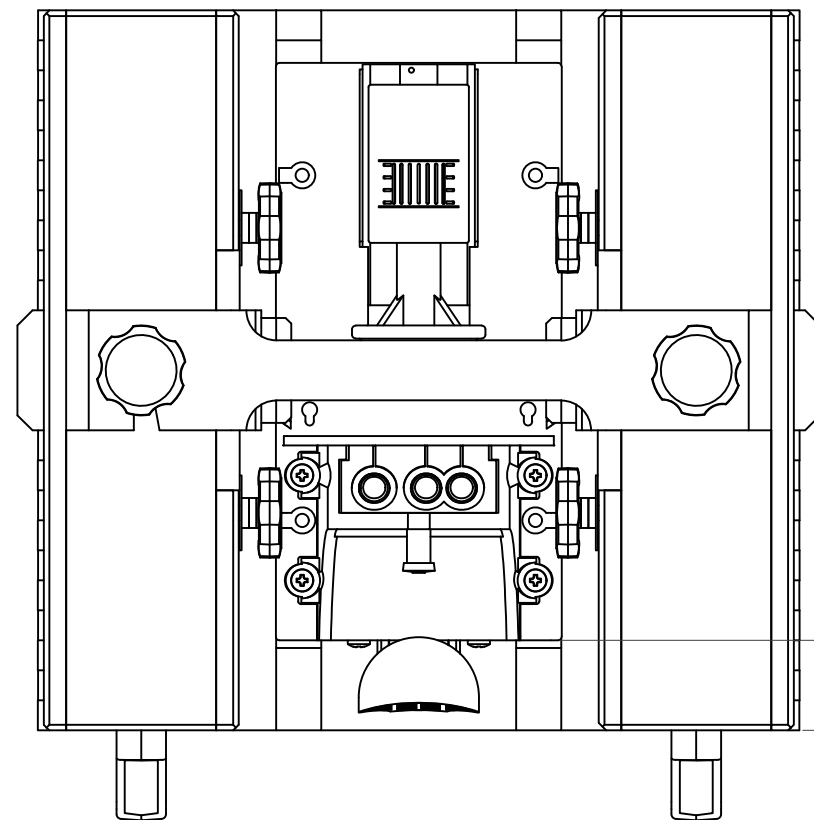

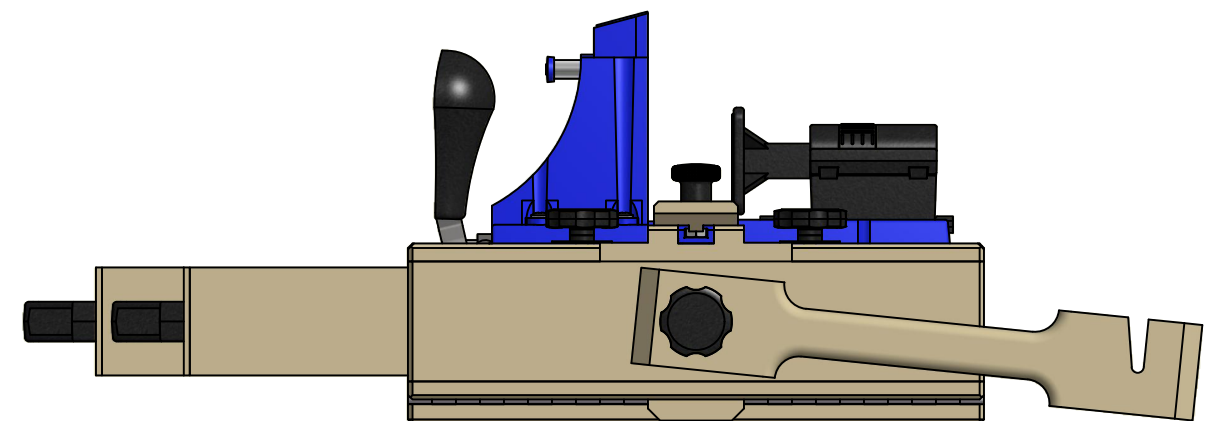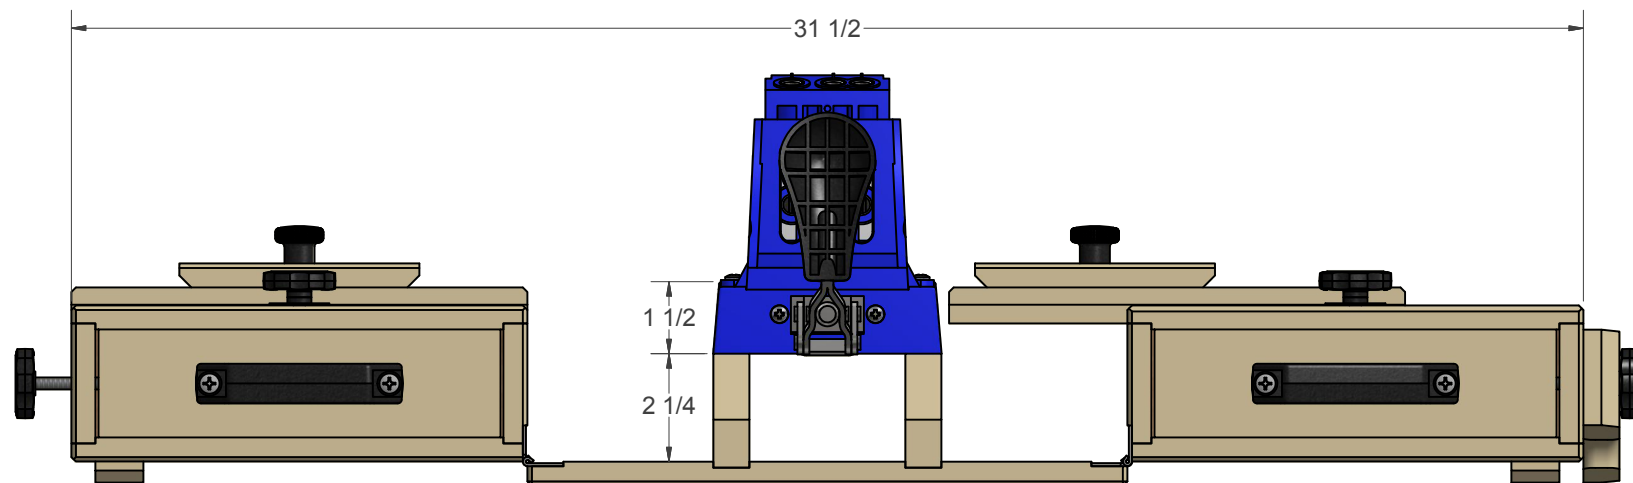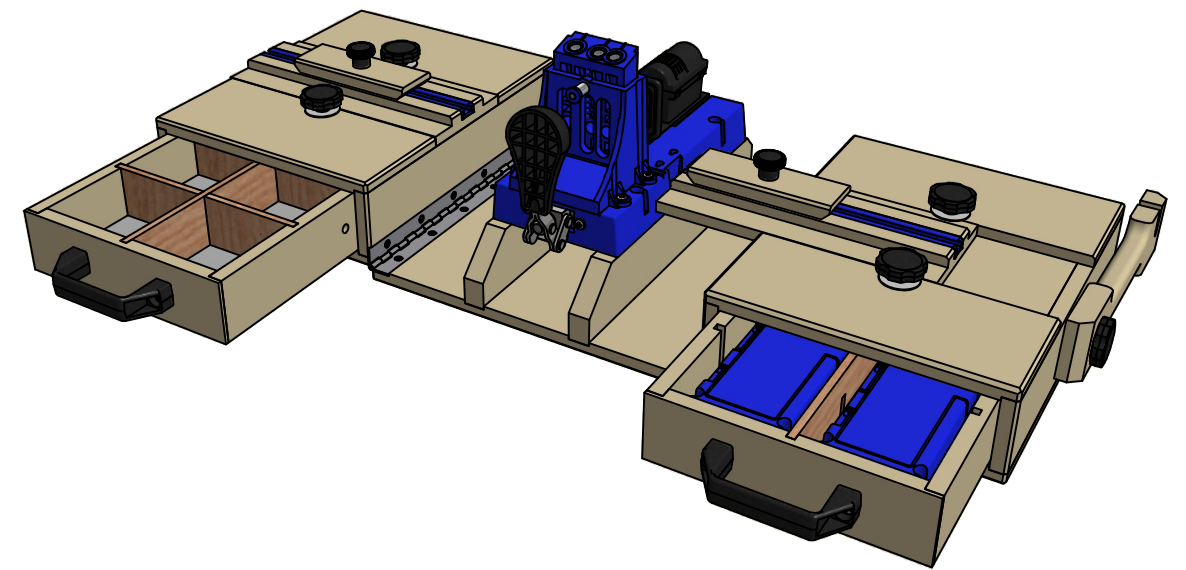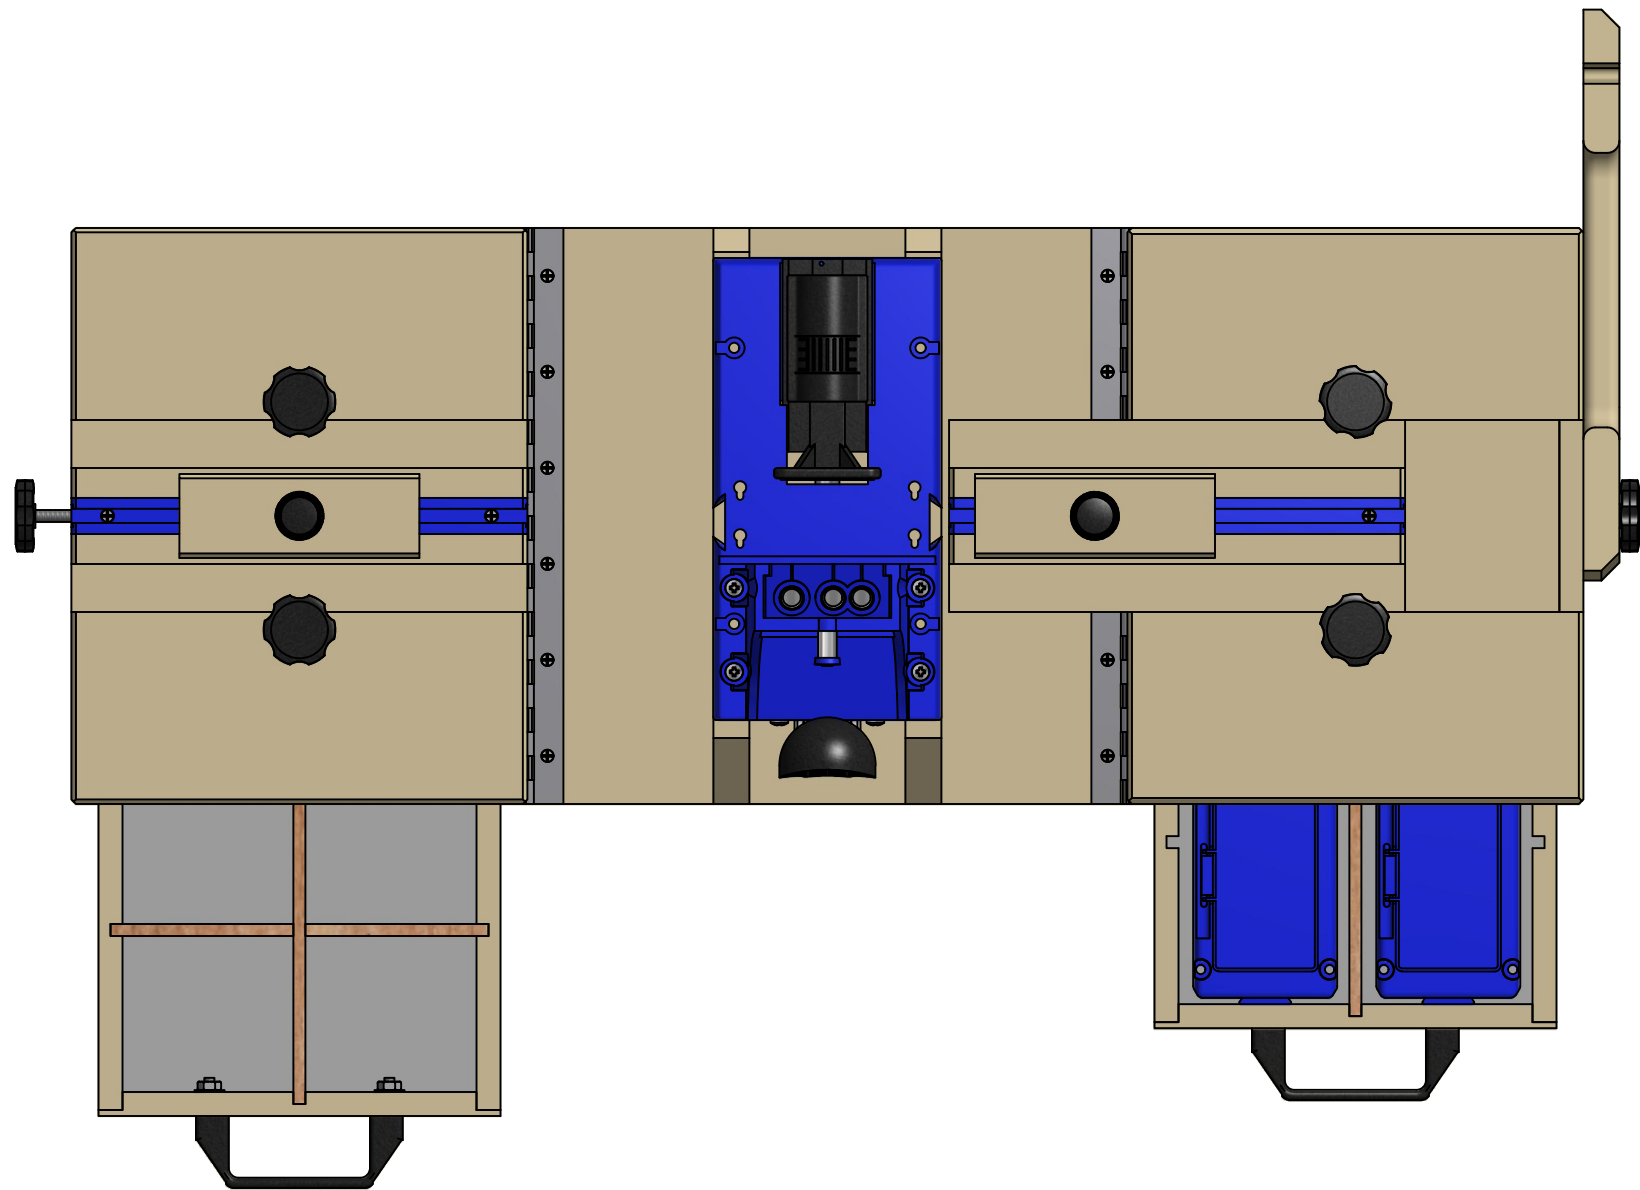


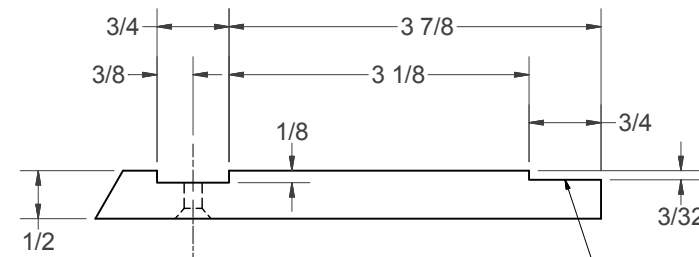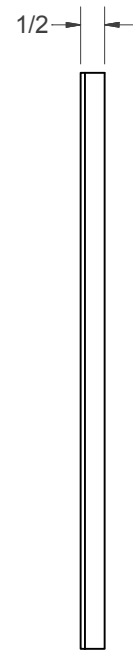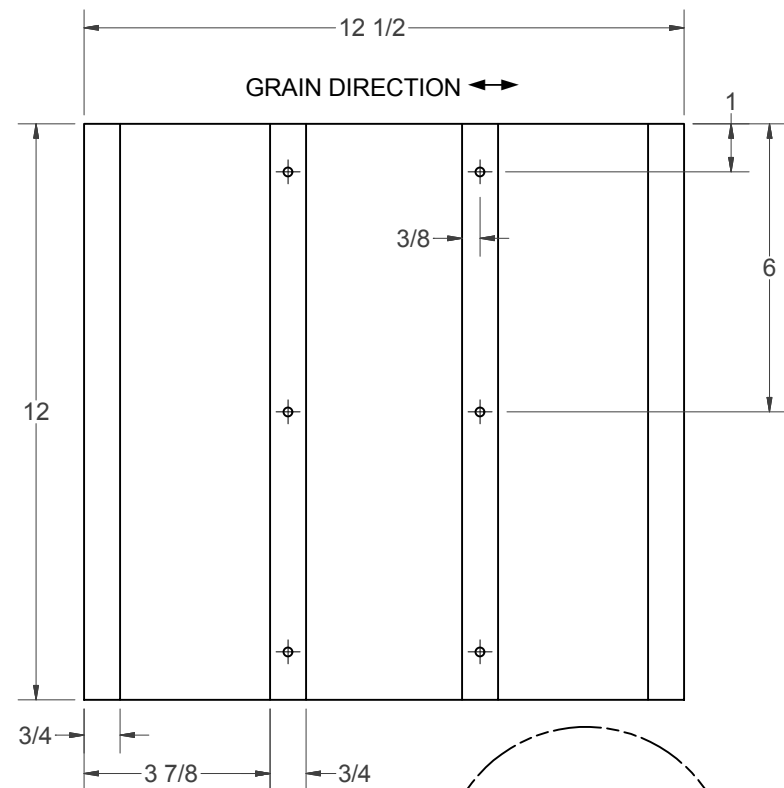


COUNTERSUNK HOLE FOR
#8 x 1 1/4" FHWS

DETAIL K

RABBET FOR 1 1/2" PIANO HINGE
HALF THICKNESS OF HINGE OR LESS

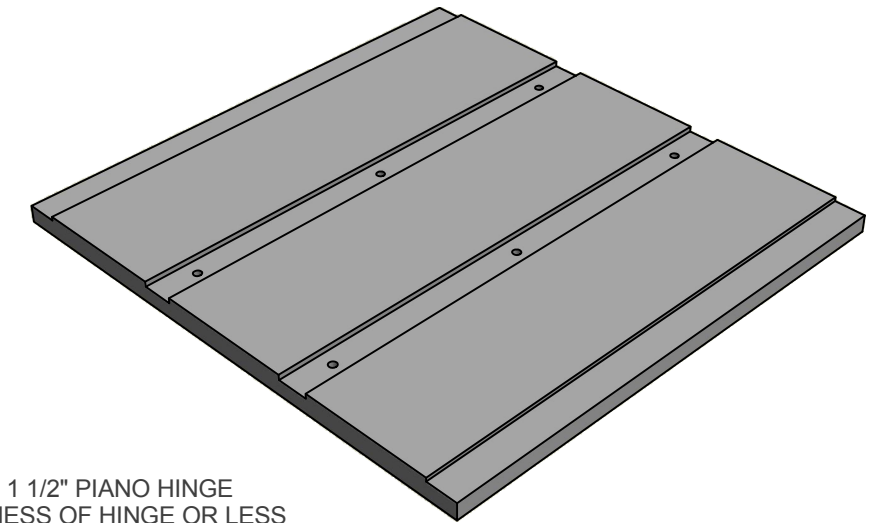


NOTE: ALL PARTS MADE FROM 1/2" (12mm)
PLYWOOD

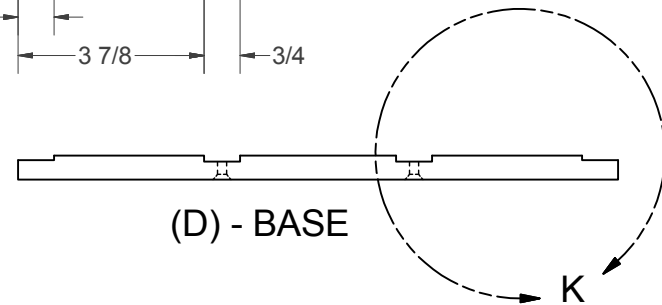


(D) - BASE

NOTE: RABBET FOR
PIANO HINGE
AFTER ASSEMBLY

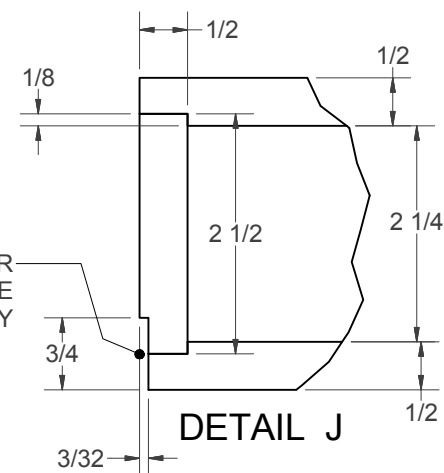


DETAIL J

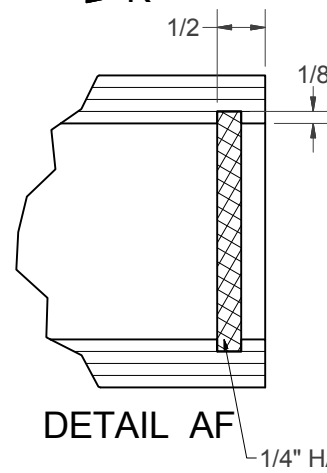


DETAIL AF


1/4" HARDBOARD

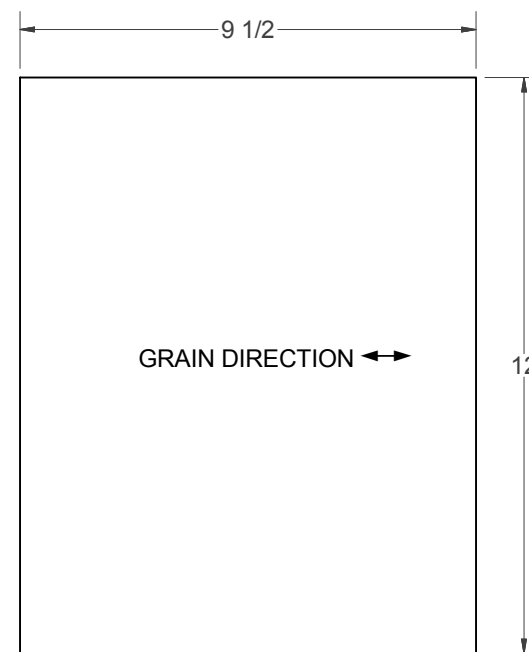


(B) - CASE TOP/BOTTOMS
(4 pcs.)

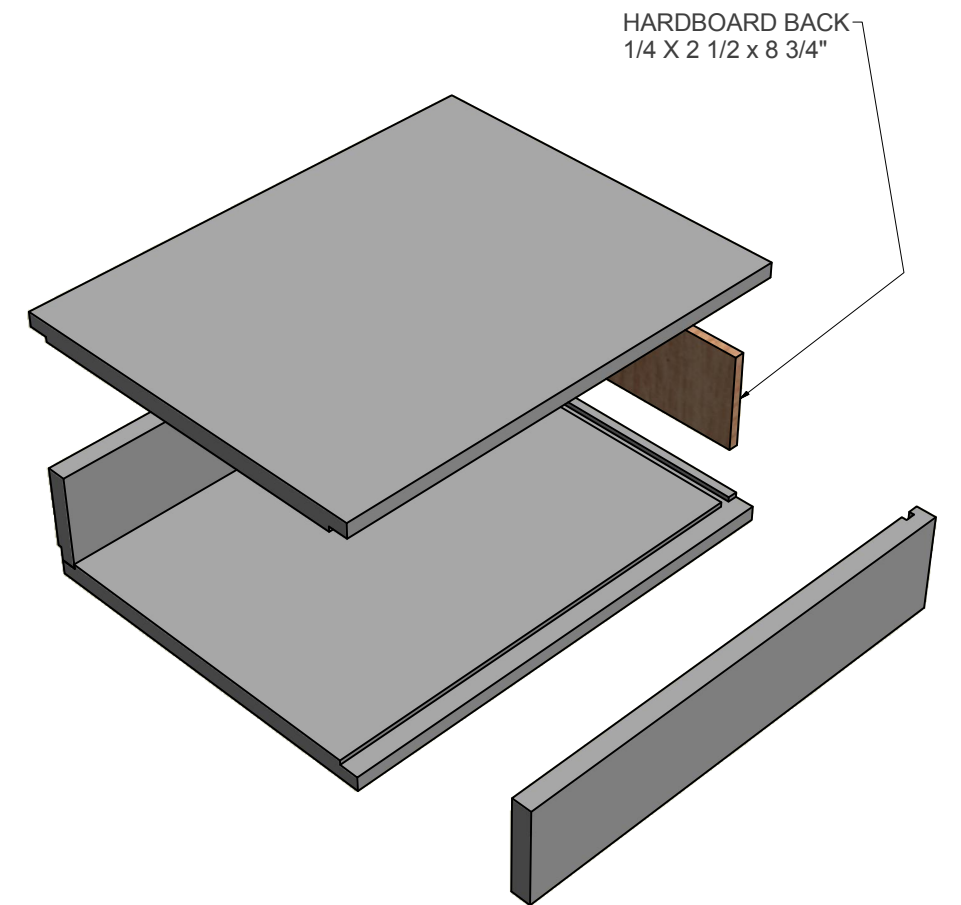



HARDBOARD BACK
1/4" X 2 1/2" X 8 3/4"

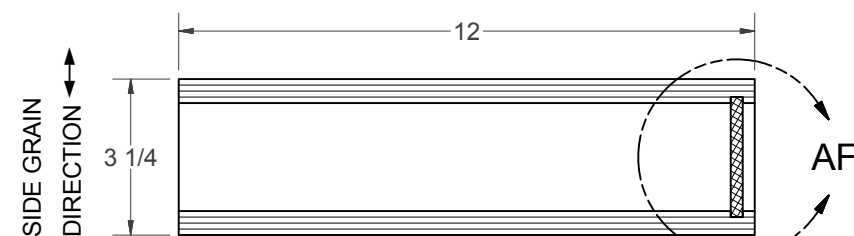


SECTION DRAWER CASE - RIGHT SIDE

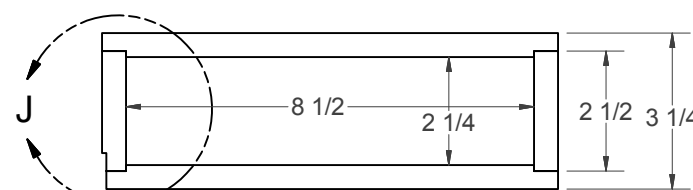



DRAWER CASE - RIGHT SIDE

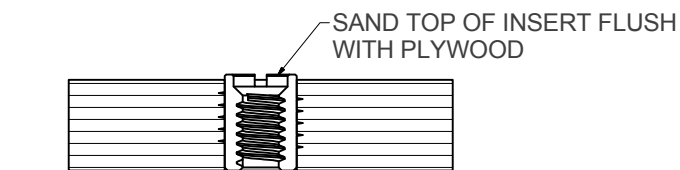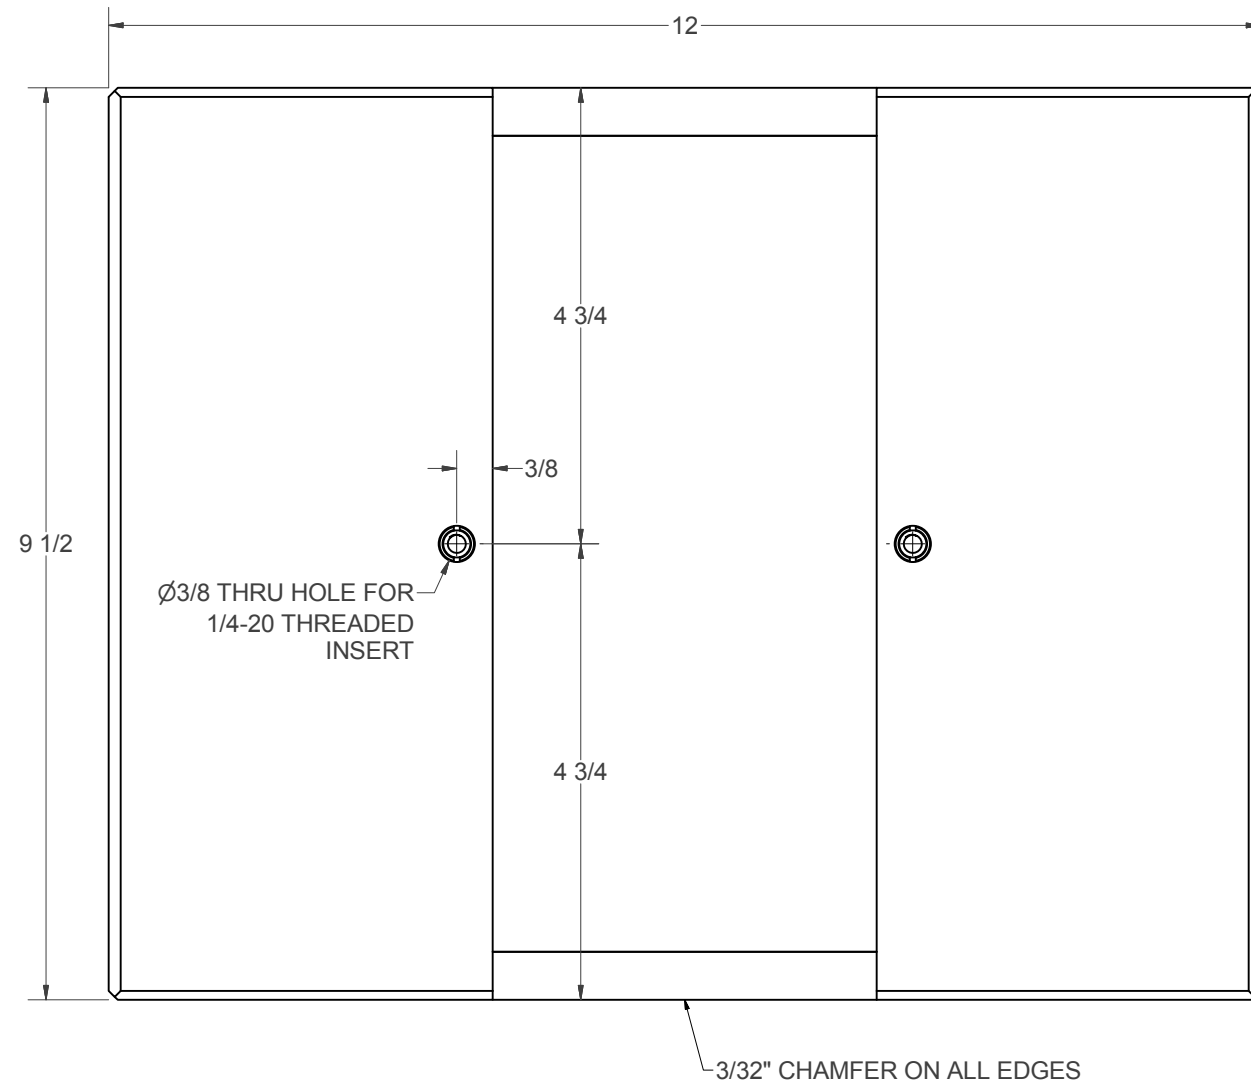




NOTE: THREADED INSERTS MAY NEED TO BE GROUND FLUSH WHEN USED IN 1/2" (12mm) BALTIC BIRCH PLYWOOD








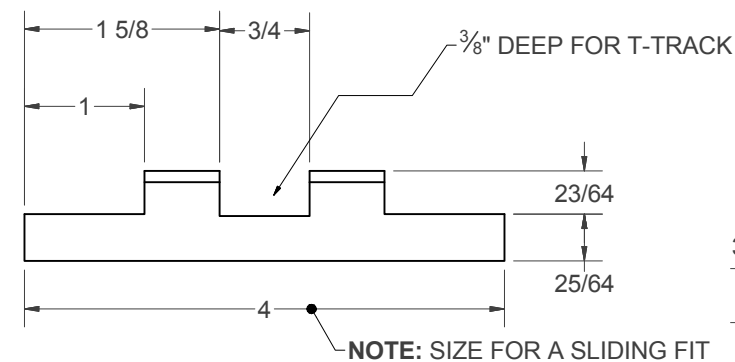



SLIDING INSERT - END VIEW

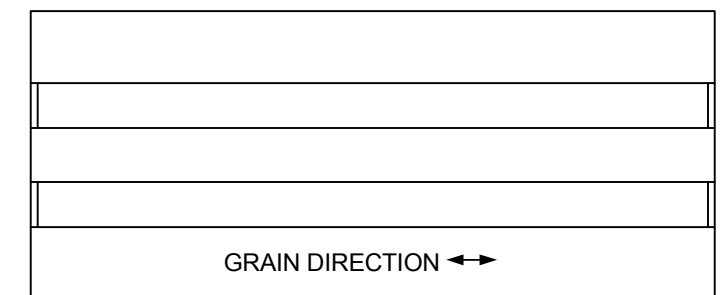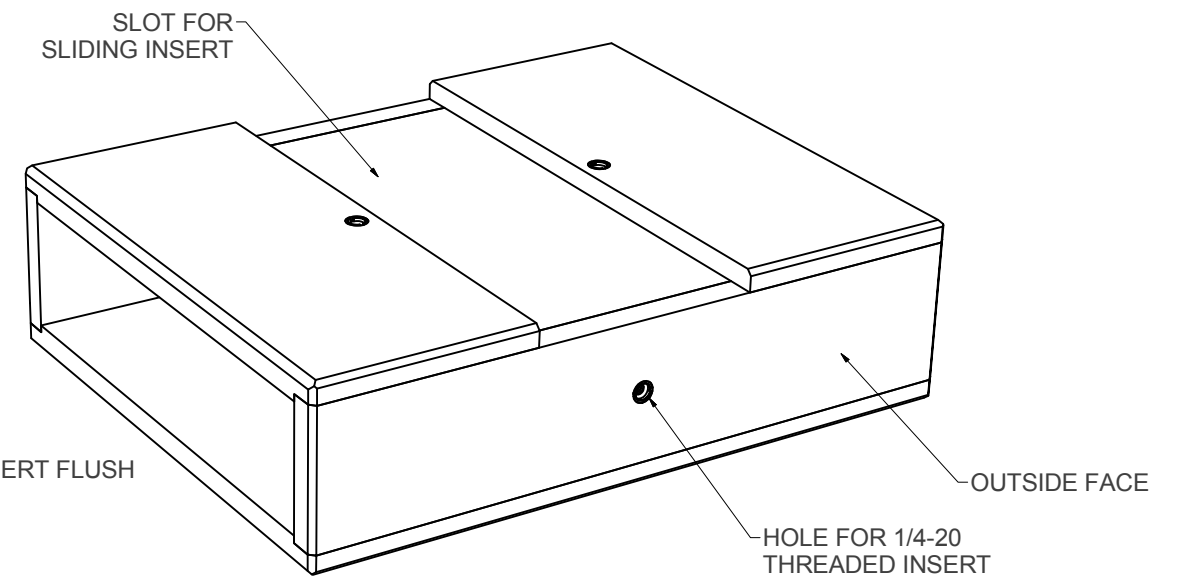


(K) - SLIDING INSERTS
(MAKE TWO)

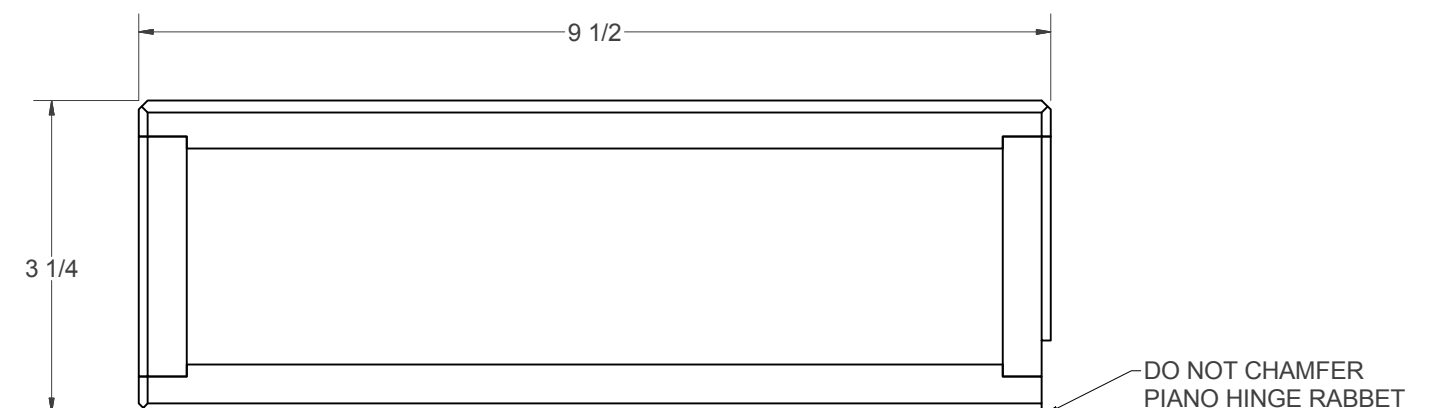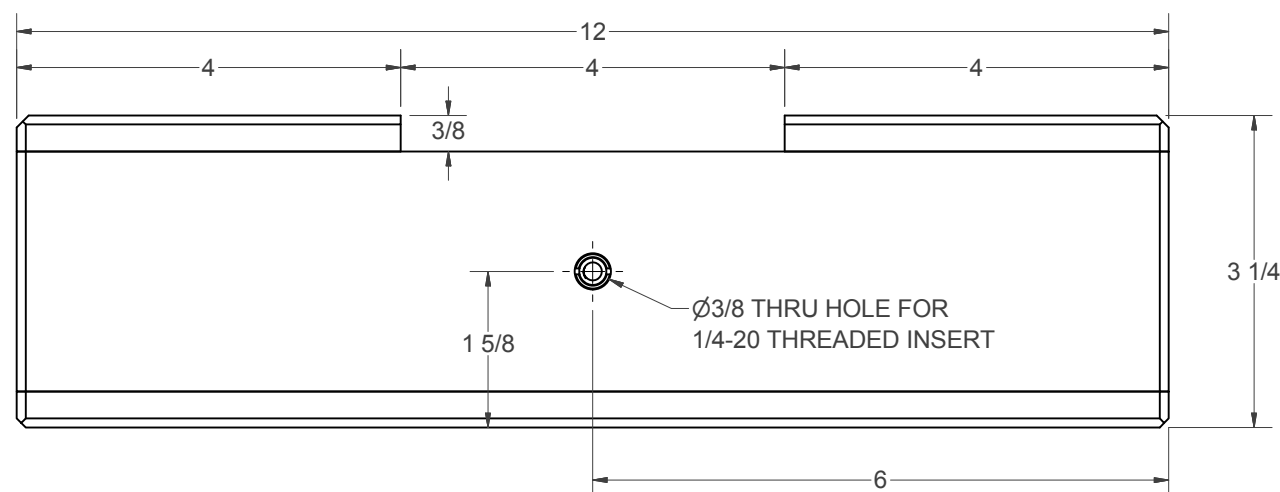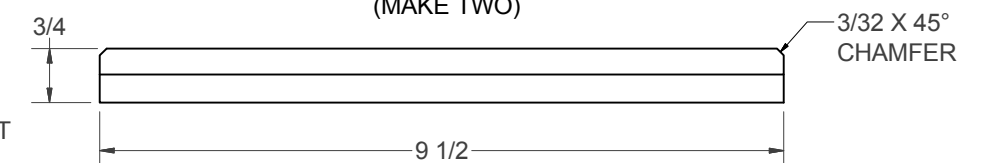

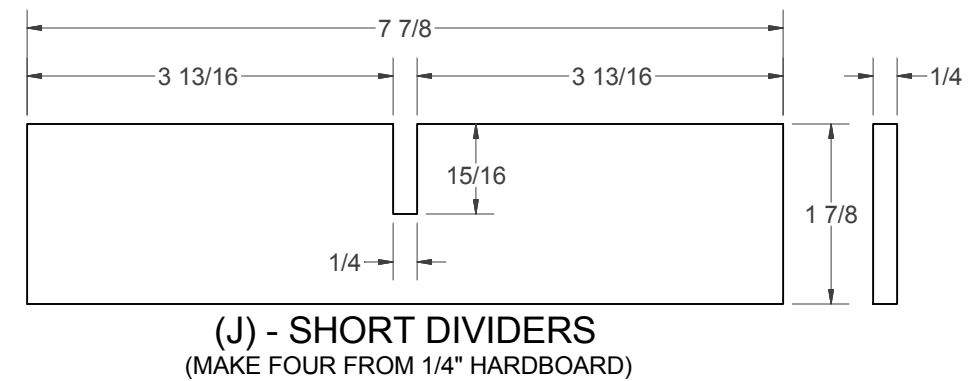
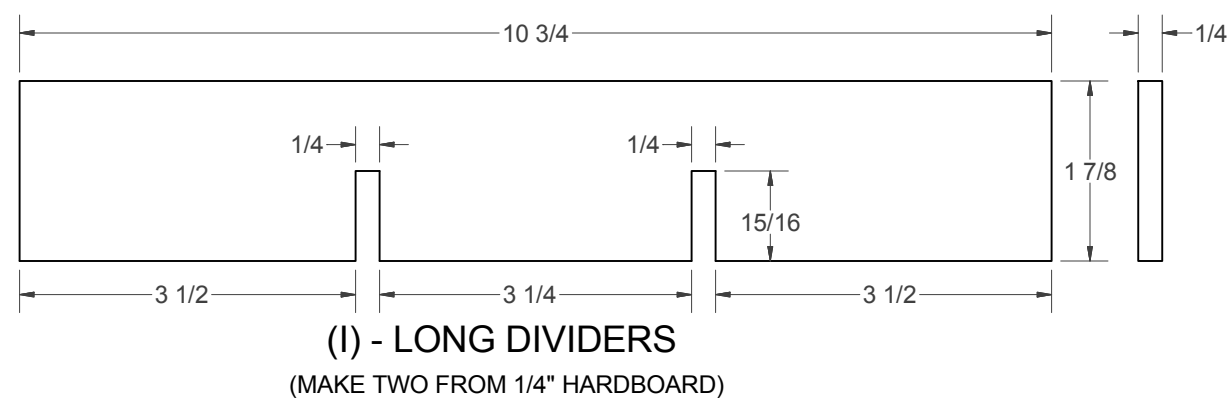
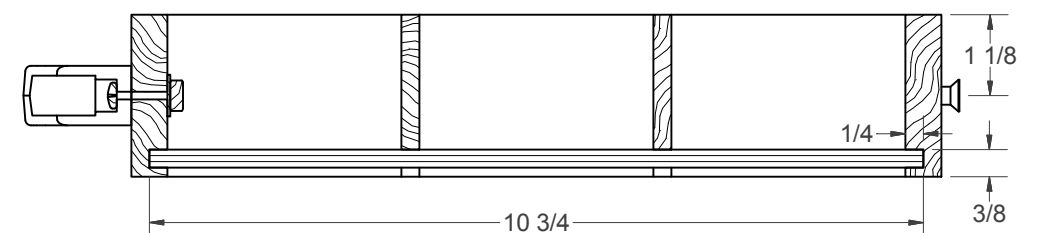
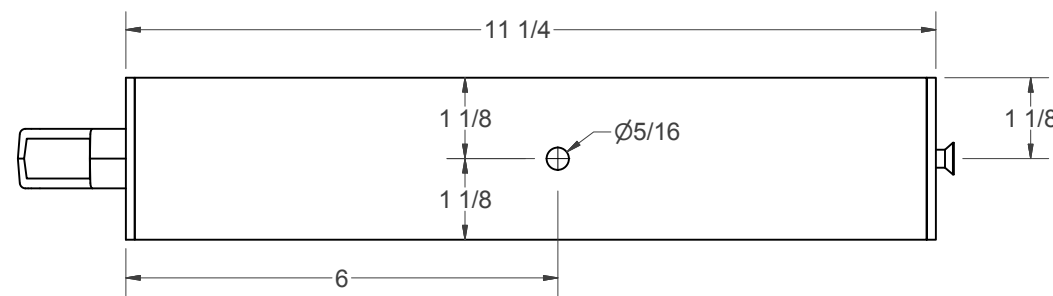
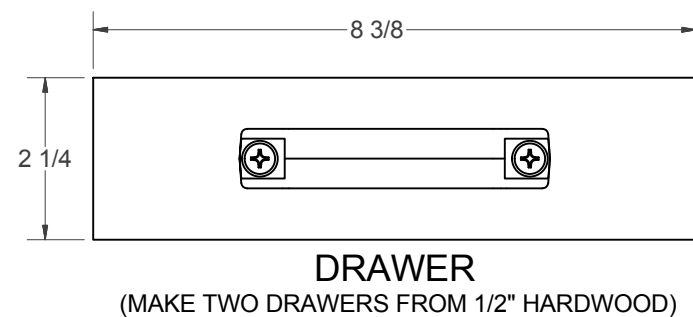
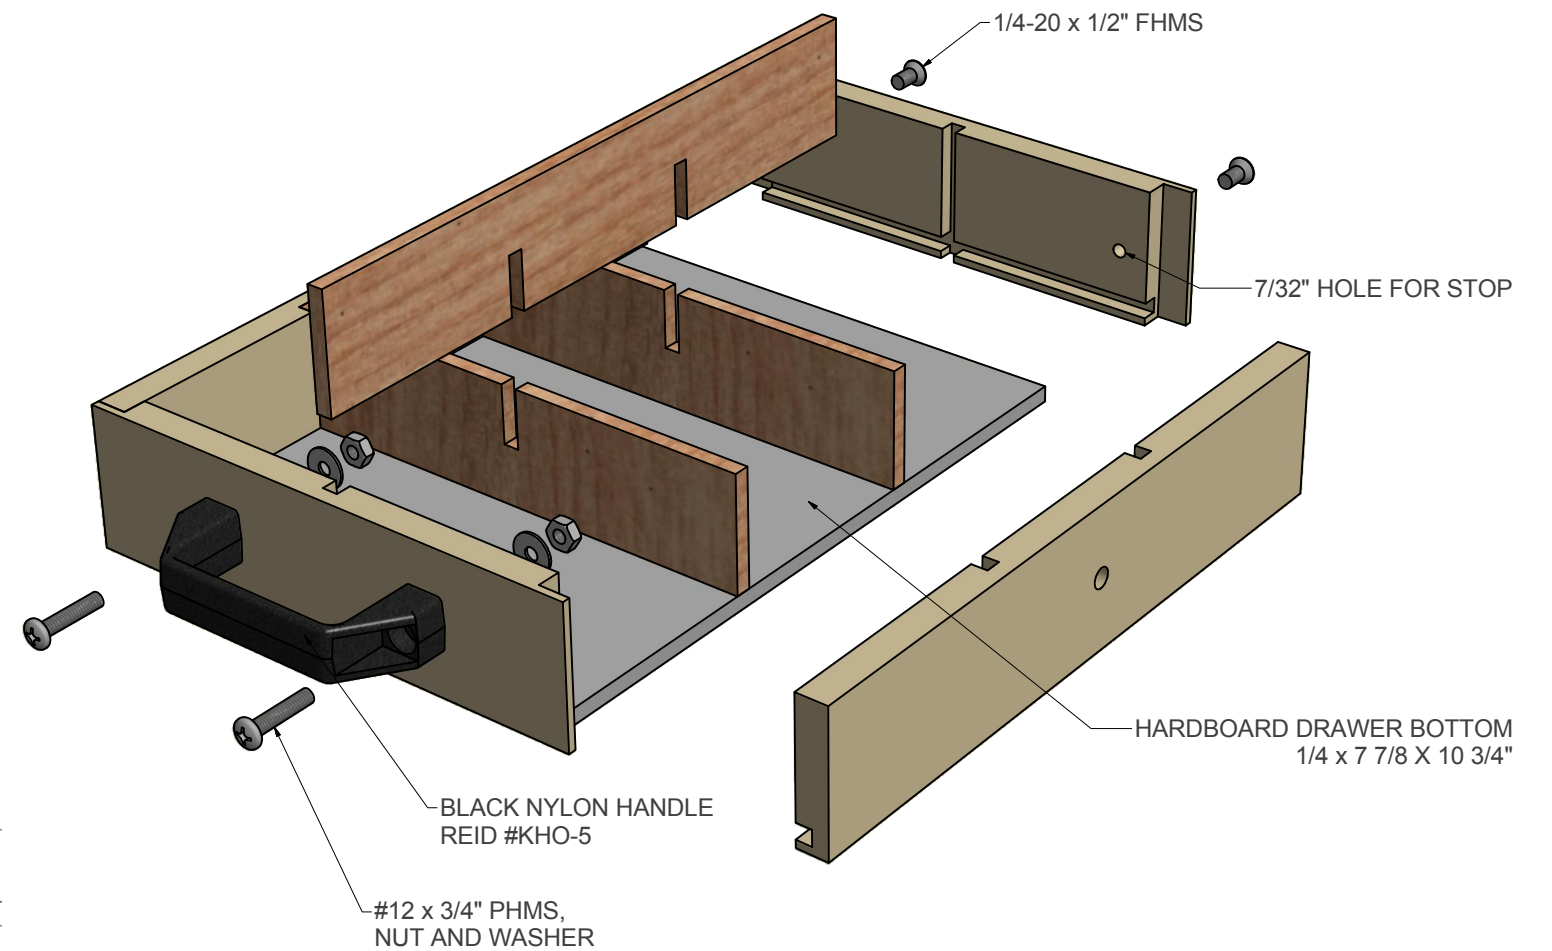
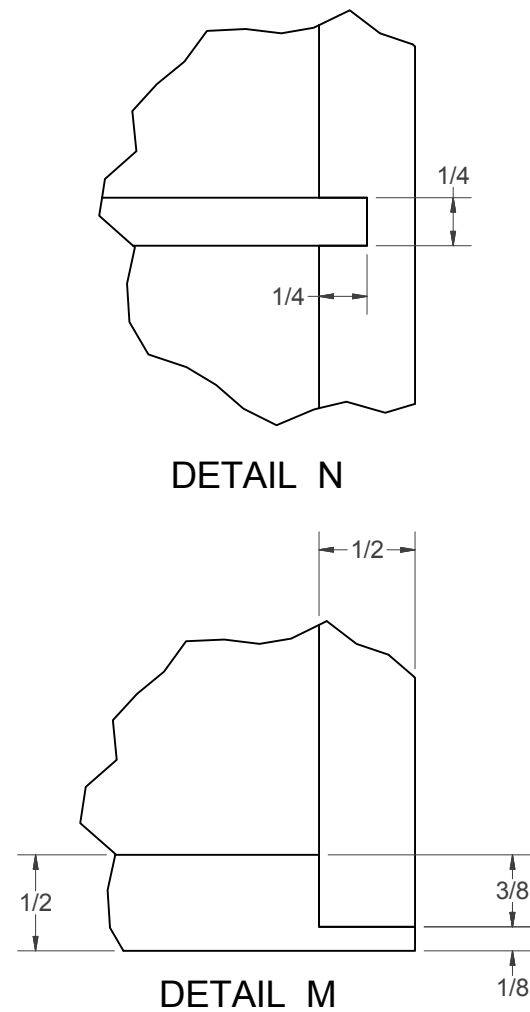
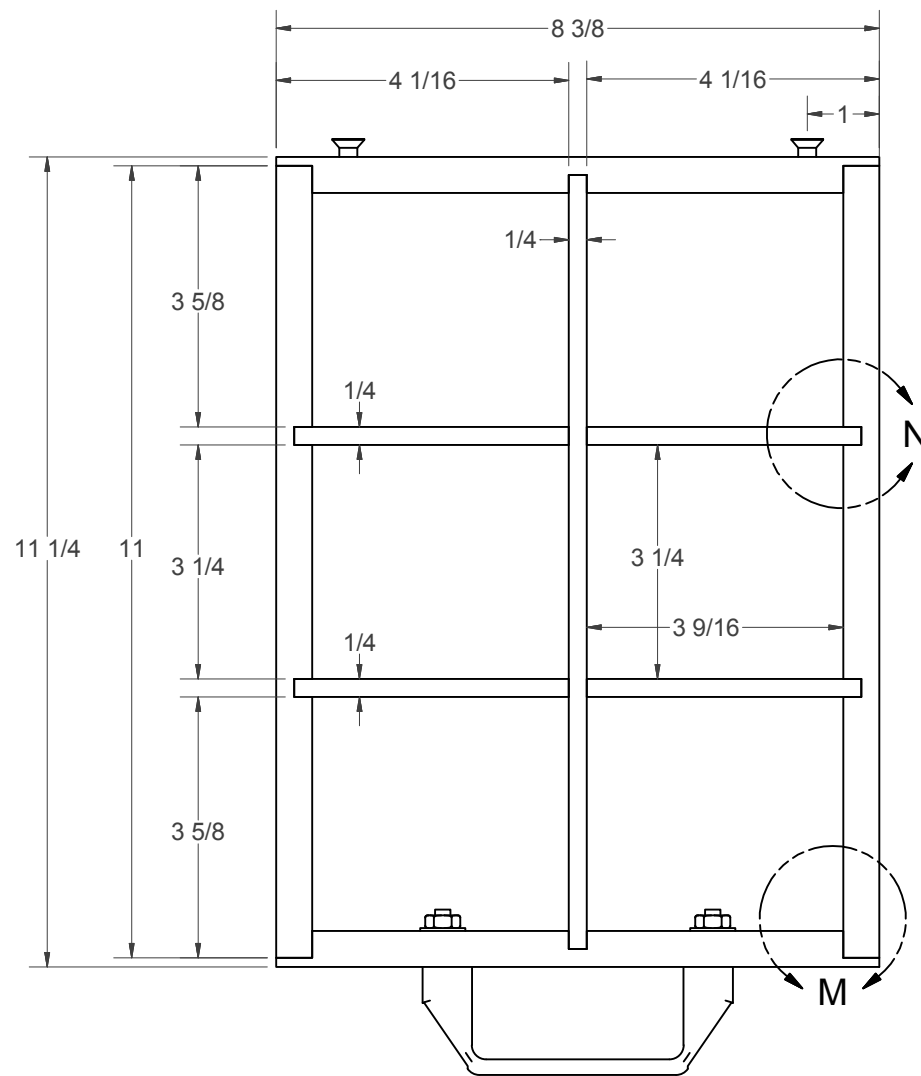


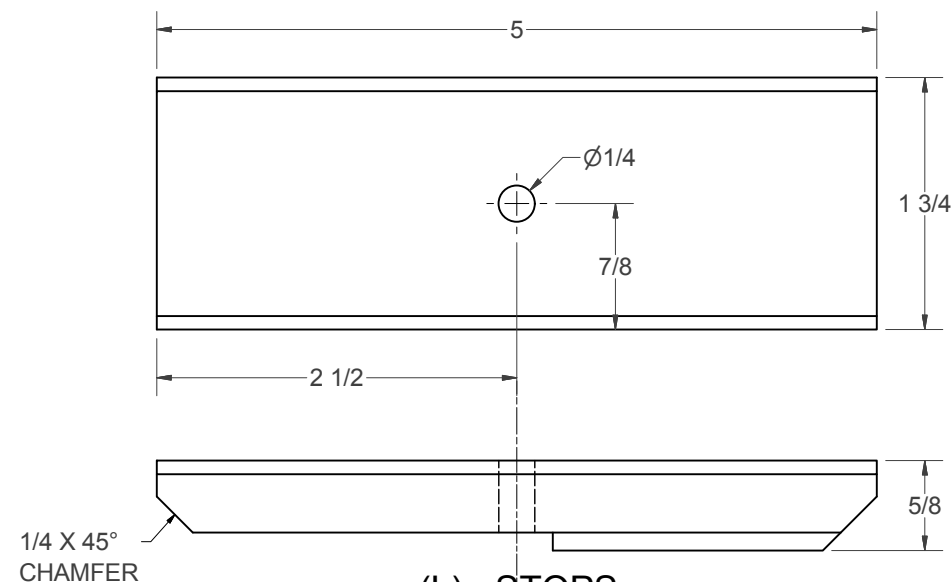


(L) - STOPS
(TWO PIECES)

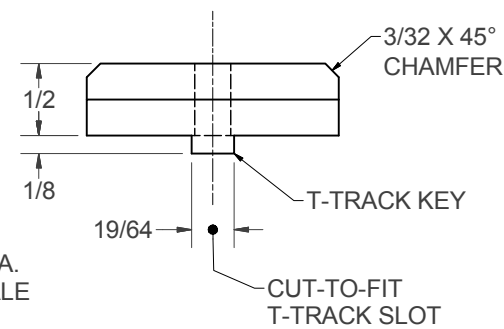


USE #6 x 3/8" FHWS
FOR ATTACHING
PIANO HINGE

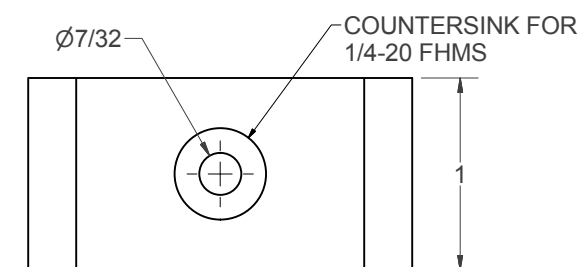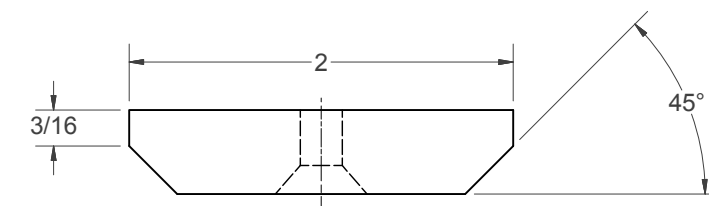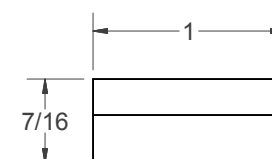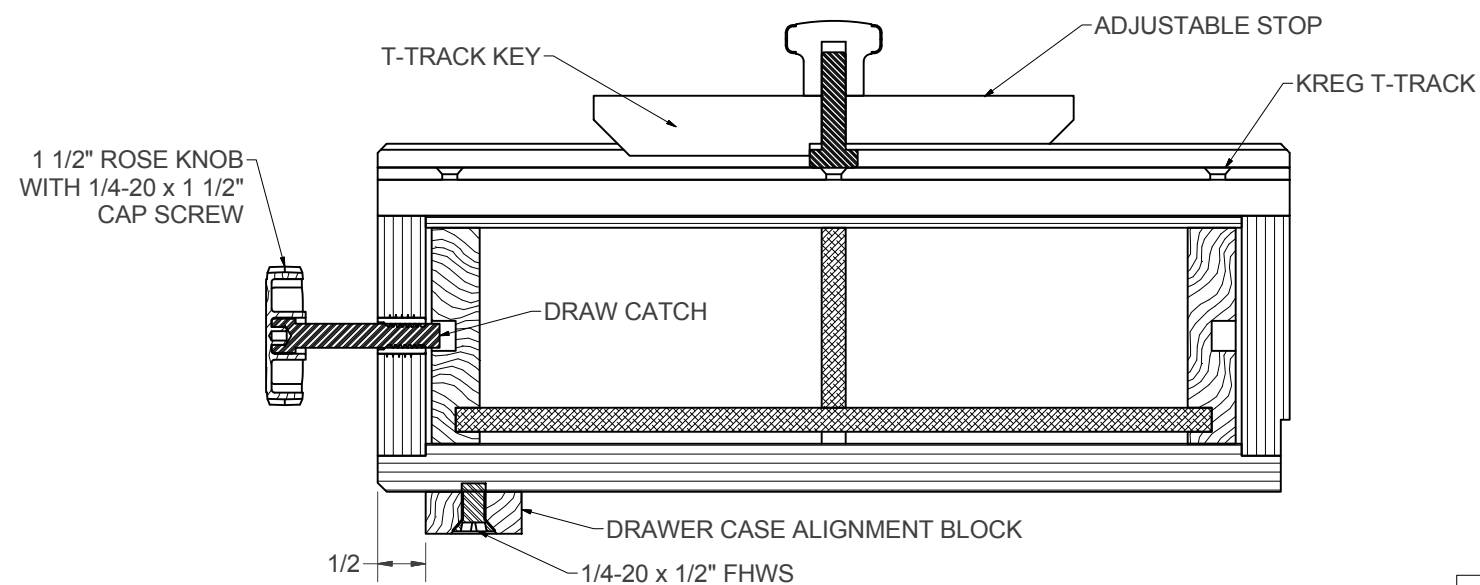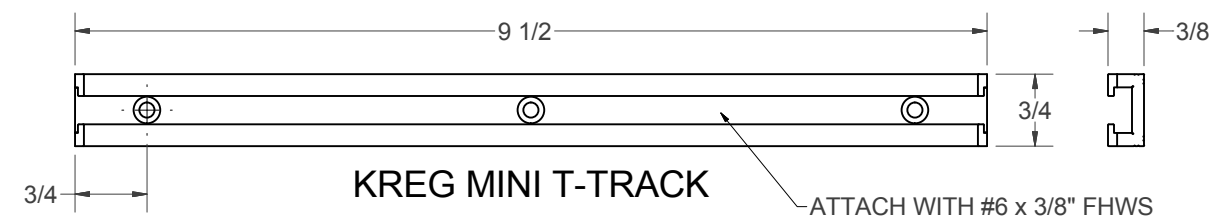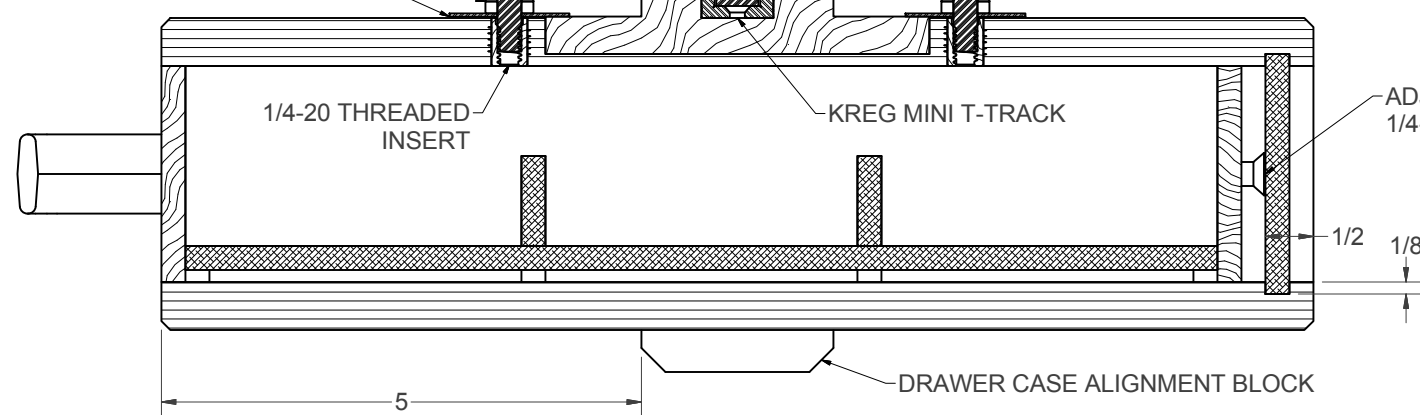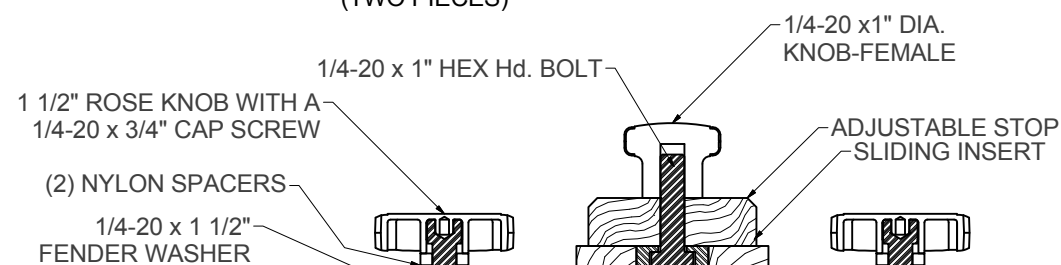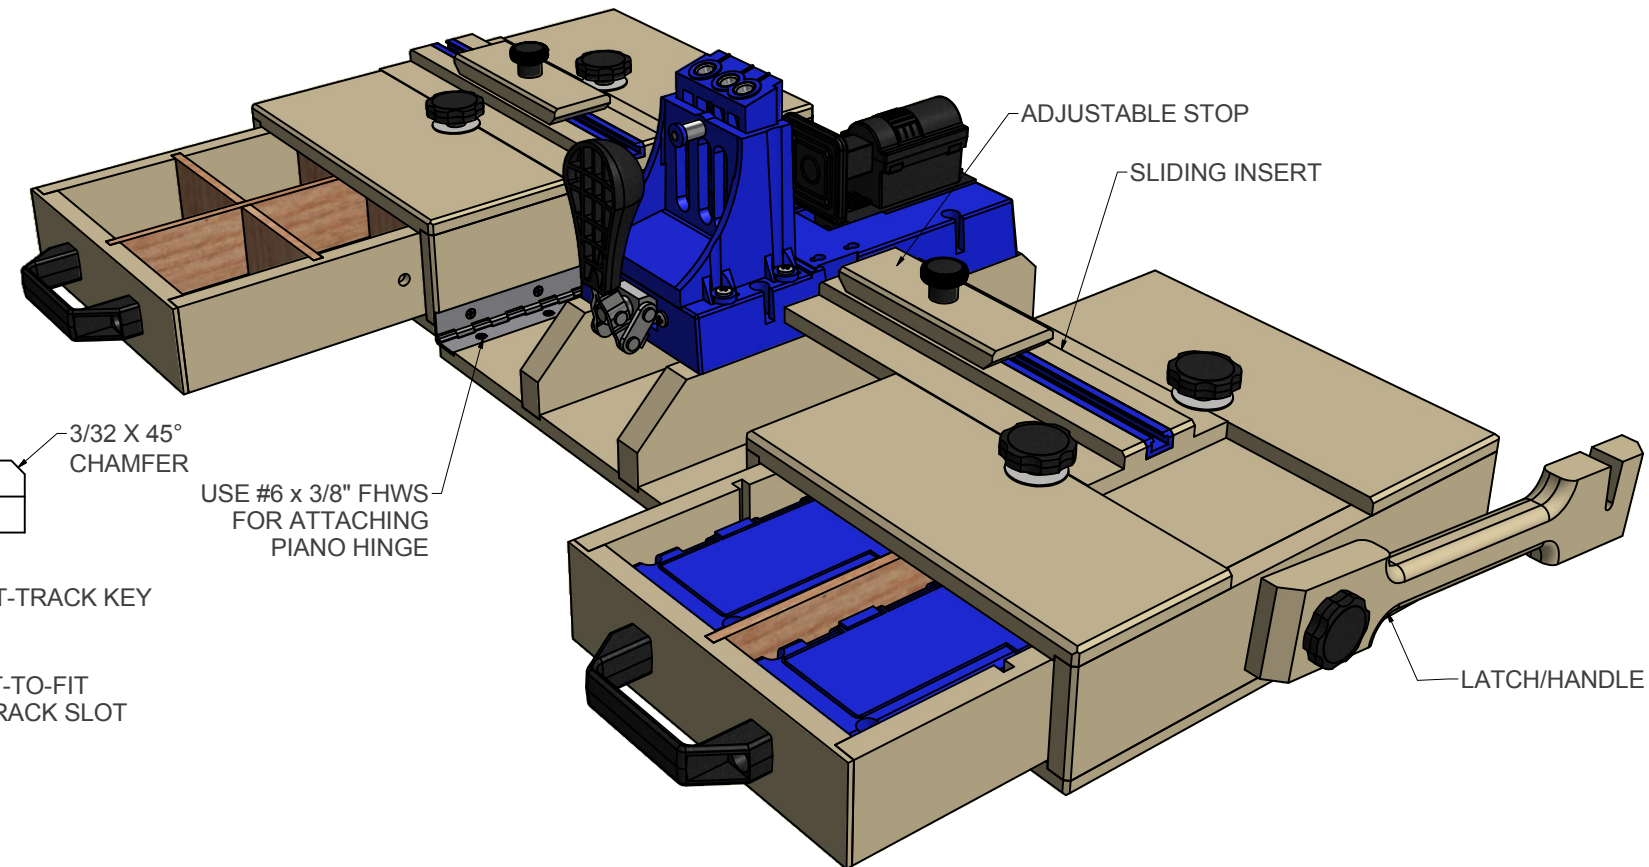


(M) - RISERS
(MAKE TWO)

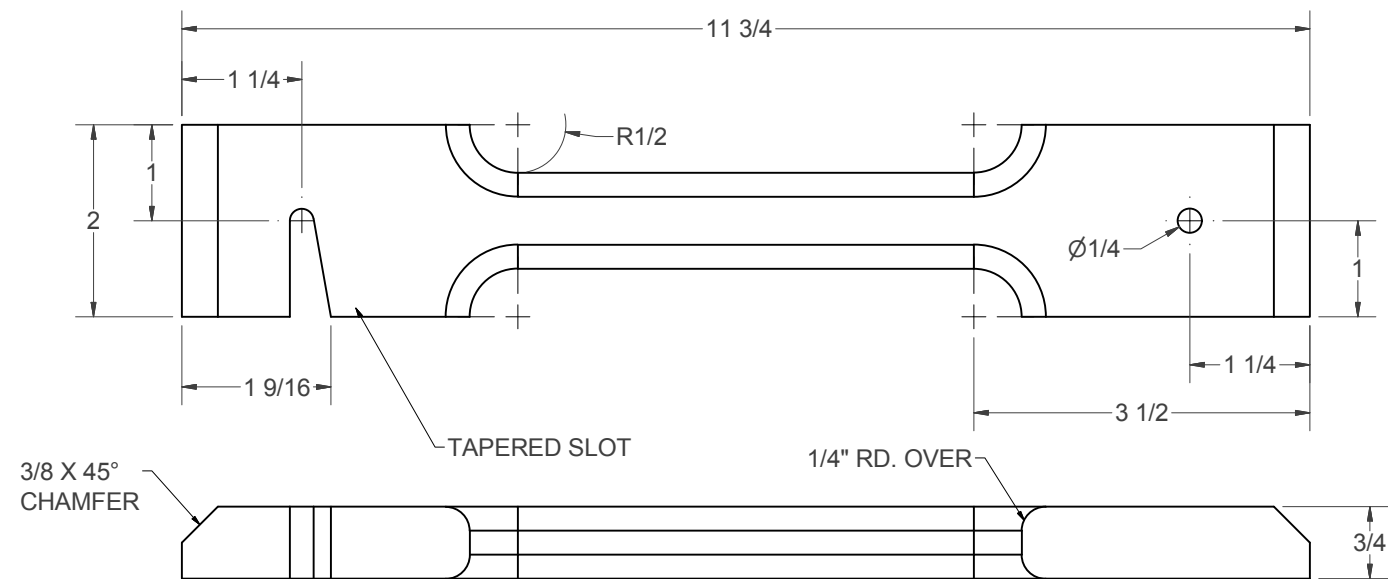

(N) - HANDLE
(3/4" HARDWOOD)

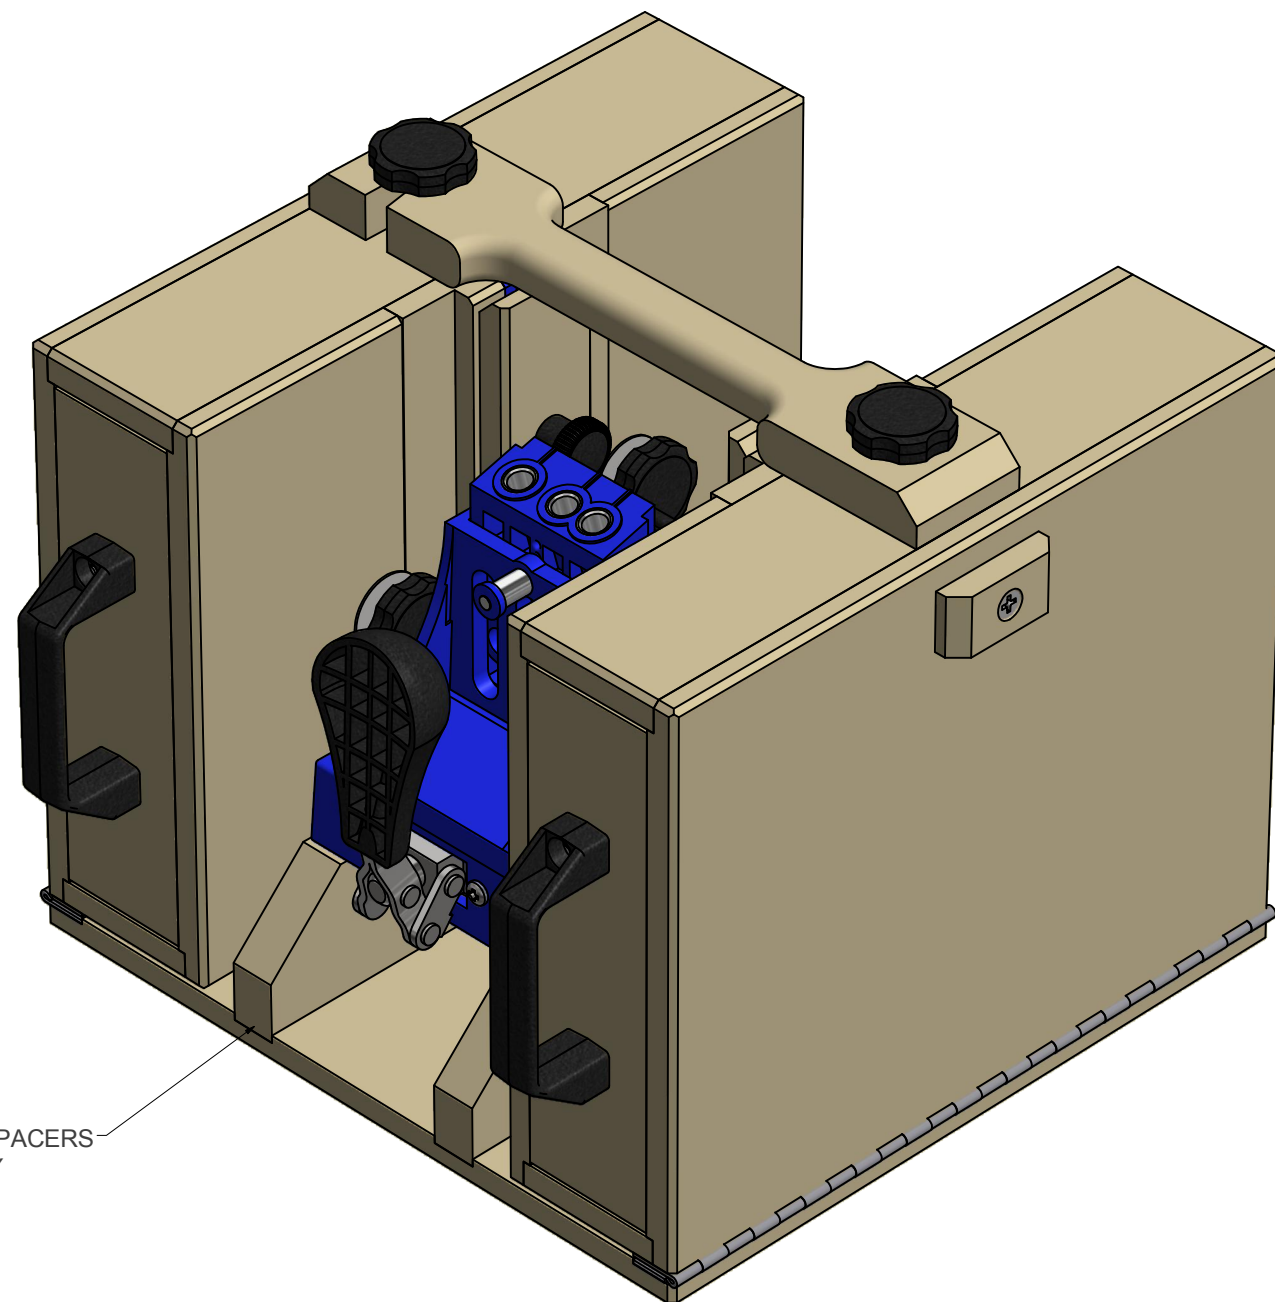

NOTE: DO NOT GLUE SPACERS INTO BASE, SCREW ONLY

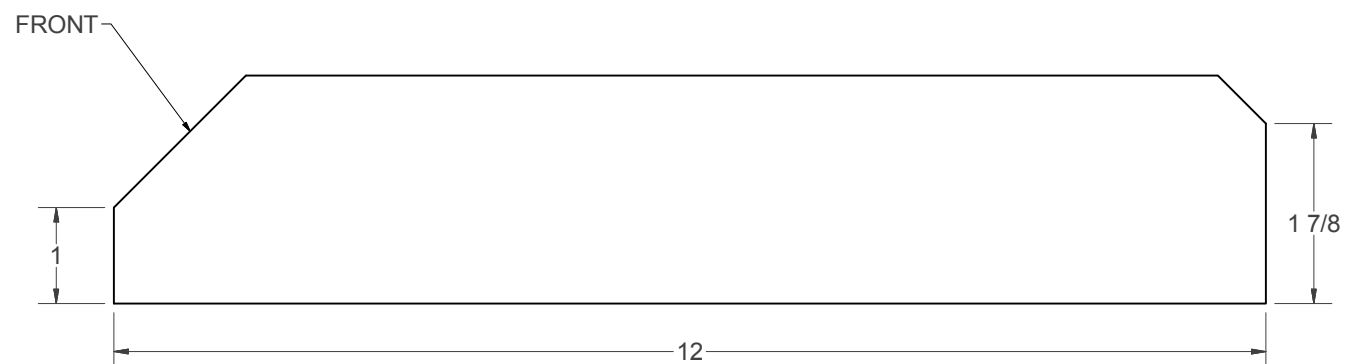

(M) - RISERS
(TWO PIECES, 3/4" HARDWOOD)