



HOTWHEEL Assembly Instructions



Congratulations on your HOTWHEELS fill and squeegee 2-in-1 asphalt crack cart purchase!

Before start the assembly process, please check and make sure you have all the parts shown. If any part is missing or damaged, please contact us to get replacements.



Your HOTWHEELS can be easily assembled within minutes. To assemble, please follow these simple steps.

1. Wheels and Axle


Pull the axle (D) through the holes located on the pour pot stand on each side.

Put wheels (E) on each side of the axle (D).

To secure the wheels (E), on each side place the washer piece outside the wheel (E) and push the cotter pin through the hole at the end of the axle (D).

PAVEMADE

Note: you may not need the washers to snugly fit the wheels. In this case you can simply ignore the washers.

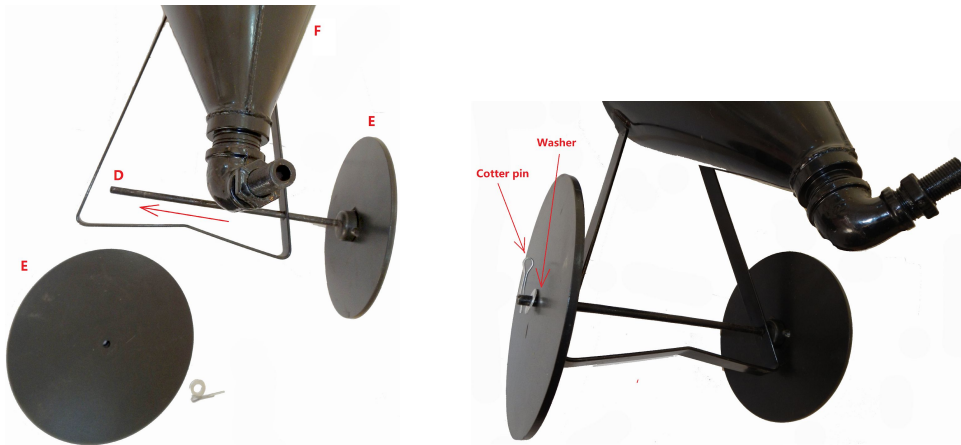

2. Push handle


Place pour pot holder (B) circle through the neck of the pour pot (F).



Place the push and valve control handle (A) as shown. Tighten the bolt to secure the handle (A) and pour pot holder (B) together to the pour pot.



PAVEMADE

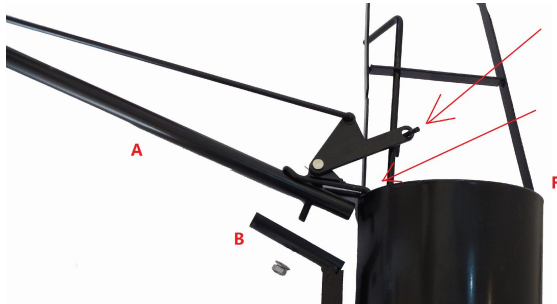

3. Squeegee head

Screw on the squeegee head. Make sure do not screw the squeegee too tight, leave some play in order to ensure the squeegee head is flexible enough to turn upon uneven ground.

Note: The pour pot comes with a 90 degree angle, you will need to take this piece off and replace with the 45 degree squeegee head as shown below.



Congratulations! You have successfully assembled your HOTWHEELS. Enjoy!