





## 10850K - King Bed

(Consists of: 10850K1, 10850K2, 10820R3)

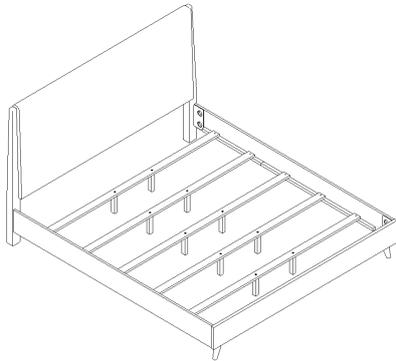

## 10850C- California King Bed

(Consists of: 10850K1, 10850K2, 10850C3)

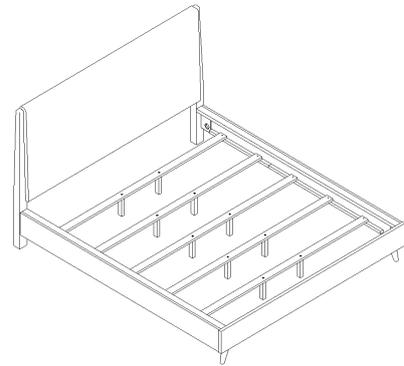


### IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent damage to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

## Part List

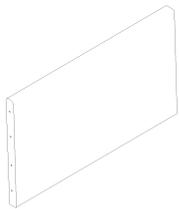

A. Headboard  
1 piece



B. Footboard  
1 piece



C1. Side Rail 2 piece  
Queen Bed



C2. Side Rail 2 piece  
Full Bed



D. Cross Slat  
5 piece



E. Headboard  
Post Left  
1 piece



F. Headboard  
Post Right  
1 piece



G. Slat Support  
10 piece



H. Footboard  
Foot Left  
1piece



I. Footboard  
Foot Right  
1piece

## Hardware List



Flat Washer  
Ø5/16" :14 pcs



Spring Washer  
Ø5/16" : 14 pcs



1. Bolt : 14pcs  
Ø5/16" x 1-3/4"



Hex Key  
1 piece



Screw  
10 pieces




Thread Bolt : 8pcs  
Ø5/16" x 4"



Curved Washer  
8 pieces



Hexagonal Nut  
8 pieces




Spanner Wrench  
1 piece



### IMPORTANT

- You should keep Hex Key and Spanner Wrench in a safe place as you may need to tighten up the Nuts in the future.
- Use a soft cloth between these parts and the floor.

### STEP 1

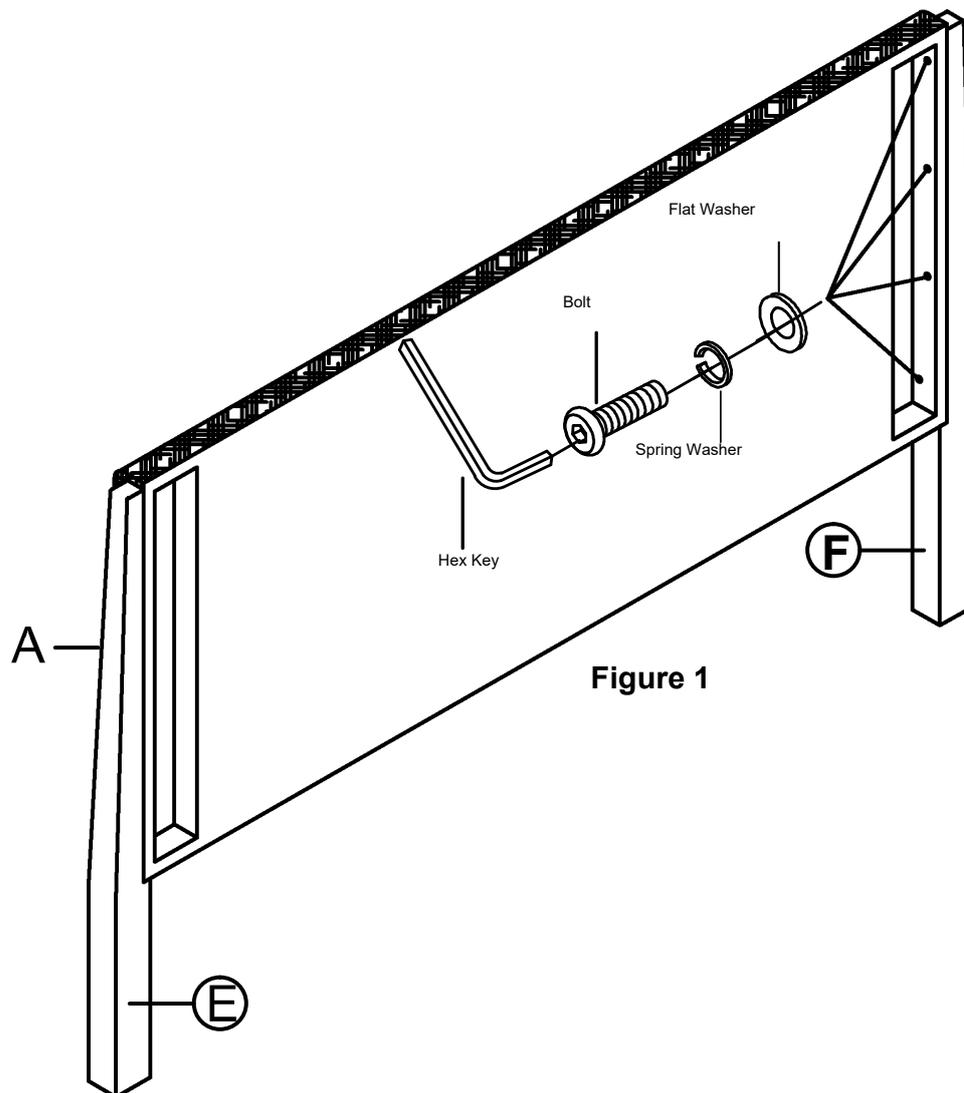




### IMPORTANT

You should keep Hex Key and Spanner Wrench in a safe place as you may need to tighten up the Nuts in the future.

- Use a soft cloth between these parts and the floor.


### STEP 2

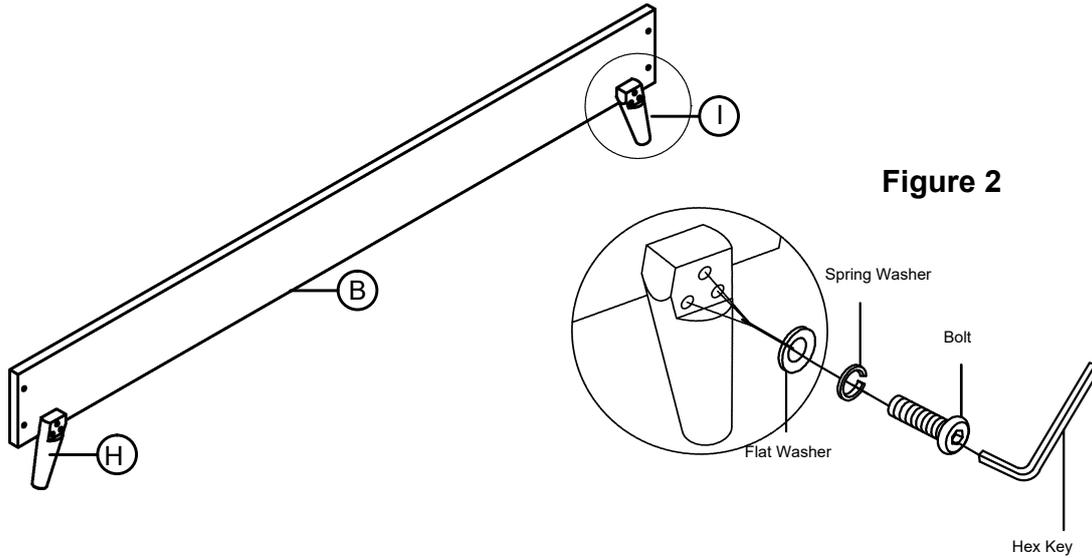

### STEP 3


#### OPTION 1 : 10850K KING BED

Figure 3

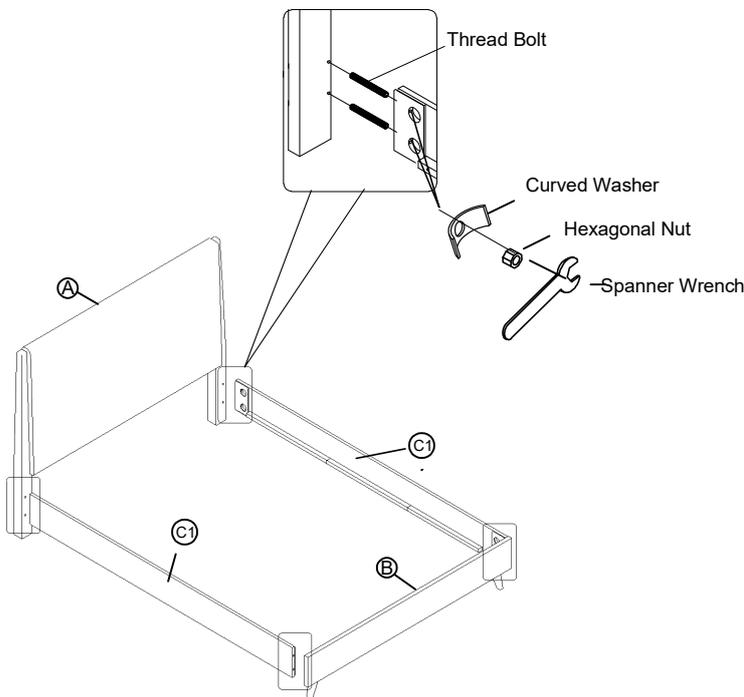

#### OPTION 2 : 10850C CALIFORNIA KING BED

Figure 3

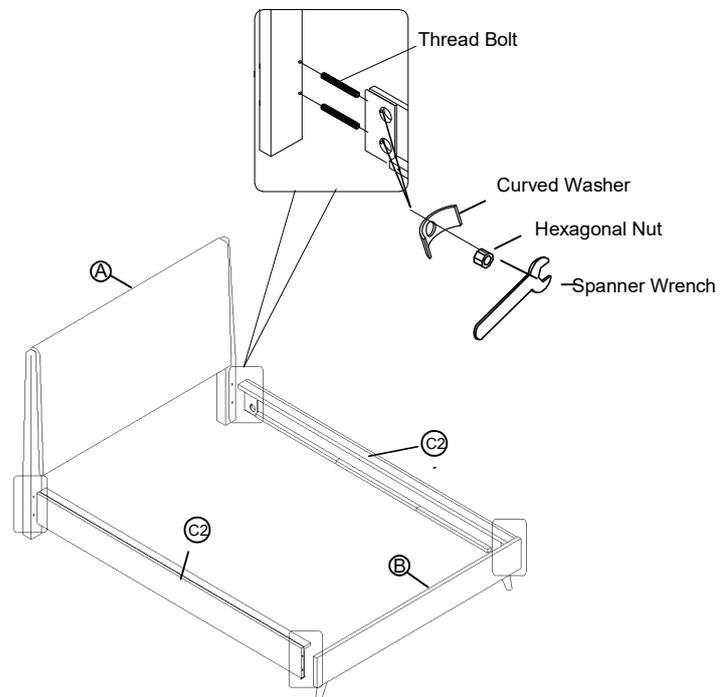




### IMPORTANT

You should keep Hex Key and Spanner Wrench in a safe place as you may need to tighten up the Nuts in the future.


- Use a soft cloth between these parts and the floor.

## STEP 4

### OPTION 1 : 10850K KING BED

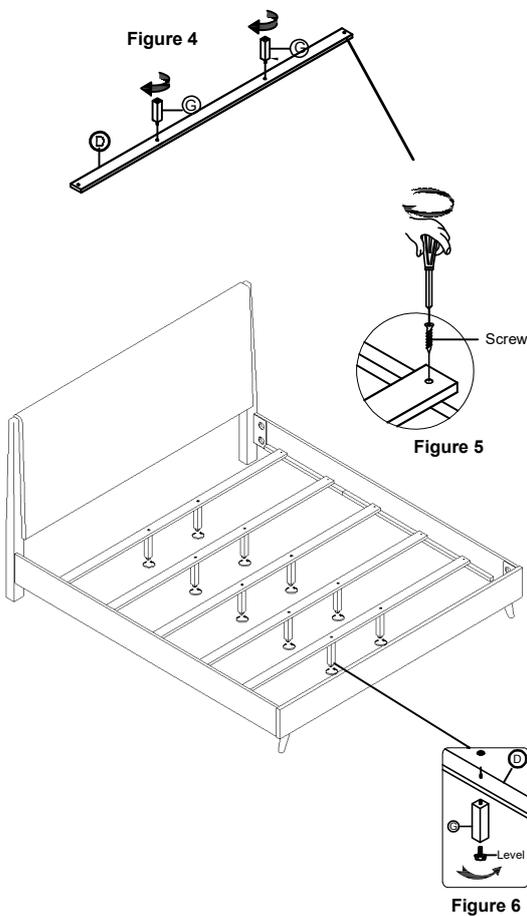

### OPTION 2 : 10850C CALIFORNIA KING BED

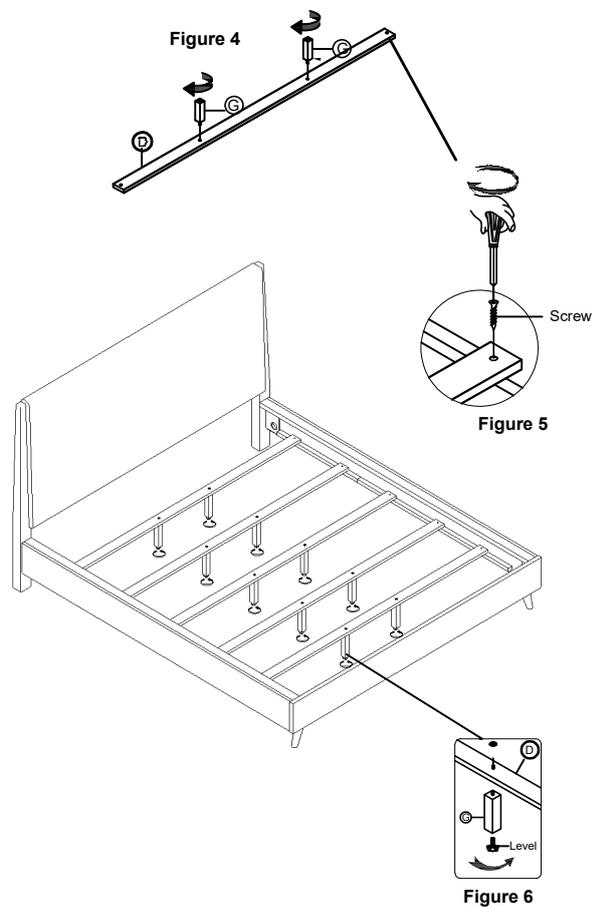

## STEP 5

Align the pre-drilled holes in the Cross Slats (D) with the cleat rail of the Side Rails (C). Secure with the Screws using a screwdriver (not included). (See Figure 4.)

## STEP 6

Adjust the levelers on the Slat Supports (F). (See Figure 5.)