


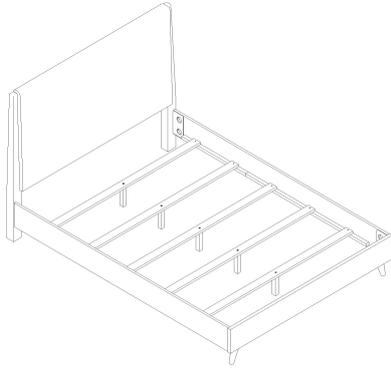


10850Q - Queen Bed

(Consists of: 10850Q1, 10850Q2, 10820R3)



10850F - Full Bed

(Consists of: 10850Q1, 10850Q2, 10850F3)

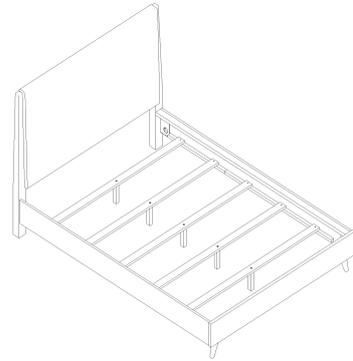


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent damage to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

Part List

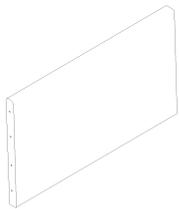

A. Headboard
1 piece



B. Footboard
1 piece



C1. Side Rail 2 piece
Queen Bed



C2. Side Rail 2 piece
Full Bed



D. Cross Slat
5 piece



E. Headboard
Post Left
1 piece



F. Headboard
Post Right
1 piece



G. Slat Support
5 piece



H. Footboard
Foot Left
1piece



I. Footboard
Foot Right
1piece

Hardware List



Flat Washer
Ø5/16" :14 pcs



Spring Washer
Ø5/16" : 14 pcs



1. Bolt : 14pcs
Ø5/16" x 1-3/4"



Hex Key
1 piece



Screw
10 pieces




Thread Bolt : 8pcs
Ø5/16" x 4"



Curved Washer
8 pieces



Hexagonal Nut
8 pieces




Spanner Wrench
1 piece



IMPORTANT

- You should keep Hex Key and Spanner Wrench in a safe place as you may need to tighten up the Nuts in the future.
- Use a soft cloth between these parts and the floor.

STEP 1

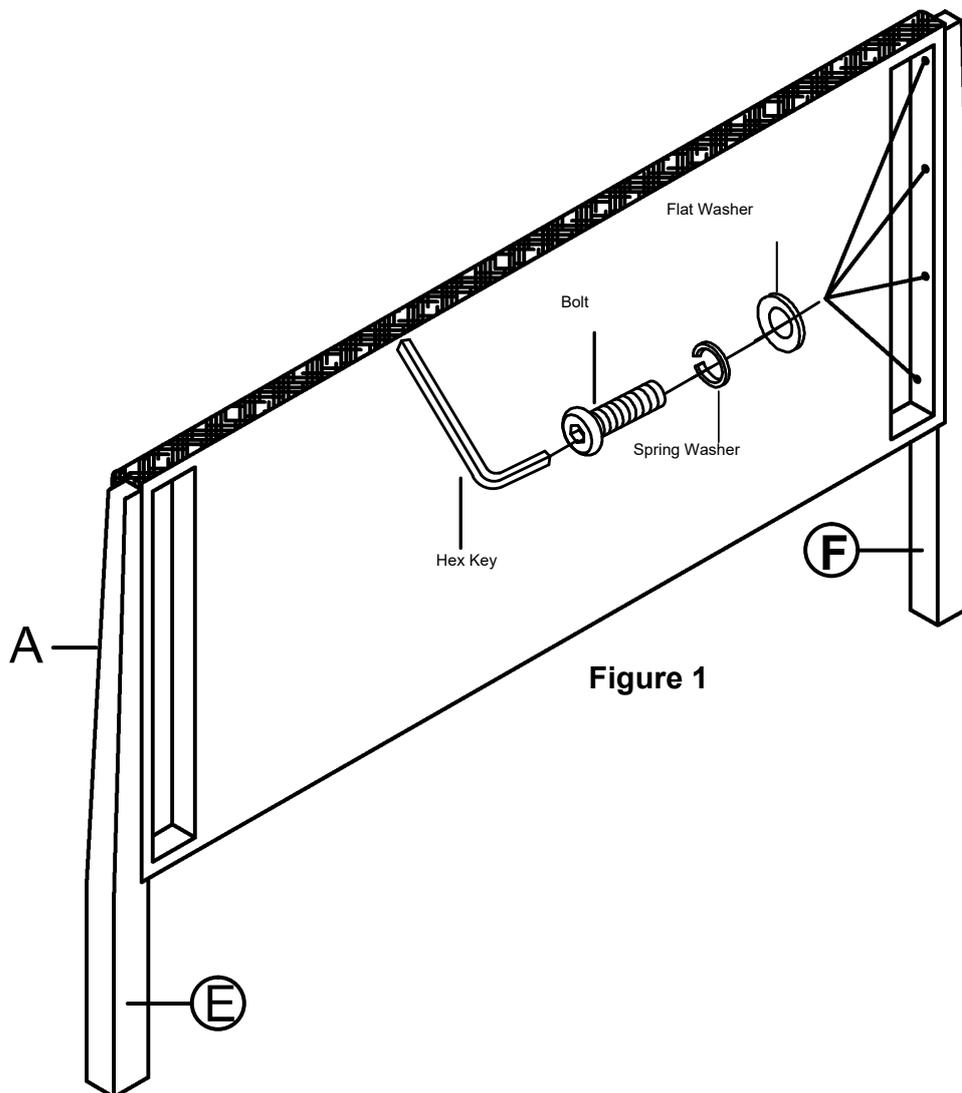




IMPORTANT

You should keep Hex Key and Spanner Wrench in a safe place as you may need to tighten up the Nuts in the future.

- Use a soft cloth between these parts and the floor.


STEP 2

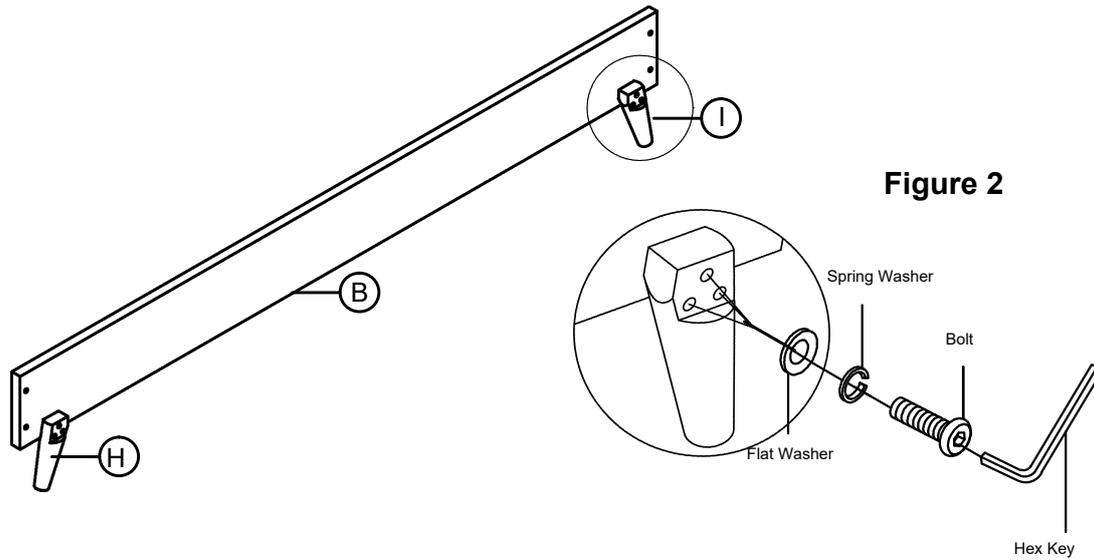

STEP 3


OPTION 1 : 10850Q QUEEN BED

Figure 3

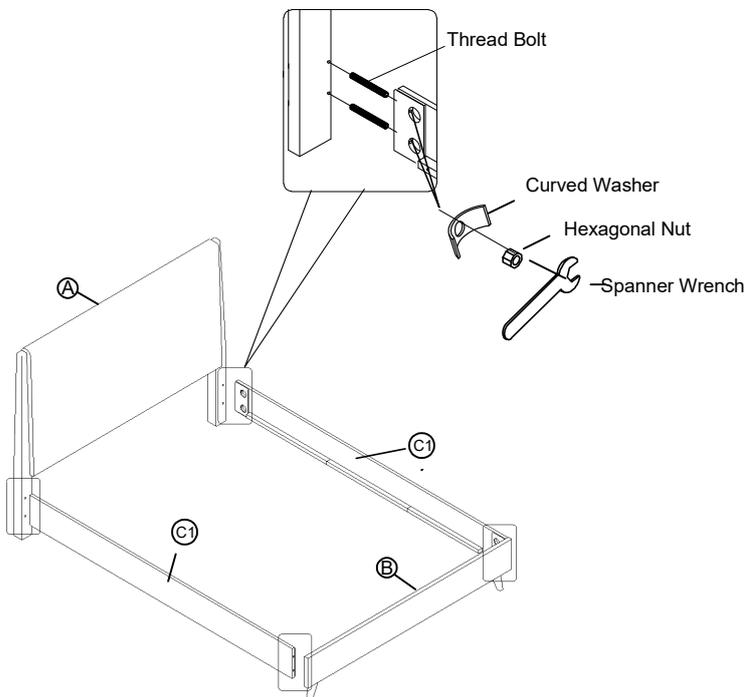

OPTION 2 : 10850F FULL BED

Figure 3

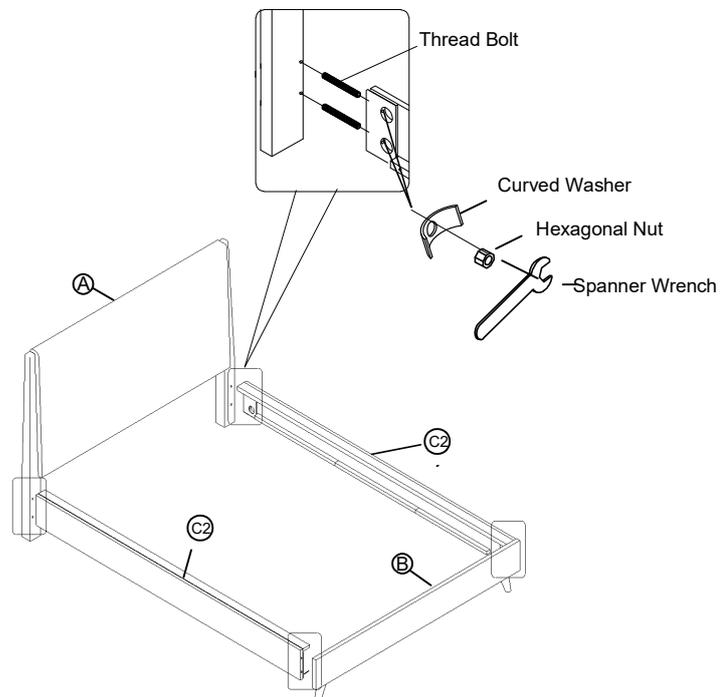



IMPORTANT



You should keep Hex Key and Spanner Wrench in a safe place as you may need to tighten up the Nuts in the future.

- Use a soft cloth between these parts and the floor.

STEP 4

OPTION 1 : 10850Q QUEEN BED

OPTION 2 : 10850F FULL BED

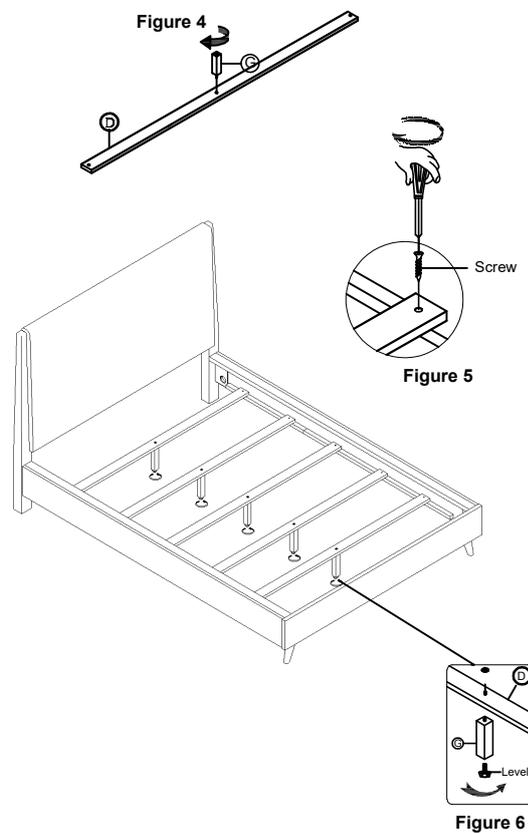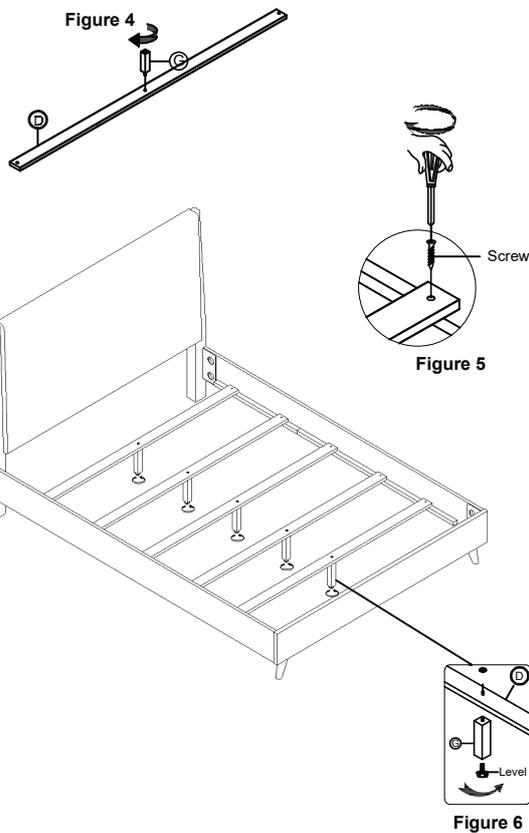

STEP 5

Align the pre-drilled holes in the Cross Slats (D) with the cleat rail of the Side Rails (C). Secure with the Screws using a screwdriver (not included). (See Figure 4.)

STEP 6

Adjust the levelers on the Slat Supports (F). (See Figure 5.)