

FLEX STEEL®

W1047-90K (Consists of: W1047-90K1, W1047-90K2, W1047-90K3)

King Bed

OR

W1047-90Q (Consists of: W1047-90Q1, W1047-90Q2, W1047-90Q3)

Queen Bed

OR


W1047-90C (Consists of: W1047-90K1, W1047-90K2, W1047-90C3)

California King Bed

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent damage to the parts.


We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

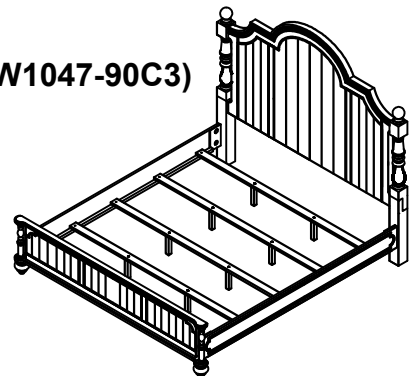


Part List




A. Headboard
1 piece

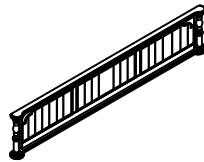

B. Footboard
1 piece

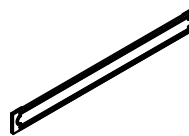

C. Side Rail
2 pieces



D. Cross Slat
4 pieces



E. Headboard Post
2 pieces



F. Slat Support
4 pieces (queen bed)
8 pieces (king bed)



G. Footboard Foot
2 pieces

Hardware List



Flat Washer
6 pieces



Spring Washer
6 pieces




Bolt
6 pieces



Hex Key
1 piece



Screw
8 pieces




Thread Bolt
8 pieces



Curved Washer
8 pieces



Hexagonal Nut
8 pieces




Spanner Wrench
1 piece



Leveler(king bed &
California king bed)
8 pieces

Tool(s) recommended for assembly: Level and Screwdriver



FLEX STEEL®

Assembly Instructions 2/3


IMPORTANT

- You should keep Hex Key and Spanner Wrench in a safe place as you may need to tighten up the Nuts in the future.
- Use a soft cloth between these parts and the floor.

STEP 1

Attach the Headboard Post (E) to Headboard (A) by inserting Flat Washer, Spring Washer, Bolt and tighten with Hex Key. (See Figure 1.)

Note: We recommend at least two adults assemble this item.

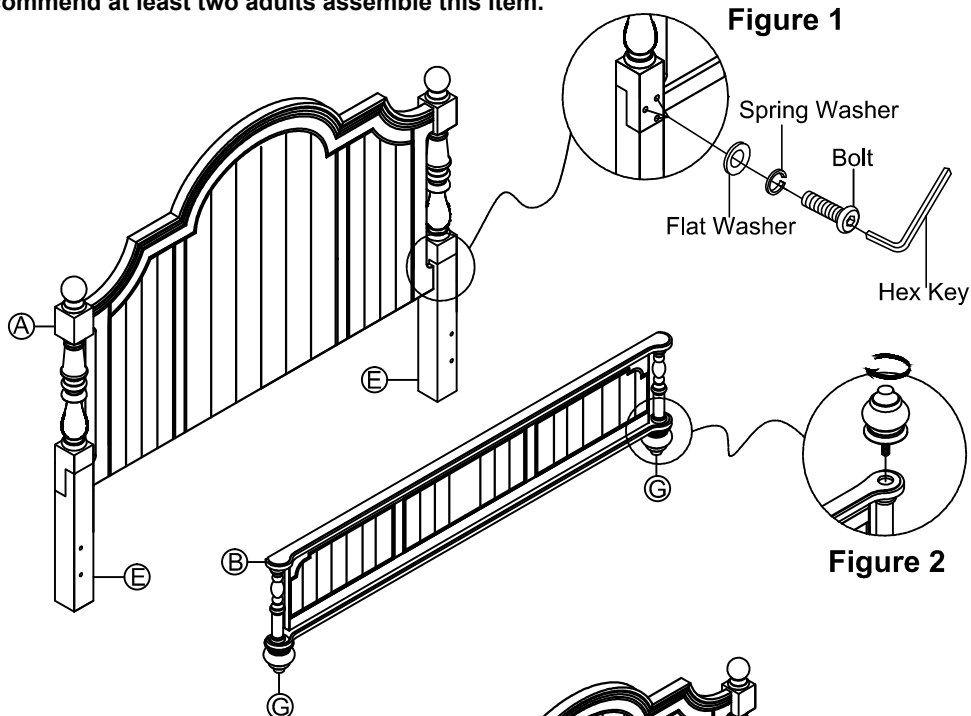



STEP 2

Attach the Footboard Feet (G) to the Footboard (B). (See Figure 2)

STEP 3

Insert the Thread Bolts into the pre-threaded holes of the Headboard Posts (E); then securely tighten the Side Rails (C) to the Headboard Posts (E) with the Curved Washers and Hexagonal Nuts, and tighten with the Spanner Wrench. (See Figure 3) Repeat assembly with the Footboard (B).

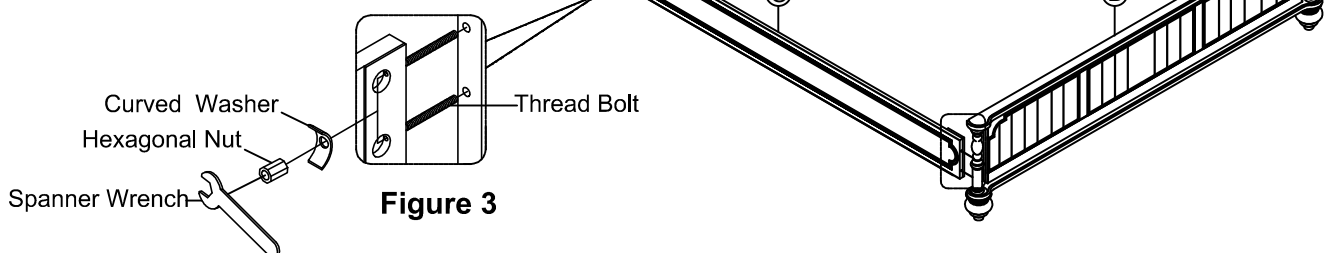





FLEXSTEEL®

Assembly Instructions 3/3


STEP 4

Screw the exposed thread in the Support Slats (F) into the pre-threaded holes in the Cross Slats (D). (See Figure 4.)

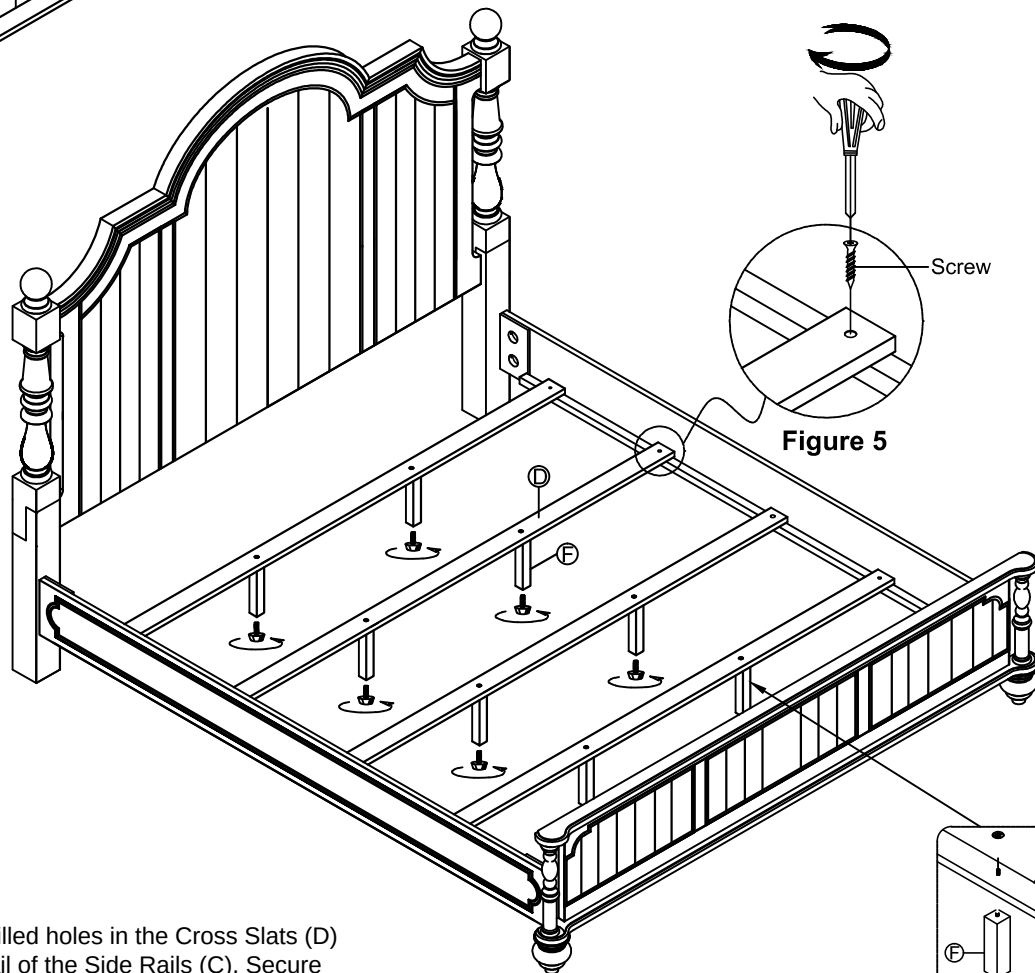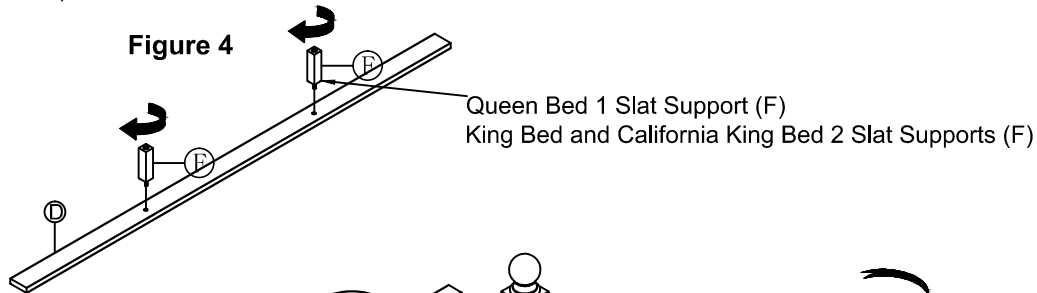

STEP 5

Align the pre-drilled holes in the Cross Slats (D) with the cleat rail of the Side Rails (C). Secure with the Screws using a screwdriver (not included). (See Figure 5.)

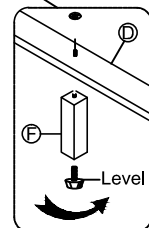

STEP 6

Adjust the levelers on the Slat Supports (F). (See Figure 6.)