

LIBERTY FURNITURE

ASSEMBLY INSTRUCTION

361-BR31/361W-BR31 ITEM#


361-BR51/361W-BR51

DESCRIPTION:

2 DOOR/ 6 DRAWER DRESSER


MIRROR

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list Below.

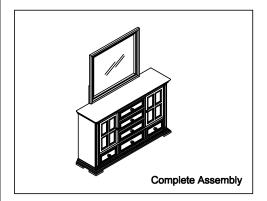

PARTS LIST				
NO.	SKETCH	DESCRIPTION	Q'TY	
A		6 Drawer dresser	1	
В		Mirror	1	
С		Mirror Support	2	

HARDWARE LIST				
NO.	SKETCH	HARDWARE	Q'TY	
1		1/4"*38mm(L)	8	
2	0	1/4"*10mm	8	
3		1/4"*19mm	8	
4		4mm	1	

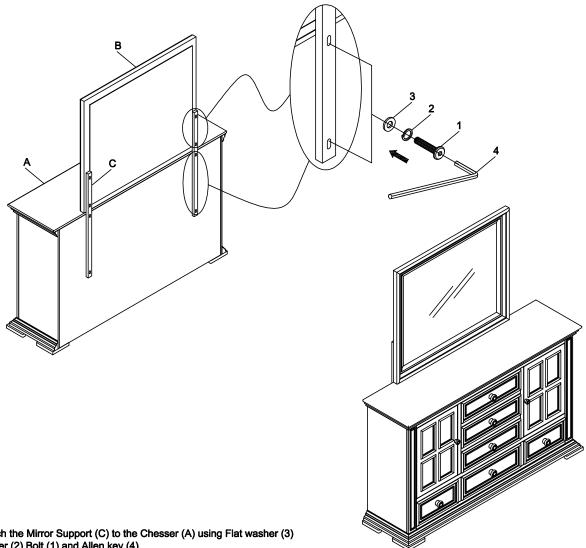

Step 1: Attach the Mirror Support (C) to the Chesser (A) using Flat washer (3) Spring washer (2) Bolt (1) and Allen key (4).

(Align hole in Mirror Support with pre-drilled Dresser).

Step 2: Carefully place Mirror (B) on top of Chesser (A) and sure to Mirror Support (C) using Flat washer (3) Spring washer (2) Bolt (1) and Allen key (4).

MADE IN VIETNAM