


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.


Parts key				Hardware kit # 2001-66P01			
No	Code	Qty	Description	No	Description		Qty
1	2001-66P54	1 pc	Table Top Frame	A	Bolt-Large to attach back stretcher	Ø6x30	04 pcs
2	2001-66P09	1 pc	Glass Insert	B	Bolt-Small to attach the legs to the top	Ø6x20	16 pcs
3	2001-66P02L	1 pc	Left Front Leg	C	Lock washer	Ø8	20 pcs
4	2001-66P02R	1 pc	Right Front Leg	D	Flat washer	Ø8x18	20 pcs
5	2001-66P02LB	1 pc	Left Back Leg	E	Allen key	K4	01 pc
6	2001-66P02RB	1 pc	Right Back Leg	F	Wooden Screw (for Stretcher)	Ø4x40	04 pcs
7	2001-66P44	2 pcs	Small Side Stretcher	G	L Plate		04 pcs
8	2001-66P11	1 pc	Large Back Stretcher	H	Wood Screw (for L Plate)	Ø4x35	08 pcs
9	2001-66P01E	1 pc	Power Outlet				
10	2001P01F	4 pcs	Floor Glide				

Do not use power tools to assemble this table


STEP 1 Attach the L Plate "G" to the top of the legs, by using wood screws "H".

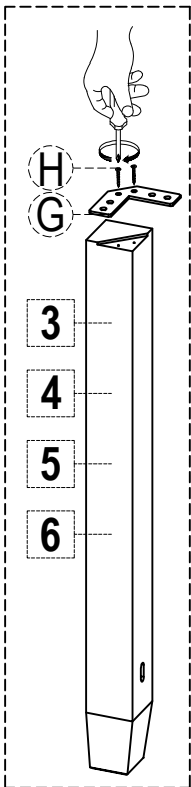


Step 2 Remove the glass retainer by using a screwdriver. And then remove the glass, put it on a flat and safe place!

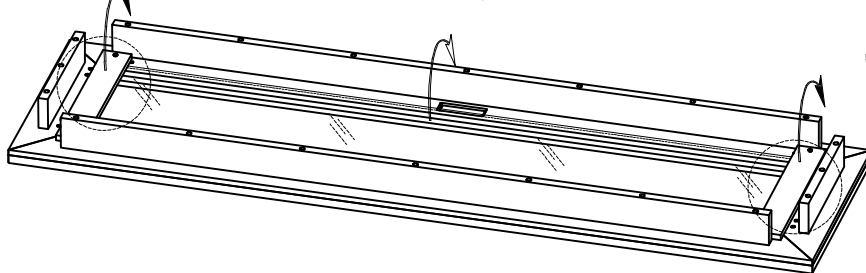


Step 3 - Attach the legs with the small stretcher in position to the topframe as shown. Do not fully tighten Bolt B at this time.
- Attach the long stretcher to the back legs and secure with Bolt A, Lock Washer and a Flat Washer. Secure the short stretchers to the legs with the wood screws by hand tighten with a Phillips screwdriver (Detail A). Fully hand tighten Bolt B.

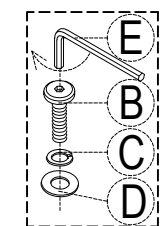


Detail C

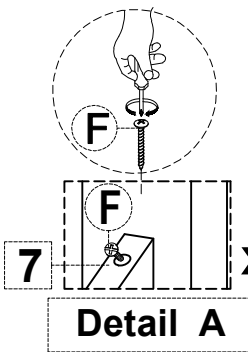

Detail A

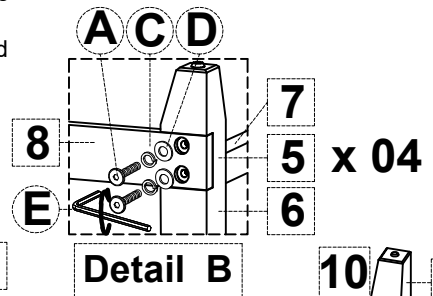

Detail B

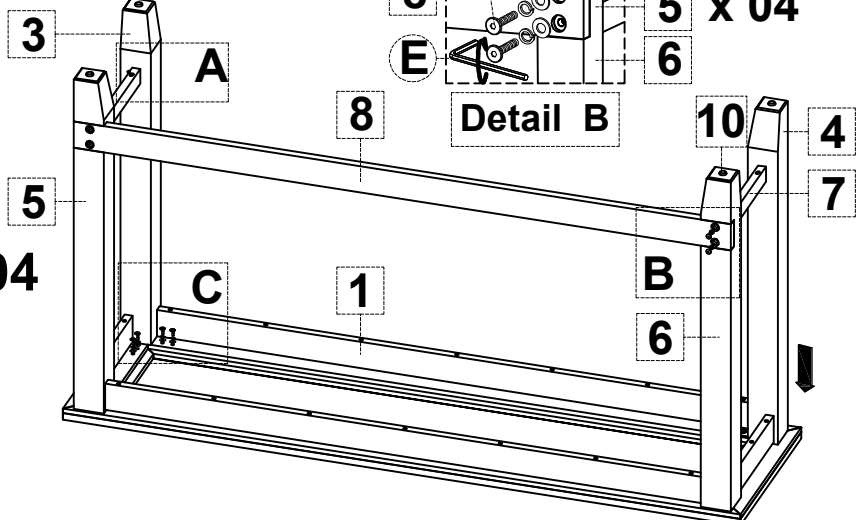

FINISH

Carefully lay the Glass Insert in place

