

ROUGH COUNTRY

921106640

Seat Back Organizer Molle Panel Kit

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.


Periodically check all hardware for tightness.

Kit Contents:

Molle Seat Back Organizer x1
117706 Strap Bag x1

Kit Bag Contents:

1" x 24"x1 Quick Buckle Straps x1
1" x 48" Quick Buckle Straps x1


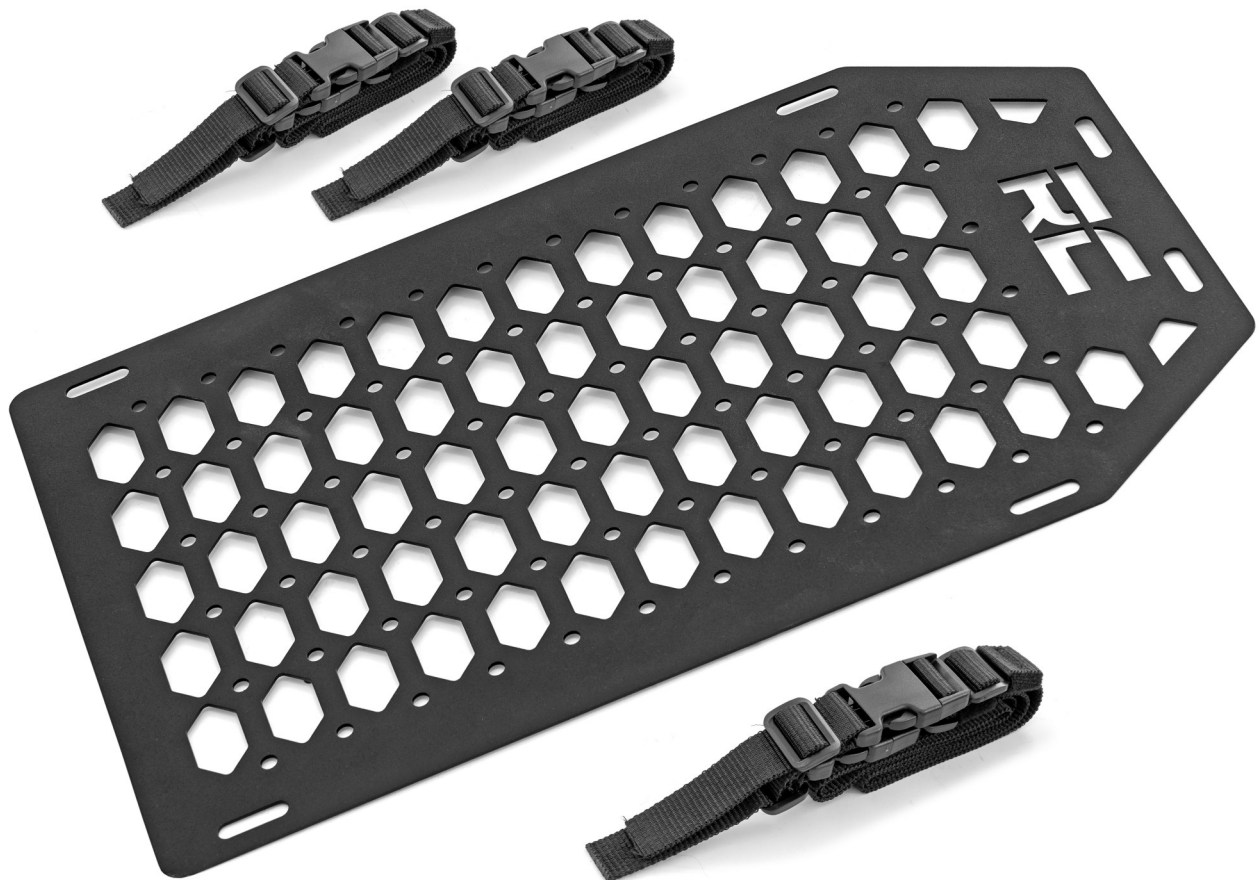


INSTALLATION INSTRUCTIONS

1. Locate the 1"x24" Quick Buckle Strap found in kit bag 117706. This strap will secure the top of the Molle Panel to the seats headrest. **See Photo 1**
2. Attach the 1"x24" strap to top of Molle Panel through the 2 small horizontal slots on the panel by unsnapping buckle and rethreading the length adjustments to loop through the slots. **See Photo 2**



3. Once the strap adjustments are rethreaded re-snap the buckle so the strap can wrap around the head rest adjustment bars to be connected to the other buckle and allowing the Molle Panel to hang loosely. **See Photo 3**
4. Locate the 1"x48" Quick Buckle Strap found in kit bag 117706. This strap will secure the bottom of the Molle Panel to the bottom of the seat back.
5. Attach the 1" x 48" strap to the bottom sides of the Molle Panel through the 2 small vertical slots by unsnapping the buckle and rethreading the length adjustments to loop through the slots. **See Photo 4**

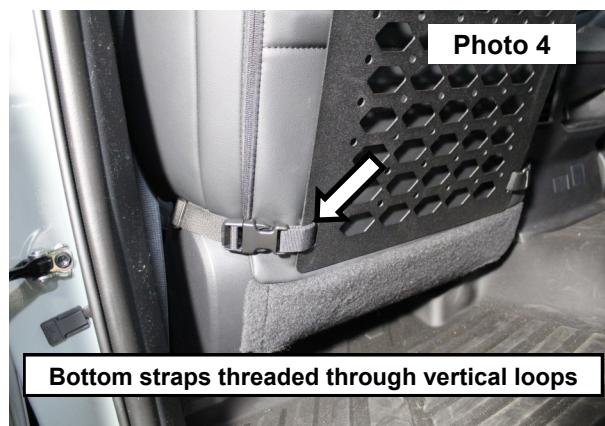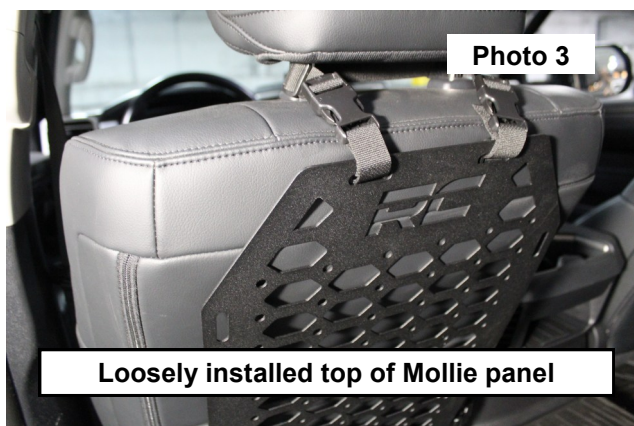

6. Once the adjustments are rethreaded re-snap the buckle so the strap can wrap around the bottom of the seat back to be connected to the other buckle and allowing the Molle Panel to be secured loosely.
7. Once attached to back of seat, the head rest strap and the bottom seat back strap can be tightened and secured to seat back. **See Photo 5**

